



NAME PARTS (RECEIVER)

- | | |
|-----------------------------------|-----------------------------|
| 1. Power switch of the receiver | 8. CH.B volume level switch |
| 2. Indicator of power of receiver | 9. CH.B antenna |
| 3. CH.A RF signal light | 10. CH.AB mixed output |
| 4. CH.A AF signal light | 11. CH.B output |
| 5. CH.A volume level switch | 12. CH.A output |
| 6. CH.B RF signal light | 13. AC power cord |
| 7. CH.B AF signal light | 14. CH.A antenna |

NAME PARTS (HAND HELD MICROPHONE)

- A: MIC set
 B: Battery indicator
 C: Power & silent switch
 D: Battery case

SPECIFICATIONS

Carrier Frequency:	VHF174.1-215.9MHz
Frequency Steadying:	Less than 0.002%
Modulating Mode:	FM
Audio dynamic range:	Over 70dB
Audio Frequency Responses:	100Hz-15KHz
Audio output Level:	0-280mV
S/N Ratio:	Over 70dB
T.H.D:	Less than 0.5%
Sensitivity:	3uV For 30dB S/N