

Back (SideKick Transmitter): Label Location



The upper half of the transmitter back is permanently affixed to the case. The bottom half of the transmitter back is able to slide off to remove the battery.