

USER GUIDE

E3-AK(R) RECEIVER SHOULD MATCH E3-AK REMOTE.

ONCE RECEIVE SIGNAL FROM E3-AK REMOTE, E3-AK(R) RECEIVER WILL CHANGE THE SIGNAL TO RELATIVE ACTION INSTRUCTION TO MAKE THE ACTUATOR WORK ACCORDINGLY.

BUTTON 'UP' ON E3-AK REMOTE RELATE TO ACTUATOR MOVE UPWARD.

BUTTON 'DOWN' ON E3-AK REMOTE RELATE TO ACTUATOR MOVE BACKWARD.

NOTE:

1. E3-AK(R) CANT WORK IN WATER. PROTECT HARNESS CONNECTORS FROM WATER.
2. E3-AK(R) WORK IN 10 METERS WORKING RANGE.
3. PROTECT E3-AK(R) FROM FIRE.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to