 
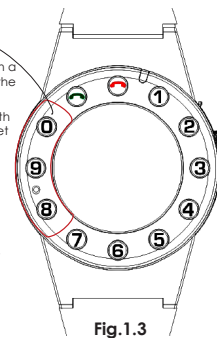 
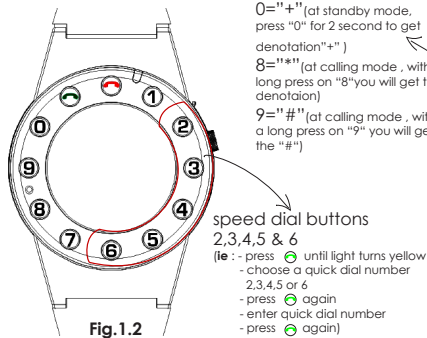 
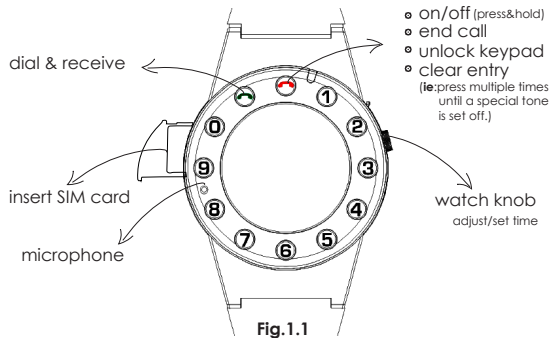 


#### G5 User Manual

 
This unit combines the function of watch and mobile phone. You can use it to make and answer calls. Before using the watch function of this phone, use the watch knob to set the time, then press the knob down to activate the watch

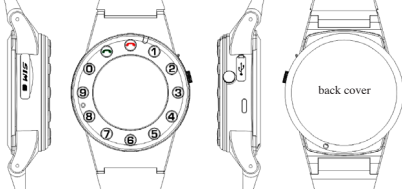

light indicator  
blue : full signal  
red : low battery  
green: low signal (if your SIM card has a PIN ,dial the PIN, then press )

The strength or weakness of the signal and battery is indicated by the increased flashes of each color.

Voicemail- If you have voicemail, the Watch Phone will give light up and Beep.

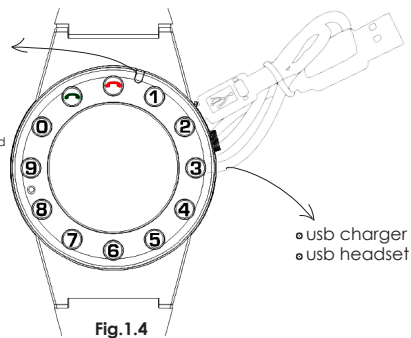

#### 2.1 Hang-up button:

- ON/OFF - When the phone is off, hold this button to power on. When the phone is on, hold this button to power off
- Clearing entry - Press this button many times to clear previous entered phone number until a special tone is set off
- Rejecting/Abort calls - Press this button to reject/abort
- Lock/Unlock - Short pressing this button to lock or unlock the key pad

#### 2.2 Dial button:

- Making Calls - Input a phone number during standby mode, then press this button to dial the number
- Receiving Calls - press this button to answer
- Speed Dial - During standby mode, press this button to set a speed dial number and then to save the speed dial number (see Fig. 1.2)

2.3 Add Pincode Explanantion  
Use this feature if you insert a SIM card that requires a pin number to activate.  
When you turn on the Watch Phone, The indicator light will be solid red.

- Using the buttons on the face of the Watch Phone, enter your pin
- Press the SEND Button (green button)
- The phone will give the welcome chime.

- 3.1 Battery and charging
- Flashing Red - Low battery signal
  - Charging - Insert one end of the charging cable into the USB port on the side of the product, and the other end into the power outlet. A ring will sound after the charger is connected successfully and it begins to charge (See Fig. 1.4)
  - Fully Charged - A ring tone to prompt you to unplug the charger. If you don't unplug the charger, the phone will ring every few seconds to prompt you

- 4.1 Calling
- Hands-Free - Calling is in hands-free mode by default, you can insert the headset to switch to headset calling
  - Headset - Insert headset and long press the confirm button to answer call. Insert headset to make headset calling

- 4.2 Emergency Calling
- Within the GSM network, SIM card is not necessary to make emergency call. Input the emergency calling number (ie, 911), press to make an emergency call

Tip: Because of network coverage or the transmission of wireless signals, some networks may not support emergency call service. For particularly crucial communication(such as medical emergency), you should not entirely depend on mobile phones. Please consult and check with the local network operators.



- 5.1 Reset button
- Press this key to reset the phone

# MANUAL

**Inserting the SIM Card**  
Make sure the Watch Phone is turned off. Open the slot on the side of the Watch Phone. Insert the Sim card so it fits snug inside the slot. Close the slot, and turn on the Watch Phone

**Burg CC Watch Phone Warning and Disclaimer**  
Do not use or place the Watch Phone under water. Avoid dropping or stepping on. Steer clear of use during sports activities. The Watch Phone is not for use for children under the age of 5 years old. When you start to use this product, Please pay attention to the following information: For safety concerns, you should only wear the wrist watch on your wrist and the device should NOT be worn on the inside of the wrist (such as palm side) or in any other configurations during transmission. If damaged, please do not attempt to repair yourself. Any of these activities will void the warranty.

**FCC Radiation Exposure Statement:**  
To ensure compliance with FCC RF exposure requirements, a separation of 1.0 cm or more should be kept between the front of the watch and the rest of the user's body while it is transmitting. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



#### IMPORTANT NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
—Reorient or relocate the receiving antenna.  
—Increase the separation between the equipment and receiver.  
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
—Consult the dealer or an experienced radio/TV technician for help.