



Bienvenue

Installation

- Branchez le récepteur USB sans fil **C** dans un port USB de votre ordinateur.
- Appuyez sur le bouton d'alimentation **D** du Navigateur **A** jusqu'à ce que le bouton s'allume.
- Téléchargez, installez et démarrez le logiciel GlideTV. <http://www.glide.tv.com/download>
(Pas nécessaire pour les utilisateurs de PLAYSTATION®3)

Votre GlideTV Navigateur est prêt!

Changement de mode TouchPad

Votre GlideTV Navigateur offre deux modes de fonctionnement.

- **Absolu:** le placement de votre doigt sur le pad correspond 1:1 avec le placement du curseur sur l'écran de votre téléviseur. Cette mode est établi à l'usine.
- **Relatif:** le curseur se déplace d'une manière similaire à un ordinateur portable.

Pour changer de mode

Appuyer et maintenez pression sur le pad tout en appuyant la touche en haut du bord extérieur. Répétez cette étape pour passer à l'autre mode.

Mise sous Tension

- Si la batterie est faible, vous verrez un avertissement sur l'écran de votre téléviseur.
- Branchez le câble d'alimentation USB **E** dans la prise de la station de charge **B** et dans l'adaptateur secteur **D**.
- Placez le Navigator **A** sur la station de charge **B**.
- Branchez l'adaptateur secteur **D** dans une prise murale pour lancer le chargement de la batterie. Chaque cycle de charge dure environ 4 heures.

Mac OS®

Quand vous brancherez votre Navigateur pour la première fois, votre Mac affichera une fenêtre vous demandant d'appuyer sur un bouton du clavier. Il suffit de fermer la fenêtre et nous gérerons le reste.

PLAYSTATION®3

Placez le Navigateur en mode Relatif. Sony PS3 ne soutient pas la mode Absolu.

Welcome

Installation

- Plug the wireless USB receiver **C** into a USB port on your computer.
- Press the power button **D** on your Navigator **A** until the button lights up.
- Download, install and launch the GlideTV software. <http://www.glide.tv.com/download>
(Not required for PLAYSTATION®3 users)

Your GlideTV Navigator is now ready!

TouchPad Modes

Your GlideTV Navigator includes two operating modes for the touch pad.

- **Absolute:** the placement of your finger on the pad maps 1:1 with the placement on your screen. The product ships from the factory in this mode.
- **Relative:** the cursor moves in a way similar to a laptop track pad.

To change modes

Press and hold the track pad while simultaneously holding down the top outside edge button. Repeat this step to switch to previous mode.

Connect Power

If the battery is low, you will see an on-screen warning.

- Plug the USB cable **E** into the power port of the charging station **B** and into the AC adapter **D**.
- Place Navigator **A** securely into the charging station.
- Plug the AC adapter **D** into a wall socket to start charging. A full charge requires about 4 hours.

Mac OS®

When you initially power up the Navigator, your Mac may display a pop-up window asking you to press a button on the keyboard. Simply close the window and we'll handle the rest.

PLAYSTATION®3

Place the Navigator in Relative Mode. Sony PS3 does not support Absolute mode.

Willkommen

Installation

- Stecken Sie den Wireless-USB-Empfänger **C** in einen USB-Anschluss am Computer.
- Drücken Sie die Power-Taste **D** auf Ihrem Navigator **A**, bis die Taste leuchtet auf.
- Downloaden, installieren und starten die GlideTV Software. <http://www.glide.tv.com/download>
(Nicht erforderlich für PlayStation®3 Benutzer).

Ihre GlideTV Navigator ist jetzt fertig!

TrackPad Modi

Ihre GlideTV Navigator umfasst zwei Betriebsarten für Touchpad.

- **Absolute:** Die Platzierung der Sie mit dem Finger auf dem Pad Karten 1:1 mit der Platzierung auf dem Bildschirm. Das Produkt von Schiffen aus der Fabrik in diesem Modus.
- **Relative:** Der Cursor bewegt sich in ähnlicher Weise wie ein Laptop-Track-Pad.

So ändern Modi:

Drücken und halten Sie die Spur Pad gedrückt halten, während gleichzeitig die obere Rand-Taste.

Wiederholen Sie diesen Schritt, um wieder auf den vorherigen Modus.

Connect Power

- Wenn die Batterie niedrig ist, wird Ihnen eine Warnung auf dem Bildschirm.
- Stecken Sie das USB-Kabel **E** in die Schnittstelle des Ladestation **B** und in den AC-Adapter **D**.
- Ort Navigator **A** sicher in der Basisstation.
- Stecken Sie den AC-Adapter **D** in eine Steckdose zu Laden. Eine volle Ladung benötigt ca. 4 Stunden.

Mac OS®

Wenn Sie zunächst die Macht Navigator, Ihren Mac wird ein Pop-up-Fenster und fordert Sie auf eine Taste drücken auf der Tastatur. Einfach das Fenster zu schließen, und wir für Sie die Ruhe.

PLAYSTATION®3

Setzen Sie den Navigator in Relative-Modus. Sony PS3 nicht unterstützt Absolute-Modus.



GlideTV Hardware Product Limited Warranty

GlideTV warrants that your GlideTV hardware product shall be free from defects in material and workmanship for the length of time set forth in the warranty periods below, beginning from the date of purchase. Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose on this hardware product is "with any implied warranty or condition of merchantability or fitness for a particular purpose on this hardware product are disclaimed unless prohibited by applicable law, in which event they are.

Remedies

GlideTV's entire liability and your exclusive remedy for any breach of warranty shall be, at GlideTV's option, (1) to repair or replace the hardware, or (2) to refund the price paid, provided that the hardware is returned to the point of purchase or such other place as GlideTV may direct with a copy of the sales receipt or dated itemized receipt. Shipping and handling charges may apply except where prohibited by applicable law. GlideTV may, at its option, use new or refurbished or used parts in good working condition to repair or replace any hardware product. Any replacement hardware product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer or for any additional period of time that may be applicable in your jurisdiction.

This warranty does not cover problems or damage resulting from (1) accident, abuse, misapplication, or any unauthorized repair, modification or disassembly; (2) improper operation or maintenance, usage not in accordance with product instructions or connection to improper voltage supply; or (3) use of consumables, such as replacement batteries, not supplied by GlideTV except where such restriction is prohibited by applicable law.

How to Obtain Warranty Support

Before submitting a warranty claim, we recommend you visit the support section at www.GlideTV.com for technical assistance. Valid warranty claims are generally processed through the point of purchase during the first thirty (30) days after purchase; however, this period of time may vary depending on where you purchased your product – please check with GlideTV or the retailer where you purchased your product for details. Warranty claims that cannot be processed through the point of purchase and any other product related questions should be addressed directly to GlideTV. The addresses and customer service contact information for GlideTV can be found in the documentation accompanying your product and on the web at www.GlideTV.com/contactus.

Limitation of Liability

GLIDE TV SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, REVENUE OR DATA (WHETHER DIRECT OR INDIRECT) OR COMMERCIAL LOSS FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON YOUR PRODUCT EVEN IF GLIDE TV HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some jurisdictions do not allow the exclusion or limitation of special, indirect, incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Duration of Implied Warranties

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS HARDWARE PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THE APPLICABLE LIMITED WARRANTY PERIOD FOR YOUR PRODUCT. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

National Statutory Rights

Consumers have legal rights under applicable national legislation governing the sale of consumer goods. Such rights are not affected by the warranties in this Limited Warranty.

No Other Warranties

No GlideTV dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

Warranty Period

The length of the warranty periods for GlideTV devices is one year, unless required by local applicable laws.

FCC Compliance And Advisory Statement:

This Equipment Has Been Tested And Found To Comply With The Limits For A Class B Digital Device, Pursuant To Part 15 Of FCC Rules.

These Limits Are Designed To Provide Reasonable Protection Against Harmful Interference In A Residential Installation. This Equipment Generates, Uses, And Can Radiate Radio Frequency Energy And, If Not Installed And Used In Accordance With The Instructions, May Cause Harmful Interference To Radio Communication. However, There Is No Guarantee That Interference Will Not Occur In A Particular Installation. If This Equipment Does Cause Harmful Interference To Radio Or Television Reception, Which Can Be Determined By Turning The Equipment Off And On, The User Is Encouraged To Try To Correct The Interference By One Of More Of The Following Measures: 1) Reorient Or Relocate The Receiving Antenna, 2) Increase The Separation Between The Equipment And Receiver, 3) Connect The Equipment Into An Outlet On A Circuit Different From That To Which The Receiver Is Connected, Or 4) Consult The Dealer Or An Experienced Radio/TV Technician For Help. You Are Cautioned That Any Changes Or Modifications Not Expressly Approved By The Party Responsible For Compliance Could Void The User's Authority To Operate The Equipment.

This Class B Digital device complies with:

* **Canadian Ices-003 (Canada)**

* **CE requirements (European Economic Area)**

© 2009 GlideTV, Inc. All rights reserved. GlideTV Navigator is a trademark of GlideTV Inc. All other brands and product names are trademarks of their respective holders.

Welcome Bienvenue Willkommen