



- Never run R/C model in crowded area or near small children.
- Never run R/C model in the street.
- Remove battery from R/C model when storing.
- Protect your System from moisture.

 
- Betreiben Sie das Modell nur auf freien Flächen, fernab von Autos Verkehr, Personen und Haustieren.
- Niemals mit dem Modell auf öffentlichen Straßen fahren.
- Entfernen Sie die Batterien aus der Fernbedienung, wenn diese längere Zeit nicht benutzt wird.
- Schützen Sie die Fernbedienung vor Flüssigkeit und Spritzwasser.

Transmitter Features / Ausstattung des Senders

**Reverse Switch
Servo Reverse Schalter**
Servo Factory Settings
Beachten Sie die Pfeile für die Servo Grundeinstellung



Antenna/Antenne
Turn the antenna down and spin to front or back when not using.
Legen Sie die Antenne wie abgebildet zur Seite, wenn die Anlage nicht benutzt wird.

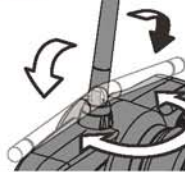

**ST.D/R
Steering Dual Rate
Maximaler Lenkausschlag**



To be used to adjust steering servo rate and range.
Einstellung des maximalen Lenkausschlages.

**Battery Level Indicator
Batterie Statusanzeige**

- Good Batteries
Volle Batterien
- Low Batteries
Fast leere Batterien

When the power of batteries are low, you will see the twinkle red light.
Wenn die Akkuspannung zu gering ist, blinkt die LED und es ertönt ein Piepston. Laden Sie die Akkus nach bzw. wechseln Sie die Batterien aus

**Steering Trim
Lenktrimmung**



 
To be used for trimming the steering operation.
Wird verwendet, um den Geradeauslauf einzustellen.

**Throttle Trim
Gastrimmung**




To be used for trimming the throttle operation.
Wird verwendet um den Gasnullpunkt einzustellen.

**Power Switch
Ein/Aus Schalter**

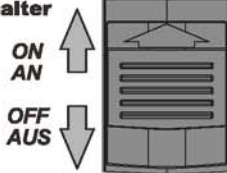

※Charger plug in
※Ladebuchse

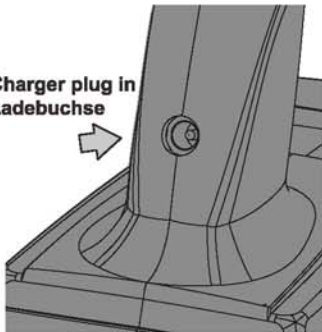 

※Please use rechargeable batteries when you are recharging.
※Nutzen Sie diese Ladebuchse nur mit aufladbaren Batterien.

Transmitter Battery Installation/Einlegen der Senderbatterien
Open battery cover at the bottom of transmitter. Install batteries. Follow the direction of batteries designated in the inside of battery box.
Öffnen Sie das Batteriefach an der Unterseite des Senders.
Legen Sie die Batterien entsprechend der angegebenen Polarität ein.

 


8X AA Alkaline Batteries
8X AA Alkaline Batterien


Attention Achtung

**Do not mix batteries of different ages or types.
Mischen Sie keine Batterien verschiedenen Typs oder Alters.**

**Battery Cover
Batteriefach**

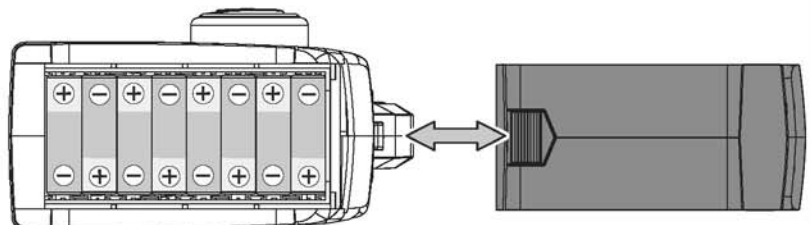


**"Pairing" Button
"Pairing" Taster**

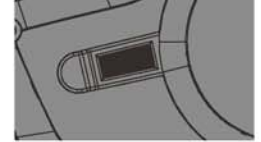 

The other side
Rückseite


**Steering Wheel
Lenkrad**

 To be used for steering operation.
Wird verwendet um das Fahrzeug zu steuern.

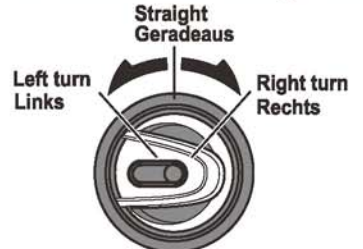

**Throttle Trigger
Gas/Brems Hebel**

 To be used for throttle operation.
Um das Fahrzeug zu beschleunigen & abzubremesen.

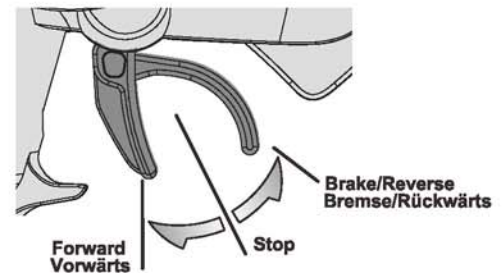

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: XY4RZT24G

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.