

# SPIROCOM - VOICE COMMUNICATION SYSTEM RADIO ADAPTER FOR MOTOROLA GP340/HT1250

30922A291

## USER MANUAL

### SAFETY NOTICE

The product must only be used with other approved Interspiro products. The apparatus must be maintained, serviced and tested as described in this user manual, Interspiro service manuals and Interspiro test instructions.

#### INTERSPIRO IS NOT RESPONSIBLE FOR

- COMBINATIONS OF PRODUCTS, UNLESS PUT TO MARKET BY INTERSPIRO
- CHANGES OR ADAPTATIONS MADE TO THE PRODUCT BY A THIRD PARTY

Changes to this document - necessitated by typographical errors, inaccuracies of current information or improvements and changes of equipment - may be made at any time without prior notice. Always refer to [www.interspiro.com](http://www.interspiro.com) for product updates, document updates and service bulletins. Exposure to extreme conditions, may require different procedures rather than those described in this manual. The guarantees and warranties specified in the conditions of sale are not extended by this Safety Notice.

The used frequency is 868 MHz in Europe and 915 MHz in US.

FCC ID: YDFSCM30605

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.


### ATTACHING AND REMOVING

Install the attachment bracket on the radio using the attached screw [Fig. 1].

Fit the adapter box into the attachment bracket with the two heels into the holes in the bracket plate. Lift the hand screw and fit the upper end into the attachment bracket [Fig. 2].

Tighten the hand screw [Fig. 3].

Remove the adaptor box by following these instructions in reverse order.

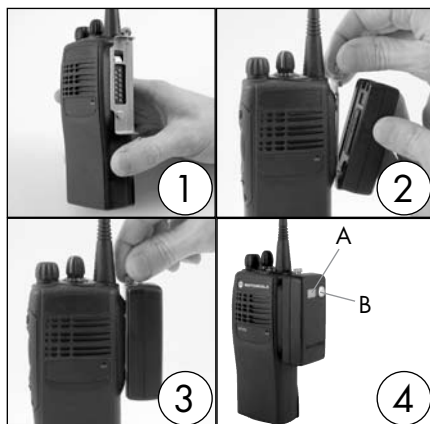

### USING THE RADIO ADAPTER

 
Start the Motorola GP340 radio by turning the volume control to approximately half of the maximum volume. The volume of the long distance radio communication can then be adjusted up or down by turning the volume control.

THE VOLUME CAN NOT BE SET LOWER THAN ONE QUARTER OF THE MAXIMUM VOLUME AS THIS WILL CAUSE THE COMMUNICATION TO BREAK UP. IF THIS HAPPENS INCREASE THE VOLUME AGAIN.

When the radio is switched on the display [Fig 4, A] starts to flash the current group number. Press the button [Fig 4, B] repeatedly to change group number. There are 16 group numbers available.

When the box has connected to the network of SpiroCom units the group number stops to flash and is constantly lit. Depending on the current radio environment the start up time can differ on different occasions. When the box has connected the group number can only be changed during the first minute, after one minute it can only be changed by switching off the long distance radio and repeat the setting.

The box is powered from the radio and has no batteries.



# SPIROCOM - RÖSTKOMMUNIKATIONSSYSTEM RADIOADAPTER FÖR MOTOROLA GP340/HT1250

30922A291

## ANVÄNDARHANDBOK

### SÄKERHETSANVISNINGAR

Produkten får endast användas tillsammans med andra godkända produkter från Interspiro. Produkten måste underhållas, erhålla service samt testas enligt den här användarhandboken, Interspiros servicehandböcker och Interspiros testanvisningar.

#### INTERSPIRO ANSVARAR INTE FÖR

- ☛ KOMBINATIONER AV PRODUKTER, OM DESSA INTE SÄLJS AV INTERSPIRO
- ☛ FÖRÄNDRINGAR ELLER ANPASSNINGAR AV PRODUKTEN UTFÖRDA AV TREDJE PART

Ändringar kan företas i detta dokument när som helst utan förvarning om de är nödvändiga på grund av typografiska fel, felaktigheter i informationen eller beroende på förbättringar eller förändringar av utrustningen. Besök [www.interspiro.com](http://www.interspiro.com) för produkt- och dokumentuppdateringar och för servicemeddelanden. Vid exponering för extrema förhållanden kan andra åtgärder än de som beskrivs i den här handboken krävas. Dessa säkerhetsanvisningar medför inte att garantierna som anges i försäljningsvillkoren utökas.

Den använda frekvensen är 868 MHz i Europa och 915 MHz i USA.

### ANSLUTA OCH KOPPLA BORT

Montera fästplåten på radion med den medlevererade skruven [Fig. 1].


Passa in adapterboxen i fästplåten med de två klackarna i hålen i fästplåten. Lyft handskruven och passa in den övre änden i fästplåten [Fig. 2].

Dra åt handskruven [Fig. 3].

Koppla bort adapterboxen genom att följa dessa instruktioner i omvänd ordning.

### ATT ANVÄNDA RADIOADAPTERN

Starta Motorola GP340-radion genom att vrida volymkontrollen till cirka hälften av den maximala volymen. Volymen för kommunikationen över långdistansradion kan sedan justeras upp eller ner genom att vrida på volymkontrollen.

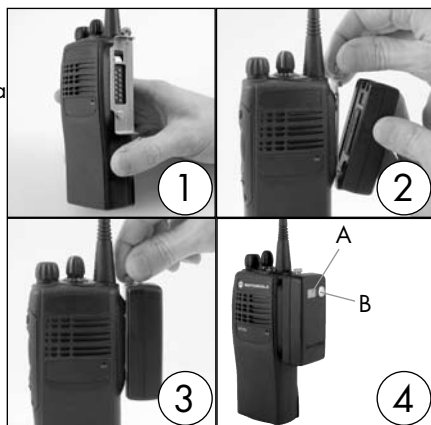

VOLYMEN KAN INTE STÄLLAS LÄGRE ÄN EN FJÄRDEDEL AV DEN MAXIMALA VOLYMEN EFTERSOM KOMMUNIKATIONEN DÅ KOMMER BÖRJA HACKA. OM DETTA INTRÄFFAR ÖKA VOLYMEN IGEN.

När radion sätts på börjar displayen [Fig 4, A] blinka med aktuellt gruppnummer. Tryck på knappen [Fig 4, B] upprepade gånger för att byta gruppnummer. Det finns 16 gruppnummer.

När boxen har kopplat upp sig mot nätverket av tillgängliga SpiroCom-enheter slutar gruppnumret att blinka och fortsätter vara tätt.

Beroende på aktuell radiomiljö kan starttiden variera från en gång till en annan. När boxen har kopplats upp kan gruppnumret bara ändras under den första minuten, efter en minut kan det bara ändras genom att stänga av långdistansradion och upprepa inställningen.

Boxen strömförsörjs från radion och har inga batterier.

