

FE6

User's Manual

Chapter 1: Getting Started.....	1
1.1 Your Device.....	1
Front	1
Back	1
Top.....	2
Down	2
1.2 Accessories	2
1.3 Installing Memory Card.....	3
1.4 Charging Battery	3
LED Indicator	4
1.5 Using Headsets	4
1.6 Turning the Device On or Off	5
1.7 Unlocking the Screen.....	6
 Chapter 2: The Basics.....	 7
2.1 Home Screen	7
Extended Home screen	7
Status Bar Icons	8
Shortcut menu.....	9
Using widgets	10
Applications.....	10
Setting wallpaper	11
2.2 Adjusting Volume.....	12
2.3 Setting up Wi-Fi	13
2.4 Contacts	15
Adding contacts	15
Importing contacts	16
Backing up contacts.....	16
Favorite contacts.....	17
 Chapter 3: Entering Information	 18
3.1 On-Screen Keyboard.....	18
Using the on-screen keyboard	18
Setting input method.....	19
3.2 Configuring Keyboard Settings	19
 Chapter 4: Email	 20
4.1 Email Accounts	20
Setting up an Internet email account	20
Viewing email accounts	20
4.2 Using Email.....	21
Composing and sending emails	21
Receiving emails	22
Reading and replying to emails	22
Managing email folders	23
Customizing email settings.....	24

Chapter 5: Using Internet	25
5.1 Browsing Web Pages.....	25
Managing web pages	26
Chapter 6: Google Applications.....	27
6.1 Gmail	27
Signing in to Gmail	27
Refreshing Gmail.....	27
Creating and sending emails.....	27
Reading and replying to emails	28
Forwarding emails	28
Managing emails	28
Configuring Gmail settings	29
6.2 Talk	30
Signing in to Google Talk	30
Google Talk options	30
Starting chat.....	30
Configuring Google Talk settings	31
6.3 Maps	32
Viewing Map	32
Finding places.....	33
6.4 Navigation	33
Getting directions	34
Finding your current location	34
6.5 Latitude	35
Starting Latitude	35
Configuring privacy settings	35
6.6 Market.....	36
Searching for applications	36
Downloading applications	36
Removing applications	36
6.7 Places	37
6.8 Google Search	37
Searching information by entering text	37
6.9 Voice Search.....	38
6.10 YouTube.....	38
Watching videos	38
Uploading videos.....	38
Searching videos.....	38
6.11 Movie Studio	39
Creating new movies	39
Viewing movies.....	39
Sharing movies	39
Chapter 7: Using Bluetooth.....	40
7.1 Connecting to Bluetooth Devices.....	40


Chapter 8: Multimedia Applications	41
8.1 Photos and Videos	41
Taking a photo	41
Recording a video	42
Reviewing a photo	42
Reviewing a video	43
Configuring camera settings	43
8.2 Viewing Photos & Videos	45
Viewing photos	45
Playing videos	46
8.3 Using Music Player	46
Music screen	46
Playing music	48
Managing playlists	48
8.4 Sharing Media	49
Viewing media files	49
Downloading media files	50
Sharing media files	50
Uploading media files	51
 Chapter 9: Applications	 52
9.1 Browser	53
9.2 Calculator	54
9.3 Calendar	54
9.4 Camera	54
9.5 Clock	55
9.6 Contacts	55
9.7 Documents To Go	55
9.8 Downloads	56
Managing files	56
9.9 Email	56
9.10 File Browser	56
Managing files and folders	56
9.11 FM Radio	57
9.12 Gallery	58
9.13 Gmail	58
9.14 Google Search	58
9.15 Latitude	58
9.16 Maps	58
9.17 Market	59
9.18 Movie Studio	59
9.19 Music	59
9.20 Myriad UPnP Remote	59
9.21 Myriad UPnP Server	59
9.22 Navigation	59
9.23 Places	59
9.24 Settings	59
9.25 Talk	59
9.26 TouchPal keyboard	60

9.27 Twidroyd PRO.....	60
Logging in to Twidroyd PRO for the first time.....	60
Twidroyd options.....	60
9.28 Voice Search.....	61
9.29 YouTube.....	61
 Chapter 10: Managing Your Device.....	 62
10.1 Device Settings.....	62
Wireless & networks	62
Sound.....	62
Screen	62
Location & security	63
Applications.....	63
Accounts & sync.....	64
Privacy.....	64
Storage.....	64
Language & input.....	64
Accessibility	65
Date & time	65
About tablet	65
10.2 Changing Basic Settings.....	66
Date and time settings	66
Alarms settings	66
Display settings	67
Ringtone settings	67
10.3 Using Wireless & networks	67
10.4 Protecting Your Device.....	68
Screen lock protection settings.....	68
10.5 Resetting the Device	68
Safety Information	69
Specifications	73


Chapter 1: Getting Started

1.1 Your Device

 
Front

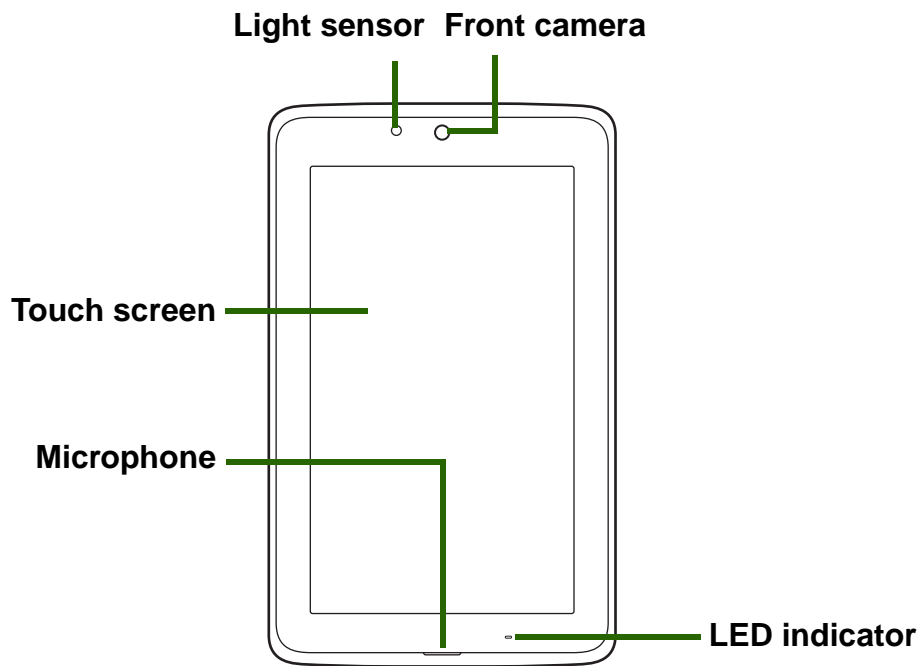


Back

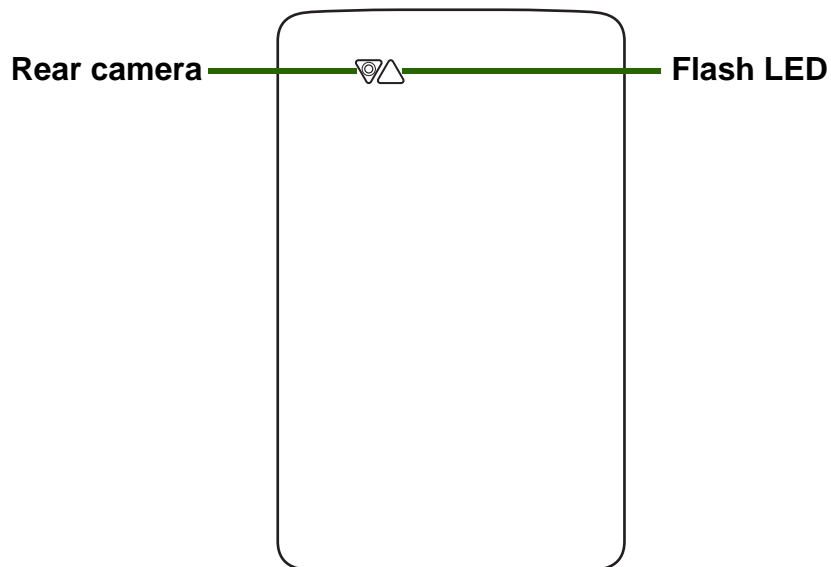 

Top

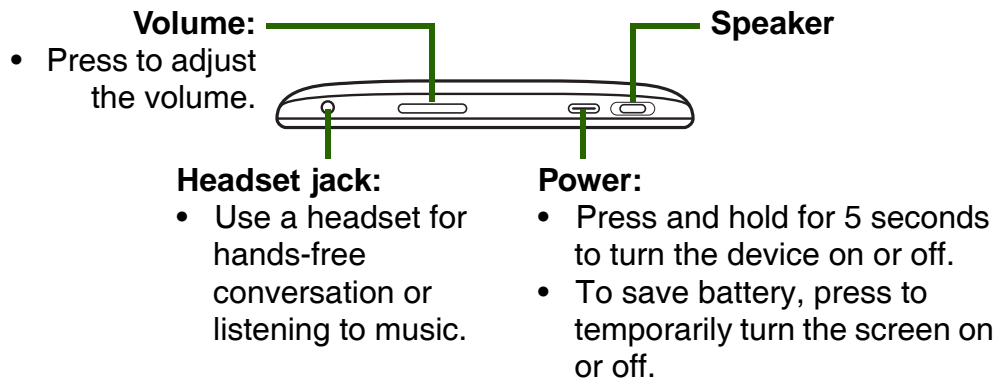 

Down

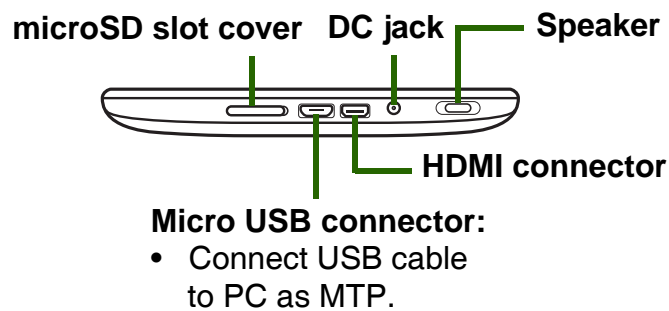 

1.2 Accessories

Your package comes with the following items. If any of them is missing, please contact your retailer.

- Tablet
- AC adapter
- Micro USB cable
- Headset
- Quick Start Guide

1.3 Installing Memory Card

 
You need a microSD[®] card to store photos, music, videos, and other data.

To install the memory card

1. Open the card cover.
2. Insert the microSD card as shown. Make sure the gold contacts are facing down.

To remove the memory card

1. Open the card cover.
2. Push to eject the microSD card from the slot.

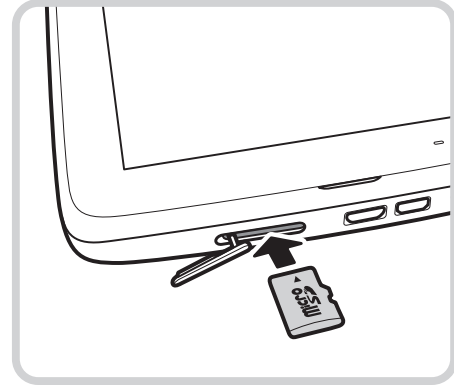



NOTE: Do not remove the memory card while the device is turned on. Sudden removal of the memory card may cause data loss or unpredictable system hang up.

 
1.4 Charging Battery

The battery is only partially charged. To fully charge the battery, charge it for 2 hours.

Charge the battery

1. Connect one end of the AC adaptor to the DC jack of the device.
2. Plug the other end of the AC adaptor to the wall outlet to start charging.

When the battery is charging and the device is turned on, the  icon is displayed on the status bar. When the battery is fully charged, the  icon is displayed on the status bar.

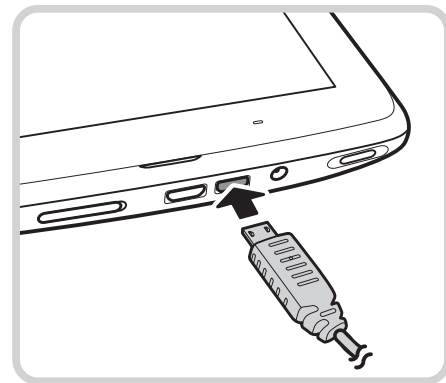

LED Indicator

Device State	LED Color	Indication
Power On	Orange (solid)	Battery is charging.
	Green (solid)	Battery is fully charged.
	Green and Orange (blinking)	Temperature around battery pack is high now (A warning "Battery temperature is too high, stop battery charging" message appears on the screen; the battery charging task will resume right after temperature goes down).
		Charging error (short circuit/over voltage/no battery inside the device/extended charging time).
Power Off	Orange (solid)	Battery is charging.
	Green (solid)	Battery is fully charged.
	Green and Orange (blinking)	Charging error (short circuit/over voltage/no battery inside the device/extended charging time).

1.5 Using Headsets

For hands-free conversation or listening to music, plug a headset to the headset jack.

NOTE:

- When using a headset, your ability to hear outside sounds may be limited. Do not use headset if it will endanger you.
- When using a headset, do not set the volume to its maximum as it may damage your hearing.

1.6 Turning the Device On or Off

 
After installing the memory card and charging the battery, the device is ready to be turned on.

To turn on your device

Press and hold the **Power** button until the device vibrates.

To turn off your device

1. Press and hold the **Power** button for 1 second.
2. A pop-up window appears, tap **OK** to confirm.

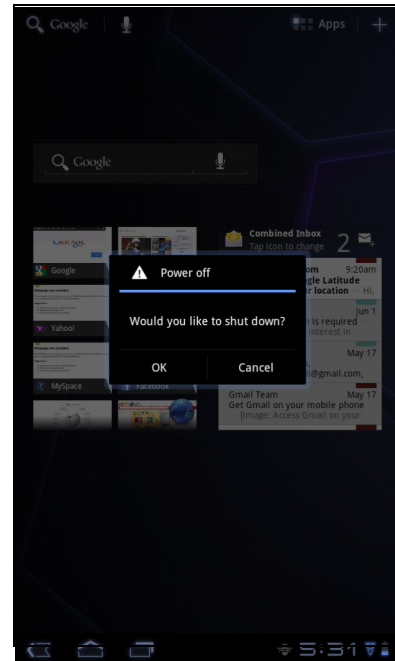

To set your device to Sleep mode




To set the device to sleep mode, press the **Power** button. This will turn the display off.

 
To turn the display on, press the **Power** button again.

1.7 Unlocking the Screen

By default, the screen automatically locks after a period of inactivity. You can set the length of time until the screen locks, see “Screen” on page 62.

To unlock the screen


1. Press the **Power** button to turn on the display from Sleep mode.
2. Tap  and drag the middle circle () to  to unlock the screen.

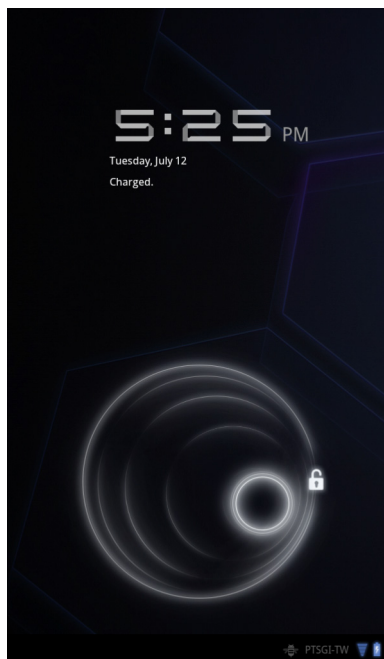

Chapter 2: The Basics

2.1 Home Screen

 
From the Home screen, you can quickly access common features and view notifications of received messages, battery and connection status.

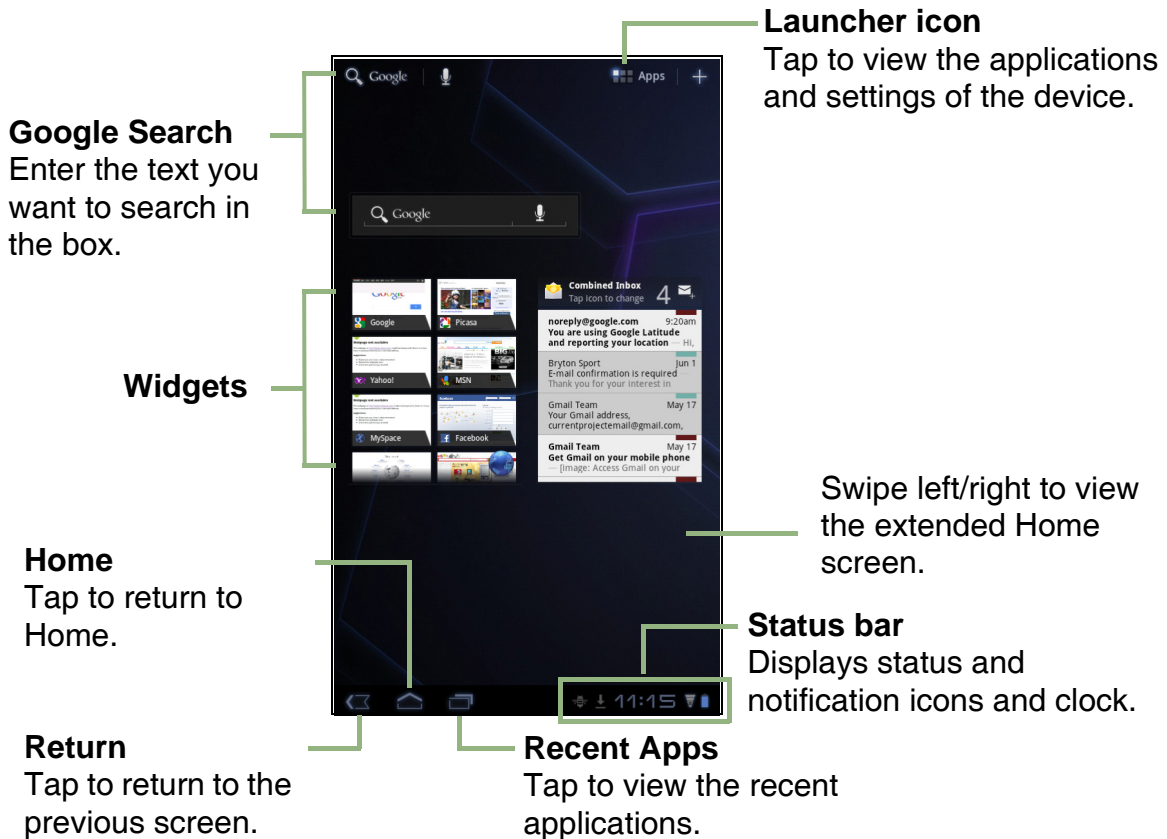

Extended Home screen

Swipe your finger to the left or right across the Home screen.

 The two extensions to the left and to the right of the Home screen provide more space for icons, widgets, shortcuts, and other items.

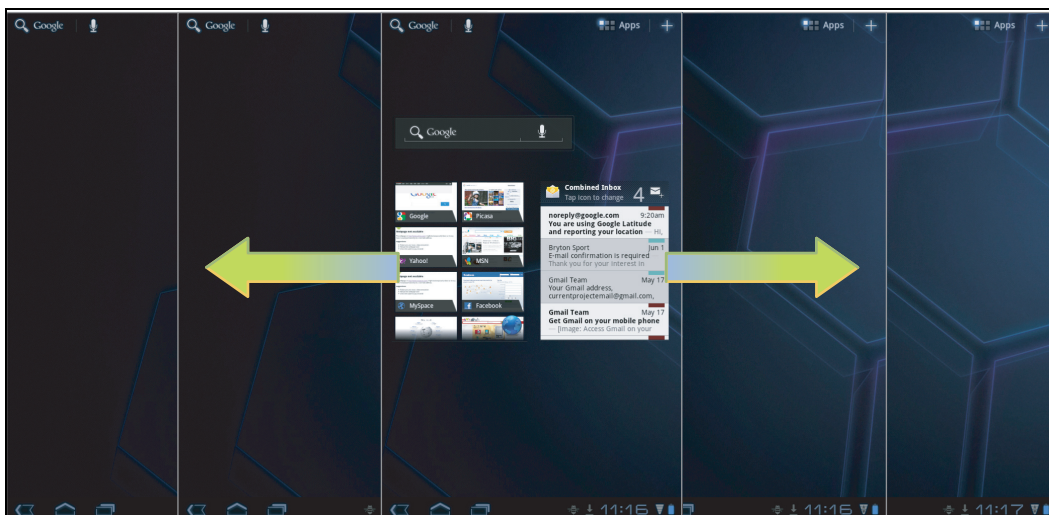










Status Bar Icons


Status bar icons indicate different types of information.

The icons on the status bar indicate the following information:



Icon	Description
	Battery is full.
	Battery is low.
	Battery is completely discharged.
	Battery is charging.
	Myriad UPnP Remote is active.

Icon	Description
	Wi-Fi is connected.
	Bluetooth connection is active.
	File downloading in progress.
	New email notification.

Tap the status bar and scroll up to view notifications or view system information easily. To close the window, tap .



Shortcut menu

 
The shortcut menu allows you to easily access an application from the Home screen. To open an application, tap an icon.

Customizing shortcut menu

To add a shortcut:

1. Tap **+**.
2. Tap **Apps** to display the applications.
3. To add an item, drag the application icon to the specific Home screen.

You can also add a shortcut by pressing and holding the application icon, then drag it to the specific Home screen.

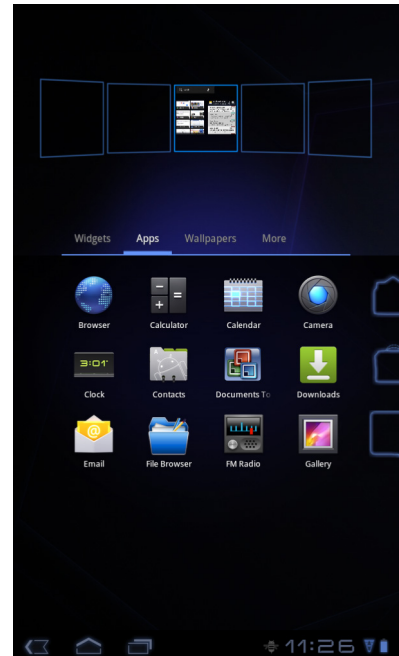

To remove shortcut:

1. Tap and hold an application icon.

The **Remove** icon appears on the top right of the Home screen.

2. Drag the application icon to **Remove** icon to delete. The application icon is removed from the Home screen.




 
Using widgets


Save time with live updates right on the Home screen and get all your personalized updates in one place.

You may add and customize the Widgets on the Home screen as you like.

1. From the Home screen, tap .
2. Tap **Widgets** to display the applications.
All available widgets is displayed.
3. To add widget, drag the widget icon to the specific Home screen.

To remove widgets:

 1. From the Home screen, tap and hold the desired widget. The  **Remove** icon appears on the top right of the Home screen.
2. Drag the widget to  **Remove** icon to delete it from the Home screen.

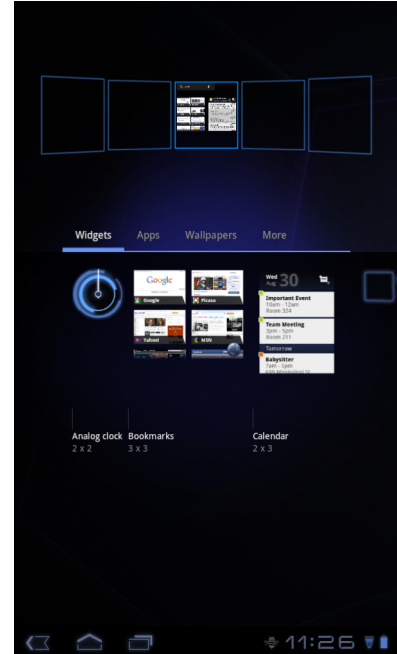

Applications

Tap  **Apps** to view the applications and settings of the device.

- Tap an icon to access the application.

