



INSTRUCTION MANUAL

Please read this guide carefully before you use the microphone.

BEFORE YOU PLAY

INSTALL BATTERIES

Always ask an adult to install batteries. This product uses 3 size AAA (1.5 V) batteries (included).

The battery compartment is located on the back of the product.

Use a Phillips head screwdriver to open the compartment door.

Install batteries according to image inside of compartment.

 
Negative (-) and positive (+) ends of each battery must be installed correctly, or an electrical hazard and/or damage to the product could result.

Close compartment door and tighten screw to secure.

Note: If the batteries wear out, the product's sound may deteriorate. If you are not going to play for a long time, remove the batteries from the product. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

ACTIVATE MICROPHONE

IMPORTANT: Before normal use, you must take microphone out of DEMO mode.




Move DEMO/PLAY switch on back of microphone to PLAY.

(Note: Microphone will now be on. To turn off, press ON/OFF button.)

Microphone

 1. FX Button
2. MIC Button
3. On/Off Button
4. Speaker
5. MP3 Input
6. Target Zone
7. Demo/Play Switch
8. Battery Compartment

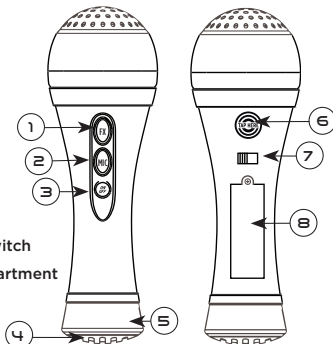

TO PLAY

NOTE: Sing or speak directly into the mic to sound your best!

ON/OFF

 
Press ON/OFF button to power mic on and off.

FX BUTTON

Press the FX button to hear a drum roll. Press again for cheers. Press button repeatedly to toggle between the two sound effects.

HI-NOTE

Tap top of flower/skull ring* to target zone and sing into the mic for HI-NOTE voice effect.


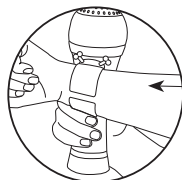


ECHO-TASTIC

Tap top of skull/zipper bracelet* to target zone and sing into the mic for ECHO-TASTIC voice effect.

ZOMBIE-ZONE

  Tap top of rock ring to target zone and sing into the mic for ZOMBIE-ZONE voice effect. (Model F1905 only)

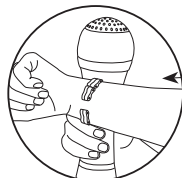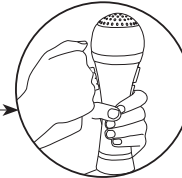


HELIUM

Tap top of bike chain bracelet -indicated by silver mark- to target zone and sing into the mic for HELIUM voice effect. (Model F1915 only)

ROBOT-RIFFIC

 Tap one accessory to target zone, then tap another accessory to the target zone and sing into the mic for ROBOT-RIFFIC effect.

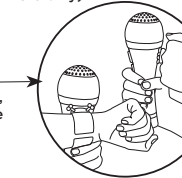

You do not have to tap a second accessory immediately. As long as you don't press MIC, or turn the mic off, the ROBOT-RIFFIC effect will start whenever you tap the second accessory.

If you want to switch between effects without starting ROBOT-RIFFIC, be sure to press MIC in between.

MIC BUTTON

Press the MIC button to change back to normal voice boost mode.

MP3 INPUT

Plug your MP3 player into the MP3 INPUT and sing along to your favorite songs. Adjust the volume on your MP3 player to your liking.

IMPORTANT SAFETY INSTRUCTIONS

Please read this section carefully.

- Do not use this device near water.
- Clean only with a dry cloth.
- Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as when liquid has been spilled on it, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
- To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

Warnings

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the product carefully to avoid damage to outer covering and inner components.

The product should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Applies to Models: F1905, F1915 FCC ID: ZDMVCKRZB. Label can be found inside microphone battery compartment.

CUSTOMER ASSISTANCE

Email: info@firstact.com
First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com



No part of this publication may be reproduced in any form or by any means without the prior written permission of First Act Inc.

Colors and specifications depicted on this guide may vary slightly from your product.

First Act, First Act Discovery, Voice RockrZ, and related logos are trademarks of First Act Inc.

© 2011 First Act Inc.
All Rights Reserved.
F19X5.M.01

- * F1905: Flower ring, skull bracelet
- F1915: Skull ring, zipper bracelet



INSTRUCTION MANUAL

Please read this guide carefully before you use the microphone.

BEFORE YOU PLAY

INSTALL BATTERIES

Always ask an adult to install batteries. This product uses 3 size AAA (1.5 V) batteries (included).

The battery compartment is located on the back of the product.

Use a Phillips head screwdriver to open the compartment door.

Install batteries according to image inside of compartment.

 
Negative (-) and positive (+) ends of each battery must be installed correctly, or an electrical hazard and/or damage to the product could result.

Close compartment door and tighten screw to secure.

Note: If the batteries wear out, the product's sound may deteriorate. If you are not going to play for a long time, remove the batteries from the product. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

ACTIVATE MICROPHONE

IMPORTANT: Before normal use, you must take microphone out of DEMO mode.




Move DEMO/PLAY switch on back of microphone to PLAY.

(Note: Microphone will now be on. To turn off, press ON/OFF button.)

Microphone

 1. FX Button
2. MIC Button
3. On/Off Button
4. Speaker
5. MP3 Input
6. Target Zone
7. Demo/Play Switch
8. Battery Compartment

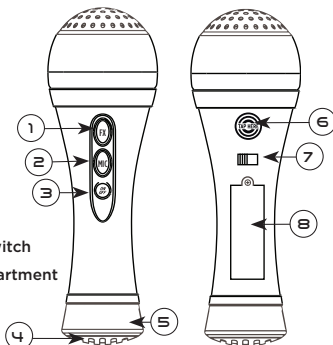

TO PLAY

NOTE: Sing or speak directly into the mic to sound your best!

ON/OFF

 
 
Press ON/OFF button to power mic on and off.

FX BUTTON

Press the FX button to hear a drum roll. Press again for cheers. Press button repeatedly to toggle between the two sound effects.

HI-NOTE

Tap top of ring to target zone and sing into the mic for HI-NOTE voice effect.

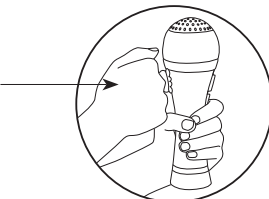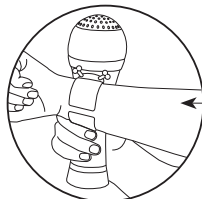


ECHO-TASTIC

Tap top of bracelet to target zone and sing into the mic for ECHO-TASTIC voice effect.

ROBOT-RIFFIC

 Tap one accessory (ring or bracelet) to target zone, then tap the other accessory to the target zone and sing into the mic for ROBOT-RIFFIC effect.

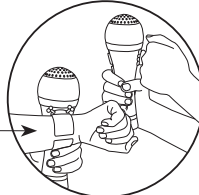

You do not have to tap the second accessory immediately. As long as you don't press MIC, or turn the mic off, the ROBOT-RIFFIC effect will start whenever you tap the second accessory.

If you want to switch from HI-NOTE to ECHO-TASTIC or vice versa without starting ROBOT-RIFFIC, be sure to press MIC in between.

MIC BUTTON

Press the MIC button to change back to normal voice boost mode.

MP3 INPUT

Plug your MP3 player into the MP3 INPUT and sing along to your favorite songs. Adjust the volume on your MP3 player to your liking.

CUSTOMER ASSISTANCE

Email: info@firstact.com
First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com



No part of this publication may be reproduced in any form or by any means without the prior written permission of First Act Inc.

IMPORTANT SAFETY INSTRUCTIONS

Please read this section carefully.

- Do not use this device near water.
- Clean only with a dry cloth.
- Do not use near any heat sources such as radiators, heaters, stoves, or other heat producing machinery.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as when liquid has been spilled on it, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
- To reduce the risk of fire and electric shock, do not expose this apparatus to rain or moisture.

Warnings

Do not change the parts without professional instructions. Any change may cause malfunctions.

Keep the wrapping bag out of the reach of children to avoid a choking hazard.

Always move the product carefully to avoid damage to outer covering and inner components.

The product should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Applies to: F1906, F1907 FCC ID: ZDMVCKRZB, IC: 9200A-F1906. Label can be found inside microphone battery compartment.

Colors and specifications depicted on this guide may vary slightly from your product.

First Act, First Act Discovery, Voice RockrZ, and related logos are trademarks of First Act Inc.

© 2011 First Act Inc.
All Rights Reserved.
VR.M.EF.02



MANUEL D'UTILISATION

Veuillez lire ce guide soigneusement avant d'utiliser le microphone.

AVANT DE JOUER

POSE DES PILES

Demandez toujours à un adulte de poser les piles. Ce produit utilise 3 piles AAA (1.5 V) (incluses).

Le logement des piles est situé au dos du produit.

Utilisez un tournevis à pointe cruciforme pour ouvrir le volet du logement.

Posez les piles en fonction de l'illustration dans le logement.

 
Les plots négatif (-) et positif (+) doivent être orientés correctement sinon le dispositif pourrait être endommagé ou présenter un risque de choc électrique.

Refermez le volet du logement et serrez bien la vis.

Note : La qualité sonore du produit se détériore alors que les piles s'épuisent. Si vous prévoyez ne pas l'utiliser pour une période prolongée, enlevez les piles du produit. Ne mélangez pas de vieilles piles avec des neuves. Ne mélangez pas des piles alcalines avec des piles ordi.

ACTIVER LE MICROPHONE

IMPORTANT: Avant l'utilisation normale, vous devez régler le microphone hors du mode DÉMO




Poussez le commutateur DÉMO/PLAY au dos du micro sur PLAY.

(Note : Le micro sera alors en circuit. Appuyez sur l'interrupteur pour le mettre hors circuit.)

Microphone

 1. Bouton FX
2. Bouton MIC
3. Interrupteur
4. Haut-parleur
5. Prise MP3
6. Zone cible
7. Commutateur Demo/Play
8. Logement des piles

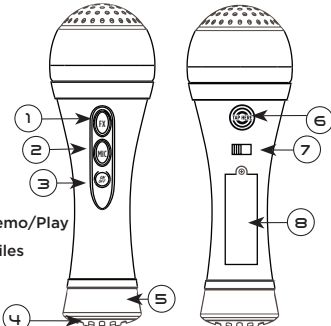

POUR JOUER

NOTE : Chanter ou parler directement dans le micro donnera un meilleur son.

INTERRUPTEUR

 
Appuyez sur l'interrupteur pour mettre le micro en et hors circuit.

BOUTON FX

Appuyez sur le bouton FX pour entendre un roulement de tambour. Appuyez de nouveau pour des encouragements. Appuyez sur le bouton de façon répétitive pour alterner entre les deux effets sonores.

HAUTE NOTE

Tapez sur le dessus de la bague sur la zone cible puis chantez dans le micro pour produire une voix HAUTE.

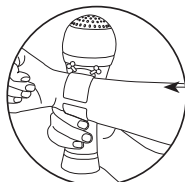


ÉCHO-TASTIQUE

Tapez le dessus du bracelet sur la zone cible puis chantez dans le micro pour un effet ÉCHO-TASTIQUE.



ROBOT-TONNANT

 Tapez un accessoire (bague ou bracelet) sur la zone cible puis tapez l'autre accessoire sur la zone cible et chantez dans le micro pour un effet ROBOT-TONNANT.

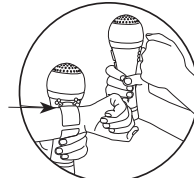

Vous n'avez pas à taper le deuxième accessoire immédiatement après. Tant que vous n'appuyez pas sur MIC ou n'éteignez pas le micro, l'effet ROBOT-TONNANT s'engagera dès que vous taperez le deuxième accessoire.

Si vous voulez passer de la HAUTE NOTE à l'effet ÉCHO-TASTIQUE ou inversement sans lancer l'effet ROBOT-TONNANT, appuyez sur MIC entre les deux.

BOUTON MIC

Appuyez sur MIC pour retourner au mode d'amplification normale de la voix.

PRISE MP3

Branchez un lecteur MP3 dans cette prise et chantez au son de vos chansons préférées. Ajustez le volume du lecteur MP3 à votre goût

CUSTOMER ASSISTANCE

Courriel: info@firstact.com
First Act Inc.
745 Boylston Street
Boston, MA 02116 USA
firstact.com.

Aucune partie de cette publication ne peut être reproduite sous quelque forme ou par quelque moyen que ce soit sans la permission écrite de First Act Inc.



NOTICES DE SÉCURITÉ IMPORTANTES

Veuillez lire cette section attentivement.

- N'utilisez pas l'appareil près de l'eau.
- Ne le nettoyez qu'avec un linge sec.
- Ne l'utilisez pas près d'une source de chaleur comme un radiateur, une chauffe-eau, une cuisinière ou tout autre machine qui produit de la chaleur.
- Confiez tout entretien à un personnel qualifié. Un entretien peut être requis si le produit est endommagé – un liquide a été renversé sur le produit ou il a été exposé à la pluie ou à l'humidité, il ne fonctionne pas normalement ou il a été échappé.
- Pour réduire le risque d'incendie et de choc électrique, n'exposez pas le produit à la pluie ou à l'humidité.

Avertissements

Ne modifiez pas les pièces sans le conseil d'un professionnel. Un changement peut entraîner un mauvais fonctionnement.

Gardez le sac d'emballage hors de la portée des enfants; il présente un risque de suffocation.

Déplacez toujours le produit avec soin pour éviter d'endommager le revêtement et les composants internes.

Évitez le contact du produit avec des acides ou des alcalis. Ne l'utilisez pas dans un milieu où l'air est très humide ou corrosif afin d'éviter la corrosion des contacts électriques
NOTE : Cet appareil a été testé et trouvé conforme aux limites pour un appareil numérique de classe B faisant l'objet de la partie 15 des règlements de la FCC. Ces limites se veulent d'offrir une protection raisonnable contre l'interférence nocive en installation résidentielle. Cet appareil génère, utilise et peut irradier une énergie de fréquence radio et, s'il n'est pas installé et utilisé conformément à ces directives, peut causer une interférence nocive aux communications radio. Toutefois, on ne garantit aucunement qu'il n'y aura pas d'interférence dans une installation particulière. Si cet appareil cause une interférence nocive à la réception radio ou télé, ce qui peut être établi en éteignant et rallumant l'appareil, on encourage l'utilisateur de tenter de remédier à la situation en prenant une ou plusieurs des mesures suivantes :

- Réorientez ou déplacez l'antenne réceptrice;
- Augmentez la distance entre l'appareil et le poste récepteur;
- Connectez l'appareil dans une prise de courant ou un circuit différent de celui où le poste récepteur est connecté;
- Recherchez l'aide ou le conseil du revendeur ou d'un réparateur d'appareils radio ou de télévision.

Avertissement : Tout changement ou toute modification apportée à cet appareil sans l'approbation expresse de la partie responsable de la conformité peut rendre nulle l'autorisation de l'utilisateur d'opérer l'appareil.

Ce dispositif est conforme aux normes CNR d'Industrie Canada pour les dispositifs exemptés de licence. L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes : (1) il ne doit pas produire de brouillage, et (2) il doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Ce dispositif est conforme à la partie 15 des règlements de la FCC. L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes : (1) il ne doit pas produire de brouillage, et (2) il doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

S'applique aux : F1906, F1907 Code FCC : ZDMVCKRZB, IC: 9200A-F1906 L'étiquette se trouve dans le logement des piles du microphone.

Les couleurs et les spécifications dans ce guide peuvent différer quelque peu du produit réel.
First Act, First Act Discovery, Voice RockrZ et les logos connexes sont des marques de commerce de First Act Inc.

© 2011 First Act Inc. Tous droits réservés.
All Rights Reserved.
VR.M.EF.02