

# Religious Content Player TB-108

(King James Version)

## User Manual



Fig.1 Religious Content Player TB-108 Overview

### Key Guide

Power Switch – Slide it Down to Power On the Religious Content Player or Slide it Up to Power Off

Mute Switch – Slide it Down to Un-Mute the Loud Speaker or Slide it Up to Mute

**M** Quit/Menu Key – Press this key to quit the current Menu and return to the previous menu. To Stop and quit to Menu the Bible Recitation during the Bible Recitation playback.

**V** Volume Key – Press this key during playback, a volume screen shown. Then, use Prev/Next Keys to adjust the volume up and down.

**⏮ ⏭** Prev/Next (Vol++/Vol--) Key – Use these keys to navigate the Menu up and down or adjust the volume in the volume screen.

**⏸** Enter/Play/Pause – Press this key to Enter the next Menu or Confirm the selected item or Toggle Play / Pause during Bible Recitation Playback.

### Introduction

Welcome to the world of Religious Content Player. This Religious Content Player model is a powerful, portable electronic Bible, with voice capability and text synchronization. With the King James Version of Talking Bible, you can:

- find any testament, book or chapter using the Menu Screen
- navigate the Menu System to quickly find favorite chapters;
- read Bible verses and listen to the Bible Recitation simultaneously;
- read Bible silently by the Text Reading Mode;
- share Bible recitation with family or friends by playing thru the built-in loud speaker;
- carry the light weight and portable electronic Bible with you anywhere;

To learn more about your electronic Bible, read this User's Guide.

### Operating Instructions

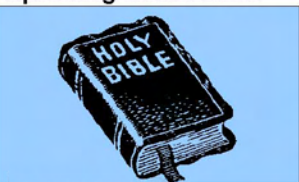 


Fig.2 StartUP Logo

Power on the Religious Content Player by sliding up the power switch at the right hand side. A Holy Bible logo (Fig.2) will be shown during the machine start up.

Finally, the Religious Content Player Main Menu will be shown (Fig.3) after boot up. You can move the cursor up and down by the Prev/Next key.

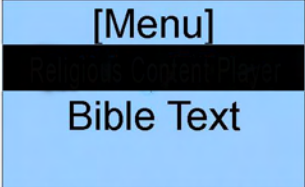 


Fig.3 Religious Content Player Main Menu

"Religious Content Player" section provides simultaneous Bible Recitation and Synchronized Text on the LCD display.

"Bible Text" section provides a text only Bible reader without voice playback. You can navigate the Holy Bible by the Menu and reading the Verses by Prev/Next Key.

## Religious Content Player Sub Menu

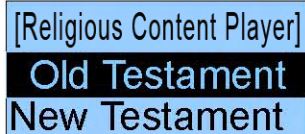 


Fig.4 Talking Bible Sub Menu

You can select Old or New Testament of the Holy Bible in this Menu (Fig.4) and press "Enter/Play/Pause" key to confirm. You can press "Quit" key to return to Main Menu.

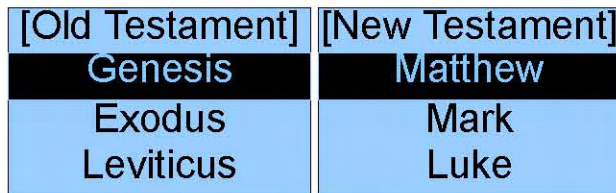 


Fig.5 Old & New Testament Sub Menu

In the Sub Menus of Old/New Testament, you can see list of all books in the Menu. You can use Prev/Next key to move cursor up or down and press "Enter/Play/Pause" key to confirm and enter the selected book section. You can press "Quit" key to return to the previous Menu.

## Bible Text Sub Menu



Fig.8 Bible Text Sub Menu

The operation of Bible Text only mode is the same as Talking Bible mode except the playback screen is replaced with static reader. You need to press "Prev/Next" key to go to the previous/next verses and no voice will be played.

## Volume Control

You can adjust volume during playback mode by pressing the "Volume" key. The volume control screen will be shown as Fig.9. You can use "Prev/Next" key to adjust the volume. The value of current volume level is also shown. This control screen will be hidden automatically when you leaves any key untouched for a few seconds.

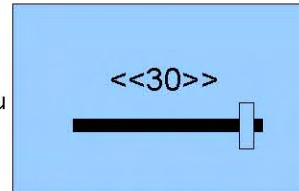 


Fig.9 Volume Control Screen

## FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment

does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices.

Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## Book Sub Menu

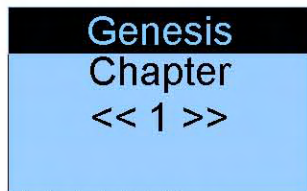 


Fig.6 Book Sub Menu

Battery Level Indicator

Fig.6 shows the Book Sub Menu of the Religious Content Player. The name of the selected book is displayed on the title bar. Below the title bar, the number of chapter is shown. You can navigate your favorite chapter by pressing "Prev/Next" key to change to any available chapters. You can press "Quit" key to return to previous Menu.

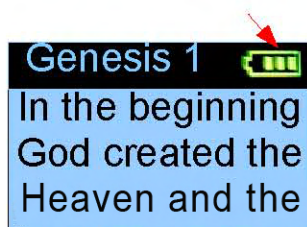 


Fig.7 Playback/Recitation Screen

Fig.7 shows the Religious Content Player playback/recitation screen. The title bar is showing the name of current book along with the number of chapter. Below the title bar is the 3-lines content of the Holy Bible in the current section. You can press "Quit" key to return to previous Menu and stop the playback.

## Charging

You can recharge your Religious Content Player by the provided AC Adapter with the USB Mini-B (5-pin) male plug. The charging screen will be shown during charging.

## Trouble Shooting & Cautions

(1) If you found the Religious Content Player is operating normally in the Menu System but there is NO sound output at the loudspeaker at all during playback, please check if the mute button is enable. You should slide down the mute button to disable muting the loud speaker.

(2) If the Religious Content Player doesn't power on properly, please switch it to off position for 30 seconds and switch it on again.

(3) Please do not re-charge by any unpowered USB hubs.

(4) Do not switch On the Religious Content Player when there is extremely low power. This will drain out the Lithium battery and it may never re-charge again.

## Religious Content Player TB-108 Specifications

- 1.5" (128x64) STN LCD with backlight
- Full KJV Holy Bible with Voice & Text Sync
- Built-in 256MB NAND Flash
- Mono Loudspeaker
- Built-in Li-ion Rechargeable Battery
- USB Mini-B (5-pin) socket for recharging
- 3.5mm Headphone Jack
- (Built-in NAND Flash memory not accessible by user)

**Pre-Caution:** The item will go into sleep mode after 2 minutes of idle. To power it on again, slide power to on and then press & hold play/pause button for 3 seconds.