

SETUP CODES FOR TVS

CÓDIGOS DE CONFIGURACIÓN PARA LOS TELEVISORES

3M	10737, 11616, 11655
A-Mark	10003
Abex	10032
Accurian	11803
Action	10873
Admiral	10093, 10463
Advent	10761, 10783, 10815, 10817
Adventura	10046
Aifron	10891
Aiko	10092
Aiwa	10701, 11914
Akai	10812, 11675, 10060, 10702, 10030, 10098, 10672, 11207, 11385, 11676, 11688, 11689, 11692, 11935, 11903
Alaron	10179, 10183, 10216
Albatron	10700, 10843
Ambassador	10177
America Action	10180
Ampro	10751
Anam	10180
Anam National	10055
AOC	10030, 11590, 11365
Aomni	11623
Apex Digital	10156, 10748, 10879, 10765, 10767, 10890, 11217, 11991
Archer	10003
Astar	11531, 11738
Audiovox	10451, 10180, 10092, 10003, 10623, 10802, 10846, 10875, 11284, 11951, 11952
Aurora Systems	10801
Aventura	10171
Belcor	10019
Bell & Howell	10154, 10016
BenQ	11032, 11315
Bradford	10180
Brillian	11007, 11257, 11258
Brockwood	10019
Broksonic	10236, 10463
Bush	10355
Byd:sign	11309
Cadla	11283
Candle	10030, 10046, 10056, 10186
Canon	10793, 11396
Carnivale	10030
Carver	10054, 10170
Casio	10611, 11205
CCE	10217, 10329
Celebrity	10000
Celera	10765
Changhong	10765
Cinego	11986
Citizen	10060, 10030, 10092, 10046, 10056, 10186, 10280, 10561, 11669, 11671, 11672, 11928
Clarion	10180
Classic	11984
Coby	12017, 11531
Commercial Solutions	11447, 10047
Compaq	10749
Concerto	10056
Contec	10180
Craig	10180
Crosley	10054
Crown	10180
Curtis Mathes	10047, 10054, 10154, 10451, 10093, 10060, 10702, 10030, 10145, 10166, 10016, 10056, 10466, 10747, 11147, 11347
CXC	10180
CyberHome	10794
Cytron	11326, 12003
Daewoo	10451, 10092, 10019, 10066, 11661, 10623, 10067, 10091, 10661, 10672, 11909, 11928
Daytron	10019
Dell	11264, 11080, 11178, 11403
Delta	11369
Denon	10145, 10511

Denstar	10628
Diamond Vision	11801, 11996
Digistar	11565
Digital Lifestyles	11765, 11822
Digital Projection Inc.	11482, 11725, 11726
Dream Vision	11297
Dumont	10017
Durabrand	10463, 10180, 10178, 10171
Dwin	10093, 10720, 10747, 10774
Dynatech	10049
Dynex	11463, 11780, 11785
Eiki	10735
Electroband	10000
Electrograph	11755, 11623
Electrohome	10463, 10446, 11570, 11670, 11672, 11760, 11761
Element	11687
Emerson	10154, 11864, 10451, 10236, 10463, 10180, 10178, 10171, 11963, 11928, 11913, 11911, 11909, 11905, 11665, 10282, 10280, 10270, 10183, 10181, 10179, 10177, 10038, 10019, 10623, 11963
Emprex	11422, 11546, 11765
Envision	10030, 10813, 11365
Epson	11122, 11290
Erae	11222
ESA	10812, 10171, 11963
Fisher	10154, 10159
Fujitsu	10179, 10186, 10683, 10853, 12008, 10809
Funai	10180, 10171, 10179, 11904, 11963, 11271
Futurtech	10180
Gateway	11755, 11001, 11756
GE	11447, 10047, 10051, 10451, 10178, 10021, 10027, 10029, 10055, 10135, 10279, 10282, 10747, 11907, 11919, 11922, 11347
Gibraltar	10017, 10030, 10019
Go Video	10886, 11823, 11831
GoldStar	10178, 10030, 10002, 10019, 10032
Goodmans	10360
Gradiente	10392
Grundig	10683
Grunpy	10180, 10179
H & B	11366
Haier	11034, 10178, 11265, 10768, 11009
Hallmark	10178
Hanns.G	11783
Hannspree	11348, 11745, 11783
Harley-Davidson	10043, 10179, 11904
Harman/Kardon	10054, 10078
Harvard	10180, 10068
Havermy	10093
Helios	10865
Hello Kitty	10451
Hewlett-Packard	11494, 11502, 11088, 11089, 11101
Hisense	10748, 11660
Hitachi	11145, 10145, 12243, 12143, 11904, 11345, 10797, 10737, 10724, 10723, 10413, 10279, 10227, 10173, 10151, 10097, 10095, 10056, 10038, 10032, 10016, 11960
Hyundai	10849, 11219, 11294
I-Inc	11746
iLo	11286, 11603, 11665, 11684
Infinity	10054
InFocus	10736, 10738, 10741, 10781
Initial	11990, 11603
Insignia	10171, 11780, 11892, 11204, 11326, 11517, 11641, 11963, 12002
Inteq	10017
IX	10877
Janeil	10046
JBL	10054
JCB	10000

Jensen	10761, 10050, 10815, 10817
JVC	10053, 10036, 10160, 10169, 10731, 11349, 11253
Kamp	10216
Kawasho	10216, 10308
Kaypani	10052
KDS	11687
KEC	10180
Kenwood	10030, 10019
KLH	10765, 10767
Kloss	10024, 10046, 10078
Knoll Systems	10781
Konka	10628, 10632, 10638, 10707, 11385, 11831, 11939
Kost	11262, 11483
Kreisen	10876, 11474
KTV	10180, 10030, 10183, 10217
LG	11265, 10178, 10700, 10442, 10856, 11178, 11530, 11637, 11758, 11934, 11993
Lloyd's	11904
Loewe	10136
Logik	10016
Luce	10837, 11031
Luxman	10056
LXI	10047, 10054, 10154, 10156
Magnavox	11454, 11866, 10054, 10030, 10706, 11990, 11963, 11913, 11904, 11525, 11365, 11198, 11254, 10386, 10802, 10230, 10187, 10186, 10179, 10096, 10036, 10028, 10024
Magnin	11907
Majestic	10015, 10016
Marantz	10054, 10030, 10704, 10854, 10855, 11398, 11554
Matsushita	10250, 10650
Maxent	11755, 11714, 11757
MB Quart	11868
Megapower	10700
Megatron	10178, 10145, 10003
Memorex	10154, 10463, 10150, 10178, 10016, 10179, 10877, 11570, 11911, 11920
MGA	10150, 10178, 10030, 10019
Micro	11436
Midland	10047, 10017, 10051, 10032, 10135, 10747
Mintek	11990, 11603
Minutz	10021
Mitsubishi	11250, 10093, 10150, 10178, 10014, 10019, 10098, 10155, 10331, 10358, 10592, 10836, 10868, 11278, 11392
Monivision	10700, 10843
Motorola	10093, 10055, 10835
Moxell	10835
MTC	10060, 10030, 10019, 10049, 10056, 10091, 10216
Multitech	10180, 10049, 10217
NAD	10156, 10178, 10866, 10037
Nakamichi	11493
Naxa	11998
NEC	10030, 10019, 10036, 10056, 10170, 10434, 10455, 10497, 10882, 11398, 11704, 11797, 12026
NetTV	11755
Nikko	10178, 10030, 10092
Niko	11581
Noblex	10430
Norcent	10748, 10824, 11089, 11365
Norwood Micro	11286, 11296, 11303
Noshi	10018
NTC	10092
NuVision	11657
Olevia	11610, 11144, 11240, 11331
Olympus	11342
Onwa	10180
Optimus	10154, 10250, 10166, 10650, 11913
Optoma	10887, 11348, 11674
Optonica	10093, 10165
Orion	10236, 10463, 11463, 10179, 11905, 11911

Panasonic	10250, 10051, 10055, 10650, 11291, 11941, 10162, 10226, 10375, 11310, 11410, 11919
Penney	10047, 10156, 10051, 10060, 10178, 10030, 11919, 11907, 10747, 10309, 10149, 10135, 10110, 10032, 10027, 10021
Petters	11523
Philco	10054, 10030, 10019, 10020, 10028, 10096, 10302
Philips	11454, 10054, 10037, 10690, 11483
Pilot	10030, 10019
Pioneer	10166, 10679, 10866, 10038, 10172, 11398
Planar	11496
Polaroid	10765, 12063, 12002, 11991, 11962, 11769, 11767, 11766, 11762, 11687, 11565, 11538, 11523, 11385, 11341, 11328, 11327, 11326, 11316, 11314
Portland	10092, 10019
Prima	10761, 10783, 10815, 10817, 11389, 11785, 11933
Princeton	10700, 10717
Prism	10051
Proscan	11447, 10178, 10047, 11347, 10466, 10747, 11922
Proton	10178, 10003, 10031, 10052, 10466
Protron	11320, 11323
Proview	10835, 11687
Pulsar	10017, 10019
Puneet	11546
Pvision	11222
Quasar	10250, 10051, 10055, 10165, 10650, 10219, 11919
RadioShack	10047, 10154, 10180, 10178, 10030, 10165
RCA	11447, 10047, 12002, 11953, 11948, 11922, 11919, 11907, 11781, 10747, 10278, 10254, 10135, 10090, 10679, 11047, 11147, 11247, 11347, 11547, 11958, 12002, 10038, 10029, 10019, 10018
Realistic	10154, 10180, 10178, 10030, 10165, 10019, 10032, 10056
RevolutionHD	11623
Rhapsody	10183, 10216
Runco	10017, 10030, 10497, 10612
Sampo	10030, 11755, 10032, 10052, 10100, 10110, 11597
Samsung	10812, 10060, 10702, 10178, 10030, 11959, 11632, 11575, 11060, 10814, 10766, 10587, 10482, 10427, 10408, 10329, 10217, 10056, 10032, 10019, 11903
Sansui	10463, 11409, 11904, 11911, 11935
Sanyo	10154, 10088, 10146, 10159, 10232, 10484, 10735, 10798, 10799, 11907
Sceptre	10878, 11217, 11360, 11599
Scimitsu	10019
Scotch	10178
Scott	10236, 10180, 10178, 10019, 10179, 10309, 11711
Sears	10047, 10054, 10154, 10156, 10178, 10171, 10015, 10056, 10146, 10149, 10159, 10168, 10179, 10747, 11007, 11904
Seleco	10737, 11297
Sharp	10093, 10153, 10165, 10386, 11602, 10398, 10491, 10851
Sharper Image	11950
Sheng Chia	10093
Sherwood	11399
Shogun	10019
Signature	10016
Signet	10800, 10844, 11262
SIM2 Multimedia	11297
Simpson	10186, 10187
Skyworth	11799
Solarism	11220

Sole	10813, 11031, 11366, 11377, 11483, 11530, 11623, 12075
Sony	11100, 10000, 10011, 10273, 10353, 10834, 11317, 11400, 11685, 11786, 11791, 11904, 11925
Soundesign	10180, 10178, 10179, 10186
Sova	11320, 11952
Soyo	11546, 11746, 11824, 11826, 11828, 11830, 11831
Spectricon	10003, 10137
Spectroniq	11687
Squareview	10171
SSS	10180, 10019
Starlite	10180
Studio Experience	10843
SunBrite	11420, 11435
Superscan	10093, 10864
Supre-Macy	10046
Supreme	10000
SVA	10748, 10587, 10768, 10865, 10870, 10871, 10872
Sylvania	11864, 10054, 10030, 10171, 11271, 10020, 10028, 10065, 10096, 11314, 11665, 11963
Symphonic	10180, 10171, 11904, 11913
Syntax	11144, 11240, 11331, 11610
Tandy	10093, 10218
Tashiko	10588
Tatung	10003, 10049, 10055, 11101, 11286, 11287, 11288, 11361, 11503, 11756
Technics	10250, 10051
Technol Ace	10179
Techview	10847, 12004
Technwood	10051, 10003, 10056
Teknika	10054, 10180, 10150, 10060, 10092, 10016, 10019, 10056, 10175, 10179, 10186, 10312
Telefunken	10702, 10056, 10101
Telemagic	10735
Tera	10031
Thomas	11904
Thomson	10209, 10210, 10625
TMK	10178, 10056, 10177
TNCI	10017
Toshiba	10154, 11256, 10156, 11265, 10060, 10036, 10650, 10845, 10149, 10736, 10832, 11343, 11369, 11704, 11935, 11156, 11356, 11656
TruTech	11723, 12066
TVS	10463
Ultra	10391, 11323
Universal	10027
US Logic	11286, 11303
Vector Research	10030
Venturer	11865
VEOS	11007
Victor	10053
Video Concepts	10098
Vidikron	10054, 10242, 11398, 11629
Vidtech	10178, 10019, 10036
Viewsonic	11755, 12014, 10724, 10775, 10797, 10857, 10864, 10885, 11330, 11342, 11578, 11627
Viking	10046, 10312
Viore	11207, 11684, 11811
Visart	11336
Vizio	11758, 10864, 10885, 11756
Wards	10054, 10178, 10030, 10016, 10019, 10020, 10021, 10027, 10028, 10029, 10056, 10096
Waycon	10156
Westinghouse	10000, 10451, 10885, 10889, 10890, 11282, 11577
White Westinghouse	10463, 10623, 11909
WinBook	11381, 11503
Wyse	11365
Xococo	11469
Yamaha	10030, 10019, 10797, 11407
Zenith	10017, 10463, 11265, 10178, 10092, 10016, 11904, 11909
Zonda	10003

Installing your digital set-top box or DTA out of sight.

Your remote control can be paired directly with your digital set-top box or DTA, allowing you to place the device out of the line of sight (in an entertainment center or behind your TV, for example).

Follow the steps below to pair your remote control with your digital set-top box or DTA.

Once your remote control is paired to a specific digital set-top box or DTA, it will not control any other set-top box or DTA in your home.

If you would like to use your remote control for another digital set-top box or DTA in your home, you can “un-pair” the devices by following the instructions included in the “Remove remote control pairing” section of this document.

HERE’S HOW:

1. Program your remote to control your TV as described in the “It’s simple to program your remote to control your TV” section. If you’ve already done this, proceed to Step 2.
2. Press and hold the **Setup** button for

- 3 seconds until the **All Power** button changes from red to green.
3. Press the **XFINITY** button on the remote control. Your TV should display on-screen instructions. If the on-screen instructions do not