

# SHANGHAI BITWISE

## Induction Lamp Ballast Specification

### 1、Introduction

Install the ballast and fit the induction lamp , then connect power.

### 2、Feature

Model	Rate Power (W)	Input Voltage (V)	Input Current (A)	Frequency (Hz)	Power factor	Ambient Temperature (°C)	Surface Temperature (°C)	Outline Dimensions L×W×H (mm)
WJZ-80-W220-F1	80W	220-240±10%	0.36-0.33	50/60	0.98	50	70	230×120×62
WJZ-120-W220-F1	120W	220-240±10%	0.56-0.50	50/60	0.99	50	70	230×120×62
WJZ-150-W220-F1	150W	220-240±10%	0.68-0.63	50/60	0.99	50	70	230×120×62
WJZ-200-W220-F1	200W	220-240±10%	0.91-0.83	50/60	0.99	50	70	230×120×62
WJZ-250-W220-F1	250W	220-240±10%	1.17-1.04	50/60	0.99	50	70	230×120×62
WJZ-300-W220-F1	300W	220-240±10%	1.36-1.25	50/60	0.99	50	70	230×120×62

### 3、Install Introduction

1 First fit the ballast on the housing , then connect the lamp and ballast.


2 Connect the prepared power cables to ballast .

### 4、Note

1 Power must be off before installation.

2 Transportation and installation of the ballast should be handle with care.

3 Ballast and induction lamp must be fit together exactly.

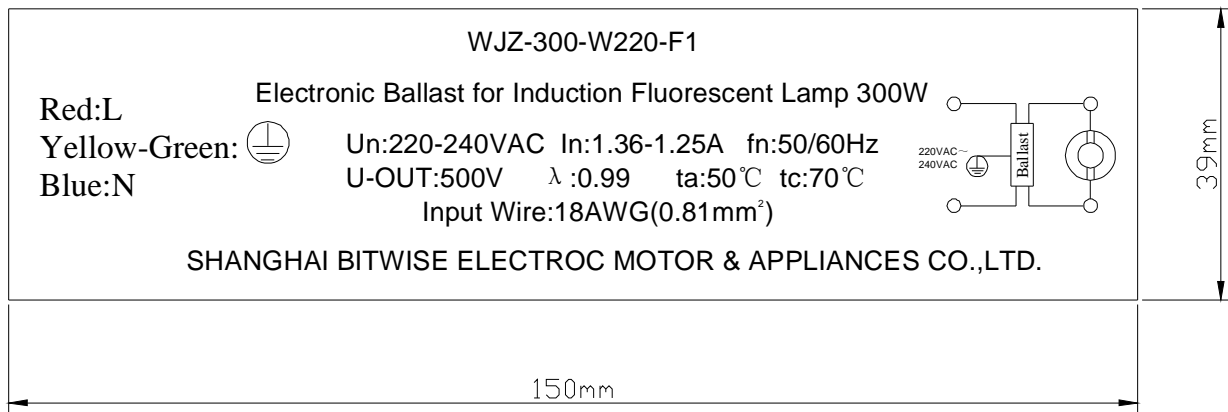

WARNING: This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45–30 MHz.