

PRESSURE TRANSMITTER - REMOVAL/INSTALLATION

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to remove/install the pressure transmitter.
- B. The pressure transmitter is installed in each hydraulic manifold.
- C. You can get access to the pressure transmitter of system 1 through access panel 193BL (AMM MPP 06-41-01/100).
- D. You can get access to the pressure transmitter of system 2 through access panel 193CR (AMM MPP 06-41-01/100).
- E. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

TASK NUMBER	DESCRIPTION	EFFECTIVITY
29-30-02-000-801-A	PRESSURE TRANSMITTER - REMOVAL	ALL
29-30-02-400-801-A	PRESSURE TRANSMITTER - INSTALLATION	ALL

TASK 29-30-02-000-801-A

EFFECTIVITY: ALL

2. PRESSURE TRANSMITTER - REMOVAL

A. General

(1) This task gives the procedures to remove the pressure transmitter.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-01/100	-
AMM TASK 29-10-00-860-802-A/200	HYDRAULIC SYSTEM - PRESSURIZATION WITH EMDP

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
193	193BL	Hydraulic compartment of system 1
193	193CR	Hydraulic compartment of system 2

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Rubber Gloves, Phosphate Ester-Base, Fluid-Resistant	Protection for the hands	1
Commercially available	Rubber Goggles, Phosphate Ester-Base, Fluid-Resistant	Protection for the eyes	1

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Hydraulic compartment of system 1 and system 2

I. Preparation

SUBTASK 841-002-A

(1) On the circuit breaker panel, open the ELEC PUMP 1 and (or) ELEC PUMP 2 circuit breaker(s) and attach a DO-NOT-CLOSE tag to it (them).

(2) Depressurize the related hydraulic system ([AMM TASK 29-10-00-860-802-A/200](#)).

- (3) Remove access panels 193BL and (or) 193CR (AMM MPP 06-41-01/100).

J. Removal [\(Figure 401\)](#)

SUBTASK 020-002-A


WARNING: THE HYDRAULIC SYSTEM CONTAINS PHOSPHATE-ESTER HYDRAULIC FLUID. THE FLUID CAN CAUSE IRRITATION IN YOUR SKIN OR INJURY TO YOUR EYES. USE THE APPLICABLE GOGGLES AND RUBBER GLOVES. IF THE FLUID TOUCHES YOU, FLUSH YOUR SKIN WITH WATER. IF IT GETS IN YOUR EYES, FLUSH THEM WITH WATER AND GET MEDICAL HELP.

- (1) Disconnect the electrical connector (1).
- (2) Remove the pressure transmitter (2) with the related O-ring (3).
- (3) Discard the O-ring (3) removed in step (2).

EFFECTIVITY: ALL

Pressure Transmitter - Removal/Installation

Figure 401

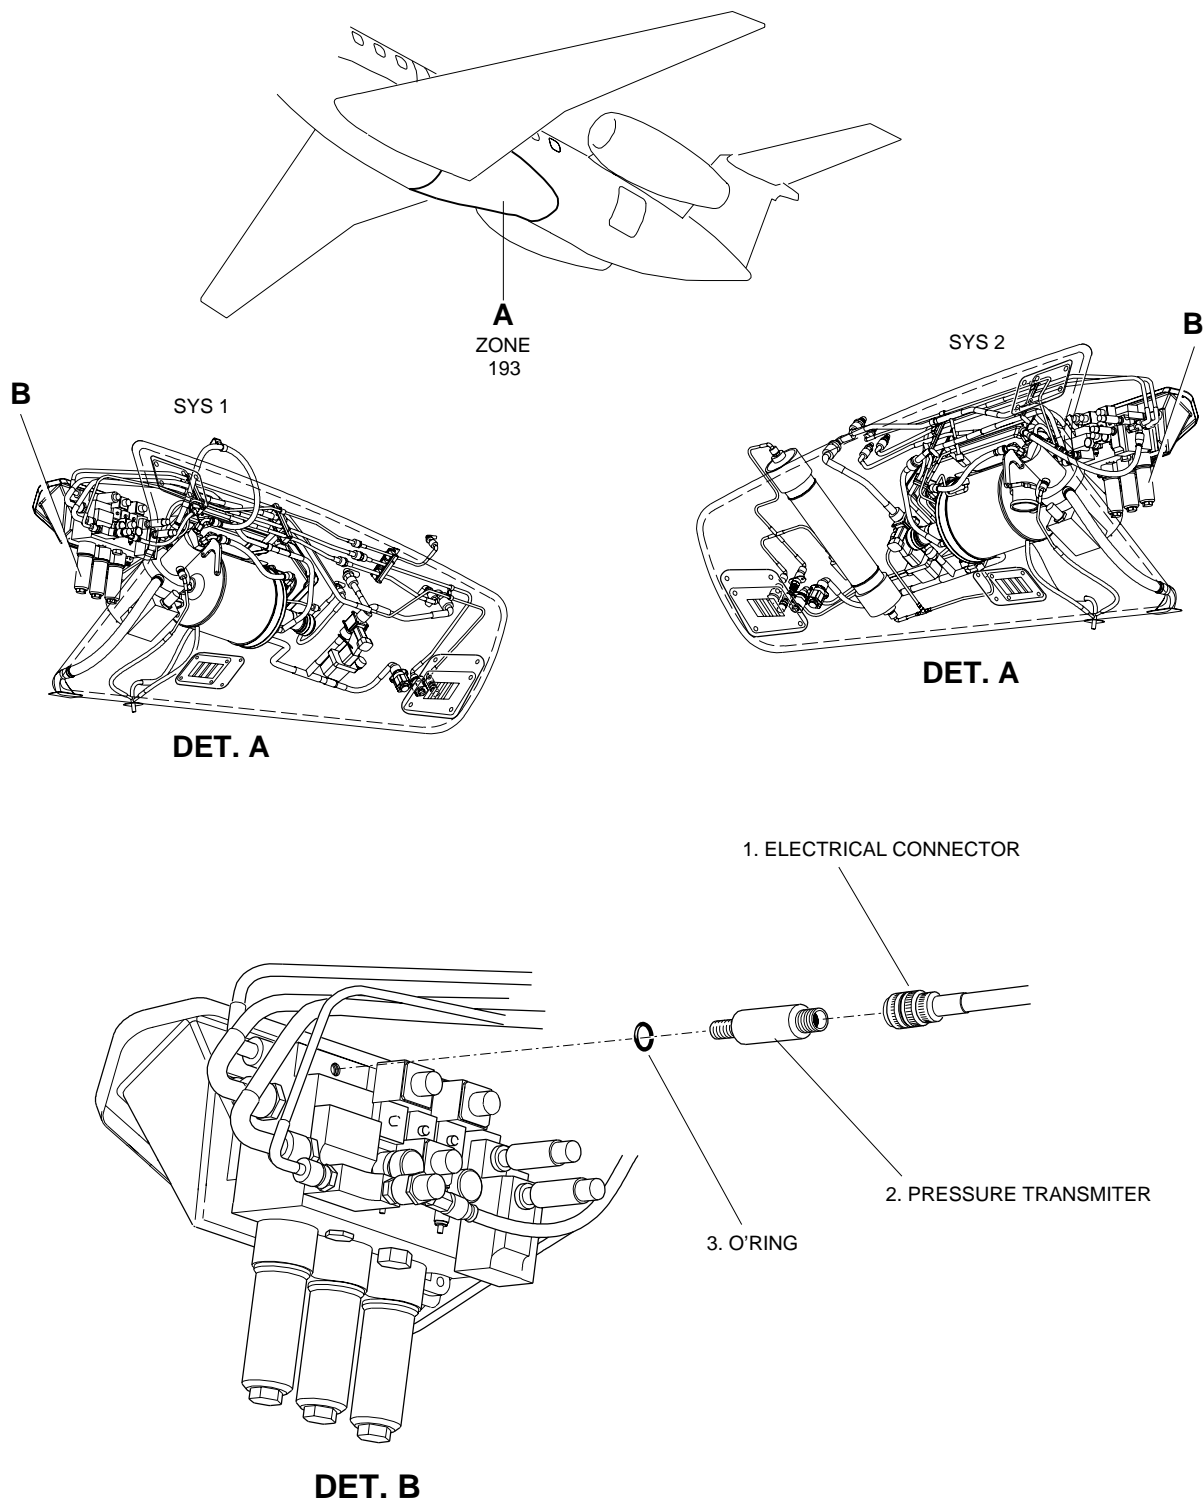

145AMM290058.MCE A

TASK 29-30-02-400-801-A
EFFECTIVITY: ALL

3. PRESSURE TRANSMITTER - INSTALLATION

A. General

(1) This task gives the procedures to install the pressure transmitter.

B. References

REFERENCE	DESIGNATION
AMM MPP 06-41-01/100	-
AMM TASK 29-10-00-860-801-A/200	HYDRAULIC SYSTEM - PRESSURIZATION WITH HTS
IPC 29-30-02	PRESSURE TRANSMITTER

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
193	193BL	Hydraulic compartment of system 1
193	193CR	Hydraulic compartment of system 2

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Rubber Gloves, Phosphate Ester-Base, Fluid-Resistant	Protection for the hands	1
Commercially available	Rubber Goggles, Phosphate Ester-Base, Fluid-Resistant	Protection for the eyes	1

F. Consumable Materials

Not Applicable

G. Expendable Parts

ITEM	IPC REFERENCE (VENDOR REFERENCE)	QTY
O-ring	IPC 29-30-02	1/LRU

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Hydraulic compartment of system 1 and system 2

I. Installation (Figure 401)

SUBTASK 420-002-A

- (1) Install the pressure transmitter (2) with the related new O-ring (3).
- (2) Connect the electrical connector (1).

J. Follow-on

SUBTASK 842-002-A

- (1) On the circuit breaker panel, close the ELEC PUMP 1 and (or) ELEC PUMP 2 circuit breaker(s) and remove the DO-NOT-CLOSE tag from it (them).
- (2) Pressurize the related hydraulic system ([AMM TASK 29-10-00-860-801-A/200](#)) and make sure that there are no leaks in the pressure transmitter.
- (3) Do the bleed of air from the hydraulic system lines ([AMM TASK 29-10-00-860-801-A/200](#)).
- (4) Install access panels 193BL and (or) 193CR (AMM MPP 06-41-01/100).