

IMPORTANT: E5V is the external power supply
if this order is not respected, the board / PC might be damaged

1. Connect the jumper between pin 2 and pin 3 of JP5
2. Check that JP1 is removed
3. Connect the external power source to E5V (CN7 pin 6) – Already handled by the PCB
Use the Power Terminal
4. Power on the external power supply (5 V)
5. Check that LD3 is turned ON
6. Connect the PC to USB connector CN1

