

自定义灯光颜色

①:Fn+Tab,进入录制模式,1-5灯亮(提示可以录制5组灯光,同时提示保存在第几组)。

②:按下数字选择组别,1:第一组、2:第二组、3:第三组、4:第四组、5:第五组。

③:按下所需按键,点按切换灯光状态。切换顺序为亮、灭。

保存时Fn键灯光的状态会切换一次,请把Fn键灯光的状态调到你想要的前一个状态。

④:Fn+Tab,进行保存。

⑤:Fn+→,展示自定义灯效。

未录制灯光的情况下,Fn+→,第一组灯光默认为1、Q、A、Z;

第二组灯光默认为2、W、S、X;

第三组灯光默认为3、E、D、C;

第四组灯光默认为4、R、F、V;

第五组灯光默认为5、T、G、B;

Caps Lock、Page Up、Page Down不支持自定义背光。



Self-Defined Light Color

①: Press Fn + Tab to enter the recording mode, when LED on number 1 to 5 turn on which means there are 5 group of settings are available as well the saving path.

②: Press the numbers to select the group 1: 1st group 2: 2nd group.....

③: Pressing the required key to swap the LED status. Swapping sequence is ON/OFF .

The status of Fn key will change after saving, please recover Fn status as required.

④: Fn+Tab, save.

⑤: Fn→ to show the self-defined light effect. If no light effect recording,

the defaulted 1st group of setting will be 1、Q、A、Z;

2nd group of setting will be 2、W、S、X;

3rd group of setting will be 3、E、D、C;

4th group of setting will be 4、R、F、V;

5th group of setting will be 5、T、G、B;

Caps Lock、Page Up、Page Down does not support self-define.



Esc、Fn功能

Esc、Fn Functions

Esc功能	按键组合	功能
	Shift+Esc	~
	Fn+Esc	`
Fn功能	Fn+数字行(1至=)	F行(F1至F12)
	Fn+F行(F1至F12)	数字行(1至=)
	Fn+J	Print Screen
	Fn+K	Scroll Lock
	Fn+L	Pause
	Fn+<	Home
	Fn+>	End
	Fn+Ctrl(右)	Application Key

Esc Functions	Key Combinations	Functions
	Shift + Esc	~
	Fn + Esc	`
Fn Functions	Fn + Number Line	F Line
	Fn + F Line	Number Line
	Fn + J	Print Screen
	Fn + K	Scroll Lock
	Fn + L	Pause
	Fn + <	Home
	Fn + >	End
	Fn + Ctrl(Right)	Application Key



智能无冲切换(默认为6键无冲)

Smart NKRO Swapping (Defaulted Version is 6 Key Rollover)

USB智能无冲切换,同时按下少于6个按键为6键无冲,同时按下超过6个按键则自动切换为全键无冲。

Pressing less than 6 keys at the same time, the keyboard will be 6 key rollover, if more than 6 keys, the keyboard will automatically become NKRO.

换键值功能

Key Function Swapping

可通过驱动更改按键的键值,请到官网varmilo.com下载驱动。

Key function can be changed by firmware, please download from www.varmilo.com.

数字行与F行整行切换功能

Number Line and F Line Swapping

F行:Fn+Page Down,按一次,切换为F功能行功能(此时Page Down灯亮,Page Up灯灭)。

数字行:Fn+Page Up,按一次,切换为数字行功能(此时Page Up灯亮,Page Down灯灭)。

Press Fn+Page Down,numer row changed to F row(Page Down light on, Page Up light off).

Press Fn+Page Up, F row change to number row(Page Up light on, Page Down light off).

