


Escon config RE30 motors and PWM for WoodenHaptics 2016-2017 edition

Using “Escon Studio” software which can be found under “Downloads” at the [Escon 50/5 Website](#) ([Direct link](#))

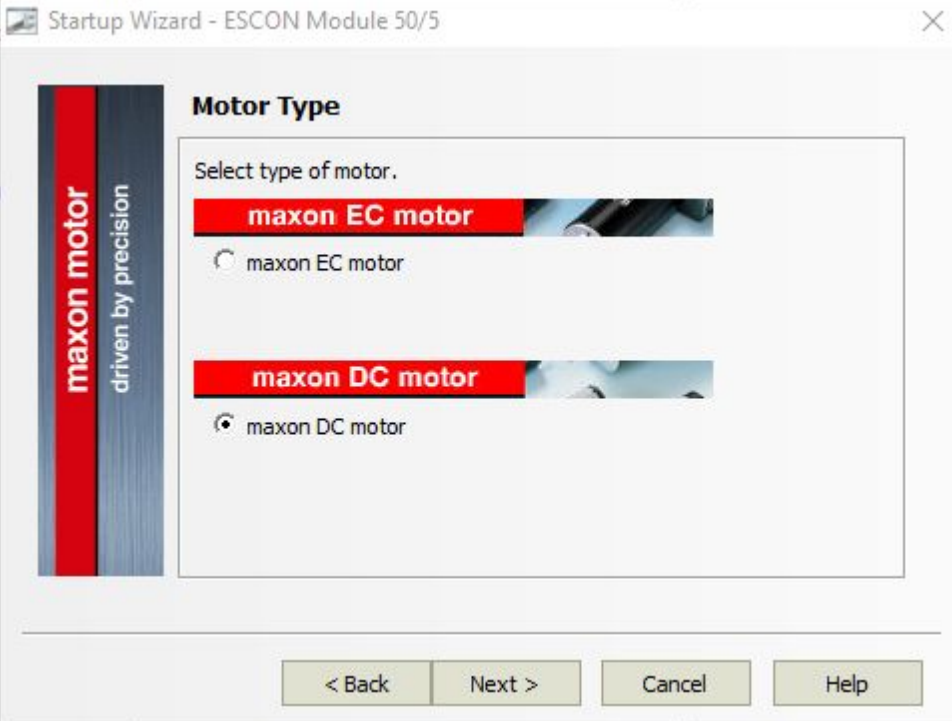


Startup Wizard - ESCON Module 50/5


**maxon motor**  
driven by precision

**Motor Type**

Select type of motor.


**maxon EC motor** 

☐ maxon EC motor

**maxon DC motor** 

☒ maxon DC motor

< Back   Next >   Cancel   Help

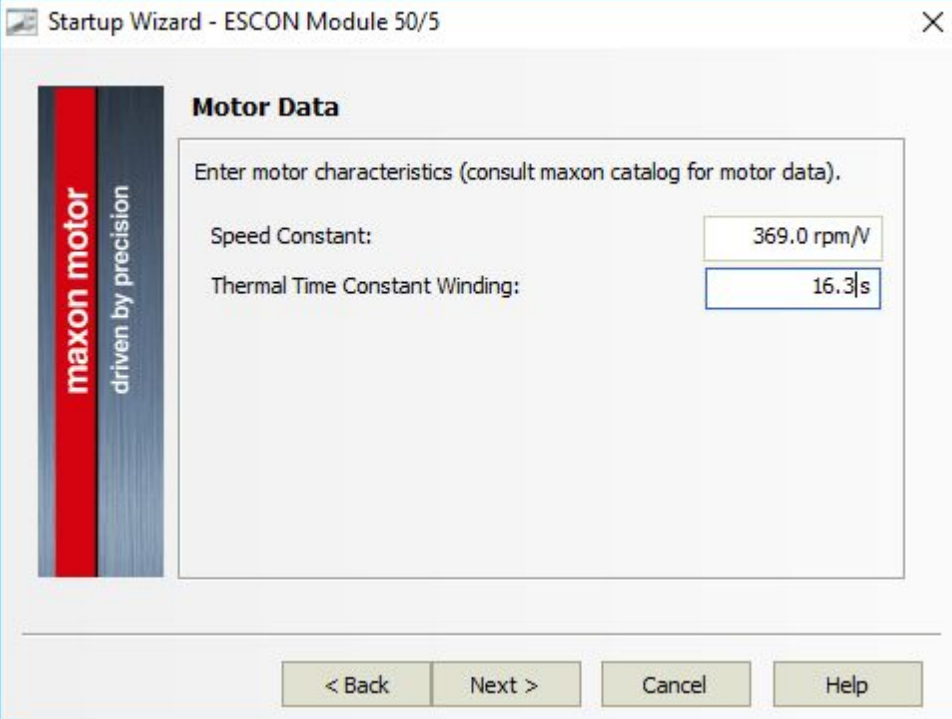

Startup Wizard - ESCON Module 50/5

**maxon motor**  
driven by precision


**Motor Data**

Enter motor characteristics (consult maxon catalog for motor data).

Speed Constant:

Thermal Time Constant Winding:

< Back   Next >   Cancel   Help



maxon motor  
driven by precision

### System Data

Enter system data.


Max. Permissible Speed:	12000.0 rpm
Nominal Current:	3.4700 A
Max. Output Current Limit:	15.0000 A

< Back

Next >

Cancel

Help



maxon motor  
driven by precision

### Speed Sensor

Select type of sensor.

No Sensor available

< Back

Next >

Cancel

Help

Startup Wizard - ESCON Module 50/5

maxon motor  
driven by precision

### Mode of Operation

Select mode of operation.

Current Controller

< Back

Next >

Cancel

Help

Startup Wizard - ESCON Module 50/5

maxon motor  
driven by precision

### Enable

Select type of <Enable> functionality.

Enable & Direction

Enable: Digital Input 3 High active

Direction: Digital Input 4 High active

Set Value Characteristic

— Dir active

— Dir inactive

< Back

Next >

Cancel

Help

**Alternatively, for ANALOG (for use with DAQ):**

Startup Wizard - ESCON Module 50/5

**Enable**

Select type of <Enable> functionality.

Enable:

Set Value Characteristic

< Back   Next >   Cancel   Help

Startup Wizard - ESCON Module 50/5

**Set Value**

Select type of <Set Value> functionality.

Input:

Current at	0.000 V	:	0.0000 A
Current at	10.000 V	:	3.0000 A

< Back   Next >   Cancel   Help

Startup Wizard - ESCON Module 50/5

**maxon motor**  
driven by precision

### Set Value

Select type of <Set Value> functionality.

PWM Set Value

Input: Digital Input 1

Current at	10.0 %	:	0.0000 A
Current at	90.0 %	:	3.0000 A

< Back   Next >   Cancel   Help

Startup Wizard - ESCON Module 50/5

**maxon motor**  
driven by precision


### Offset

Select type of <Offset> functionality.

Fixed Offset

Offset: 0.0000 A

< Back   Next >   Cancel   Help



maxon motor  
driven by precision

Startup Wizard - ESCON Module 50/5

Digital Inputs & Outputs

Select functionalities for digital inputs and outputs.


Input/Output	Functionality
Digital Input 1	PWM - Set Value
Digital Input 2	None
Digital Input 3	Enable
Digital Input 4	Direction

< Back

Next >

Cancel

Help



maxon motor  
driven by precision

Startup Wizard - ESCON Module 50/5

Analog Inputs

Select functionalities for analog inputs.


Input	Functionality
Analog Input 1	None
Analog Input 2	None
Potentiometer 1	None

< Back

Next >

Cancel

Help



maxon motor  
driven by precision

### Analog Outputs

Select functionalities for analog outputs.


Output	Functionality
Analog Output 1	Actual Current
Analog Output 2	Temperature Power Stage

< Back

Next >

Cancel

Help



maxon motor  
driven by precision

### Analog Output 1 - Actual Current

Set scaling for analog output.

Current at

:

Current at


:

< Back

Next >

Cancel

Help



maxon motor  
driven by precision

Startup Wizard - ESCON Module 50/5

✕

Analog Output 2 - Temperature Power Stage

Set scaling for analog output.

Temperature at

0.000 V

:

0.0 °C

Temperature at

4.000 V

:

150.0 °C

< Back

Next >

Cancel

Help