

NTI Wavelet Tools - Short manual

Primary contact: Dr. Gergő Pokol - pokol@reak.bme.hu

Developers: László Horváth, Péter Pölöskei, Gergely Papp, Gábor Pór

Institute of Nuclear Techniques, Budapest University of Technology and Economics

(Last modified: September 18, 2014)

The aim of this short manual is to quickly guide the user step by step on the basic applications of NTI Wavelet Tools data processing toolbox. This document is only presenting the main steps when the toolbox is called from MTR (by Marc Maraschek).

Load data (using MTR):

- Log into AUG AFS.
- Log into an sxaug20-24 machine (for example: `ssh sxaug22`).
- Star MTR using the `mtr_dev` command.
- Load and pre-process data in MTR.
- Start NTI Wavelet Tools GUI by choosing the Wavelet/NTI Wavelet menu item.

Process data:

- Select channel pairs. (*Since NTI Wavelet Tools is in principle developed to investigate coherences and modenumbers, the basic data unit is a channel pair*).
- Choose type of transform (Continuous Wavelet Transform (CWT) or Short Time Fourier Transform (STFT)) on the Transforms panel.
- The parameters of the transforms can be set here. A help text accessed by pressing the "?" button. This text gives the definition of the parameters to be set in the corresponding step, and it might also contain some tips on how to do it.
- On the bottom of the panel the sufficient memory needed for the calculation is predicted. The resolution of the transforms can be decreased by changing the *Dscale* (CWT) or *F.res* and *Step* (STFT) parameters.
- The parameters of the modenummer calculation can be set on the last panel. The cross-transform and coherence calculation will be selected automatically.
- In order to calculate modenumbers without any smoothing, set the coherence average to 0.
- **In order to use the cross-phase correction which takes into account the transfer function of the probes, check the *Cross-phase correction* field on the Cross-transforms panel.**

Visualize results:

- On the Visualization panel one can plot the results. Default output folder is a subfolder of your current directory.
- The modenumbers can be filtered in three different ways. Modenumbers are to be plotted only for the time-frequency points satisfying all filters:
 - Coh. Limit: Minimum wavelet coherence must be higher than the value set.
 - Power Limit: Average smoothed cross-energy density must be higher than the set percentage of the maximum.
 - Q Limit: The residual for the best fit must be lower than the set percentage of the maximum.