 





TO MAIN PCB





TO OLED (ER-OLED028-1W)

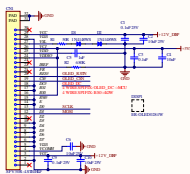


TO TOP PCB WITH TOUCH & LEDS

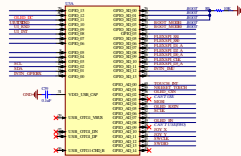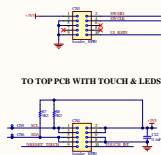

GPIOEX FOR NOTE KEYS
ADDR: 0x24

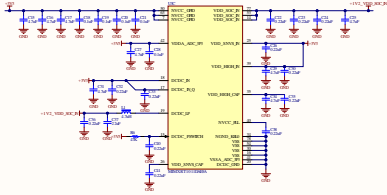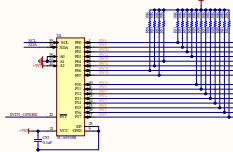

GPIOEX FOR NOTE KEYS AND ENCODER BUTTON
ADDR: 0x20

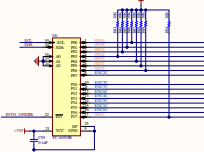


BOOT FLASH




PSRAM




GPIOEX FOR ROTARY ENCODERS
ADDR: 0x28

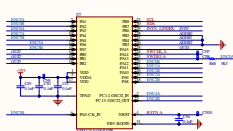

GPIOEX FOR TOUCH SLIDER LEDS - MISC
ADDR: 0x22

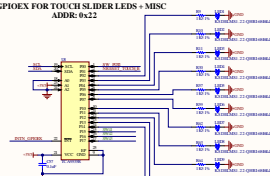

JOYSTICK

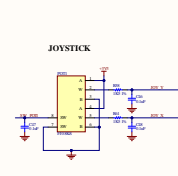

ADDR: 0x68

