


LIGHTBURN RUIDA INSTALLATION

Download and install LightBurn Software on Laser PC and open it.

Laser Controller settings:


Open your Laser Controller interface, go to "IPConfig+" settings and make these settings >> IP – 192.168.1.102, Gateway – 242.57.0.0

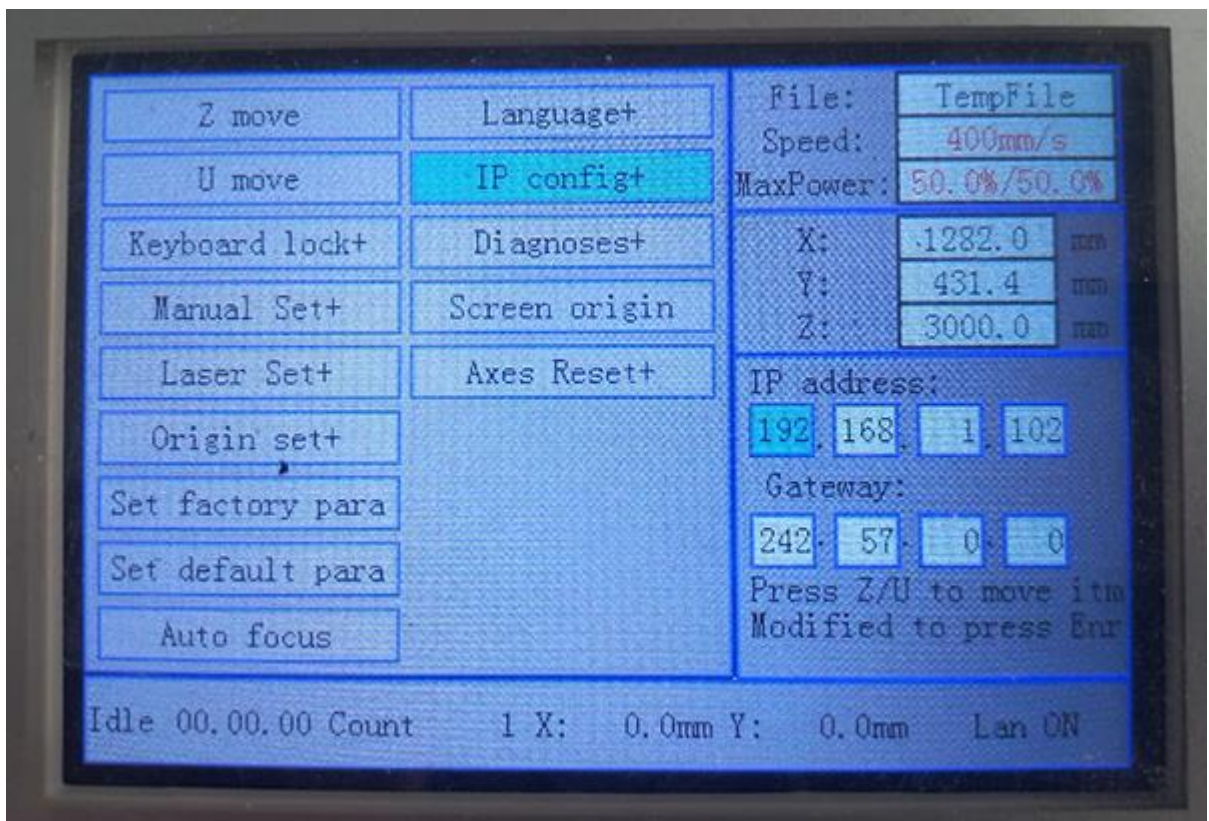


Laser Controller Settings are Done.

Windows PC settings:


Go to Network Settings >> Ethernet >> Change adapter options

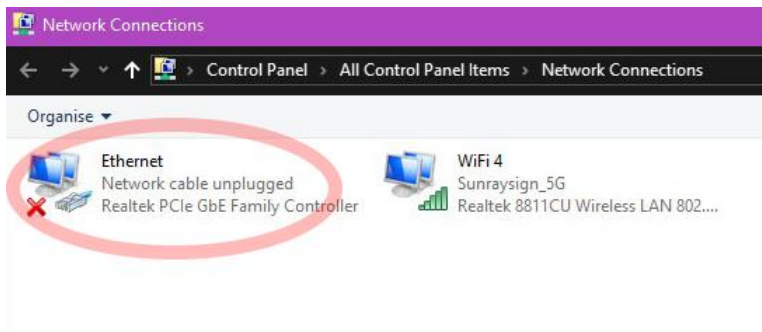

In the opened window choose "IP4 Settings" and after push "Properties"

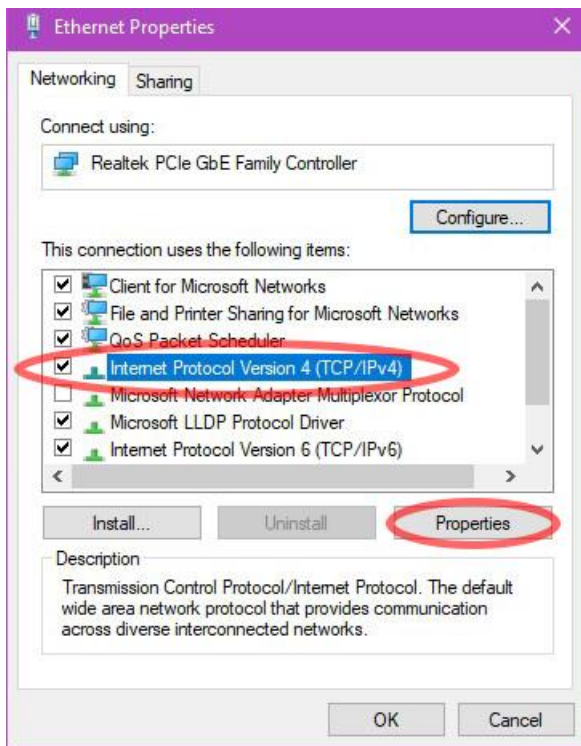


In the opened window set up: IP – 192.168.1.200, Subnet – 255.255.255.0, Gateway – 192.168.1.1

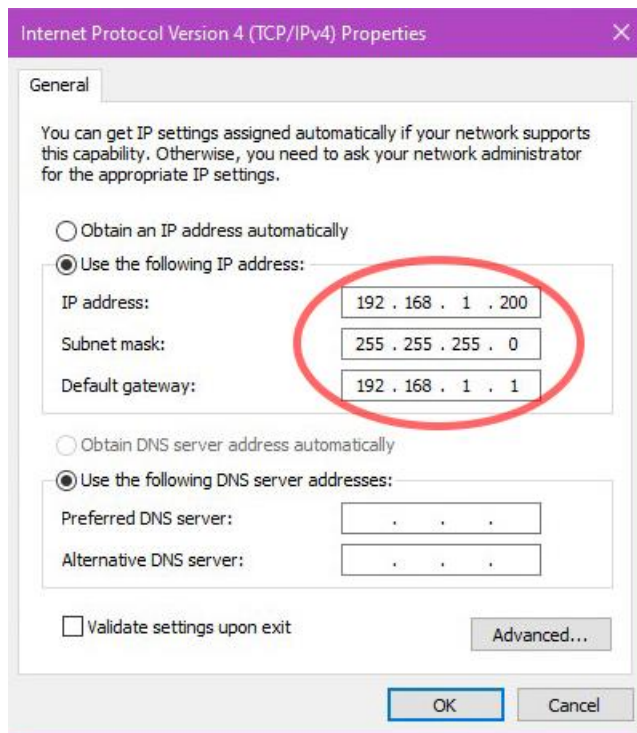


Windows PC settings are done.

LightBurn Settings:


Open LightBurn, Go to Laser Tab and push “Device” button:

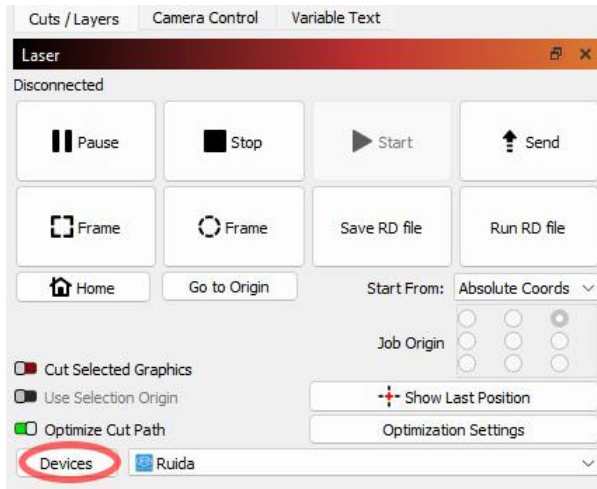


Push “Create Manually” and choose “Ruida”:

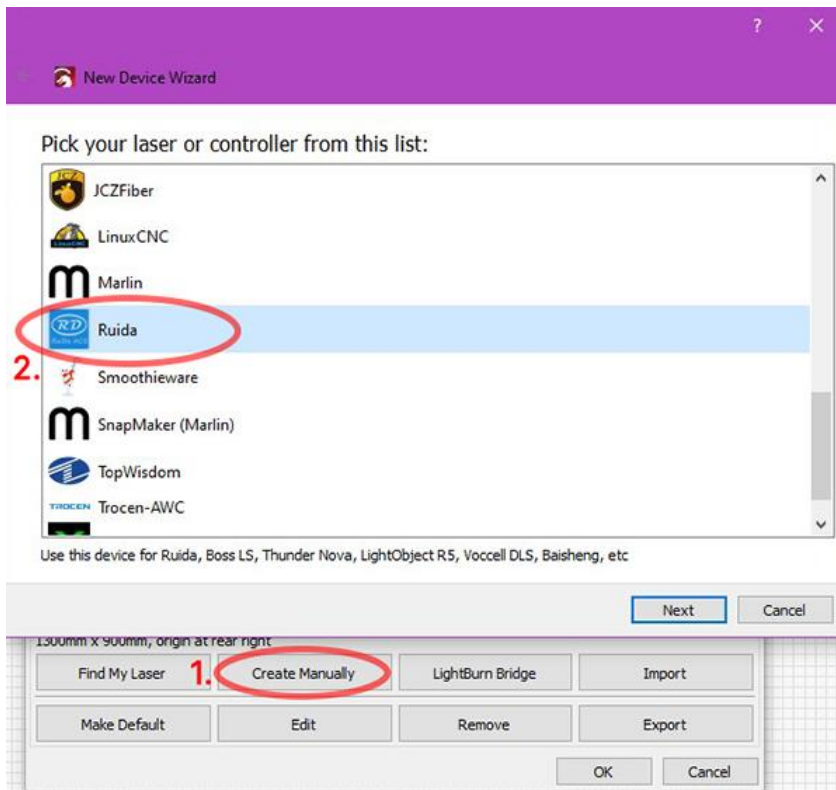


In next tab choose "Ethernet/UDP":

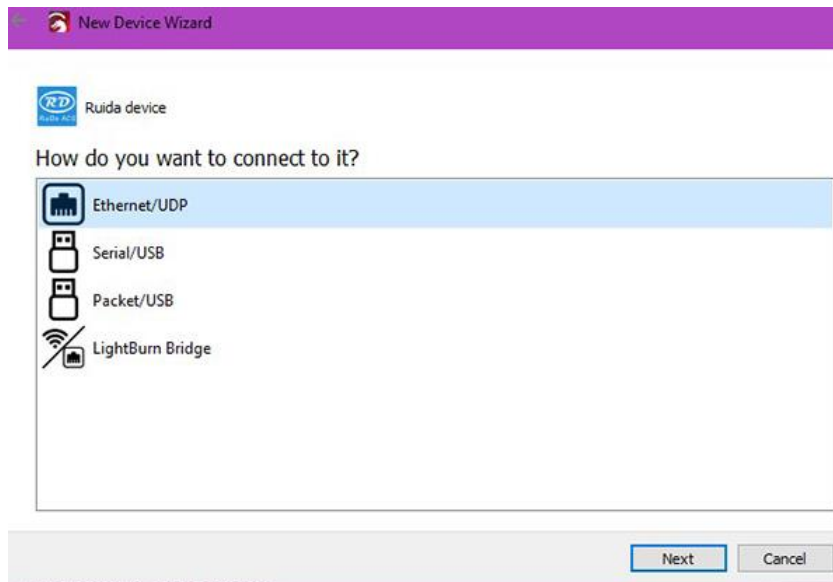

In next tab set this IP – 192.168.1.102

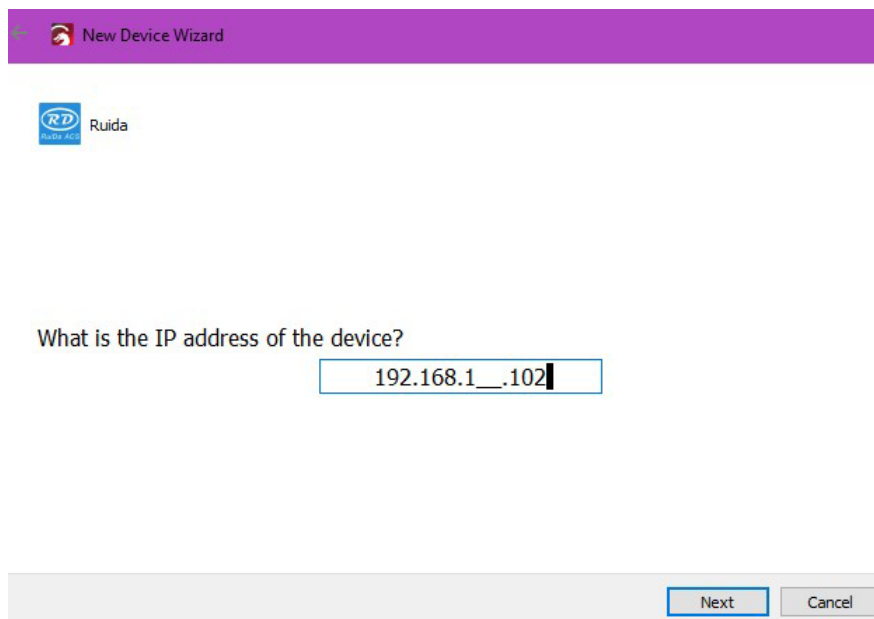

Go to Edit >> Device Settings and set the Table Dimensions = 1300x900:

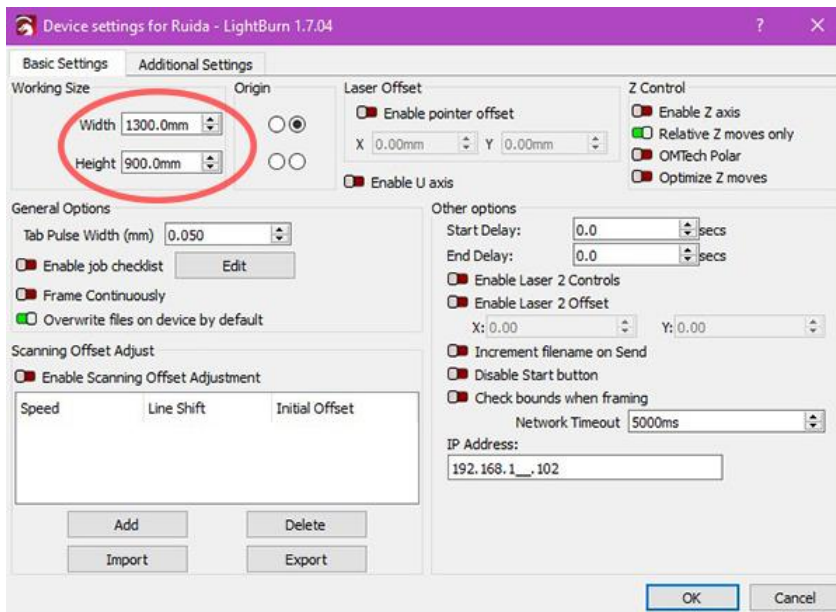

LightBurn Settings are done.

Congrats! Now you can install and adjust Camera.