
 


USER INSTRUCTION


- 1** To start just turn on switch on the front door:

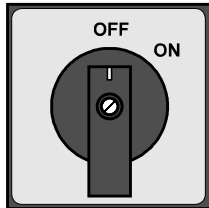


- 2** Open the front door and find timer named "CLOCK":




- 3** Here you set the time, when ventilation fans are active.
According to "Timer TMS-1" manual set the time:
When "ON" - Fans are active
When "OFF" - Fans are inactive

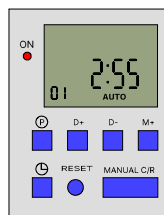

- 4** Find timer named "TIMER":

 

- 5** Here you set the time, when ventilation fans are active.
According to "Timer TMS-1" manual set the time:
When "ON" - SET2 works
When "OFF" - SET1 works

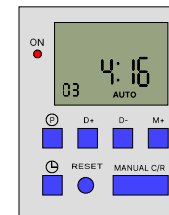


- 4** On the front door there is
STC-1000 temperature controller.
According to manual set the temperature,
when all 2 SETS will work together
to cool air inside pylon faster



- 7** When you've set the Temperature Controller it shows you current temperature inside pylon:



- 8** On the front door you can see which SET is currently works right now:

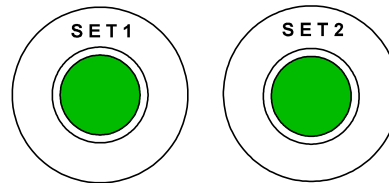

- 9** If you want to make Ventilation System off, just use this switch to "OFF" position:

