
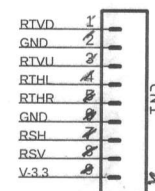
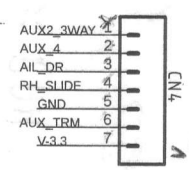




XR 9303 original Pin-out

Nomenclature of signals as seen from operators view:
 LSH : Left Stick Horizontal
 LSV : Left Stick Vertical
 LTHR : Left Trim Horizontal
 LTRH : Left Trim Horizontal Right
 LTVU : Left Trim Vertical Up
 LTVL : Left Trim Vertical Down
 etc, etc


AUX TRM and FLAP TRM are two set push switches between GND and V3.3
 AUX2 3way and Flap3-way are spot switches between V and GND

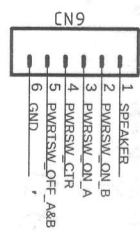


 
Right

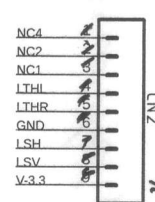



Left

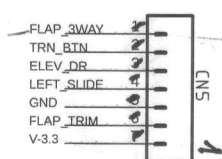

Position 9

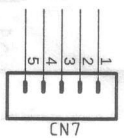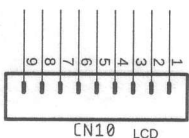


up pos left right?

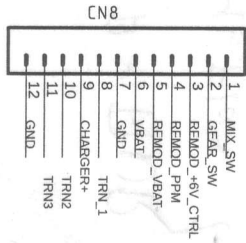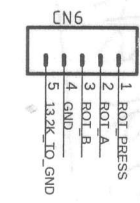

Menu? Exit?

Ext 1
 Ext 2
 Ext 3
 PB 14
 PBC 8 - 3 way switches
 PBC 10 - 3 way switch

Layer 150 has external wiring connections

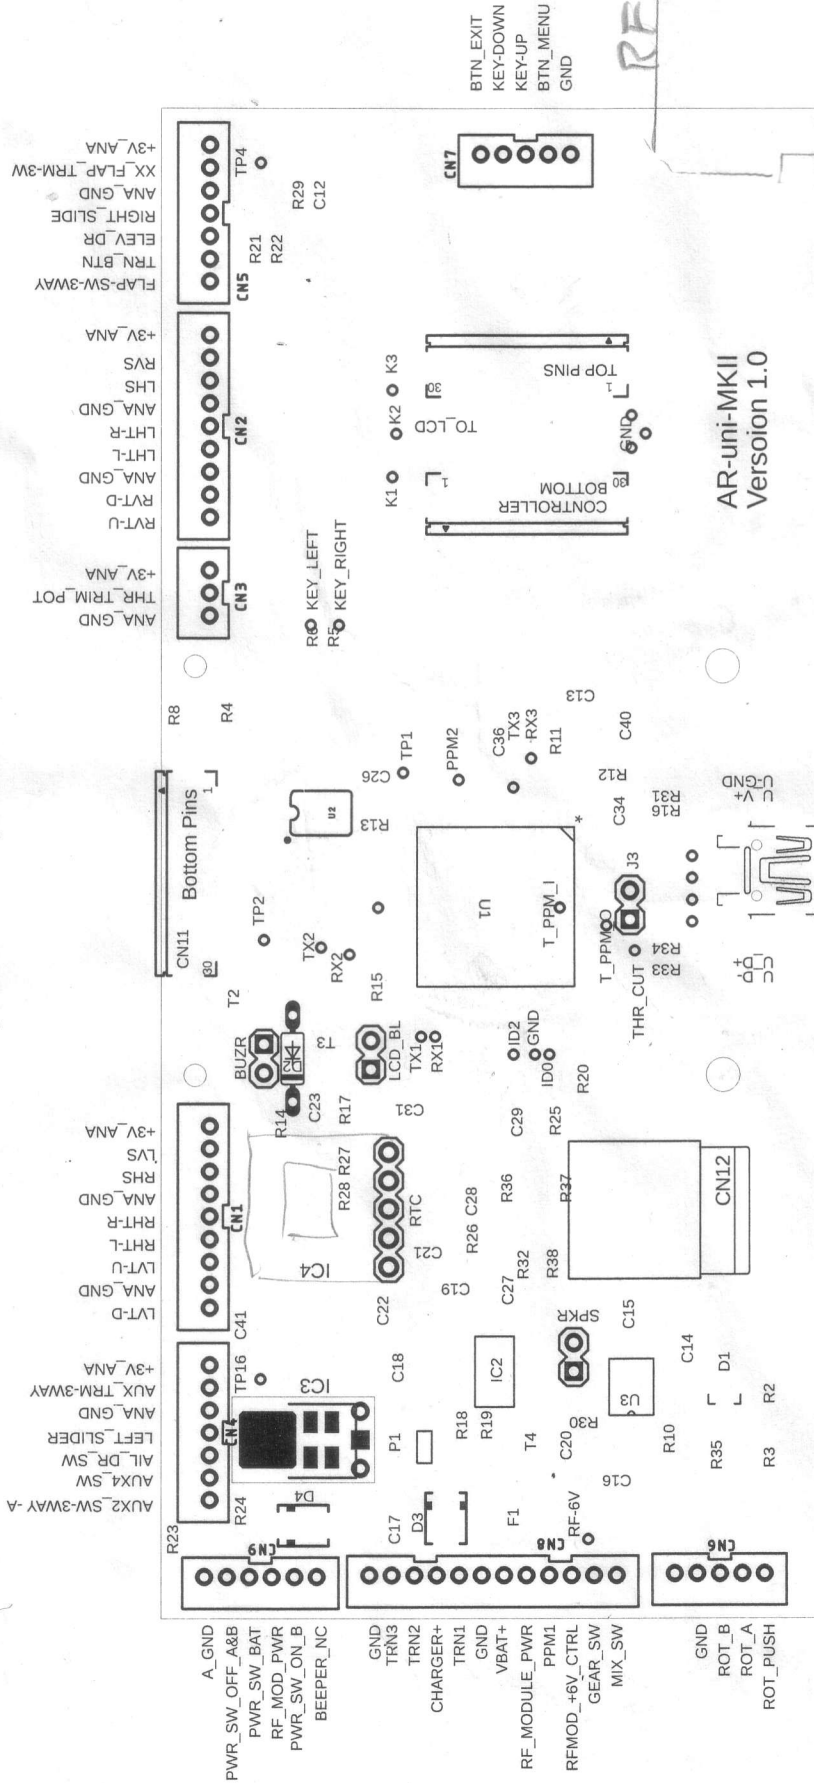

AR-uni-MKII
Version 1.0

RF-Mod

6V/ Heart Beat
+ Battery
72MHz Pin
GND
Serial Port