

Arduino Clock Generator

How to use the Arduino Clock Generator in your circuit:

1. Plug into your breadboard using the 3-pin header shown below.
 2. Provide 5V and GND to the appropriate pins.
 3. Connect the Clock Output pin to the clock input of your circuit.
- You do **not need a USB connection** for it to work.

