


+5V Power Suplay and RS232 for proqraming ESP32

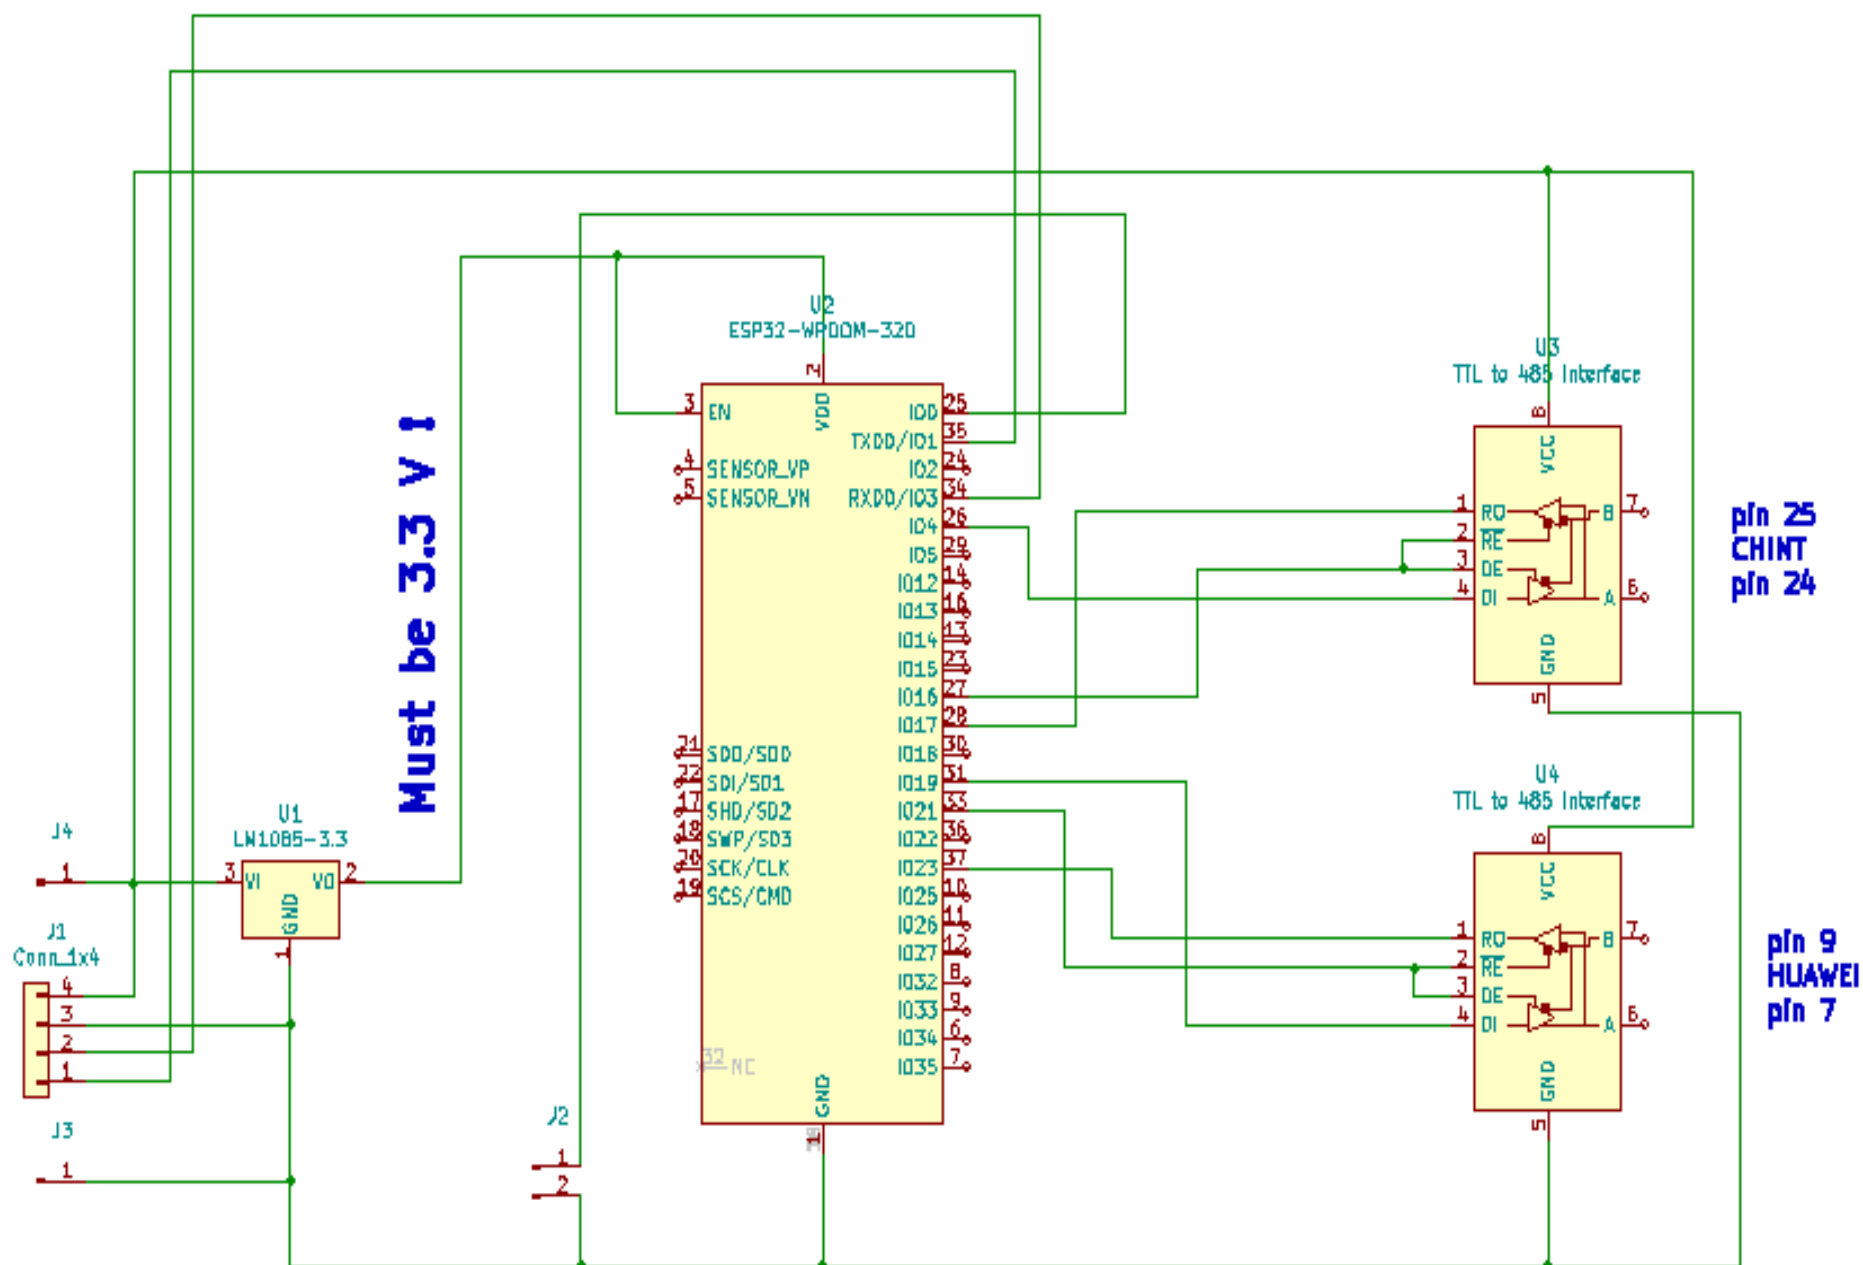

Must be 3.3 V !

**Close If ESP32
firmware upgrade**

**p/n 25
CHINT
p/n 24**

**p/n 9
HUAWEI
p/n 7**

PCB Layout



ESP32 WROOM-32U PINS

