

2604052
User's Guide



USB Transfer Cable

for Windows® and Mac®



We hope you enjoy your USB Transfer Cable from RadioShack. Please read this user's guide before using your new cable.

Package Contents

- USB Transfer Cable
- EasySuite™ Software: EasyCopy, EasySync, EasyMover, GO!Bridge
- User's Guide

Features

- Transfers files from an older version of Windows to Windows 7 or Windows 8
- Great for sharing files: connects between two PCs, two Macs, or even between a PC and Mac.
- Plug and play: all software is built-in, making it easy to copy and move files, settings, e-mail and more.

System Requirements

Operating System	Windows 8, Windows 7, Mac OS X 10.5 or above
CPU.....	P2 or higher processor
Memory.....	128M RAM
I/O	One available USB 2.0/1.1 port

Specifications

 
 
Connectors.....	USB 2.0/1.1 gold plated
USB Bus Power.....	5 V, 500 mA
Cable Length	8 ft (2.43m)
Operating Temperature	0 °C to 40°C
Operating Humidity	5% to 90% (non-condensing)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Connecting PCs

For Windows 7 and Windows 8:

1. Turn on both computers.
2. Connect the cable to each computer; the computers automatically detect the cable.
3. On either computer, use EasySuite to drag and drop files between the two connected computers.

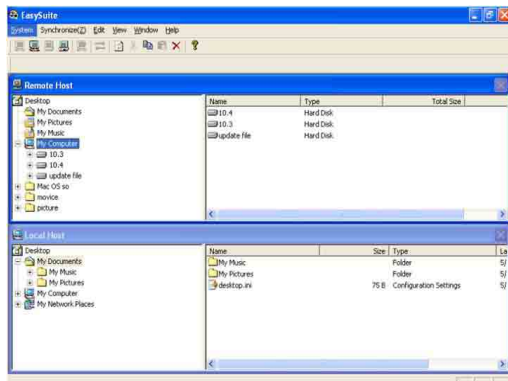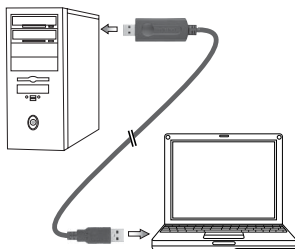


Note: If EasySuite does not launch automatically on your PC or if you receive an error message, click **My Computer**, browse to the **EasySuite** drive, then open the EasySuite application.

Note: To prevent accidentally editing files on the destination computer, select **System** → **Setup**. Check the **Share as Read Only** box, and then click **OK**.

Copy Mac Files

Use GO!Bridge to transfer files to or from a Mac computer.

 1. Start the GO!Bridge program on both Mac computers.
2. Drag and drop files between the two Mac computers.

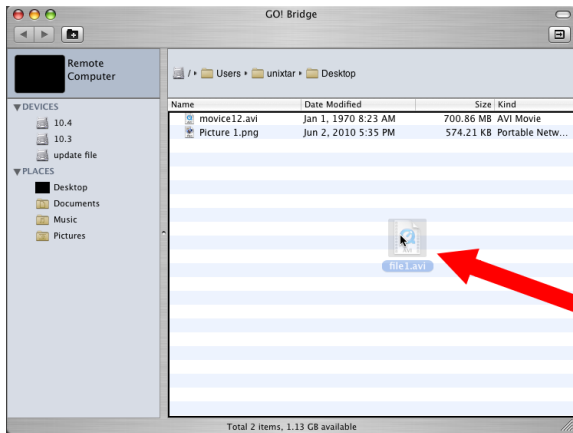

Note: On a Mac, the refresh function is not automatic in GO!Bridge. After transferring files, select **GO!Bridge** → **View** → **Refresh** to refresh.

Copy files PC to Mac or Mac to PC:

1. On your PC, open EasySuite.
2. On your Mac computer, open GO!Bridge.
3. Drag and drop files between the computers.

Disconnect the Transfer Cable

On a PC:

1. Select **System** → **Exit** or click the button (X) at the upper right to exit the program.
2. Click the **Safely Remove Hardware** icon (🗑️) on the task bar and remove the USB transfer cable from the computer.

On a Mac:

1. Select **GO!Bridge** → **Quit GO!Bridge**.
2. Drag and drop the **EasySuite** icon on the desktop into the **Trash**, and remove the transfer cable from the computer.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Product	USB Transfer Cable for Windows and Mac
Model	2604052
Responsible Party	RadioShack 300 RadioShack Cir. Fort Worth, TX 76107
Phone	817-415-3200

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a RadioShack-owned store or an authorized RadioShack franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store in the U.S. RadioShack will, at its option, unless otherwise provided by law (a) replace the product with the same or a comparable product, or (b) refund the purchase price. All replaced products, and products on which a refund is made, become the property of RadioShack.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact RadioShack at:

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth,

TX 76102

02/14

www.RadioShack.com



RoHS
COMPLIANT

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

EasySuite is a trademark owned by Ours Technology Inc. Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries. Mac is a trademark of Apple, Inc., registered in the U.S. and other countries. The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, Inc.

©2014 RadioShack Corporation.
All rights reserved. RadioShack is a registered trademark used by RadioShack Corporation.

Printed in China 03A14
2604052