



Notes: Each balancing circuit is turned on when its corresponding input (D0, D1, or D2) is pulled LOW.

Voltage measurements are taken at A0, A1, and A2 and used in software to calculate correct cell voltages. Resistor sizes can be adjusted.

Title		
Layla BMS v2.0		
Size	Document Number	Rev
A	<Doc>	<RevCo
Date:	Wednesday, January 21, 2015	Sheet 1 of 1