

JRK LED CODES

Green LED

OFF: Not connected to computer.

Slow blink: Connected to USB port.

Steady: JRK not connected to control program.

Fast flicker: Program connected to JRK.

Red LED

ON indicates JRK is powered but with an error of some kind.

Yellow LED

Flashing slowly: Motor OFF awaiting command.

Flashing fast: Motor ON but has not reached target.

ON steady : Motor ON and reached the desired position.