 
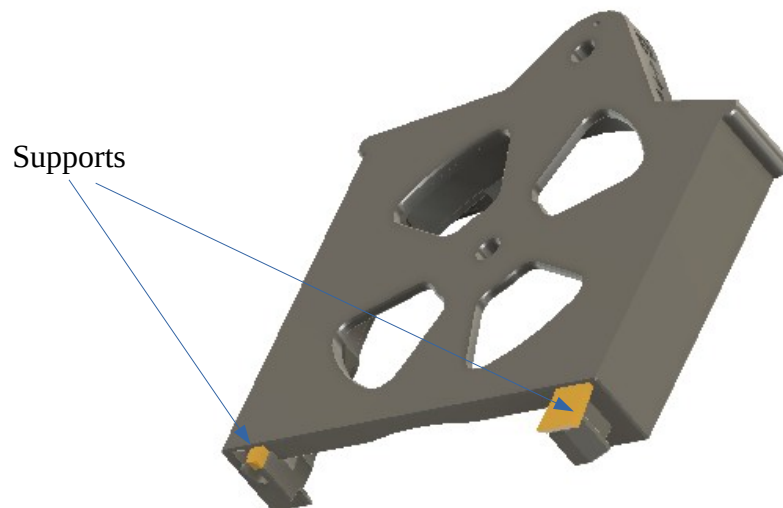 
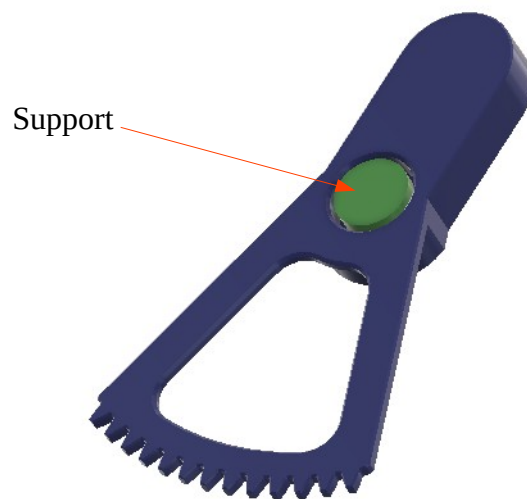 



Assembly instructions

Supports removal

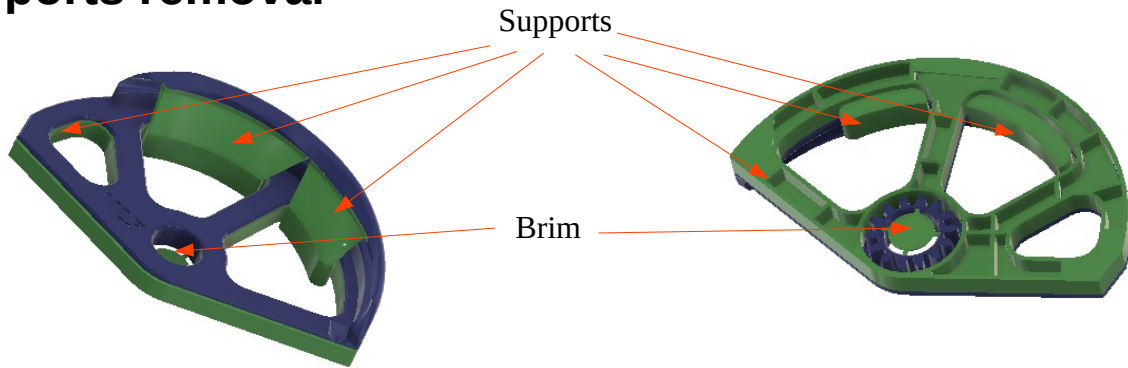


M3 Inserts.

 
Buffer tower

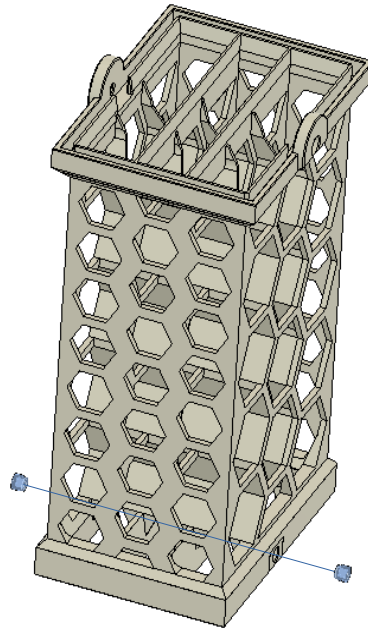

Interface block

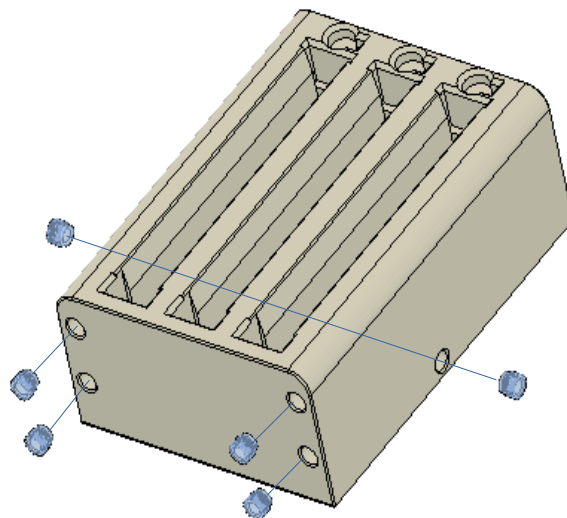 


Case

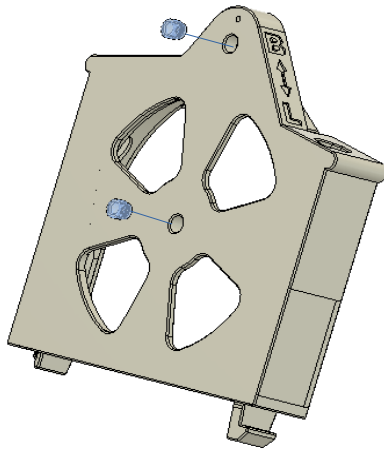 


6x3 Magnets

 Interface block

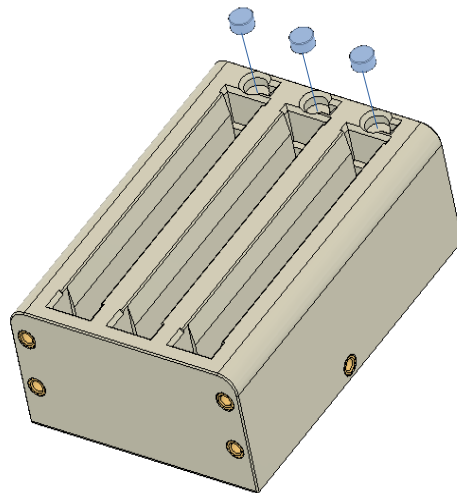


Case

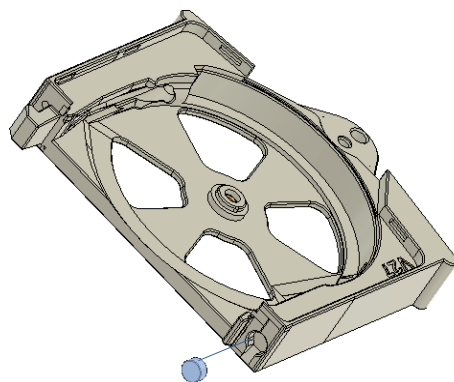 


Assembling the parts.

The buffer tower stack.

 Use as many tower as you need.

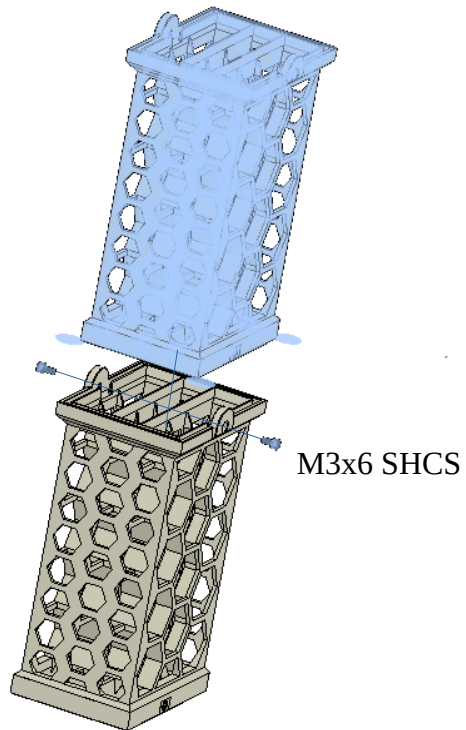


 Assembling the interface block to the Buffer tower

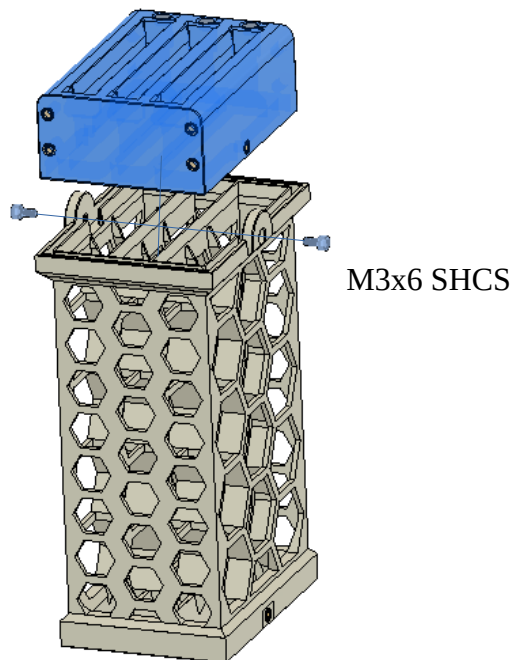


Assembling the buffer Head

 
Inserting the bearing to the wheel

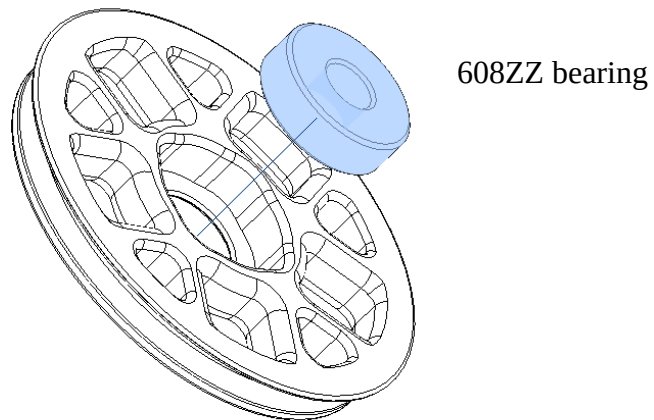


Assembling the wheel to the head case

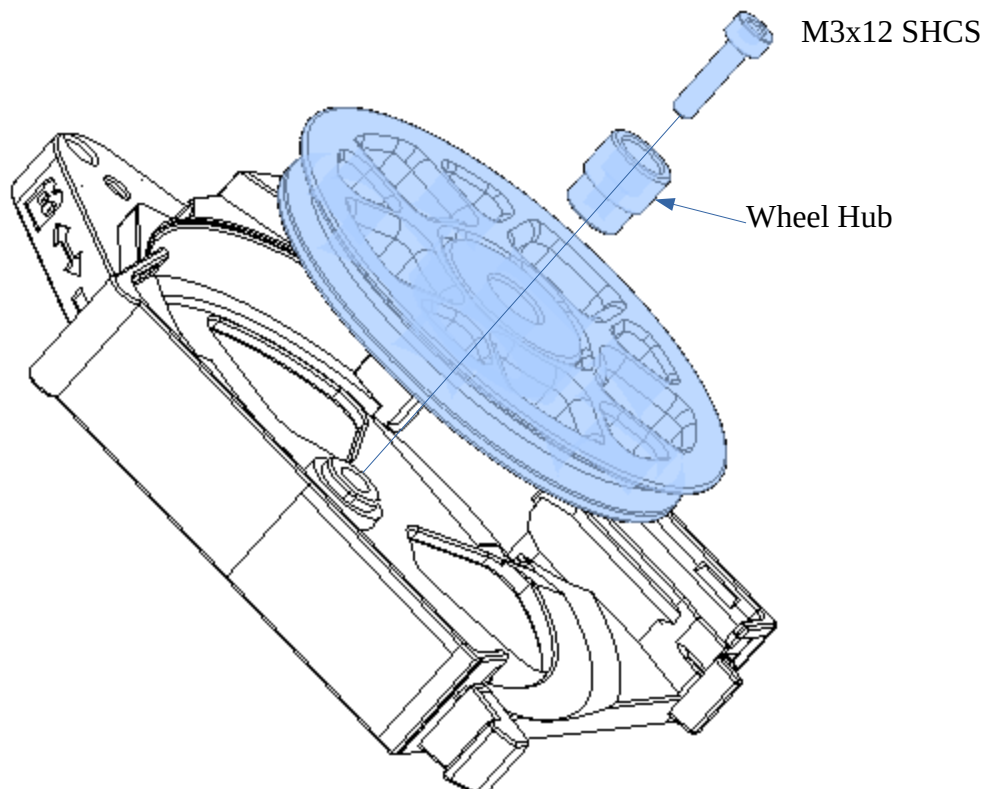 


Assembling the guide to the head

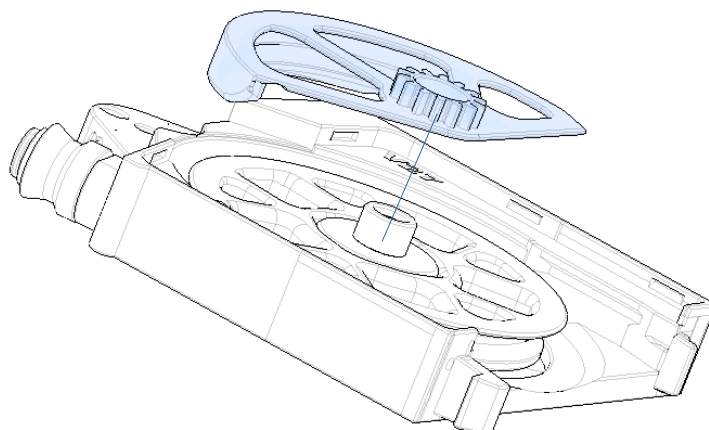 


Optional spring and ball bearing.

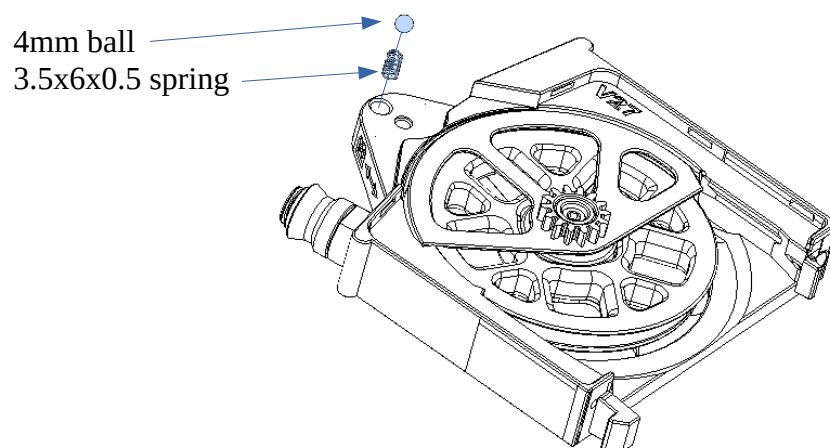 


Assembling the lever.

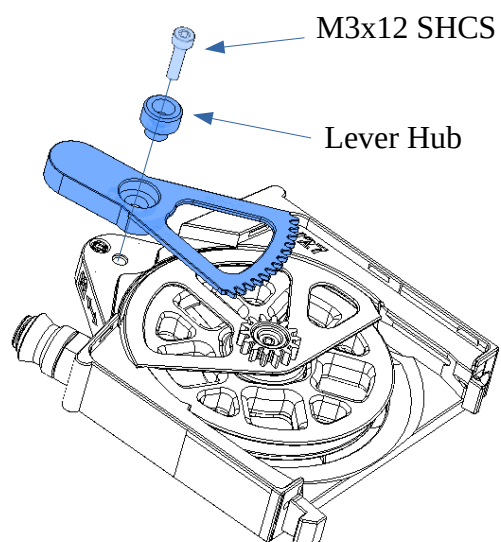 

Adjusting the gear.


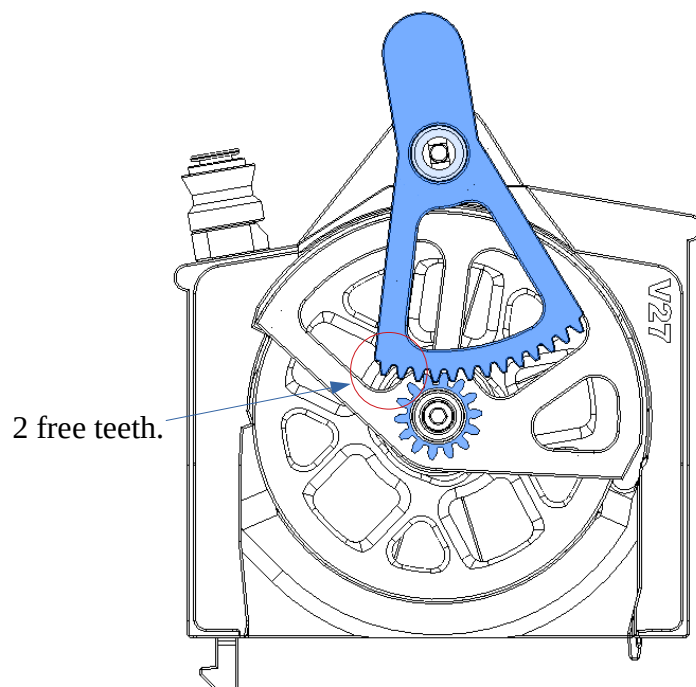 


Closing the head

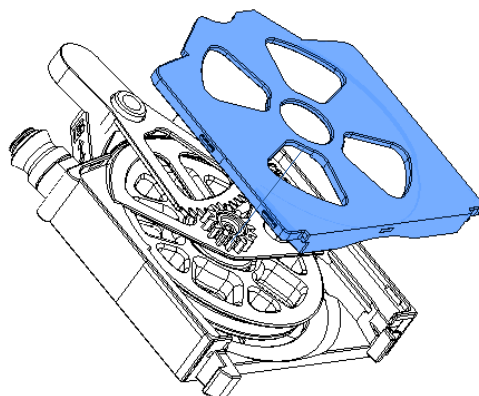 


Installing the head on the interface block.

  Insert the hook first, then
tilt the head so the
magnets stick together.

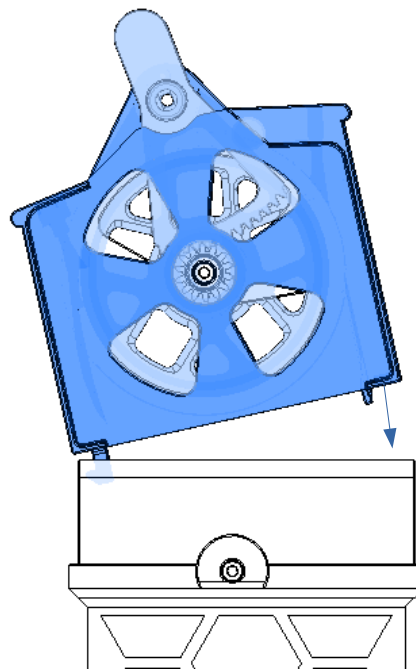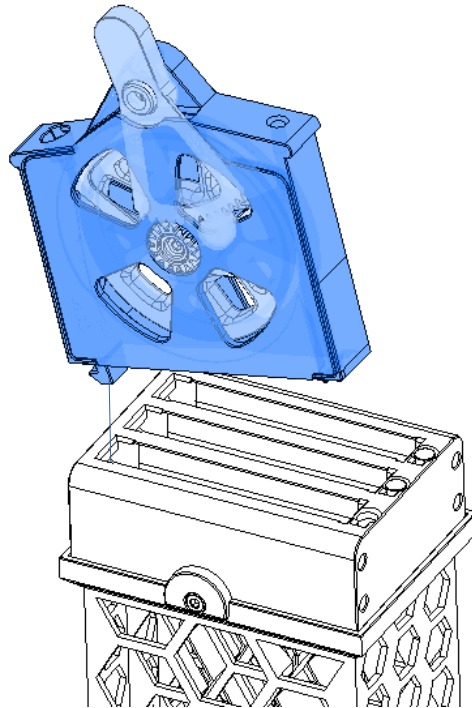

Usage

 *Filament loading
position*

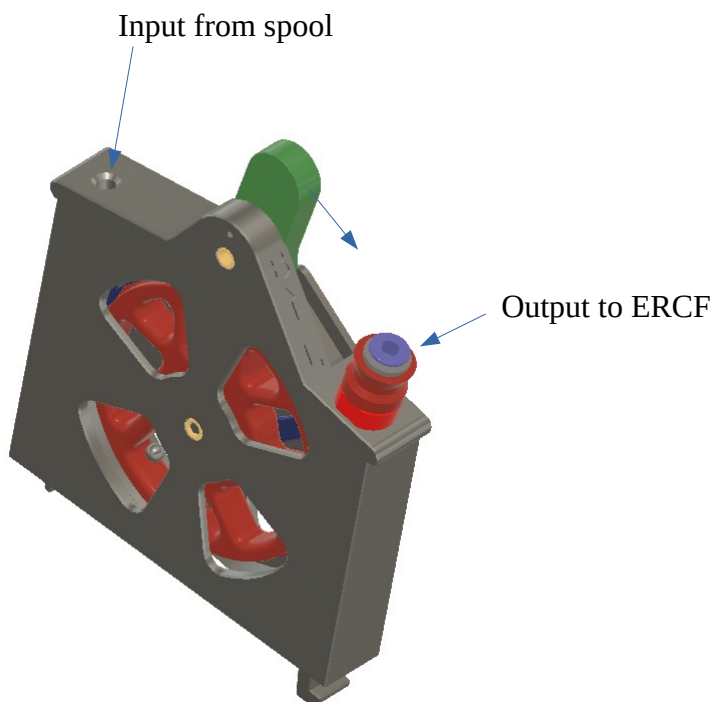

*Printing / buffering
position*

