

## SCANNER MODE SETTING FOR SDK

To be able to connect to the scanner using the SDK, the module has to be in serial mode.

Scan the barcode below to change the module to serial mode

### ***USB Serial***

Scan the following code to program the scan engine to emulate a regular RS232-based COM Port. If you are using a Microsoft® Windows® PC, you will need to download a driver from the Honeywell website ([www.honeywellaidc.com](http://www.honeywellaidc.com)). The driver will use the next available COM Port number. Apple® Macintosh computers recognize the scan engine as a USB CDC class device and automatically use a class driver.



TERMID130.

USB Serial

If you want to return to the keyboard mode, you can use the code below

### ***USB PC or Macintosh Keyboard***

Scan one of the following codes to program the scan engine for USB PC Keyboard or USB Macintosh Keyboard. Scanning these codes also adds a CR suffix.



PAP124.

USB Keyboard (PC)