

# 加载任意固件

## 基本思路

设备上使用 EEPROM 记录了启动固件的基本信息（MTD 块编号、文件名等），固件的内容则以文件形式存储在一个 JFFS2 文件系统上，在 sysloader 和系统中以 MTD 块的形式存在，均挂载于 `/boot` 目录。

## 实施步骤

在 sysloader 或者系统中进入 shell 并确保网络连接连通性之后，可以使用 `wget` 和 `ftpget` 等工具传输网络文件到 `/boot`，然后在 sysloader 的选单中创建切换启动选项到目标固件上，为了确保切换顺利，在 `/boot` 目录下可以事先创建一个空的 `b.bin` 文件。

### sysloader 加载任意固件

0. 打断正常的启动过程，进入 sysloader.

```
Platform: SG-6000-XXXXX
DRAM: 1024 MB
BOOTROM: 512 KB

Press ESC to stop autoboot: 4
Run on-board sysloader? [y]/n: y
Loading: #####
```

1. 使用 sysloader 的选单进行网络设置，需要注意这里不传输文件，而仅仅是配置 IP 地址选项.

```
Sysloader 2.1.4

1      Load firmware via TFTP
2      Load firmware via FTP
3      Load firmware from USB disks (not available)
4      Select backup firmware as active
5      Show on-board firmware
6      Reset
sysloader# 2

NOTE: The firmware can be upgraded via eth0/2-9

Local ip address      [0.0.0.0/0           ]: 192.168.1.123
Server ip address     [0.0.0.0             ]: 192.168.1.100
Gateway ip address     [0.0.0.0             ]:
User Name              [anonymous          ]:
Password               :
File name              : notfound
ftpget: can't connect to remote host (192.168.1.100): Connection refused
Ftp failed
```

2. 下面使用 `ftpget` 从主机上下载固件，并创建一个空的 `b.bin` 文件.

```
sysloader# shell sh

BusyBox v1.18.4 built-in shell (ash)
Enter 'help' for a list of built-in commands.

~ # cd /boot/
/etc/boot # ls
b.bin
/etc/boot # ftpget 192.168.1.100:2121 SG6000-M-5.5R6P19-v6.bin
```



