

GMMK Pro Cheatsheet

7/20/2022

Basic Shortcuts

| Key Combo | Function |
|-------------------------|------------------------------------|
| Capslock (hold) | Numpad (while held)* |
| Capslock (double tap) | Numpad layer toggle* |
| L+R Shift | Capitalize next word only |
| Left Shift (double tap) | Capslock |
| Fn + P | Paddle Game (toggle) |
| Shift + Backspace | Insert* |
| Fn + PGUP | Home |
| Fn + PGDN | End |
| Fn + Winkey | WinKey lock out (for gaming) |
| FN + [or] | Move active window to next monitor |
| Fn + . | Macro: ".com" |
| Fn + G | Macro: "gmail.com" |
| Fn + O | Macro: "outlook.com" |
| Fn + H | Macro: "hotmail.com" |
| Fn + Y | Macro: "yahoo.com" |

RGB Functionality

| Key Combo | Function |
|--------------------|----------------------------------|
| Fn + - or = | RGB backlight timeout up/down |
| Fn + Z | RGB night mode (backlight off) |
| Fn + A or D | RGB hue up/down |
| Fn + Q or E | RGB saturation up/down |
| Fn + W or S | RGB value (brightness) up/down |
| Fn + Up or Down | RGB effect next/previous |
| Fn + Left or Right | RGB animation slower/faster |
| Fn + Del | RGB sleep (until next keystroke) |

| Key Combo | Function |
|----------------|--|
| Fn + ` (tilde) | Print toggle statuses (in text editor) |
| Fn + 1 | CapsLock RGB highlight alpha keys |
| Fn + 2 | Numpad RGB highlight layer keys |
| Fn + 3 | Dbl-tap ESC to revert to BASE layer |
| Fn + 4 | Swap DEL & HOME key locations |

Fn-Function Key Shortcuts

| Key Combo | Function |
|-----------|----------------------|
| Fn + F1 | My Computer |
| Fn + F2 | Open new browser tab |
| Fn + F3 | Calculator |
| Fn + F4 | My Music |
| Fn + F5 | Media Previous track |
| Fn + F6 | Media Next track |
| Fn + F7 | Media Play |
| Fn + F8 | Media Stop |
| Fn + F9 | Volume Down |
| Fn + F10 | Volume Up |
| Fn + F11 | Print Screen |
| Fn + F12 | Scroll Lock |
| Fn + F13 | Pause |

* = Customizable function -- see Advanced Toggles

Rotary Encoder

| Key Combo | Function |
|-----------------|-------------------------------|
| Rotate | Volume Up/Dn (paddle in Game) |
| Push | Mute* |
| LShift + Rotate | Cycle layers |
| RShift + Rotate | PgUp/PgDn |
| LCtrl + Rotate | Navigate prev/next word |
| RCtrl + Rotate | RGB hue up/down |
| LAlt-Rotate | Media prev/next track |
| Fn + Push | Sleep PC |

Advanced Toggles

| Key Combo | Function |
|-----------|--|
| Fn + 5 | Numpad on CapsLock (double tap LSHIFT for CapsLock) or Standard CapsLock |
| Fn + 6 | Encoder button functions as Mute or Media Play/Pause |
| Fn + 7 | Insert function accessed with [SHIFT]-[BKSPC] or [SHIFT]-[DEL] |
| Fn + 8 | Force SHIFT- & CTRL-SPACE to function like standard SPACE |
| Fn + 9 | Toggle AutoCorrect |

Numpad Layer

| Key Combo | Function |
|-----------------------|-----------------------|
| M,J,K,L,U,I,O,7,8,9,0 | 0,1,2,3,4,5,6,7,8,9,0 |
| Space or Enter | Enter (numpad) |
| P or + | Add (+) |
| - | Subtract (-) |
| ; | Multiply (*) |
| , | 00 |
| . | Decimal |
| / | Divide (/) |
| W,A,S,D | Arrow keys |
| Arrow keys | Mouse movement |
| Right Shift | Mouse button 1 |
| End | Mouse button 2 |
| Right CTRL | Mouse button 3 |

Advanced Functions

| Key Combo | Function |
|-------------------|-----------------------|
| Esc (double tap) | Revert to BASE layer* |
| Fn + L | Lock PC |
| Fn + / | Ctrl-Alt-Delete |
| Fn + N | System Numlock toggle |
| Fn + Push encoder | Sleep PC |
| Fn + R | NKRO toggle |
| Fn + Esc | Clear EEPROM |
| Fn + \ | Bootloader mode |