



The headset will sync lap count and battery data only when it is connected in data-transfer mode.

If you don't see your lap count or battery data, make sure the units are within a few feet of each other and wait for them to sync.