

# BuzzerKeyboard

The buttons of the keyboard send the following keycodes:

Button	Color	Keycode
A	red	j
B	green	k
C	yellow	l
D	blue	m
E	white	n

Different web browsers expect different keycode modifiers – see the configuration mode.

	Windows	Linux	Mac
Mozilla Firefox	[ALT]+[SHIFT]	[ALT]+[SHIFT]	[ALT]+[CTRL]
Microsoft Edge	[ALT]	[ALT]+[SHIFT]	-
Google Chrome	[ALT]+[SHIFT]	[ALT]+[SHIFT]	[ALT]+[CTRL]
Chromium	[ALT]+[SHIFT]	[ALT]+[SHIFT]	[ALT]+[CTRL]

## Configuration Mode

By pressing the red button for 5 seconds, the configuration mode is enabled. The configuration mode is indicated by a blinking activity LED.

In the configuration mode, the buttons are used as follows to change the emitted keycode modifier.

Button	Color	Function
A	red	leave the configuration mode
B	green	set the keycode modifiers to [ALT]
C	yellow	set the keycode modifiers to [ALT]+[SHIFT]
D	blue	set the keycode modifiers to [ALT]+[CTRL]
E	white	set the keycode modifiers to [NONE]