

ISUZU

**TOP
(INDEX)**

2011 F&G SERIES

WORKSHOP MANUAL

WIRING DIAGRAM

(RHD model)



This Workshop Manual deals only with the screen toned section(s) in the table below.

Section		Sub Section	
0	GENERAL INFORMATION	0A	General Information
1	ENGINE	1A	Engine Control System
		1B	Engine Mechanical
		1C	Engine Cooling
		1D	Engine Fuel
		1E	Engine Electrical
		1F	Emission Control
		1G	Engine Exhaust
		1H	Engine Lubrication
		1I	Engine Speed Control System
		1J	Induction
		1K	Pre-Heating System
		1L	Power Take-Off (PTO)
2	SUSPENSION	2A1	Air Suspension Control System
		2B	Front Suspension
		2C	Rear Suspension
		2D	Wheel and Tire System
3	DRIVELINE/AXLE	3A1	Front Differential
		3A2	Rear Differential
		3C1	Propeller Shaft
		3C2	Front Axle
		3C3	Rear Axle
		3D	Transfer Case
4	BRAKES	4A2	Brake Control System (Air Over)
		4A3	Brake Control System (Full Air)
		4B2	Brake (Air Over)
		4B3	Brake (Full Air)
		4C	Anti-Lock Brake (ABS)
		4C1	Anti-Lock Brake (ABS)/Anti-Slip Regulator (ASR)
		4D	Parking Brake
		4E	Hill Start Aid (HSA)
		4F	Speed Retarder System
5	TRANSMISSION/TRANSAXLE	4G	Trailer Brake
		5A	Transmission Control System
		5B	Automatic Transmission
		5C	Manual Transmission
		5E	Clutch
		5G	Power Take-Off (PTO)
6	STEERING	5G1	Side Power Take-Off
		6B	Power Steering
7	HVAC	7A	Heating and Ventilation
		7B	Manual Air Conditioning
		7C	Automatic Air Conditioning
8	RESTRAINTS	8A	Seat Belt
		8B	Supplemental Restraint System (SRS)
		8C	SRS Control System
9	BODY, CAB AND ACCESSORIES	9A	Lighting System
		9B	Wiper/Washer System
		9C	Entertainment
		9D	Wiring System
		9E	Instrumentation/Driver Info.
		9F	Body Structure
		9G	Cab
		9H	Seats
		9I	Security and Lock
		9K	Exterior/Interior Trim
		9L	Cab Mounting
10	CONTROL SYSTEMS	10B	Vehicle Control
11	FRAME AND FRAME ACCESSORIES	11A	Frame

BODY, CAB, AND ACCESSORIES

Wiring System

(RHD model)

TABLE OF CONTENTS

Electric Equipment	9D-3	Supplemental Restraint System (SRS)	
Reading the Circuit Diagram	9D-3	Airbag System	9D-166
Parts for Electrical Circuit	9D-8	Circuit Diagram	9D-166
Connector	9D-10	Headlight(Halogen)	9D-167
Notes for working on Electrical Items	9D-12	Circuit Diagram	9D-167
Fuse, Fusible Link	9D-13	Headlight (HID)	9D-170
Relay	9D-15	Circuit Diagram	9D-170
Diode	9D-18	Headlight Manual Leveling	9D-171
Main Data and Specifications	9D-20	Circuit Diagram	9D-171
Fuse, Fusible Link and Slow-Blow Fuse		Fog Light/Clearance Light	9D-174
Location	9D-20	Circuit Diagram	9D-174
Power Distribution	9D-23	Taillight/Stoplight/Cornering Light	9D-177
Relay Location	9D-31	Circuit Diagram	9D-177
Relay List	9D-31	Horn	9D-185
Diode Location	9D-33	Circuit Diagram	9D-185
Cab Junction Block Connector Location	9D-34	Backup Light/Back Buzzer	9D-187
Connector Box Connector Location	9D-35	Circuit Diagram	9D-187
Junction Block Connector Location	9D-36	Body Control Module (BCM)	9D-189
Joint Connection and Weld Splice Location	9D-37	Circuit Diagram	9D-189
Joint Connection Circuit	9D-49	Data Recording Module (DRM)	9D-190
Reference Table of Weld Splice	9D-69	Circuit Diagram	9D-190
Grounding Point Circuit	9D-74	Windshield Wiper and Washer	9D-192
Ground Point Location	9D-87	Circuit Diagram	9D-192
Cable Harness Routing	9D-89	Power Door Lock/Keyless Entry	9D-196
Controller Area Network (CAN)	9D-92	Circuit Diagram	9D-196
Circuit Diagram	9D-92	Power Window	9D-199
Starter and Charging	9D-96	Circuit Diagram	9D-199
Circuit Diagram	9D-96	Remote Mirror/Mirror Heater	9D-201
Instrument Panel (IP) Cluster and Warning	9D-99	Circuit Diagram	9D-201
Circuit Diagram	9D-99	Dome Light/Fluorescent Light	9D-205
Data Link Connector (DLC)	9D-114	Circuit Diagram	9D-205
Circuit Diagram	9D-114	Roof-Mounted Clearance Light	9D-207
Engine Control Module (ECM)	9D-116	Circuit Diagram	9D-207
Circuit Diagram	9D-116	Audio	9D-209
Transmission Control Module (Smoother)	9D-139	Circuit Diagram	9D-209
Circuit Diagram	9D-139	Cigarette Lighter/Seat Belt	9D-211
Transmission Control Module (A/T)	9D-146	Circuit Diagram	9D-211
Circuit Diagram	9D-146	Heater and Air Conditioning (Manual)	9D-213
ZF Transmission	9D-153	Circuit Diagram	9D-213
Circuit Diagram	9D-153	Heater and Air Conditioning (Auto)	9D-218
Air Suspension Control Unit	9D-155	Circuit Diagram	9D-218
Circuit Diagram	9D-155	Exhaust Brake	9D-221
Electronic Hydraulic Control Unit (EHCU)	9D-158	Circuit Diagram	9D-221
Circuit Diagram	9D-158	Cab Power Tilt	9D-223
ABS Control Unit	9D-160	Circuit Diagram	9D-223
Circuit Diagram	9D-160	Differential Lock,Front Drive	9D-225
HSA (Hill Start Aid) System	9D-163	Circuit Diagram	9D-225
Circuit Diagram	9D-163	Tractor	9D-230
		Circuit Diagram	9D-230

9D-2 Wiring System (RHD model)

Power Take-Off (PTO)	9D-233
Circuit Diagram	9D-233
Immobilizer Control Unit (ICU)	9D-237
Circuit Diagram	9D-237
Tachograph	9D-238
Circuit Diagram	9D-238
Service Terminal.	9D-239
Circuit Diagram	9D-239
Parts Locations	9D-240
Parts Locations	9D-240
Connector List	9D-295
Connector List	9D-295

Electric Equipment

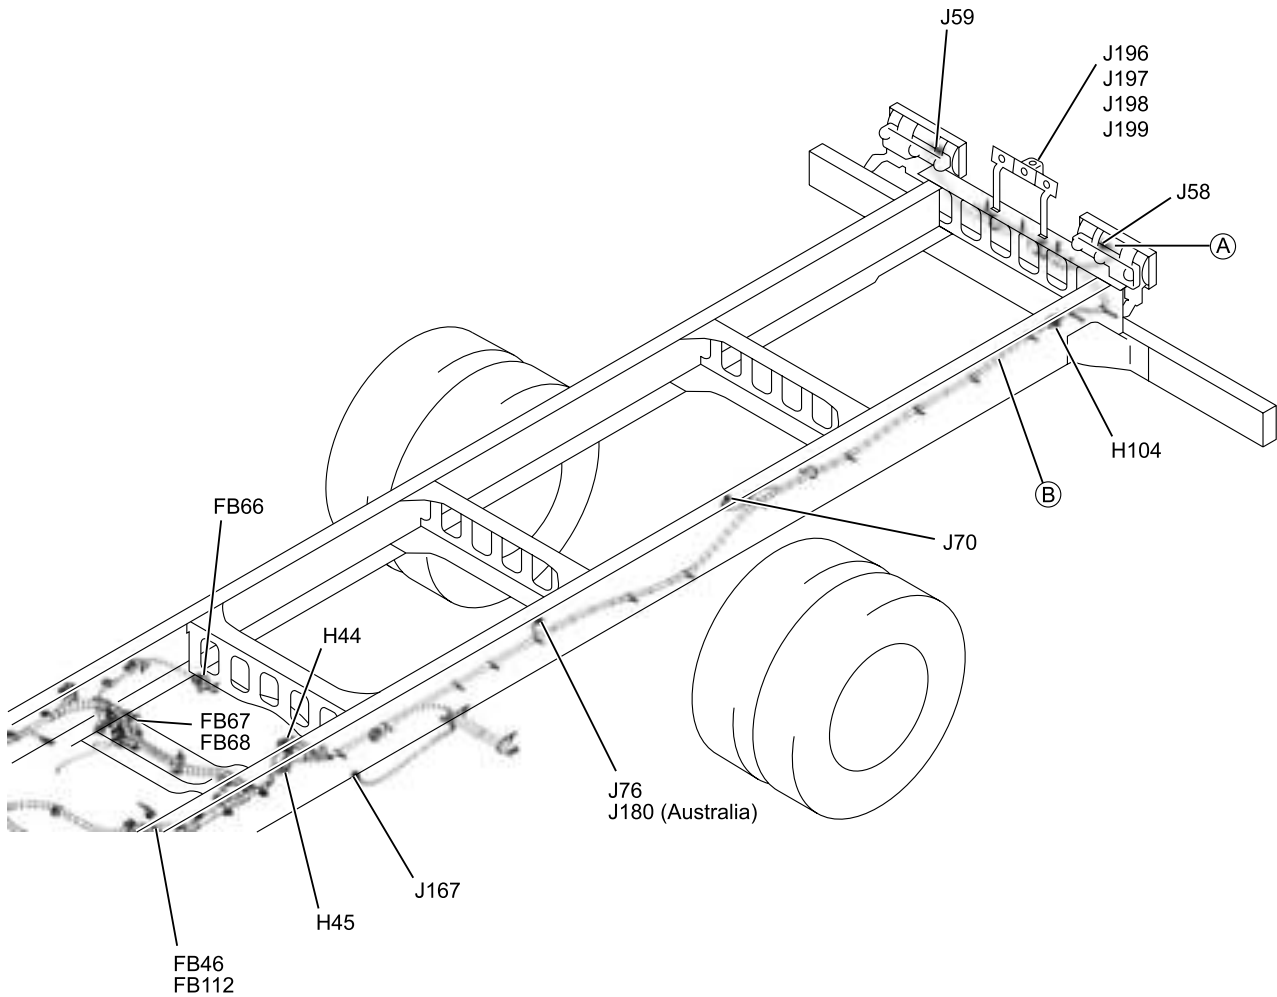
Reading the Circuit Diagram

In this manual, each system has its own parts location illustration, circuit diagram and connector configuration used in the circuit diagram.

CIRCUIT DIAGRAM

PARTS LOCATION









The parts location shows the location of the parts and the connector (A) used in each harness routing (B).



9D-6 Wiring System (RHD model)

CONNECTOR LIST

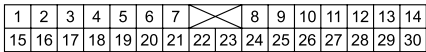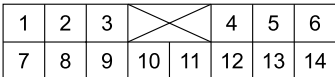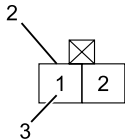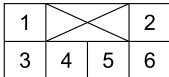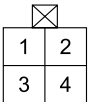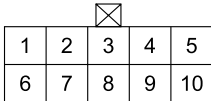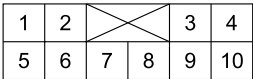 The connector list shows each connectors' identification number (1) configuration (2) and the pin number (3).

No.	Connector Face	No.	Connector Face
FB9	 <p>White 030-007</p>	FB20	 <p>White 014-026</p>
FB12	 <p>White 002-267</p>	FB26	 <p>White 006-116</p>
FB13	 <p>White 004-129</p>	FB46	 <p>White 010-061</p>
FB15	 <p>White 010-062</p>	FB52	 <p>000-049</p>


MFW89DLF000101

CONNECTOR SYMBOL

Connector Symbol	Harness name	Connector Symbol	Harness name
D	Door Harness	FU	Instrument Upper Harness
E	Engine Harness , Injector Harness	G	Roof Harness (LH & RH)
F	Floor Harness	H	For joint between harnesses
FB	Frame Harnesses , Frame Front Harness , Frame Rear Harness	J	Frame Rear Harness, Power Tilt Harness,
FL	Instrument Lower Harness , Headlight Harness , Mirror Harness	-	-


JOINT CONNECTION

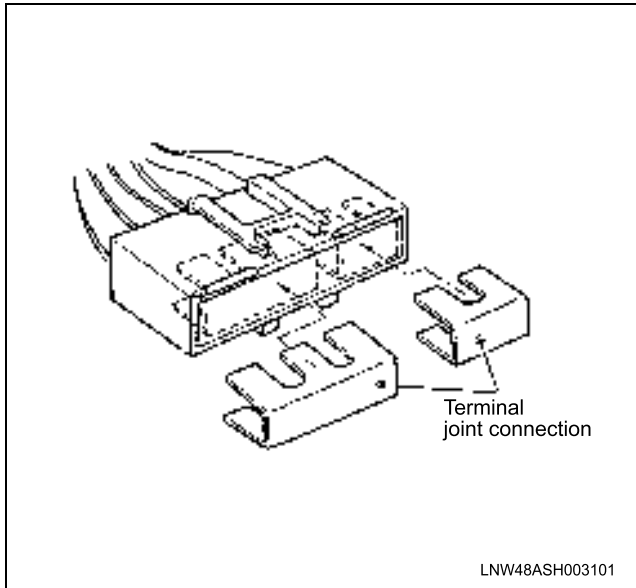This connector has the structure of plural number of terminals collectively connected inside the connector.




How to show joint connection in the circuit diagram

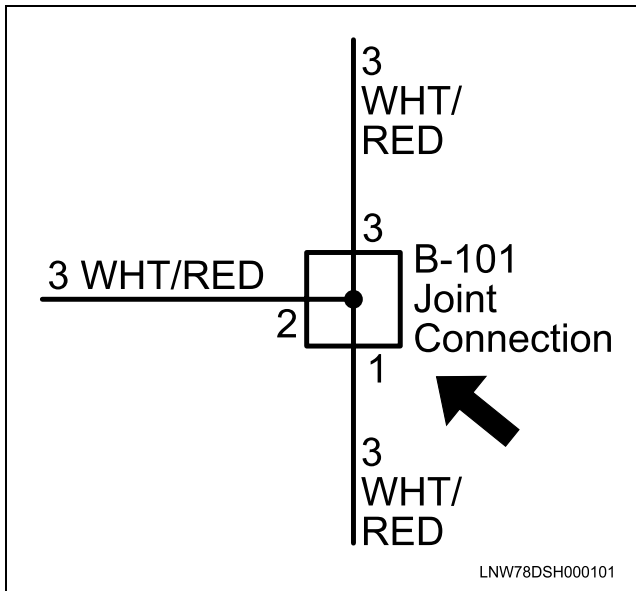1. When joint connection can be shown as actual circuit diagram.



WELD SPLICE

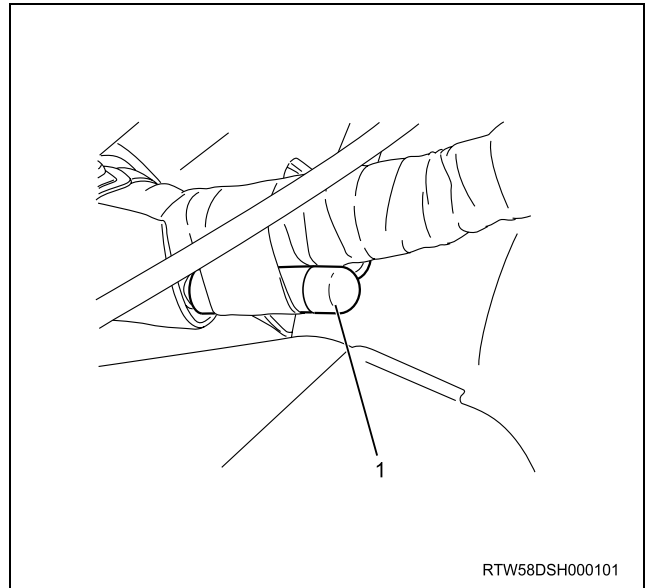Weld splice is a harness that welds the point of the harness and does joint.




Legend

1. Weld Splice

How to show weld splice in the circuit diagram

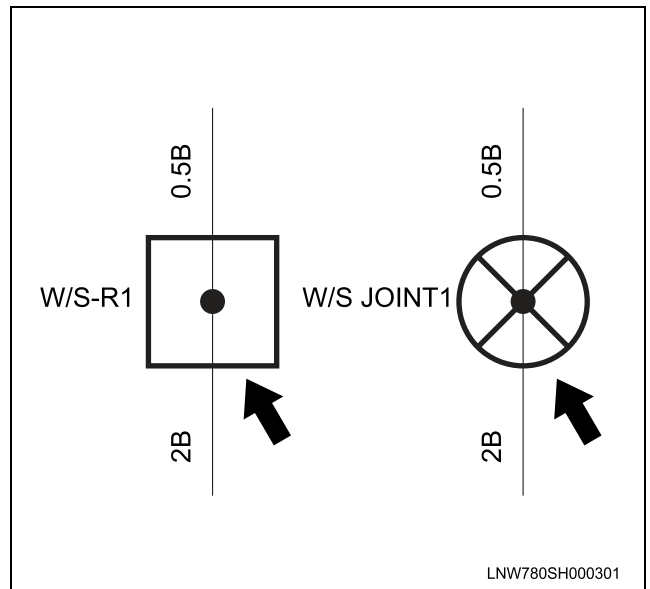1. When weld splice can be shown as actual circuit diagram.




Parts for Electrical Circuit

WIRING

Wire Color

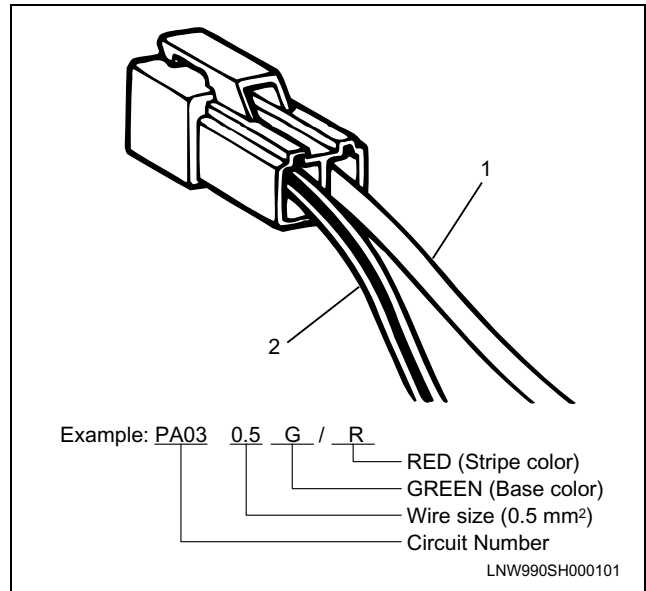All wires have color-coded insulation. Wires belonging to a system's main harness will have a single color. Wires belonging to a system's sub-circuits will have a colored stripe. Striped wires use the following code to show wire size and colors.



Abbreviations are used to indicate wire color within a circuit diagram. Refer to the following table.

Wire Color Coding


Color coding	Meaning	Color coding	Meaning
B	Black	BR	Brown
W	White	LG	Light green
R	Red	GY	Gray
G	Green	P	Pink
Y	Yellow	SB	Sky blue
L	Blue	V	Violet
O	Orange		

Distinction of Circuit by Wire Base Color

Base color	Circuits	Base color	Circuits
Black	Starter circuit	Yellow	Instrument circuit
White	Charging circuit	Blue, Orange, Brown, Light green, Gray, Pink, Sky blue, Violet	Other circuit
Red	Lighting circuit		
Green	Signal circuit		

Wire Size

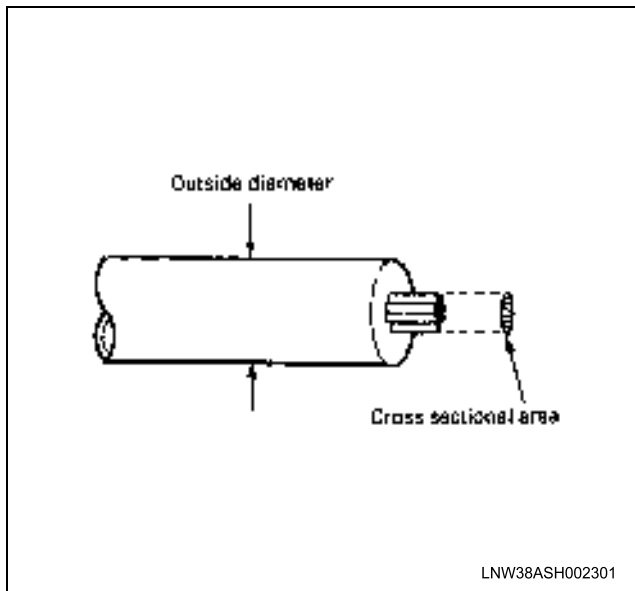The size of wire used in a circuit is determined by the amount of current (amperage), the length of the circuit, and the voltage drop allowed. The following wire size and load capacity, shown below, are specified by AWG (American Wire Gauge) (Nominal size means approximate cross sectional area).



Wire Size Table


Nominal size	Cross sectional area (mm ²)	Outside diameter (mm)	Allowable current (A)	AWG size (cross reference)
0.3	0.372	1.8	9	22
0.5	0.563	2.0	12	20
0.85	0.885	2.2	16	18
1.25	1.287	2.5	21	16
2	2.091	2.9	28	14
3	3.296	3.6	37.5	12
5	5.227	4.4	53	10
8	7.952	5.5	67	8
15	13.36	7.0	75	6
20	20.61	8.2	97	4

Circuit Number


To identify the circuit, the circuit number is shown to each wiring harness between the electrical parts in alphanumeric code.

Connector

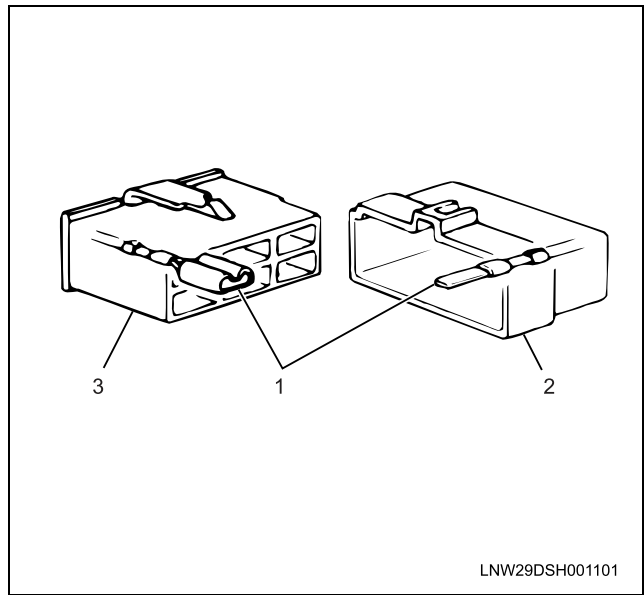
The connector terminal shape (1) determines whether the connector is male (2) or female (3).
The connector housing configuration does not determine whether a connector is male or female.



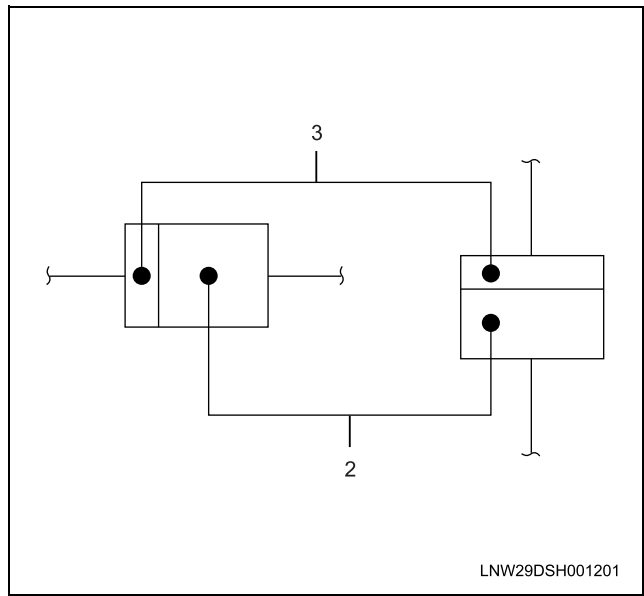
The symbol illustrated in the figure is used as connector, In the circuit of this section.




Connector is identified with a number.

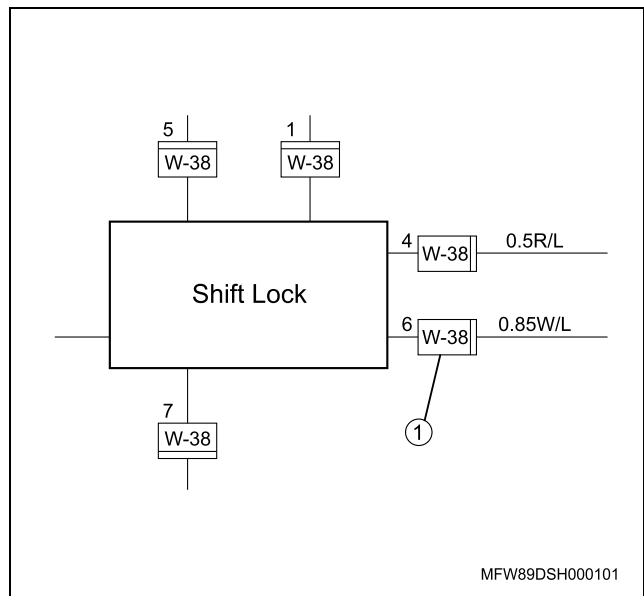

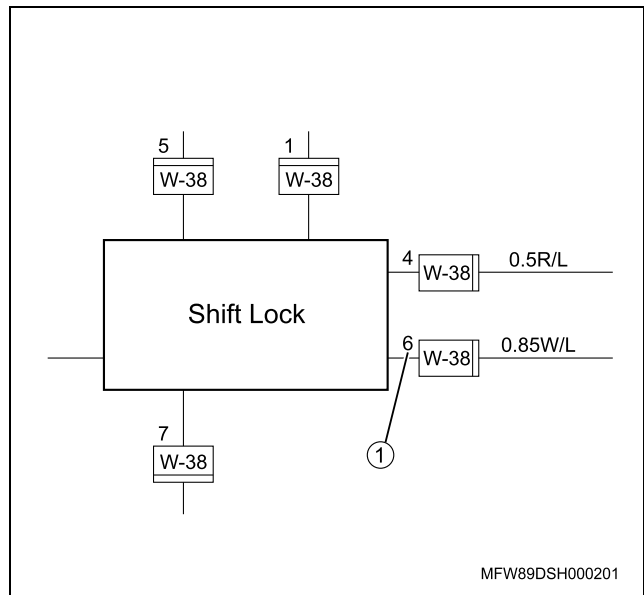
The applicable terminal number is shown for each connector.



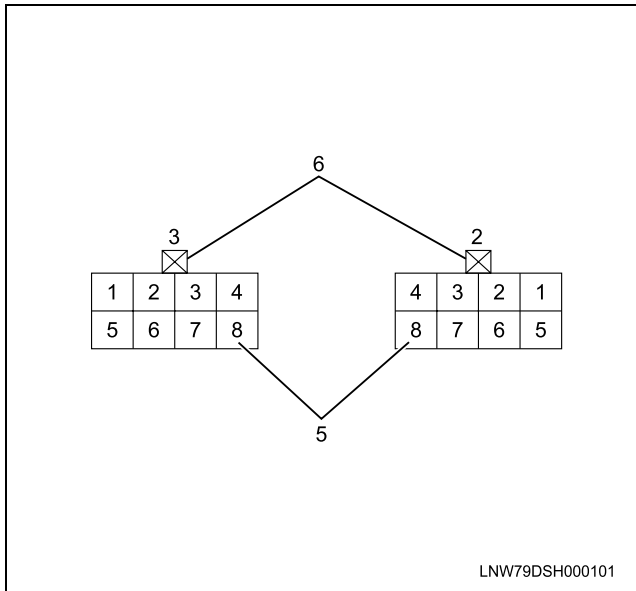Connector terminal numbers (5) are clearly shown. Male side connector (2) terminal numbers are in sequence from upper right to lower left. Female side connector (3) terminal numbers are in sequence from upper left to lower right. Do lock part (6) of the connector up in any case and lock from the opening.




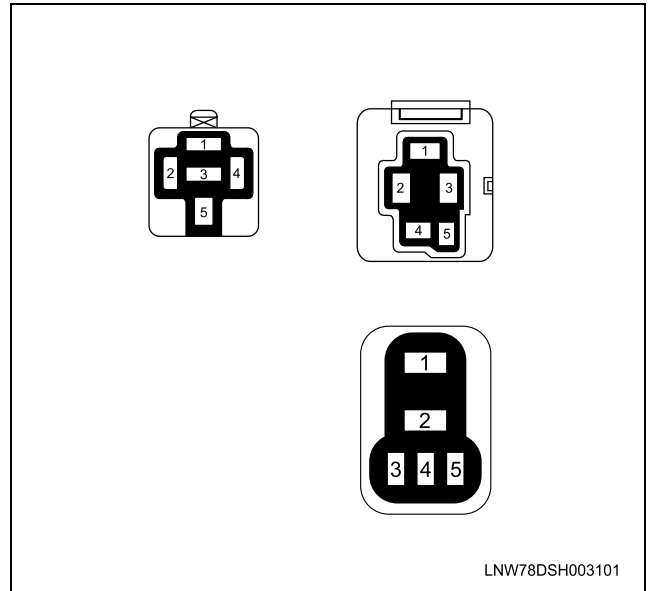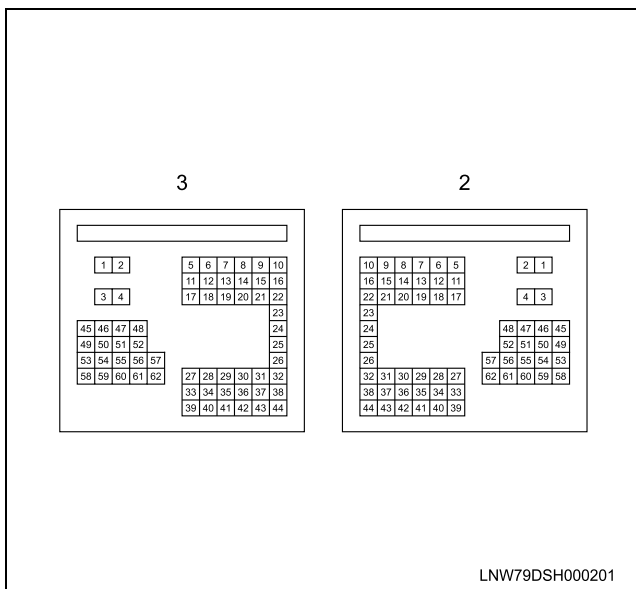The connectors used for relays have their own terminal number assignment, irrespective of the above rule.







 
 
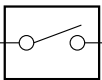
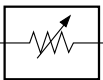
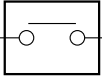
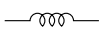
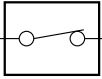
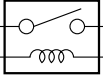

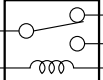
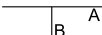
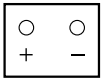
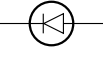
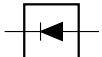
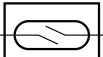
 
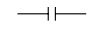


 
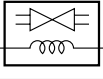
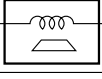
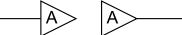
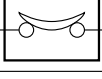
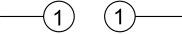

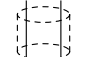
NOTE:

For those connectors on which specific terminal numbers or symbols are shown (such as ECM), the terminal numbers or symbols are used in the circuit diagram, irrespective of the above rule.



Notes for working on Electrical Items

SYMBOLS

Symbol	Meaning of Symbol	Symbol	Meaning of Symbol
	Fuse		Bulb
	Slow blow fuse		Double filament bulb
	Fusible link wire		Motor
	Switch (Normal open type)		Variable register Rheostat
	Switch		Coil (inductor), solenoid, magnetic valve
	Switch (Normal close type)		Relay (Normal open type)
	Contact wiring		Relay (Normal close type)
	Selection of harness. It displays selecting shared.		
	Battery		Light emitting diode
	Diode		Reed switch
	Electronic Parts		Condenser
	Resistor		Horn
	Speaker		Vacuum switching valve
	Buzzer		Arrow shows circuit continues to the deferent page
	Circuit breaker		Arrow shows circuit continues in the same page
	Twist Pair		Shield

Fuse, Fusible Link

FUSE

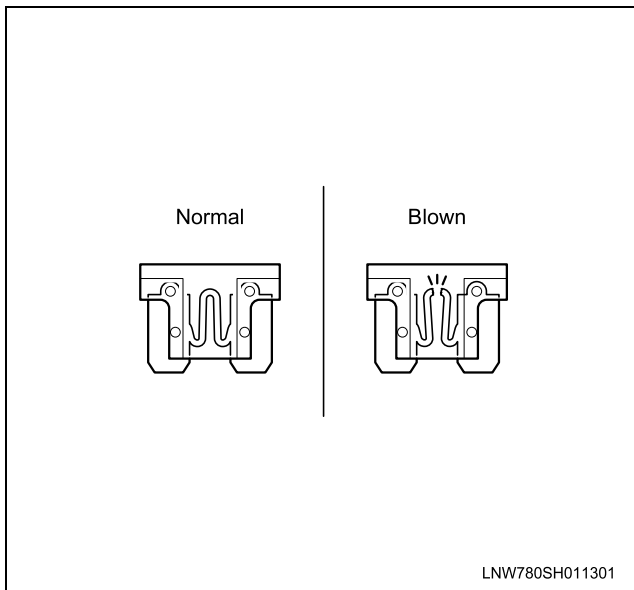
Fuses are the most common form of circuit protection used in vehicle wiring. A fuse is a thin piece of wire or strip of metal encased in a glass or plastic housing. It is wired in series with the circuit it protects. When there is an overload of current in a circuit, such as a short to ground, the wire or metal strip is designed to burn out and interrupt the flow of current. This prevents a surge of high current from reaching and damaging other components in the circuit.

Determine the cause of the overloaded before replacing the fuse.

The replacement fuse must have the same amperage specifications as the original fuse.

Never replace a blown fuse with a fuse of a different amperage specification.

Doing so can result in an electrical fire or other serious circuit damage. A blown fuse is easily identified.




FUSIBLE LINK

The fusible link is primarily used to protect circuits where high amounts of current flow and where it would not be practical to use a fuse. For example, the starter circuit. When a current overload occurs, the fusible link melts open and interrupts the flow of current so as to prevent the rest of the wiring harness from burning.

Determine the cause of the overload before replacing the fusible link. The replacement fusible link must have the same amperage specification as the original fusible link.

Never replace a blown fusible link with a fusible link of a different amperage specification. Doing so can result in an electrical fire or other serious circuit damage.

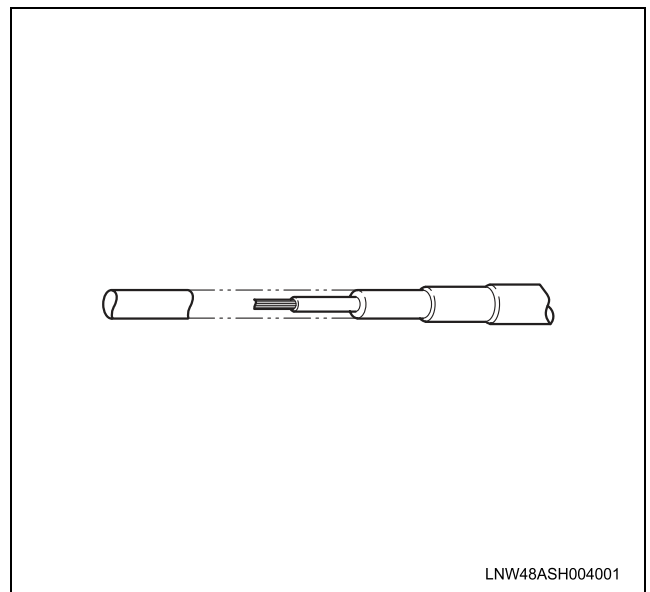A blown fusible link is easily identified.



SLOW-BLOW FUSE


A slow-blow fuse is used in a circuit having a very high current flow (starter) or in an area where an ordinary fuse would be impractical.

Excessive current flow causes the fusible link inside the fuse to melt. Current flow is interrupted. Circuit damage caused by fire or heat is prevented.

Before replacing a fuse, determine the cause of the excessive current.

Always replace the blowout fuse with a new fuse of the same amperage rating. Replacing the fuse with one having a higher rating can result in a serious and expensive electrical fire.

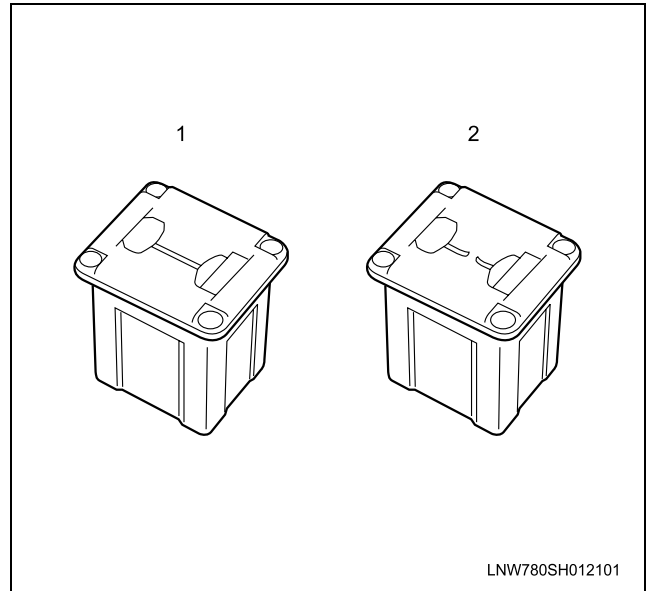Figure 1 shows a normal slow-blow fuse. Figure 2 shows a blowout fuse. it is easy to distinguish between the 2 fuses.




Slow-Blow Fuse Specifications

Type	Rating	Case Color	Maximum Circuit Current (A)
Connector	30A	Violet	15
Connector	40A	Green	20
Connector	50A	Red	25
Connector	60A	Yellow	30

Relay

Battery and load location may require that a switch be placed some distance from either component. This means a longer wire and a higher voltage drop (1). The installation the battery and the load reduces the voltage drop (2).


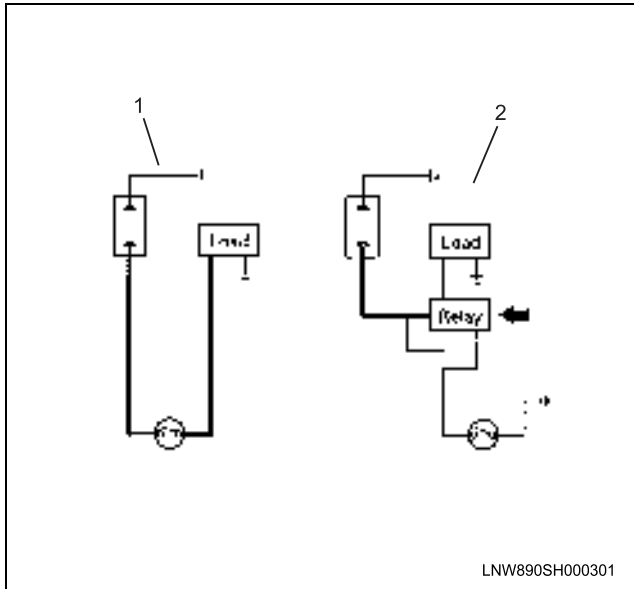
Because the switch controls the relay, amperage through the switch can be reduced.




RELAY SPECIFICATION AND CONFIGURATION


Name/Color	Rated voltage/Coil resistance	Internal circuit
ACB 13222 M01 Green	24V/ Approx. 302Ω Minimum operating voltage: 16V at 20°C (68°F)	<p style="text-align: right;">MFW89DSH001101</p>

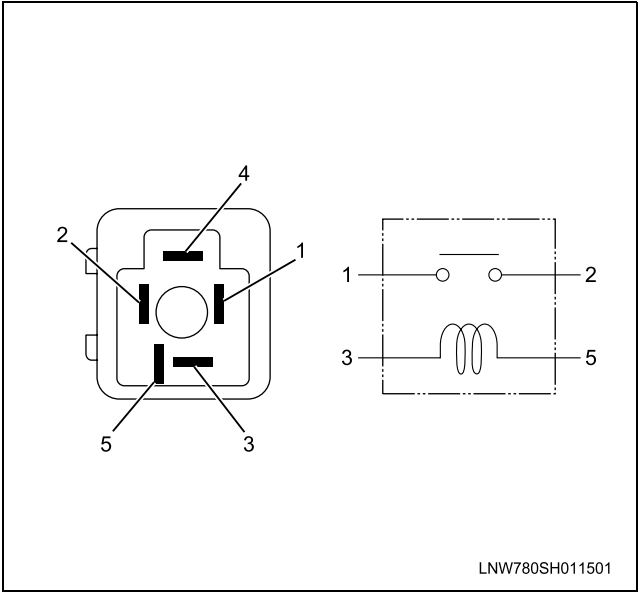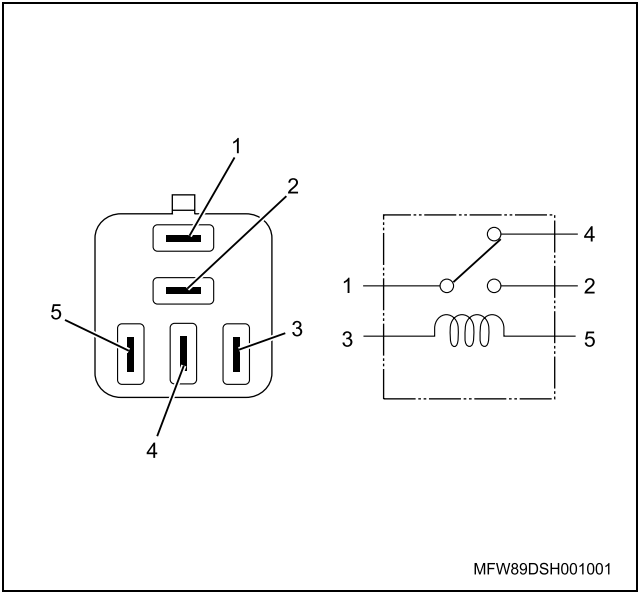9D-16 Wiring System (RHD model)

Name/Color	Rated voltage/Coil resistance	Internal circuit
MR82C-752, 2738099-A Black	(MR82C-752) 24V/ Approx. 100Ω Minimum operating voltage: 16V at 20°C (68°F) (2738099-A)24V/ Approx. 198Ω Minimum operating voltage: 16V at 20°C (68°F)	 <p>LNW780SH011501</p>
ACM13222 M01 Green	24V/ Approx. 320Ω Minimum operating voltage: 16V at 20°C (68°F)	 <p>MFW89DSH001001</p>

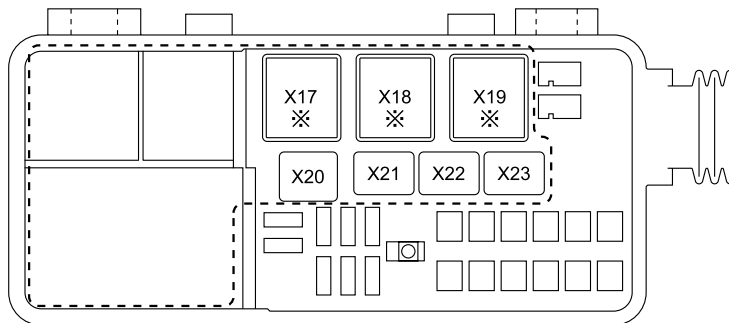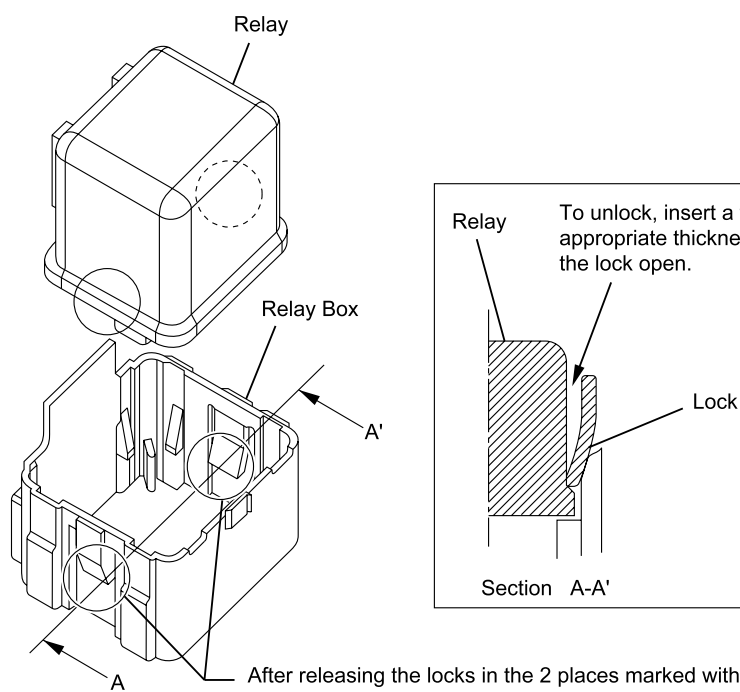 
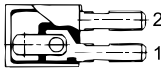
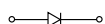
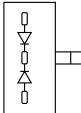

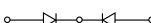
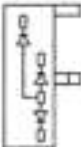


Relay Exchange method

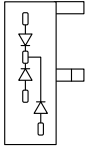
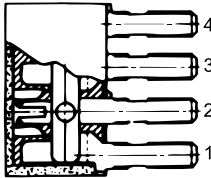
 
 
 
 
 
 
 
 
 
 
 
 
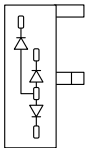












When detaching the ※ marked relays, carry out work in accordance with the below procedures.



Diode

DIODE SPECIFICATIONS AND CONFIGURATIONS

MARK	CONSTRUCTION	CHECKING	THERE SHOULD BE CONTINUITY IN EITHER A OR B WHEN A CIRCUIT TESTER IS CONNECTED WITH DIODE TERMINAL.					
			TERMINAL NO.					
					2	1		
			CONNECTION PATTERN	A	⊕	⊖		
				B	⊖	⊕		
			TERMINAL NO.					
					3	2	1	
			CONNECTION PATTERN	A	⊖	⊕		
				B	⊕	⊖	⊕	
			TERMINAL NO.					
					4	3	2	1
			CONNECTION PATTERN	A			⊕	⊖
				B		⊖	⊕	
				A	⊖		⊕	
				B		⊕	⊖	
				A			⊖	⊕
				B	⊕		⊖	

MARK	CONSTRUCTION	CHECKING (THERE SHOULD BE CONTINUITY IN EITHER A OR B WHEN A CIRCUIT TESTER IS CONNECTED WITH DIODE TERMINAL)																															
		<table><tr><th colspan="2">TERMINAL NO.</th><th></th><th></th><th></th><th></th></tr><tr><th colspan="2"></th><th>4</th><th>3</th><th>2</th><th>1</th></tr><tr><td rowspan="4">CONNECTION PATTERN</td><td rowspan="2">A</td><td></td><td></td><td>⊕</td><td>⊖</td></tr><tr><td></td><td>⊖</td><td>⊕</td><td></td></tr><tr><td rowspan="2">B</td><td>⊖</td><td></td><td>⊕</td><td></td></tr><tr><td></td><td></td><td>⊖</td><td>⊕</td></tr></table>	TERMINAL NO.								4	3	2	1	CONNECTION PATTERN	A			⊕	⊖		⊖	⊕		B	⊖		⊕				⊖	⊕
TERMINAL NO.																																	
		4	3	2	1																												
CONNECTION PATTERN	A			⊕	⊖																												
			⊖	⊕																													
	B	⊖		⊕																													
				⊖	⊕																												
		<table><tr><th colspan="2">TERMINAL NO.</th><th></th><th></th><th></th><th></th></tr><tr><th colspan="2"></th><th>4</th><th>3</th><th>2</th><th>1</th></tr><tr><td rowspan="4">CONNECTION PATTERN</td><td rowspan="2">A</td><td></td><td></td><td>⊕</td><td>⊖</td></tr><tr><td></td><td>⊖</td><td>⊕</td><td></td></tr><tr><td rowspan="2">B</td><td>⊖</td><td></td><td>⊕</td><td></td></tr><tr><td></td><td></td><td>⊖</td><td>⊕</td></tr></table>	TERMINAL NO.								4	3	2	1	CONNECTION PATTERN	A			⊕	⊖		⊖	⊕		B	⊖		⊕				⊖	⊕
TERMINAL NO.																																	
		4	3	2	1																												
CONNECTION PATTERN	A			⊕	⊖																												
			⊖	⊕																													
	B	⊖		⊕																													
				⊖	⊕																												

MFW89DMF000501

MFW89DMF000501


MAXIMUM RATING (Temp. = 25°C {77°F})

Items	Rating	Remarks
Peak reverse voltage	400V	
Transient peak reverse voltage	500V	
Average output current	1.5A	Temp. = 40°C (104°F)
Working ambient temperature	-30°C – 80°C (-22°F–176°F)	
Storage temperature	-40°C – 100°C (-40°F–212°F)	

Main Data and Specifications

Fuse, Fusible Link and Slow-Blow Fuse Location

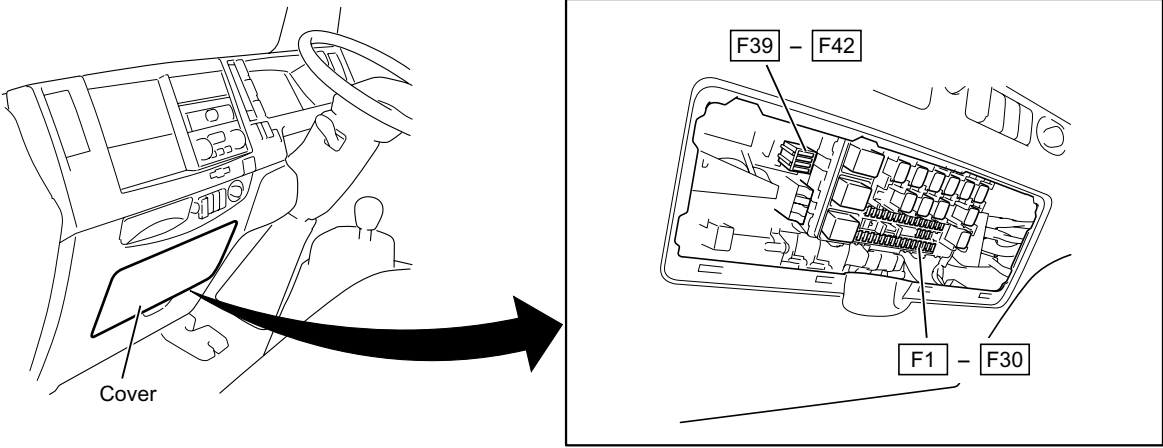FUSE & FUSE LABEL(Except Indonesia)



Fuse Label

NOTICE


USE SPECIFIED FUSE ONLY, UNSPECIFIED FUSES CAN CAUSE FIRE AND MALFUNCTION OF EQUIPMENTS.

F39	15A	CONDENSER FAN (AIR CON)
F40		
F41	20A	POWER WINDOW(REAR)
F42	25A	ABS

HLIGHT CLEANER	AIR SUSPENSION	DOVE LIGHT	DOOR LOCK	FRT FOG LIGHT	POWER WINDOW	ABS	FRONT WIPER&WASHER	HLIGHT LH	IMMOBILIZER	HLIGHT RH	STOP LIGHT	STARTER	HLIGHT LH	HLIGHT RH
20A	15A	15A	15A	10A	20A	10A	20A	10A	10A	10A	10A	10A	10A	10A
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
SPARE			SPARE			SPARE								
MIRROR HEATER	AIR DRYER	PTO. BACK LIGHT	SRS	ENGINE CONTROLLER	METER	RR FOG LIGHT	REMOTE CONTROL MIRROR	CIGAR LIGHTER	HORN	TURN LIGHT- HAZARD	TAIL LIGHT	ILLUMI	CORNERING LIGHT/ RR FOG LIGHT	BLOWER MOTOR
15A	15A	15A	10A	10A	10A	10A	15A	15A	15A	15A	10A	10A	10A	20A
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

1	15A F31	Power source
2	15A F32	TCM
3	15A F33	ECM main
4	F34	-
5	F35	-
6	F36	-
7	10A F37	Air conditioner
8	F38	-

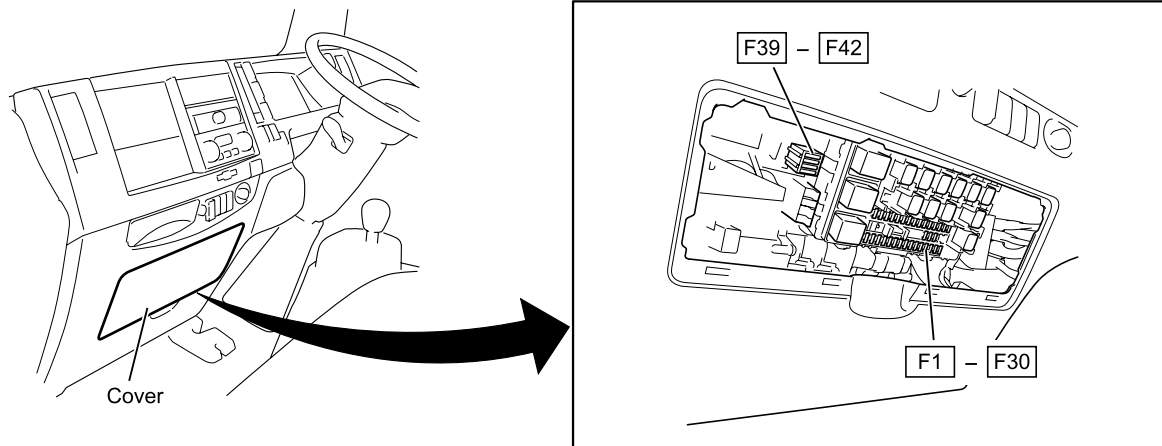FUSE & FUSE LABEL(Indonesia)




Fuse Label

NOTICE

USE SPECIFIED FUSE ONLY, UNSPECIFIED FUSES CAN CAUSE FIRE AND MALFUNCTION OF EQUIPMENTS.

F39	15A	CONDENSER FAN (AIR CON)
F40		
F41	20A	POWER WINDOW(REAR)
F42	25A	ABS

H/LIGHT CLEANER	AIR SUSPENSION	DOVE LIGHT	DOOR LOCK	FRT FOG LIGHT	POWER WINDOW	ABS	FRONT WIPER&WASHER	H/LIGHT LH	IMMOBILIZER	H/LIGHT RH	STOP LIGHT	STARTER	H/LIGHT LH	H/LIGHT RH
20A	15A	15A	15A	10A	20A	10A	20A	10A	10A	10A	10A	10A	10A	10A
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
SPARE					SPARE					SPARE				
MIRROR HEATER	AIR DRYER	PTO BACK LIGHT	SRS	ENGINE CONTROLLER	METER	RR FOG LIGHT	REMOTE CONTROL MIRROR	CIGAR LIGHTER	HORN	TURN LIGHT, HAZARD	TAIL LIGHT	ILLUMI	CORNERING LIGHT/ RR FOG LIGHT	BLOWER MOTOR
15A	15A	15A	10A	10A	10A	10A	15A	15A	15A	15A	10A	10A	10A	20A
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

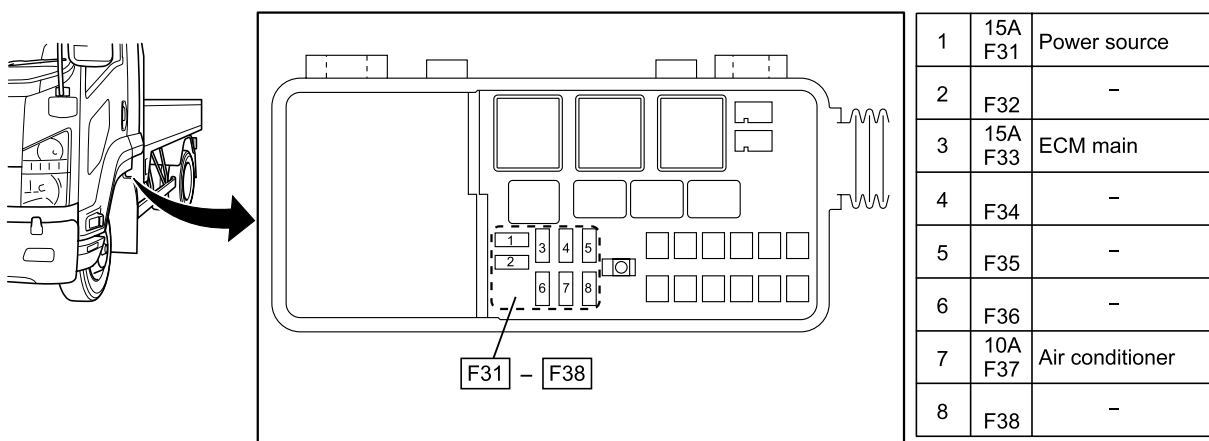


MFWB9DXF026101

NOTE:

The fuse numbers (1)-(30) indicated on the fuse labels are expressed as [F-1] – [F-30] in the circuit diagrams

of this manual.

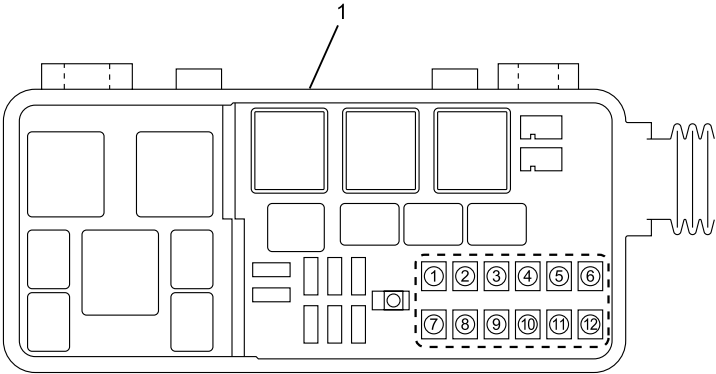SLOW-BLOW FUSE(Except Indonesia)




No.	SBF No.	Name	Capacity
①	SBF1	ECM	40A
②	SBF2	STARTER	60A
③	SBF3	-	-
④	SBF4	GLOW	60A
⑤	SBF5	STARTER SW2	30A
⑥	SBF6	STARTER SW1	50A
⑦	SBF7	Smoother	30A
⑧	SBF8	HEAD LAMP	50A
⑨	SBF9	-	-
⑩	SBF10	WIPER & H/AC	60A
⑪	SBF11	ABS	40A
⑫	SBF12	CAB JUNCTION BLOCK	50A

MFW89DSF000501

- Legend**
1. Chassis Relay Box

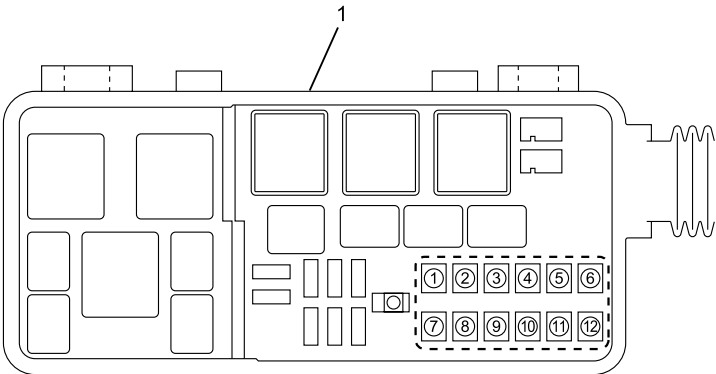SLOW-BLOW FUSE(Indonesia)



No.	SBF No.	Name	Capacity
①	SBF1	ECM	40A
②	SBF2	STARTER	60A
③	SBF3	-	-
④	SBF4	-	-
⑤	SBF5	STARTER SW2	30A
⑥	SBF6	STARTER SW1	50A
⑦	SBF7	-	-
⑧	SBF8	HEAD LAMP	50A
⑨	SBF9	-	-
⑩	SBF10	WIPER & H/AC	60A
⑪	SBF11	-	-
⑫	SBF12	CAB JUNCTION BLOCK	50A

MFWB9DSF000401

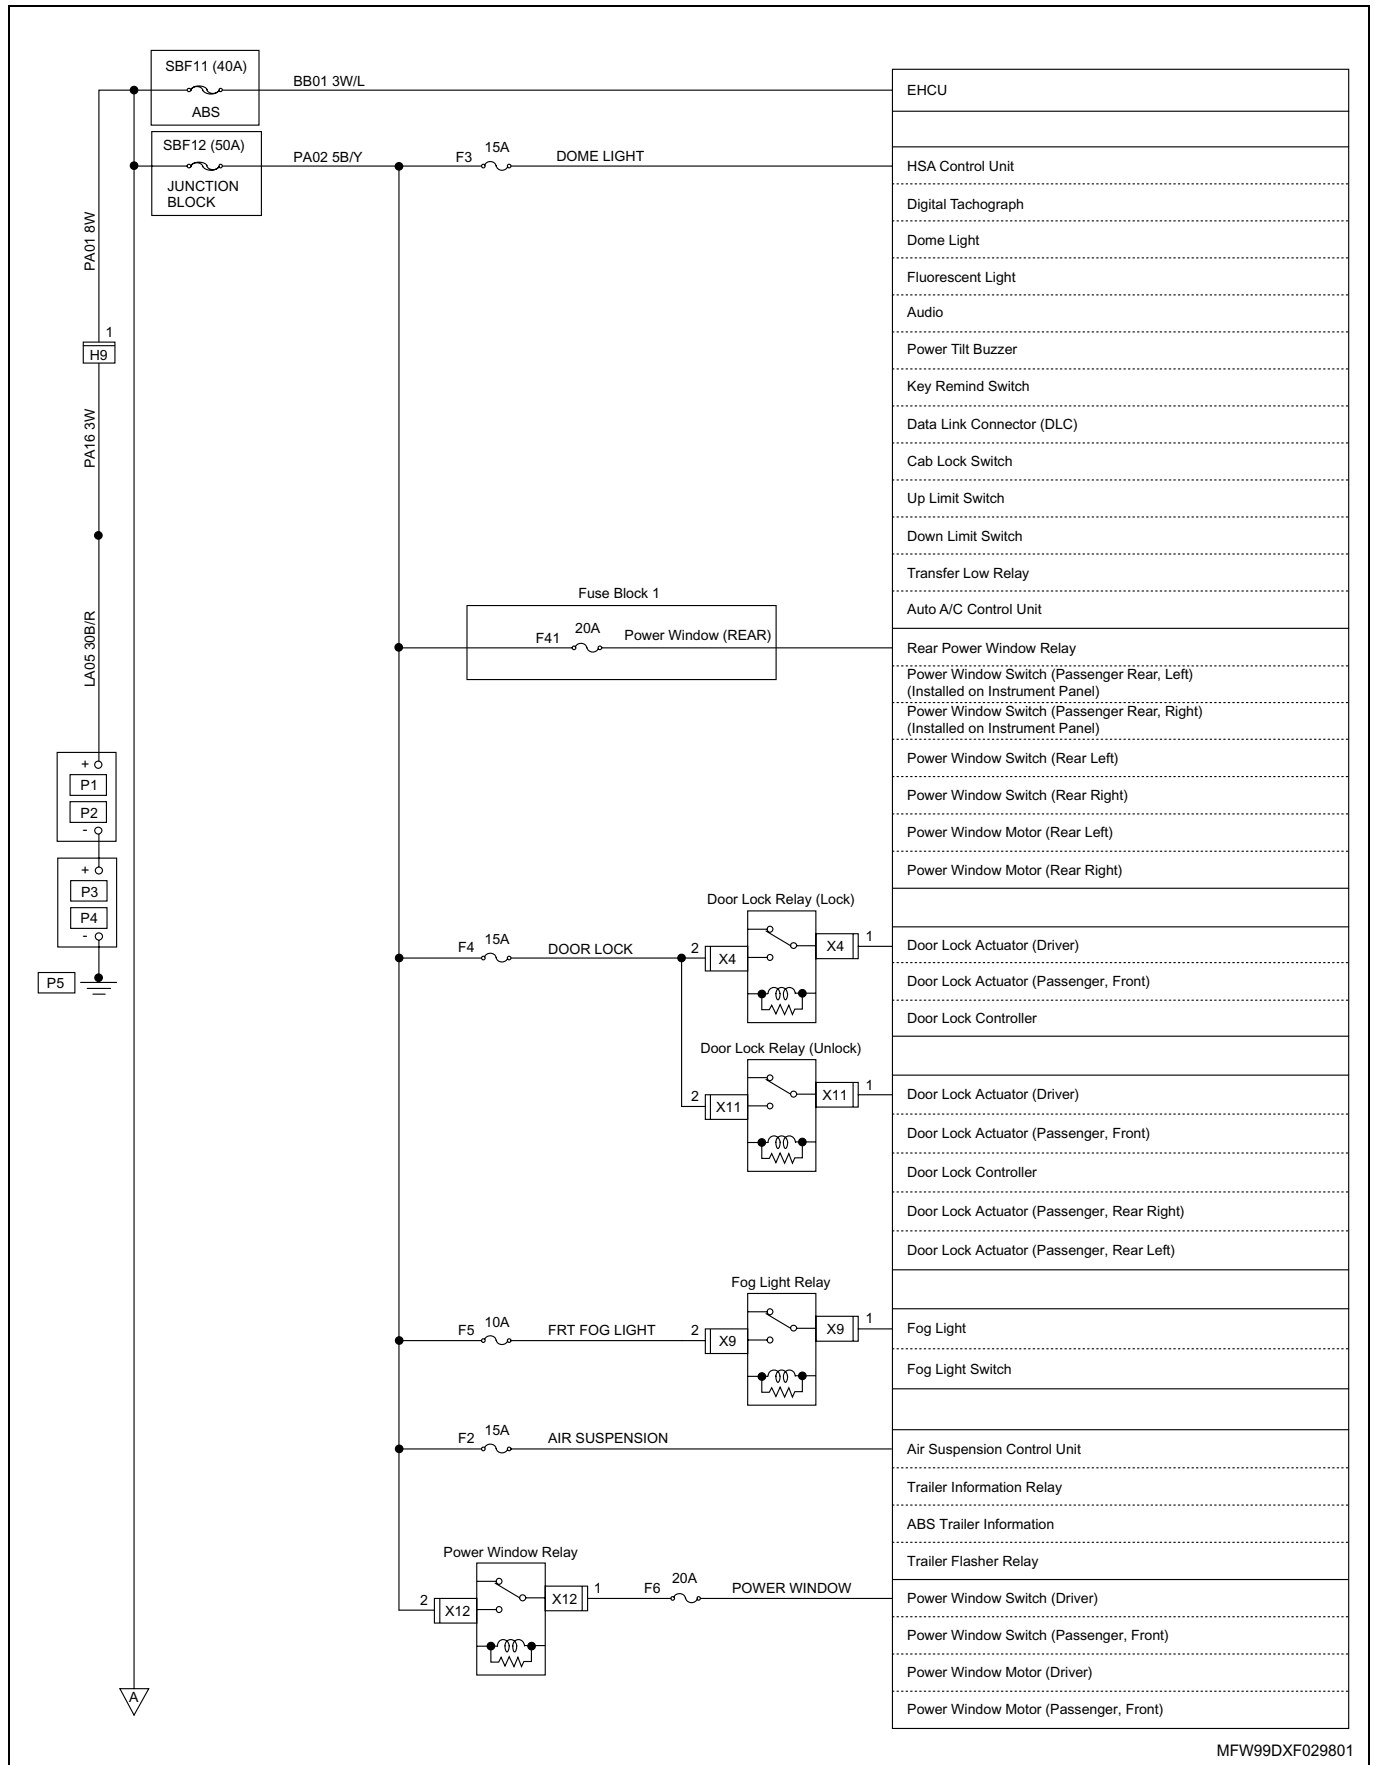
- Legend**
1. Chassis Relay Box

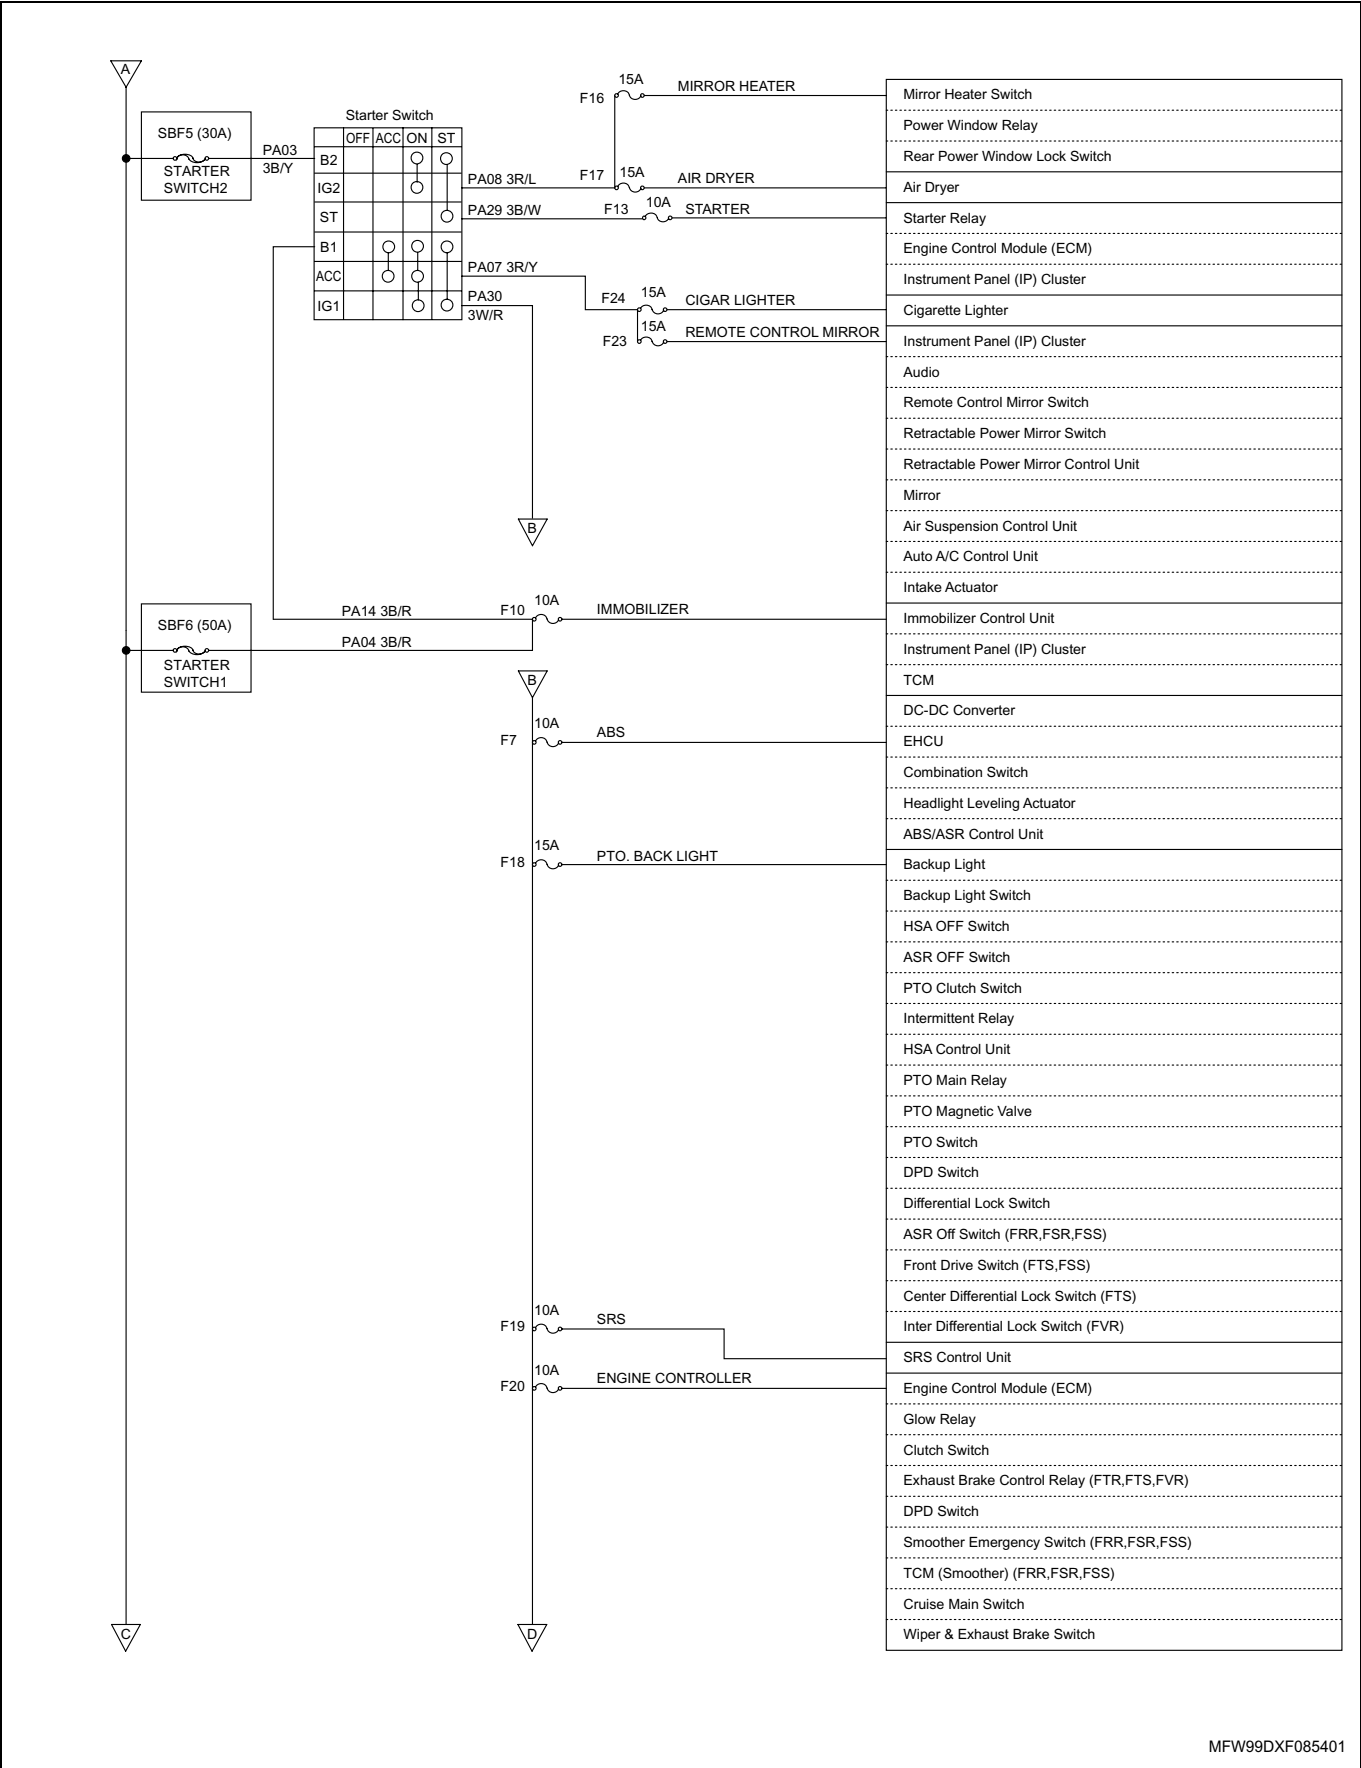
NOTE:
The slow-blow fuse numbers (1)-(12) indicated on the fuse labels are expressed as [SBF-1] – [SBF-12] in the circuit diagrams of this manual.

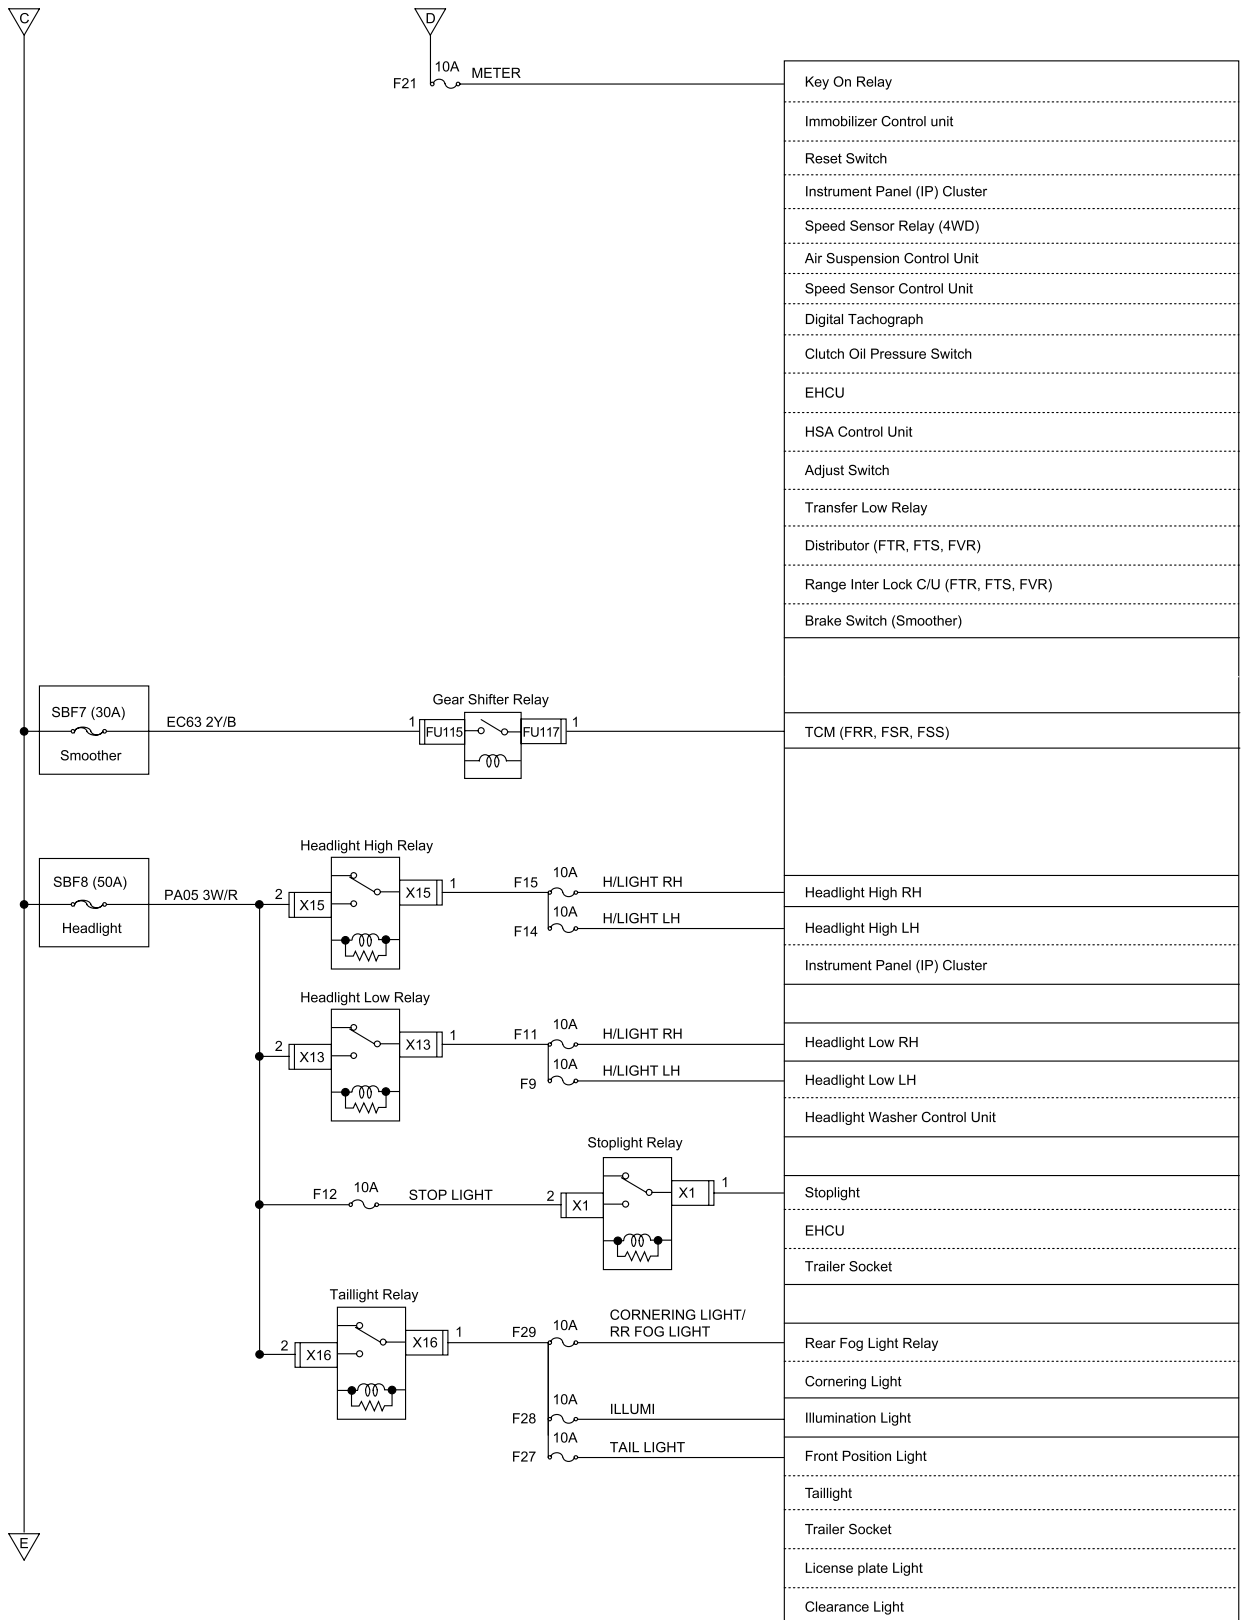
Power Distribution

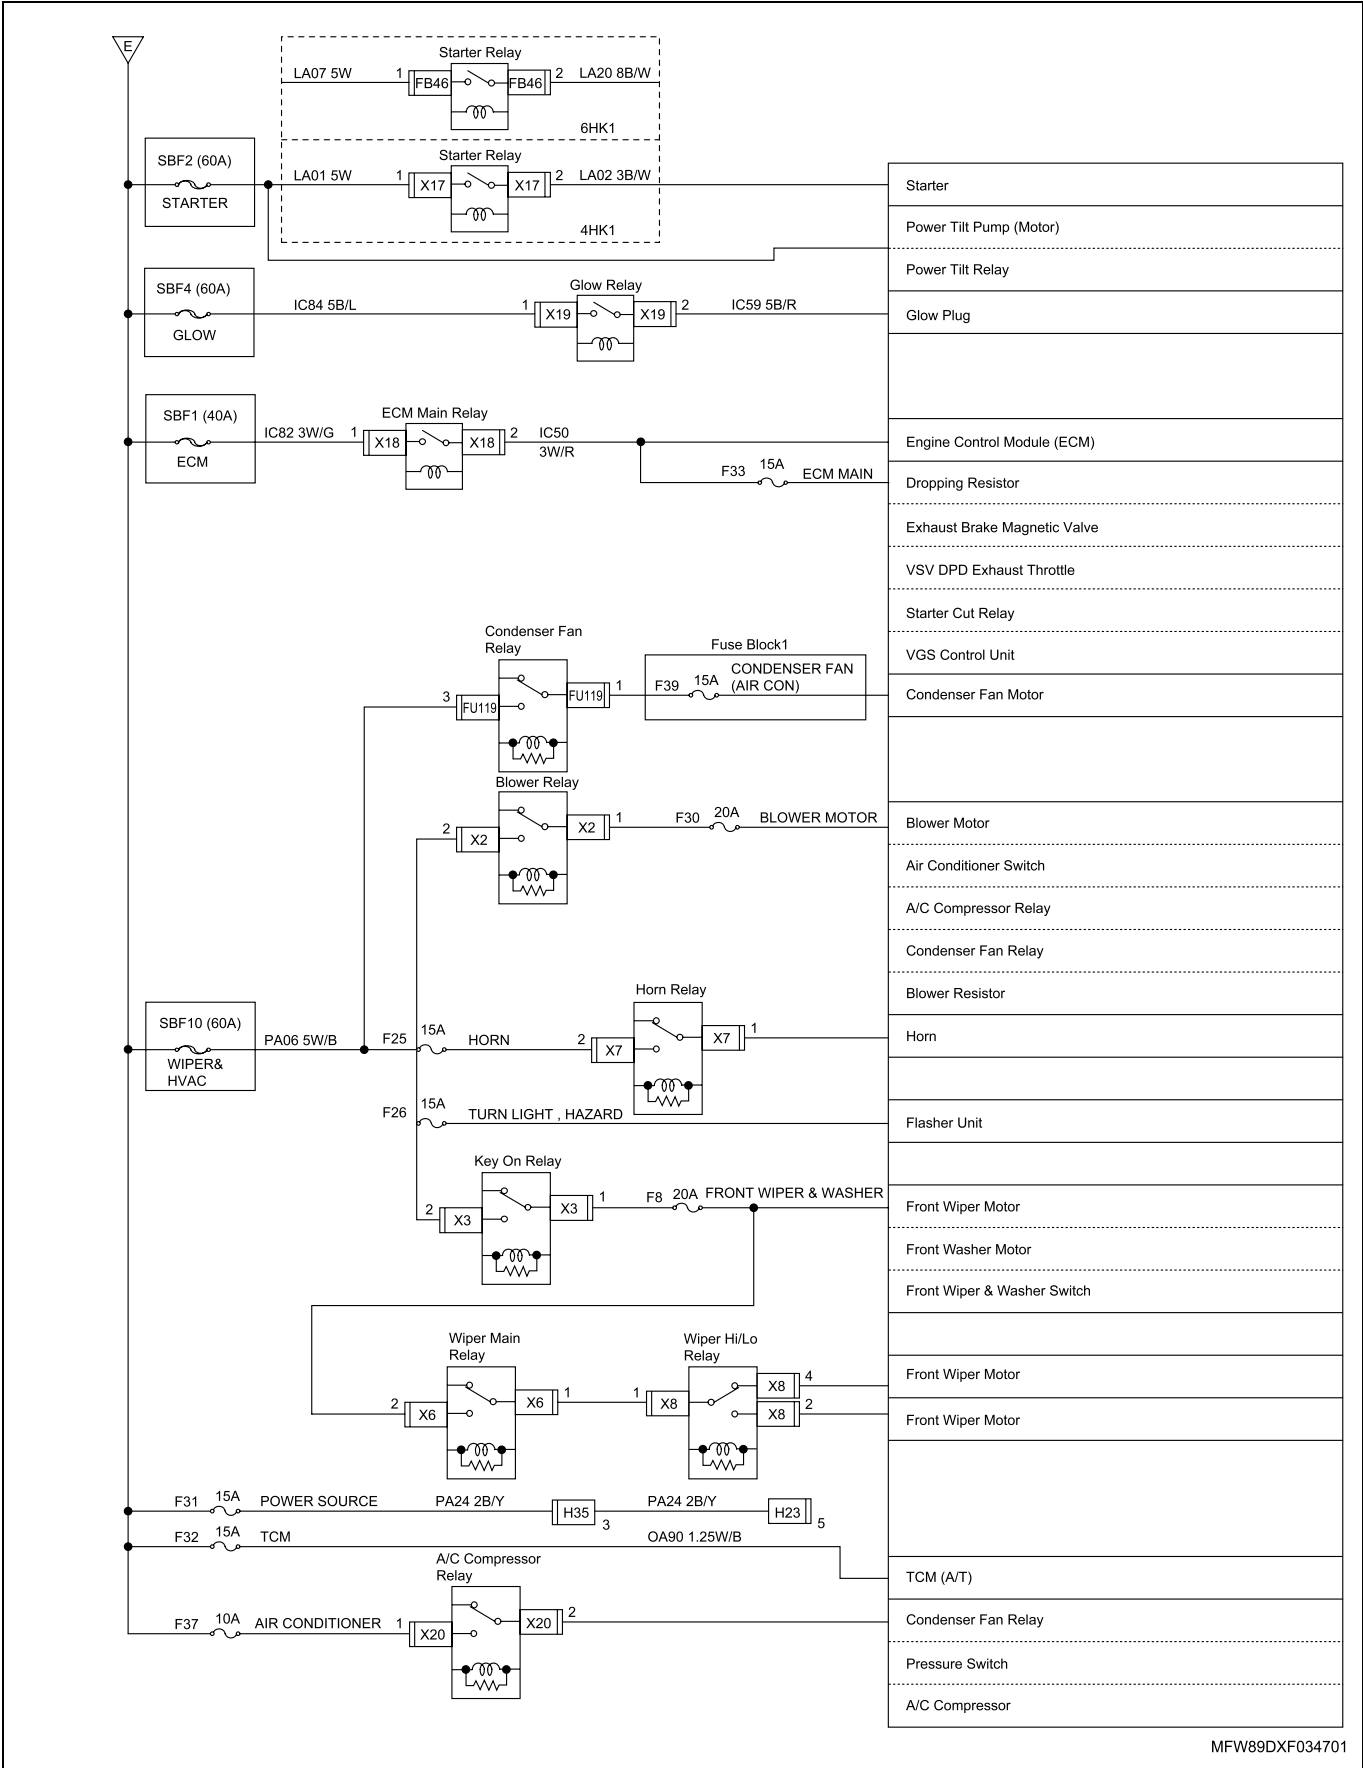
Except Indonesia

1/4












Indonesia

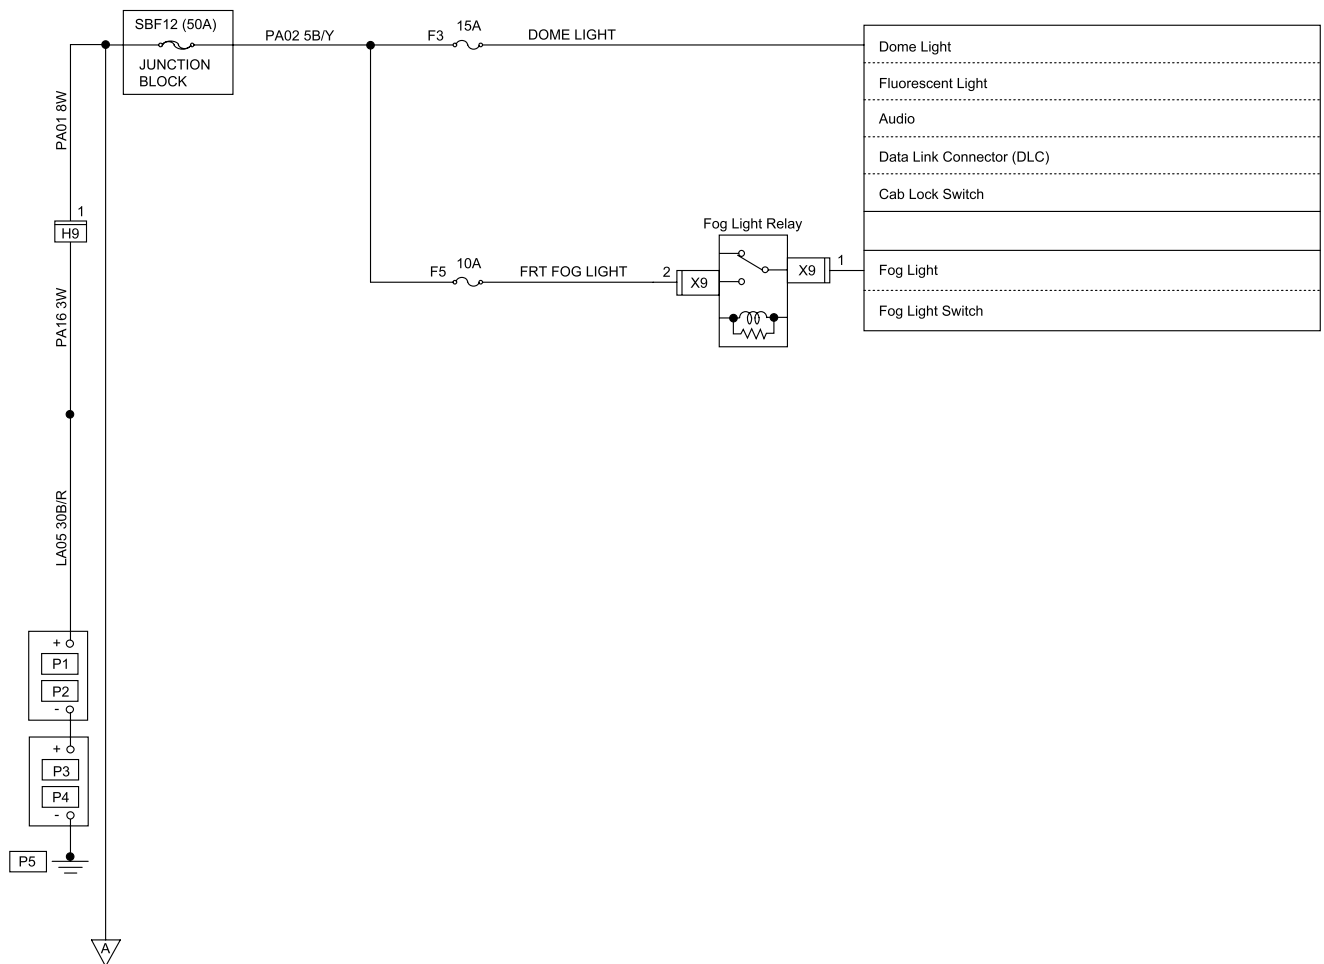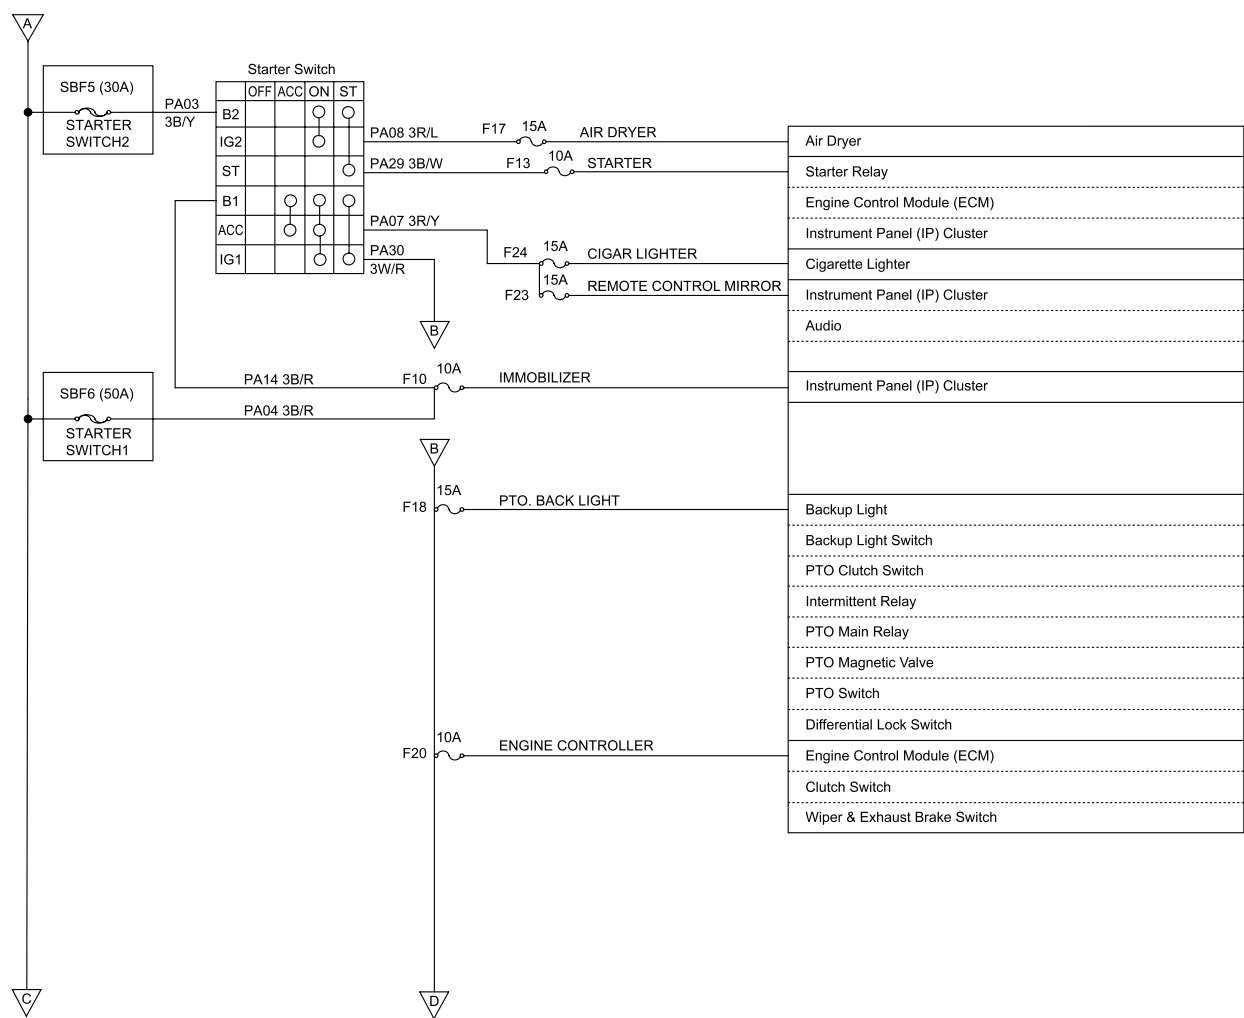
1/4






3/4

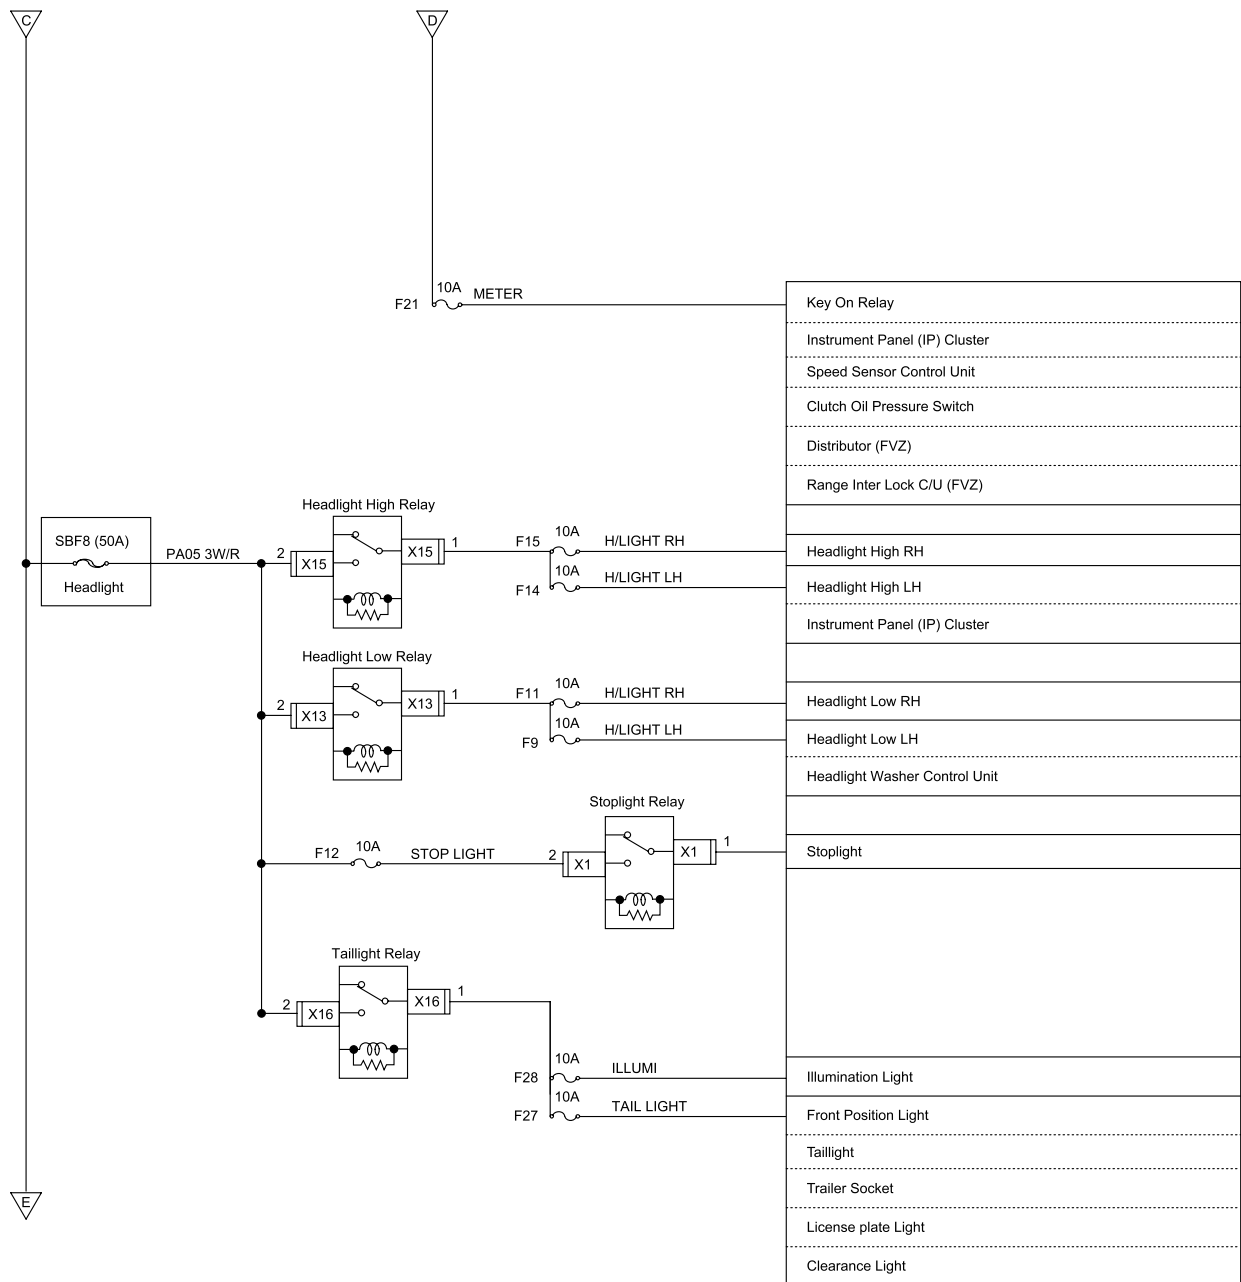

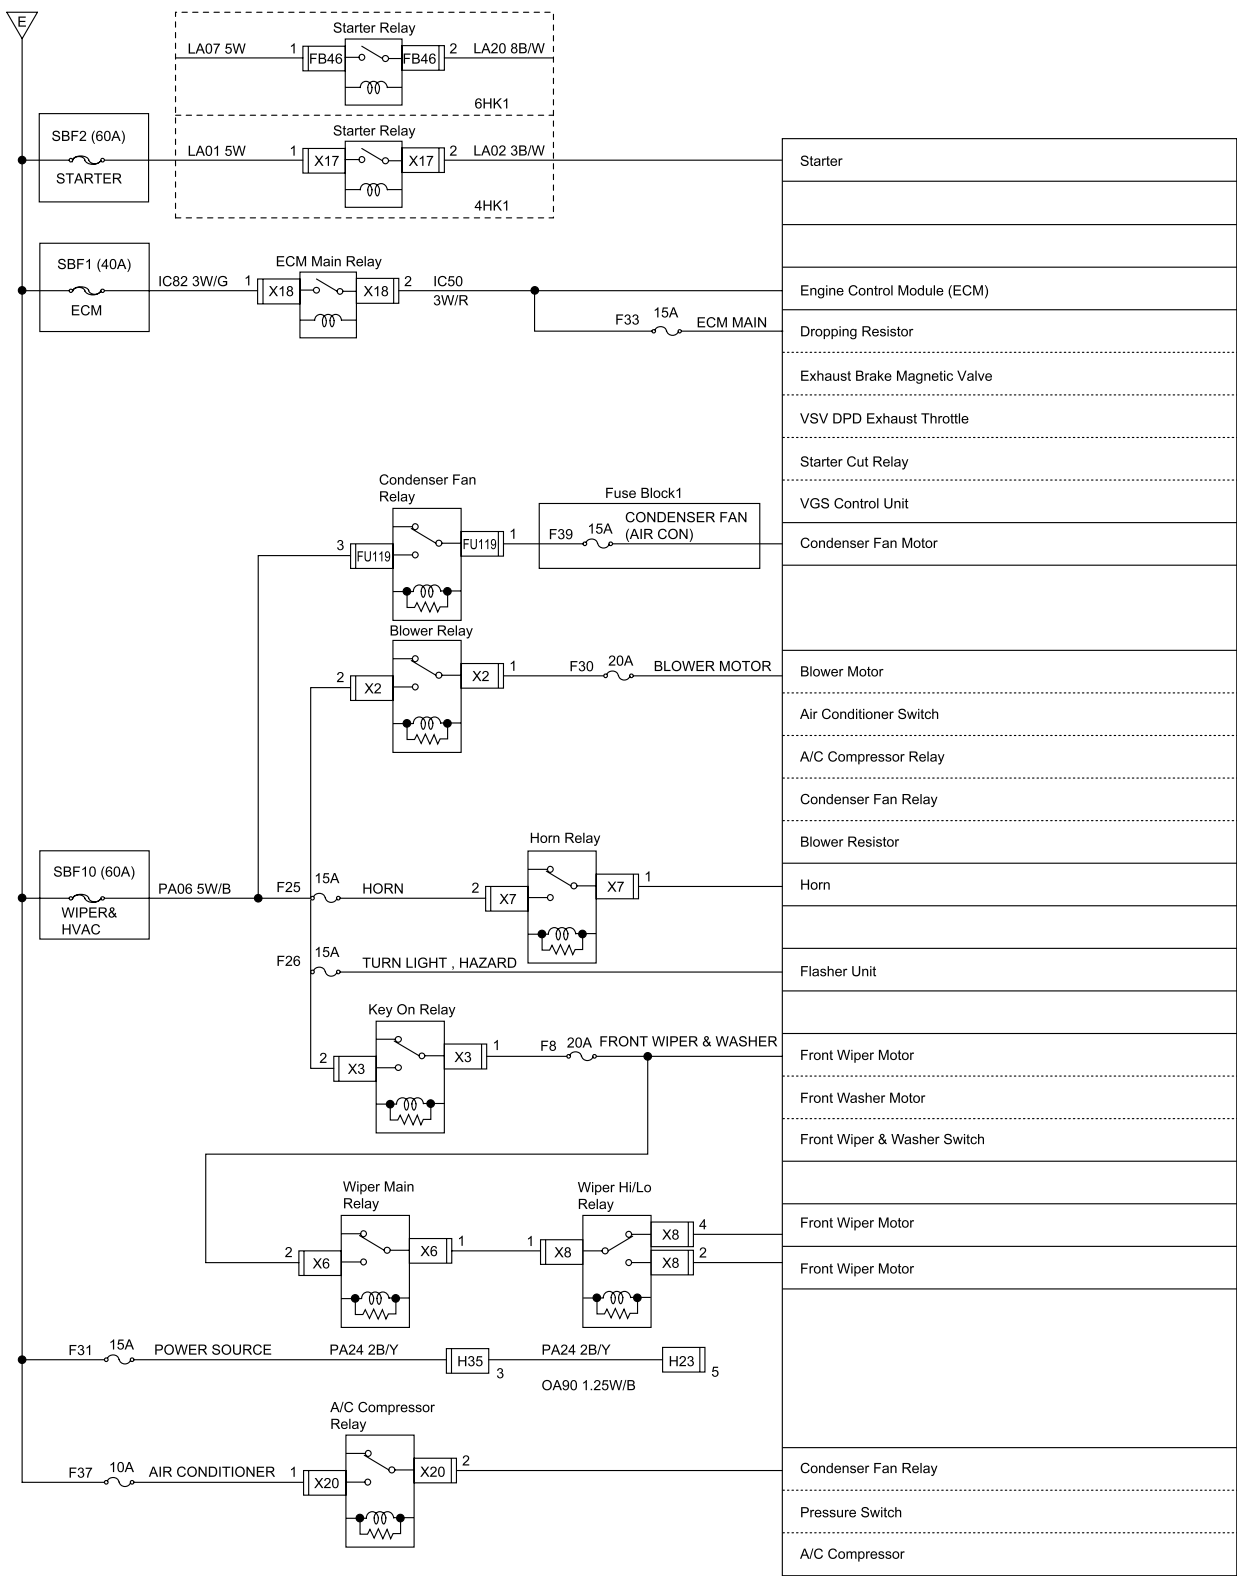

Relay Location

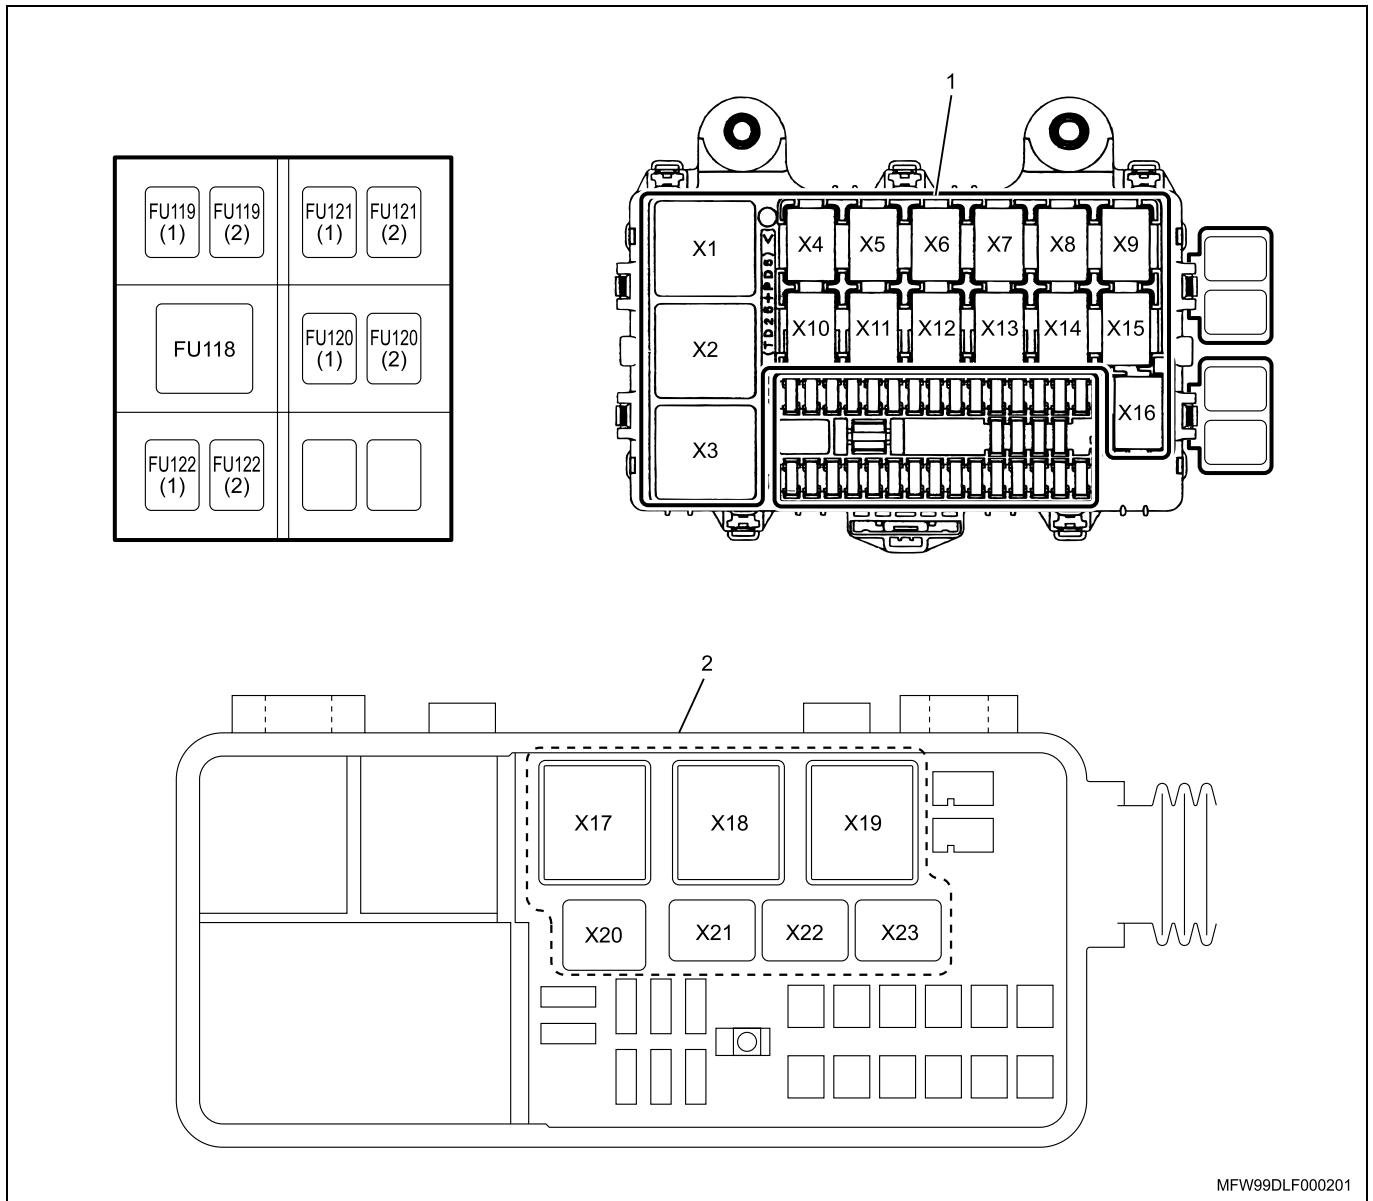

MFW99DLF000201

Legend

1. Cab Junction Block

2. Relay Box

Relay List

Except Indonesia

Connector NO	Relay Name
FU118	Rear Power Window
	Trailer Stop
FU119 (1)	PTO Main
	Exhaust Brake Cut
FU119 (2)	Condenser Fan

FU120 (1)	Transfer Low
	Trailer Information 2
FU120 (2)	Exhaust Brake Control
FU121 (1)	PTO Cut
	Neutral
FU121 (2)	—
FU122 (1)	Trailer Flasher
	Trailer Information 1
FU122 (2)	—
X1	Stoplight

9D-32 Wiring System (RHD model)

X2	Blower Motor
X3	Key On
X4	Door Lock (Lock)
X5	—
X6	Wiper Main
X7	Horn
X8	Wiper High/ Low
X9	Front Fog Light
X10	Headlight Cleaner
X11	Door Lock (Unlock)
X12	Power Window
X13	Headlight(Low)
X14	Engine Run
	Reverse
X15	Headlight(High)
X16	Taillight
X17	Starter (4HK1)
X18	ECM Main
X19	Glow
X20	A/C Compressor
X21	Buzzer Cut
X22	Starter Cut
X23	—


X5	—
X6	Wiper Main
X7	Horn
X8	Wiper High/ Low
X9	—
X10	—
X11	—
X12	—
X13	Headlight(Low)
X14	—
X15	Headlight(High)
X16	Taillight
X17	Starter (4HK1)
X18	ECM Main
X19	—
X20	A/C Compressor
X21	—
X22	Starter Cut
X23	—

Indonesia

Connector NO	Relay Name
FU118	—
FU119 (1)	PTO Main
FU119 (2)	—
FU120 (1)	—
FU120 (2)	—
FU121 (1)	PTO Cut
FU121 (2)	—
FU122 (1)	—
FU122 (2)	—
X1	Stoplight
X2	Blower Motor
X3	Key On
X4	—

Diode Location

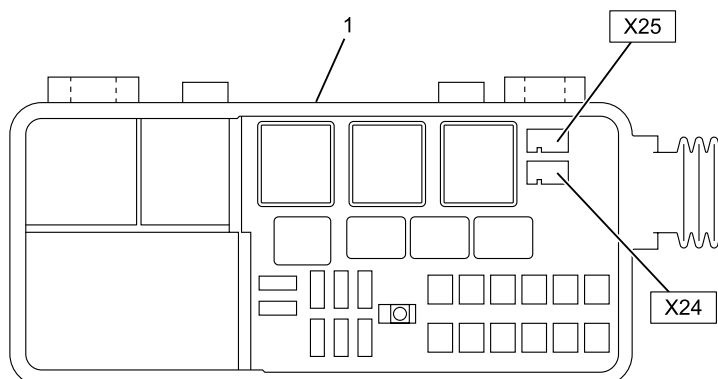Except Indonesia




Connector No.	Usage
X24	A/C Compressor
X25	Power Tilt Buzzer

MFW89DSF000201

Legend

- 1. Relay Box

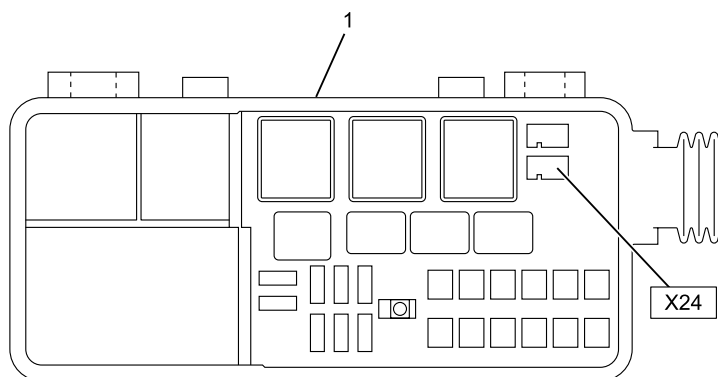Indonesia



Connector No.	Usage
X24	A/C Compressor

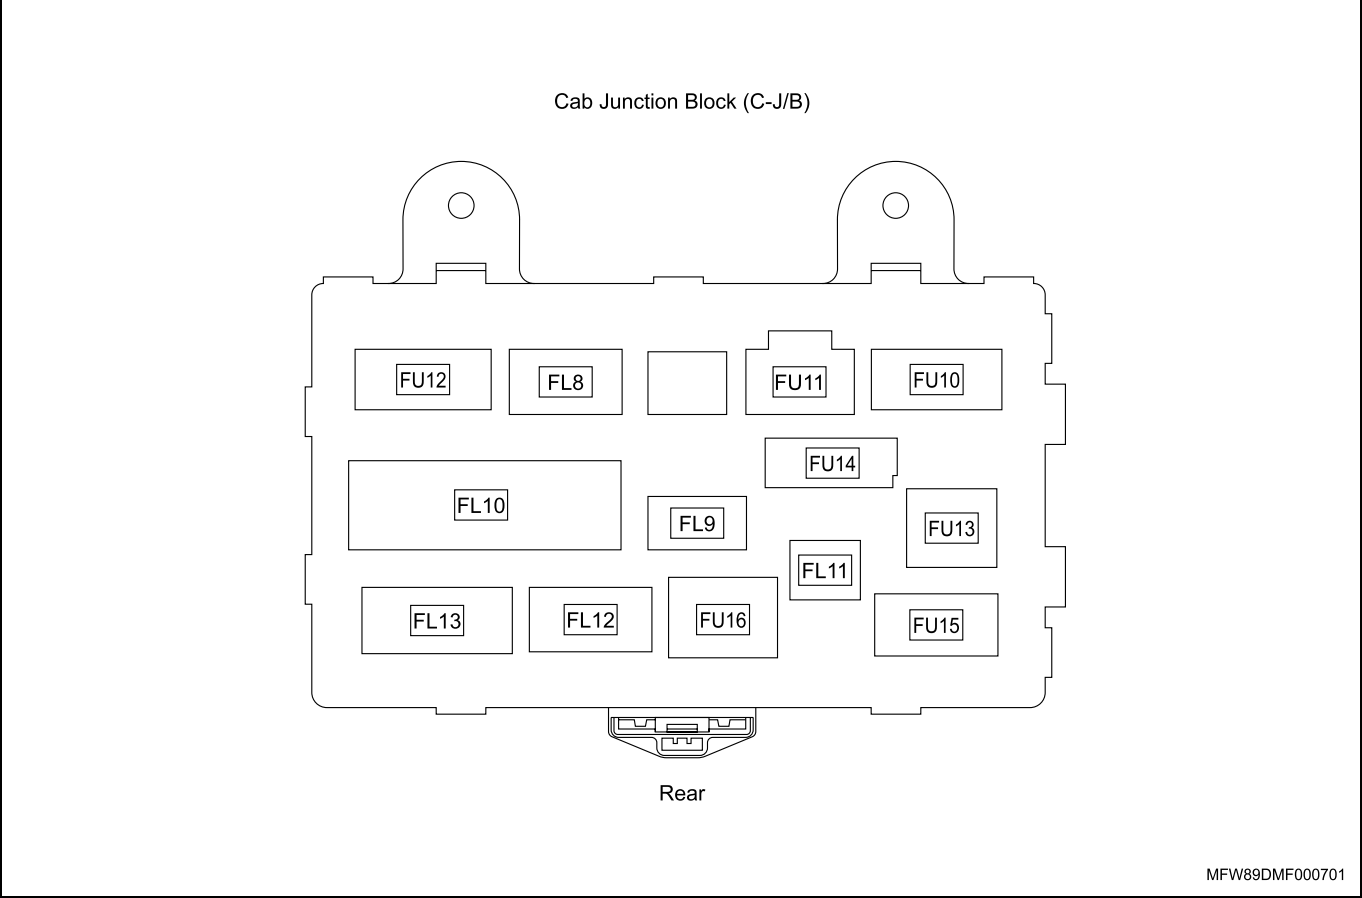
MFWB9DSF000501

Legend


- 1. Relay Box

Cab Junction Block Connector Location

(Except Indonesia)




(Indonesia)

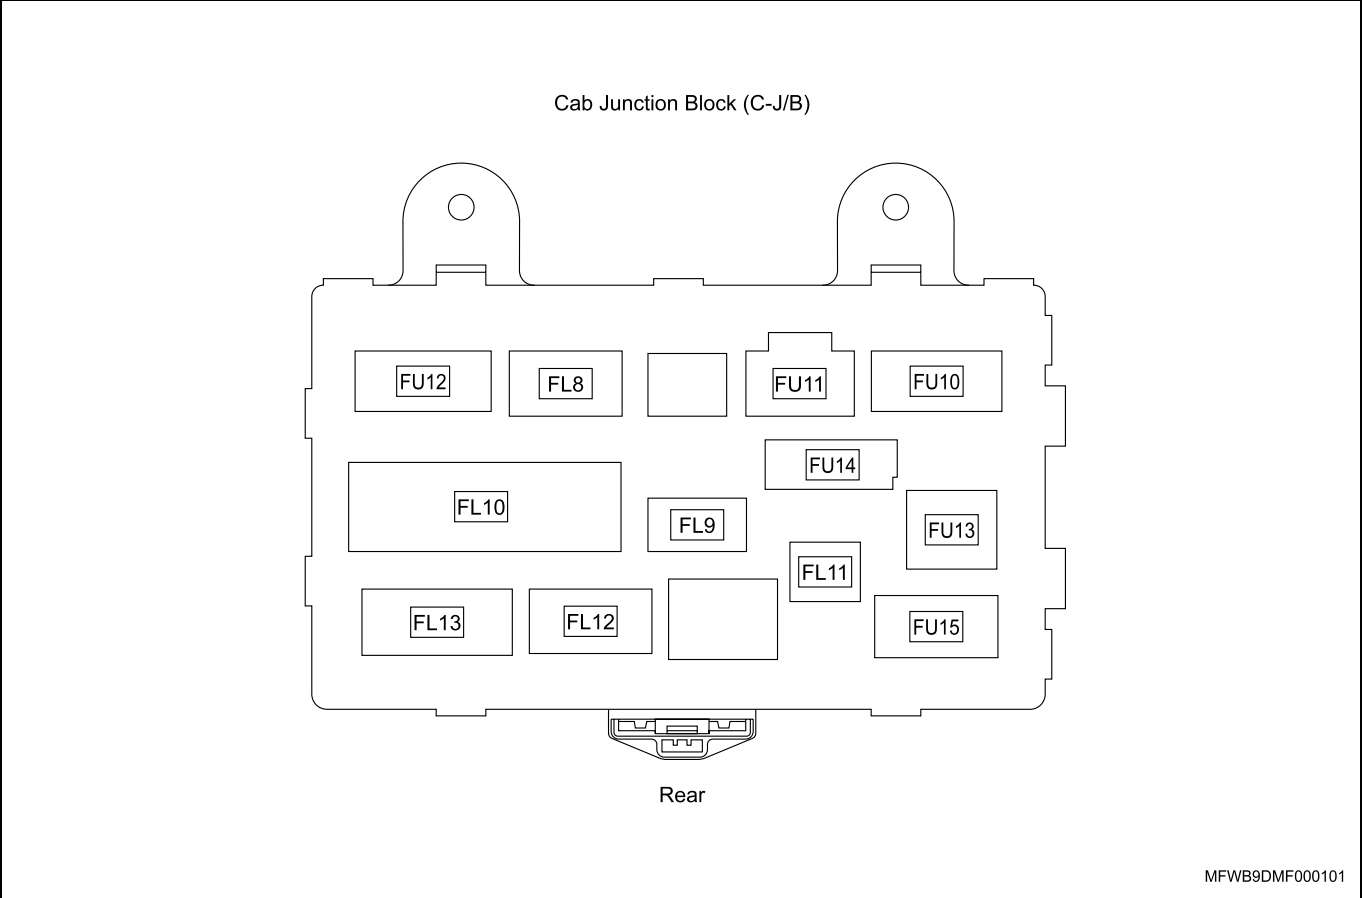

Connector Box Connector Location

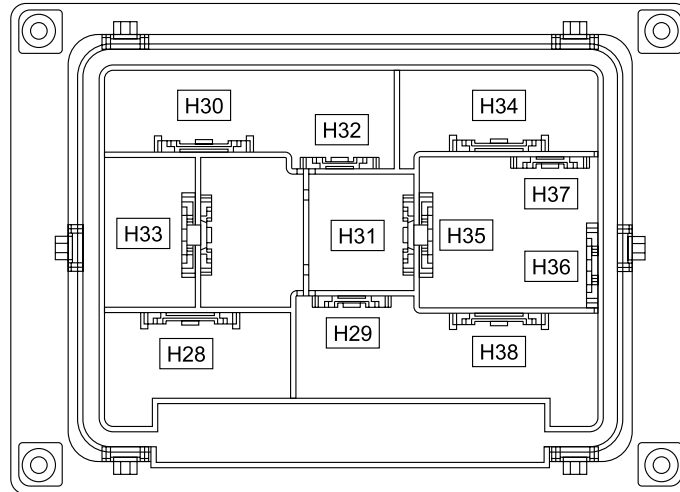
(Exept Indonesia)



Connector Engagement Side

MFW89DMF000201

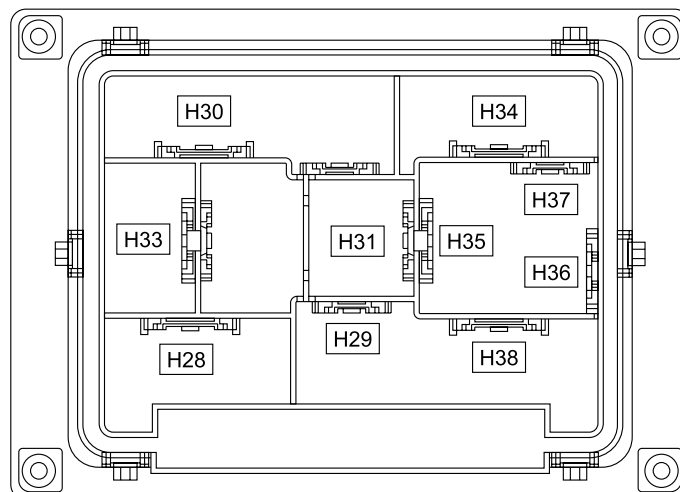(Indonesia)




Connector Engagement Side


MFWB9DMF000201

Junction Block Connector Location

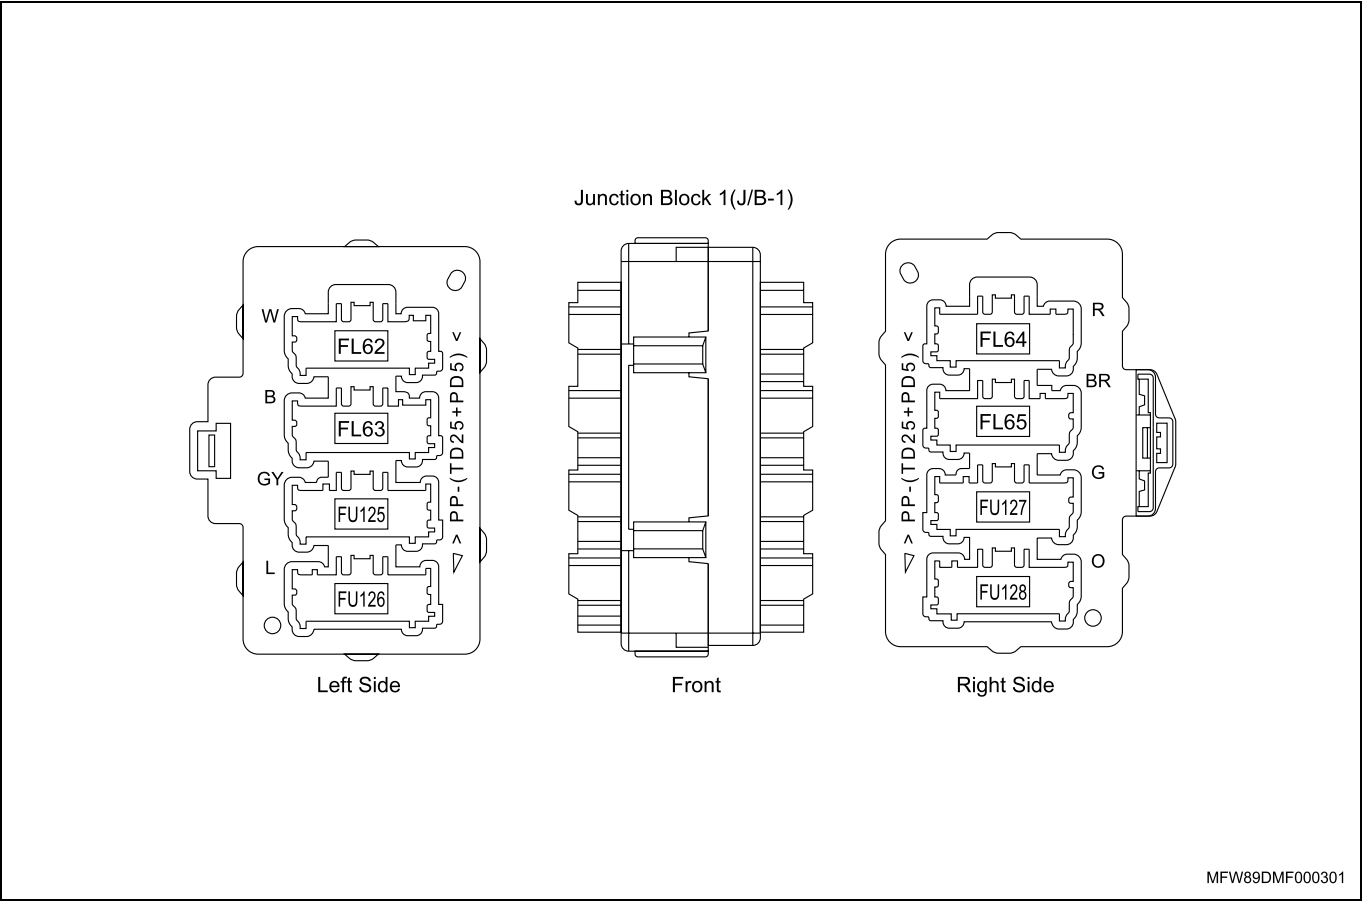(Exsept Indonesia)




(Exsept Indonesia)

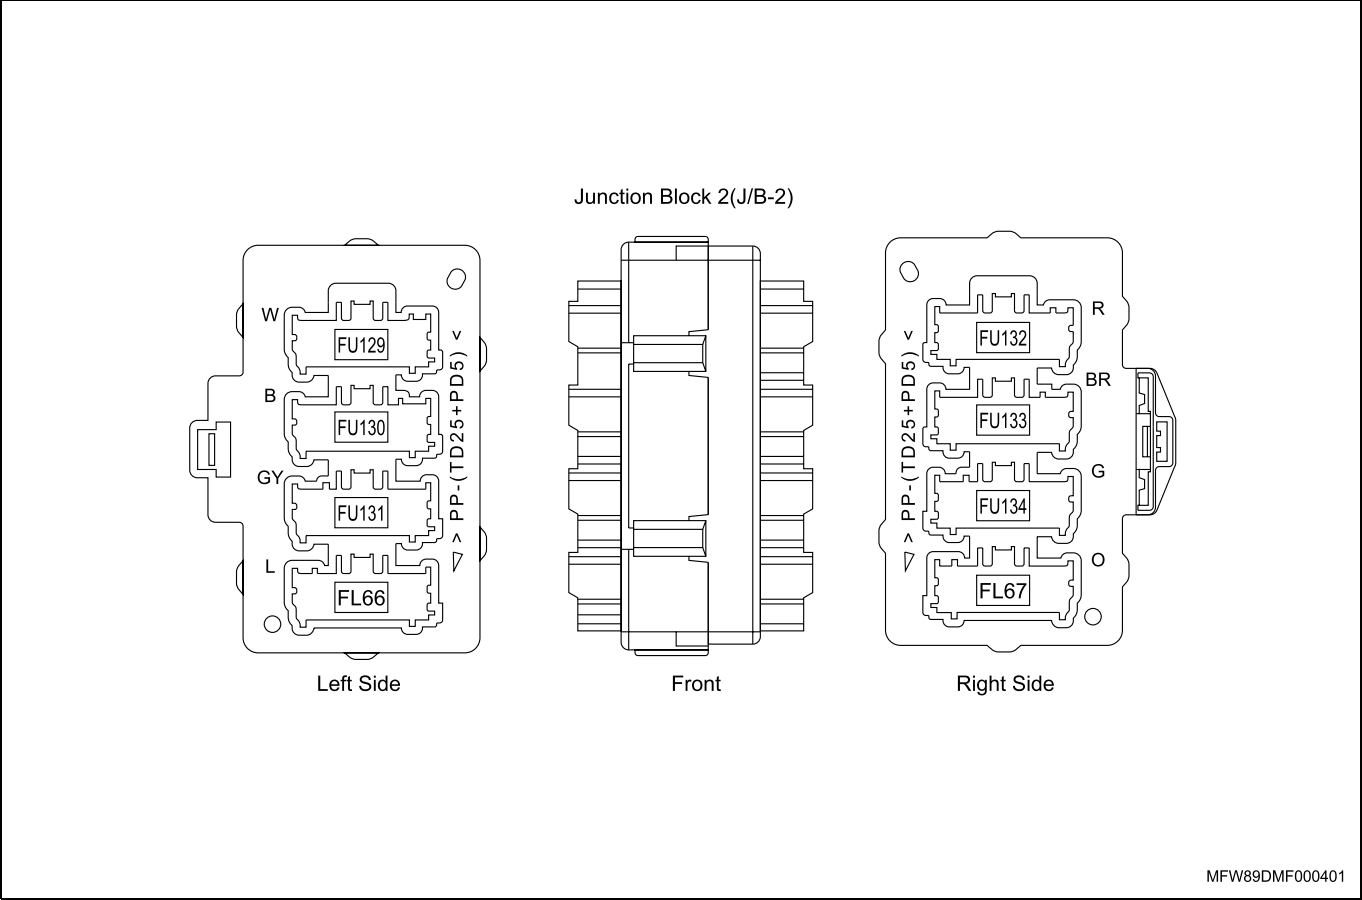


Joint Connection and Weld Splice Location

Body Cable Harness & Frame Cable Harness(Except Indonesia)

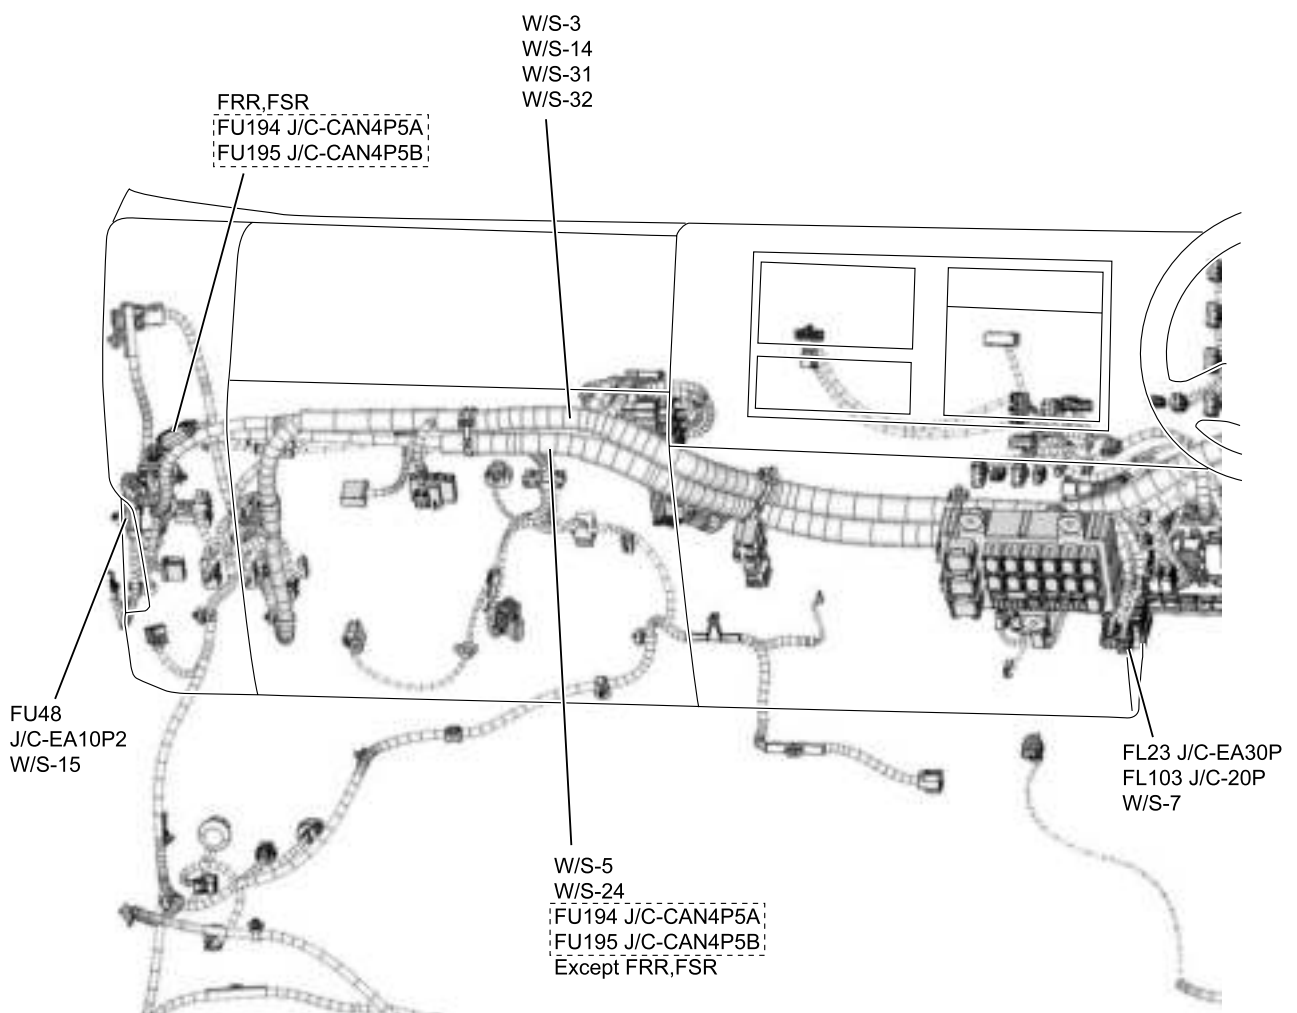
Body (1/2)



Body (2/2)

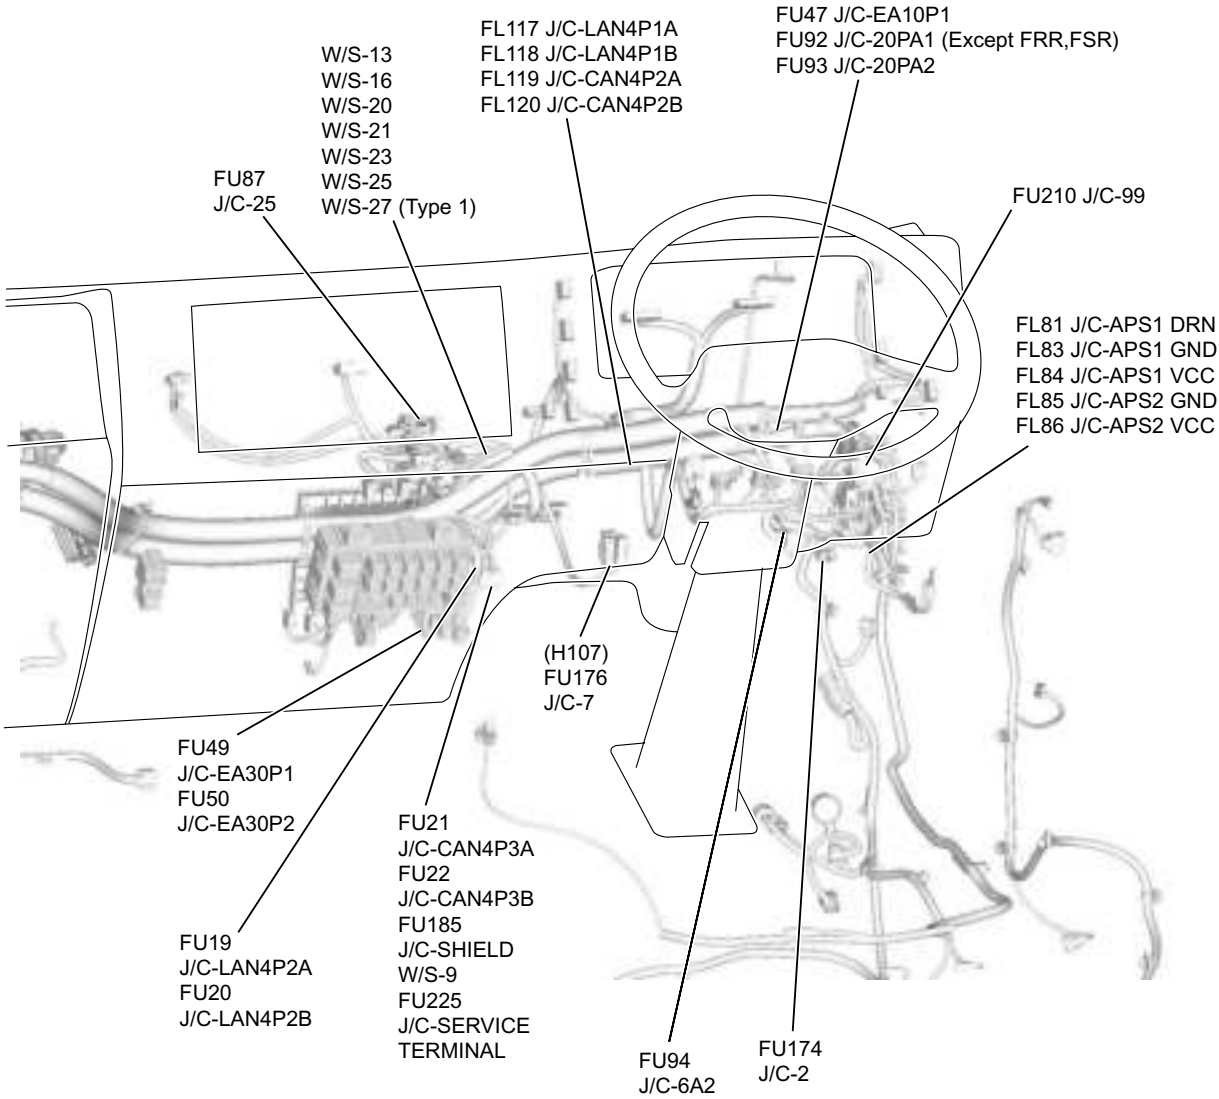


Frame ,T/M,Cab

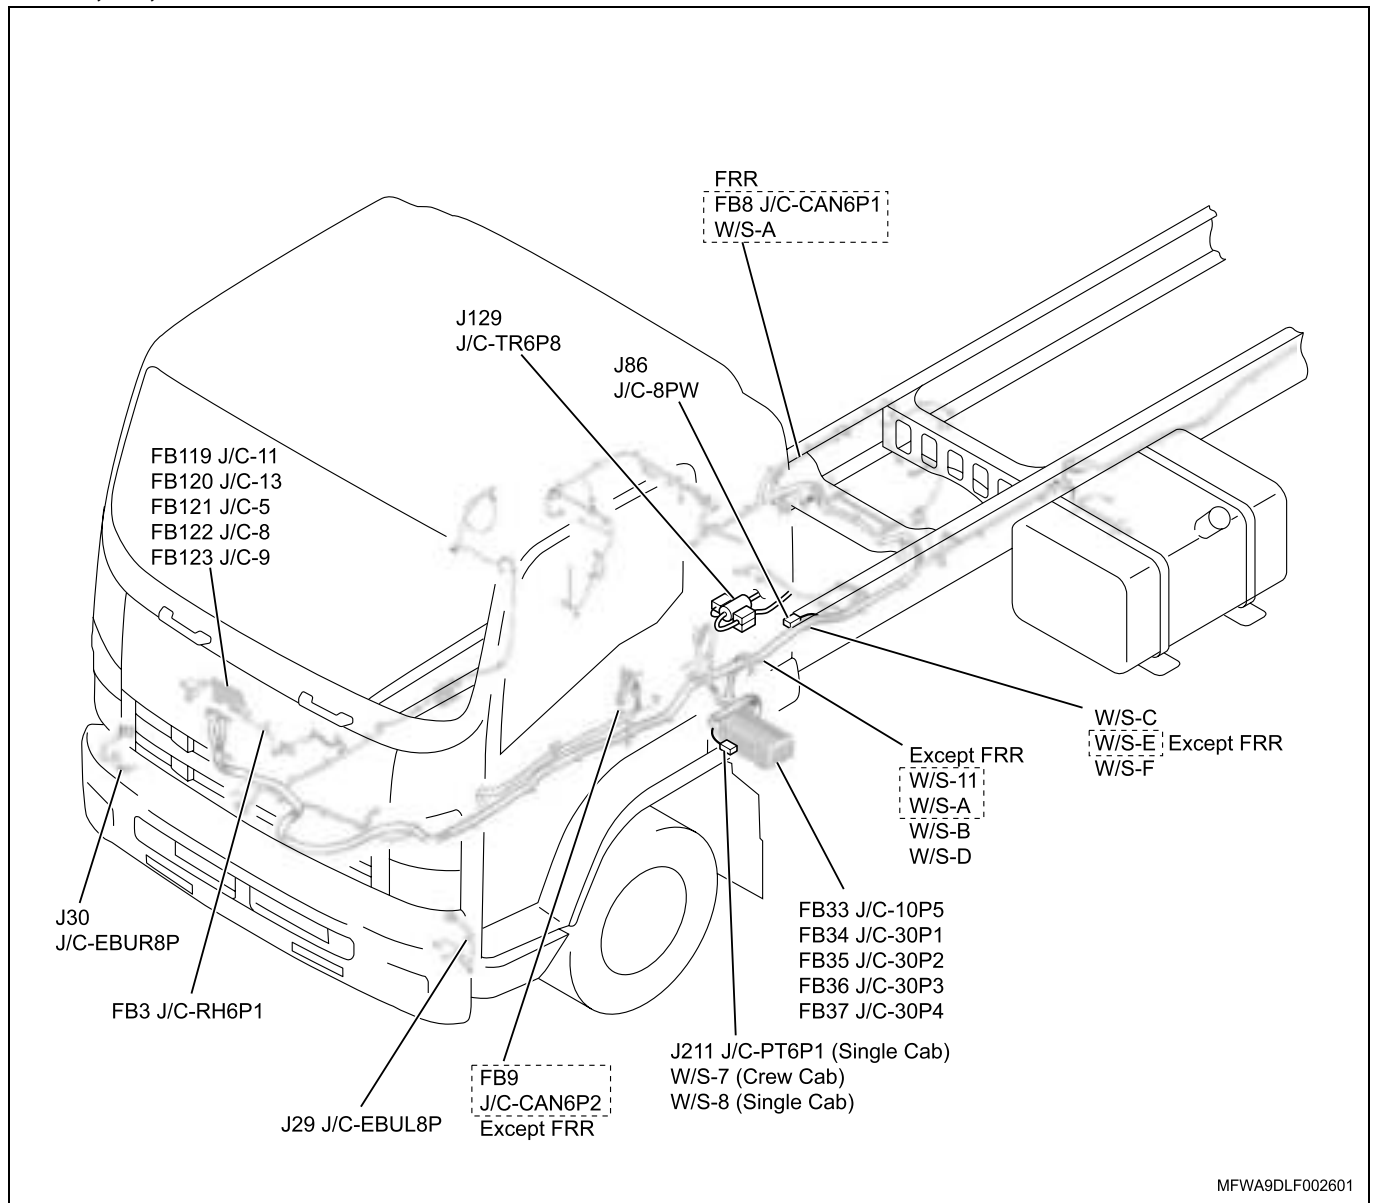


9D-40 Wiring System (RHD model)

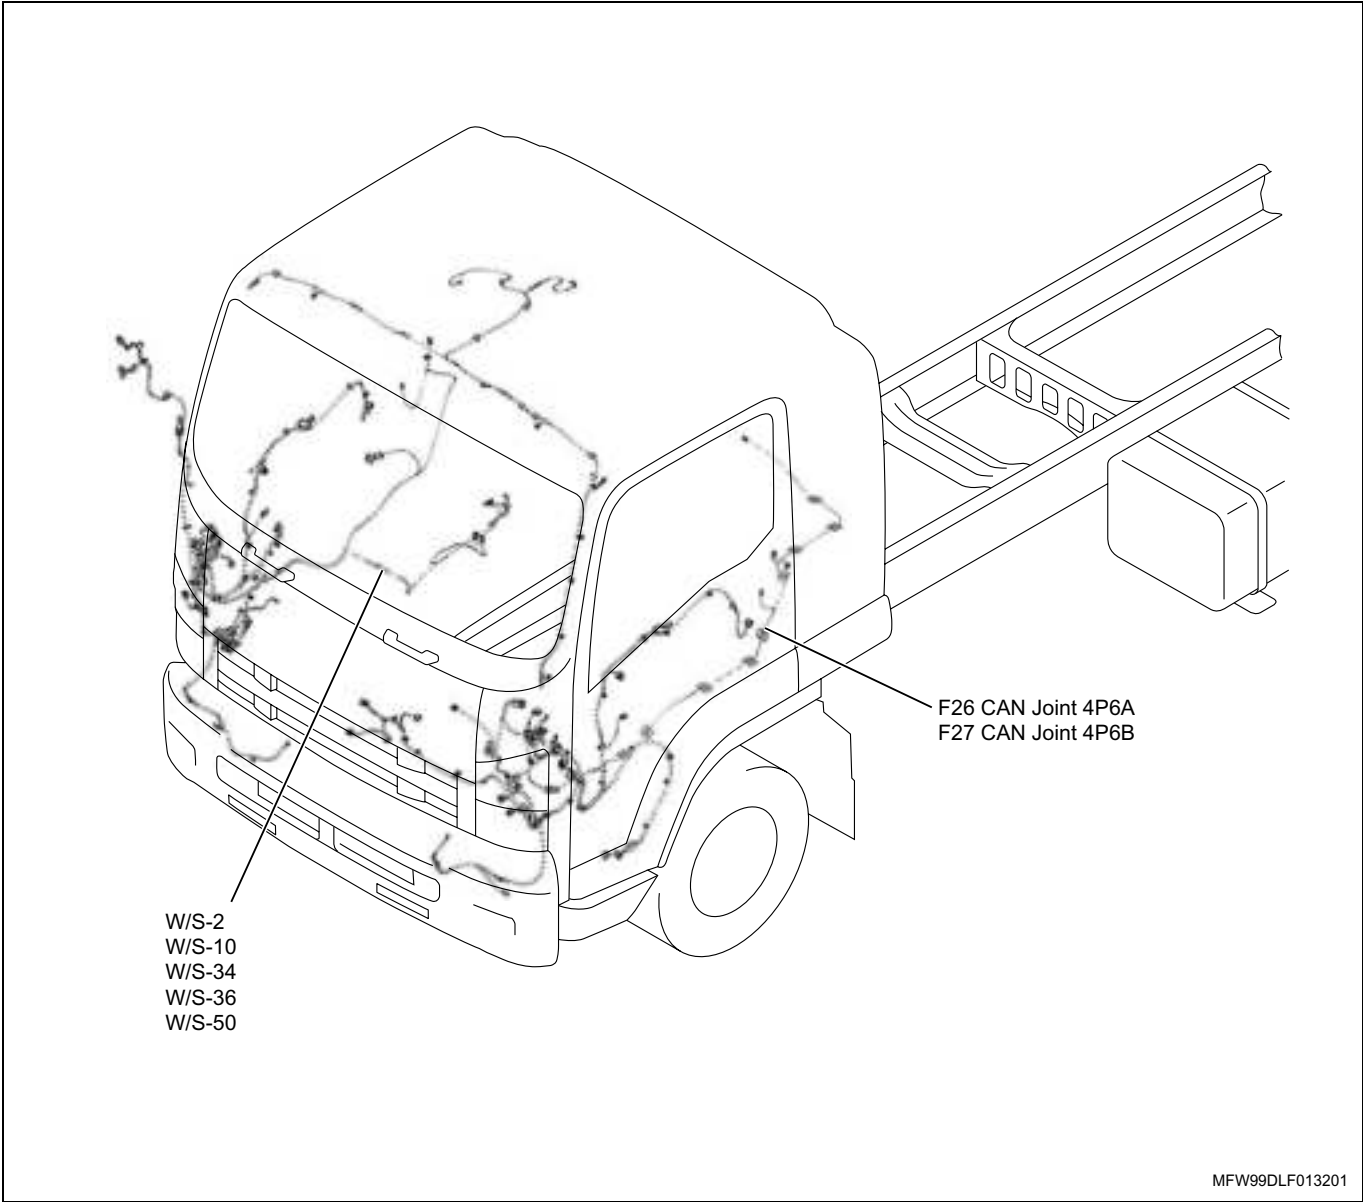Floor ,Roof (Day Cab / Full Cab)




Floor, Roof (Crew Cab)

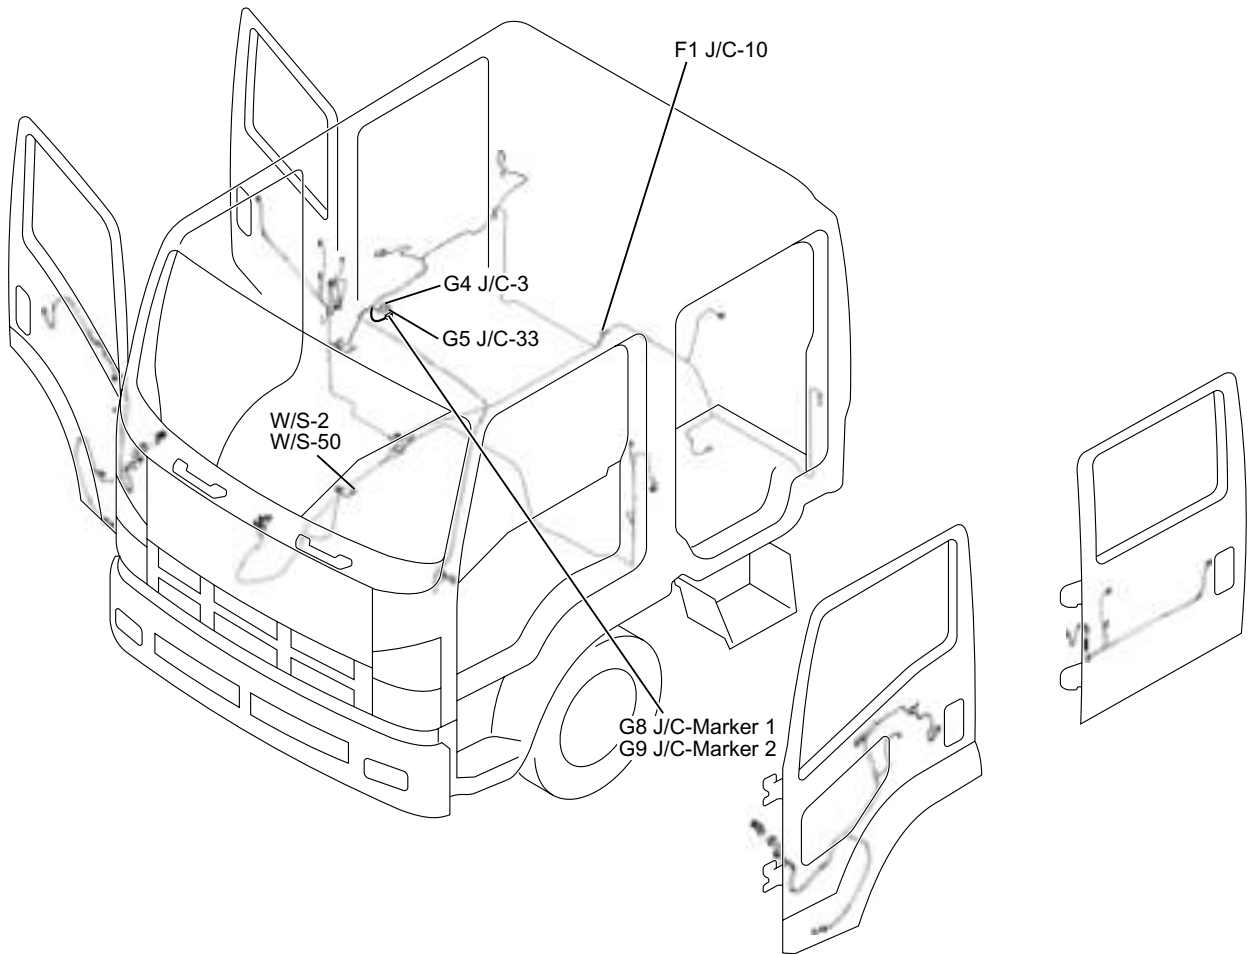


MFW99DLF004501

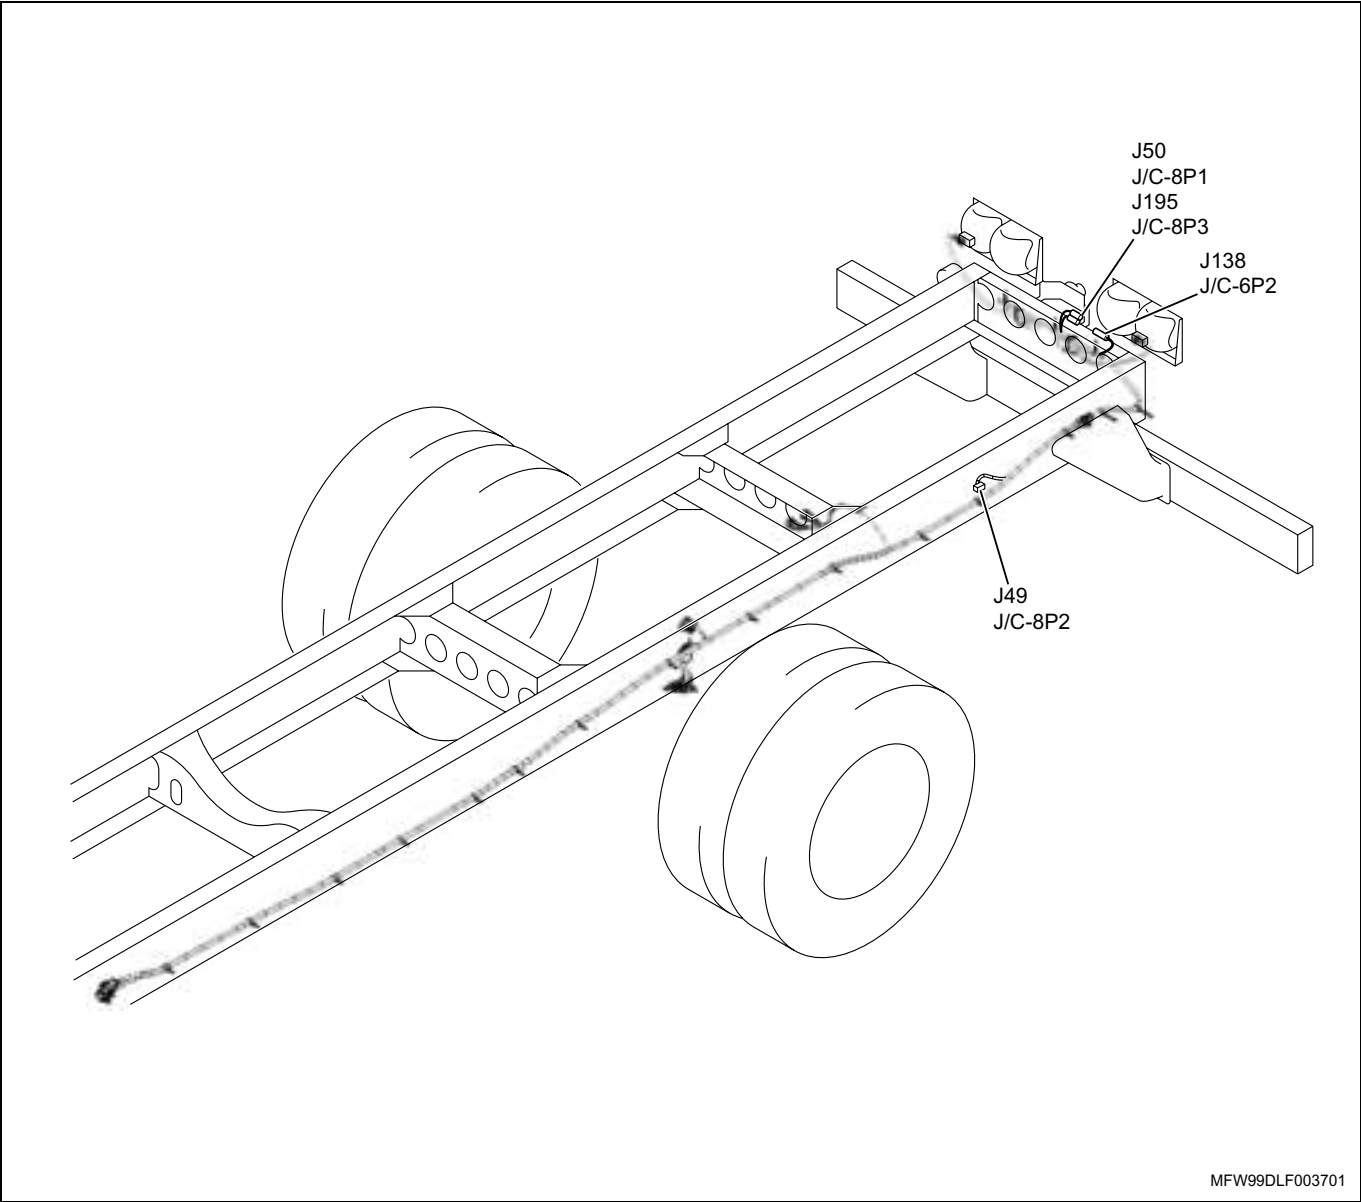Leaf Suspension




Air Suspension

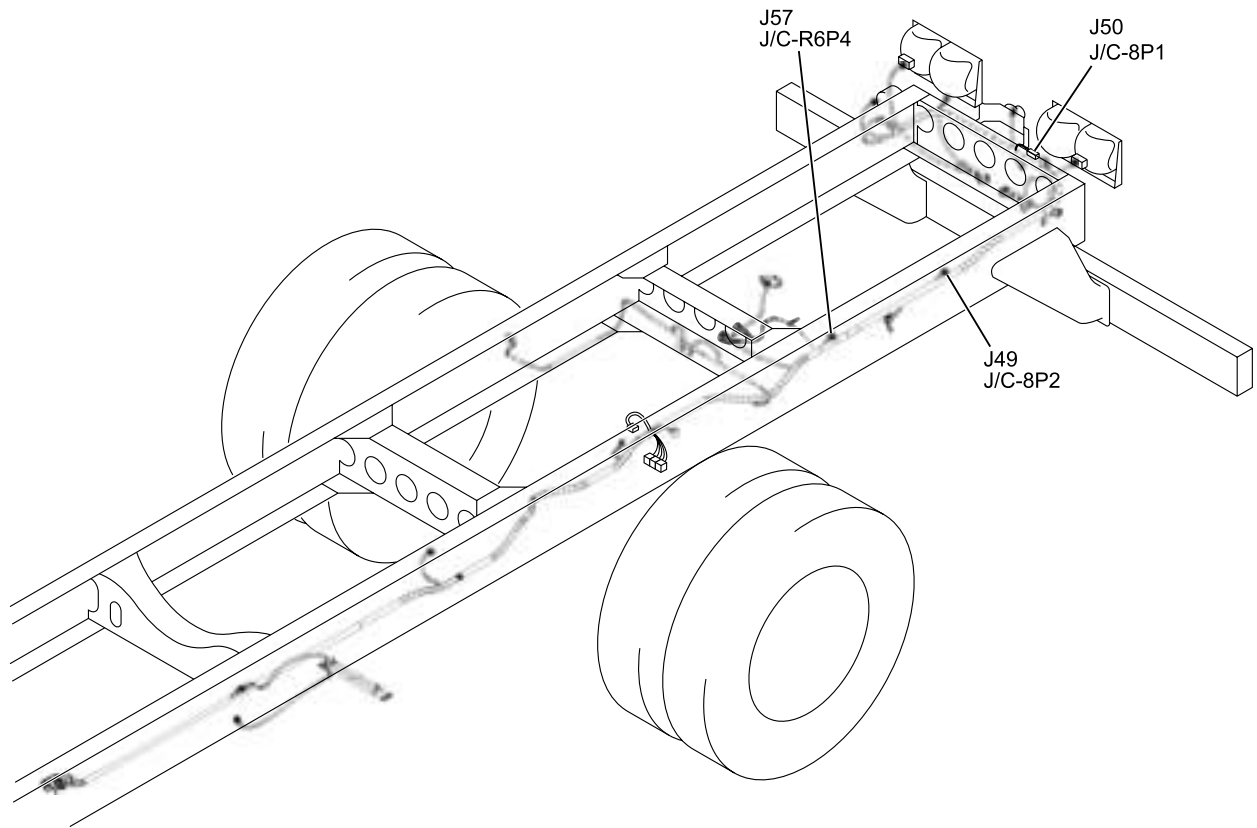


MFW89DLF003301

Air Tank

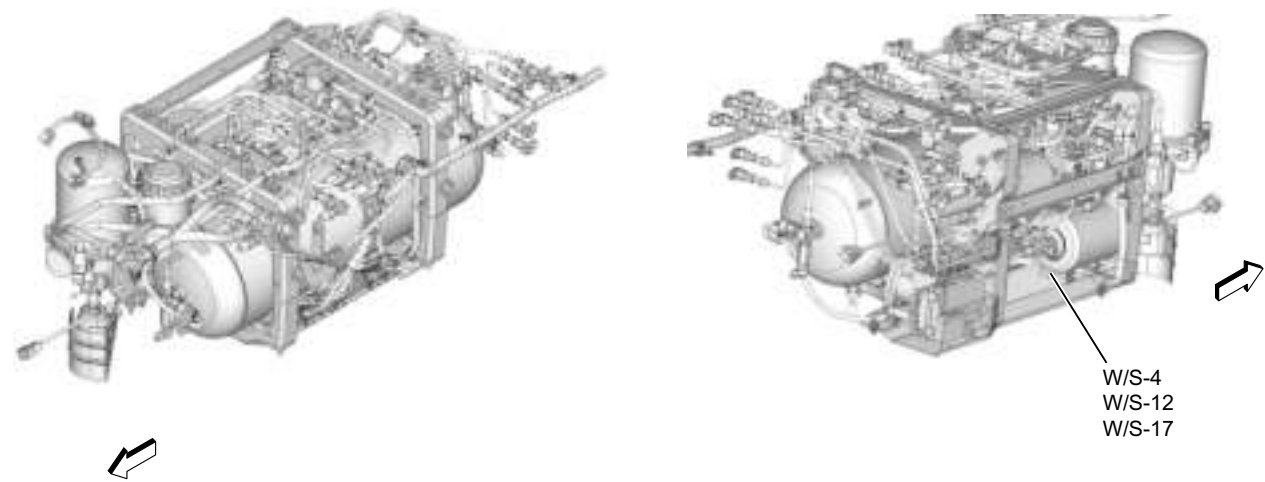
FRR, FSR



FTR, FVR, FVM, FVZ, GVR

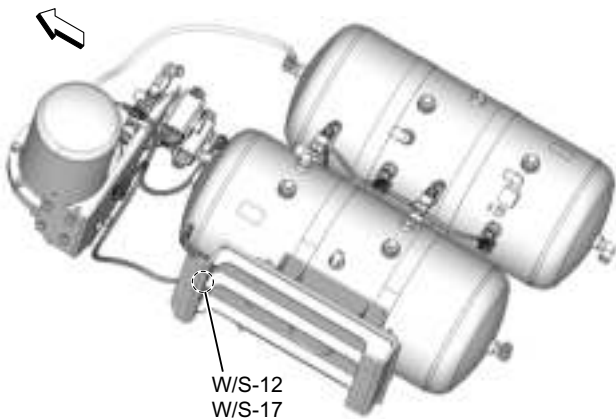


FSS, FTS

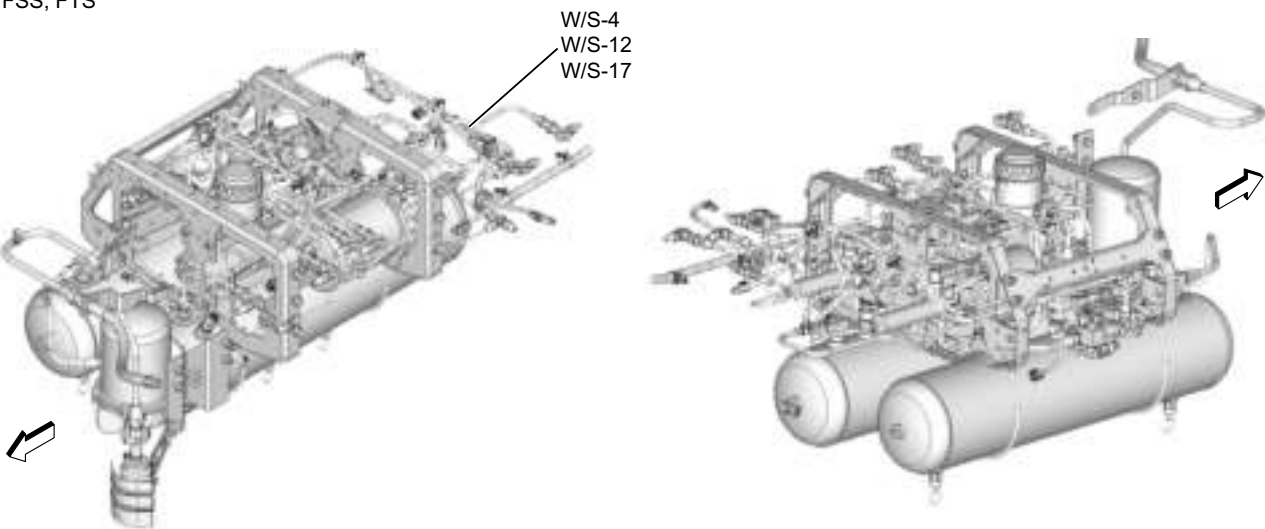

Indonesia

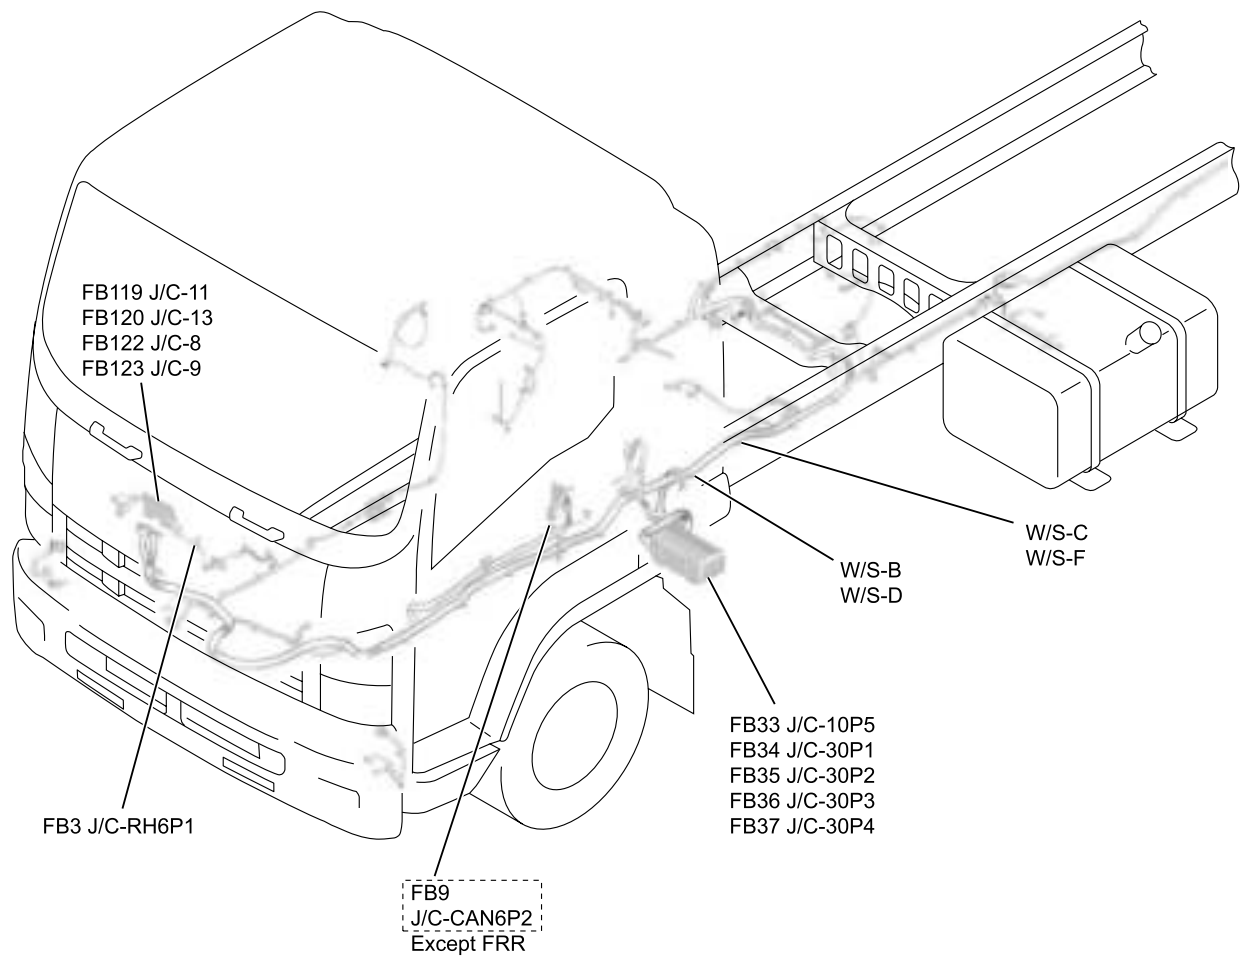
Frame ,T/M,Cab



MFWB9DLF002201


9D-46 Wiring System (RHD model)

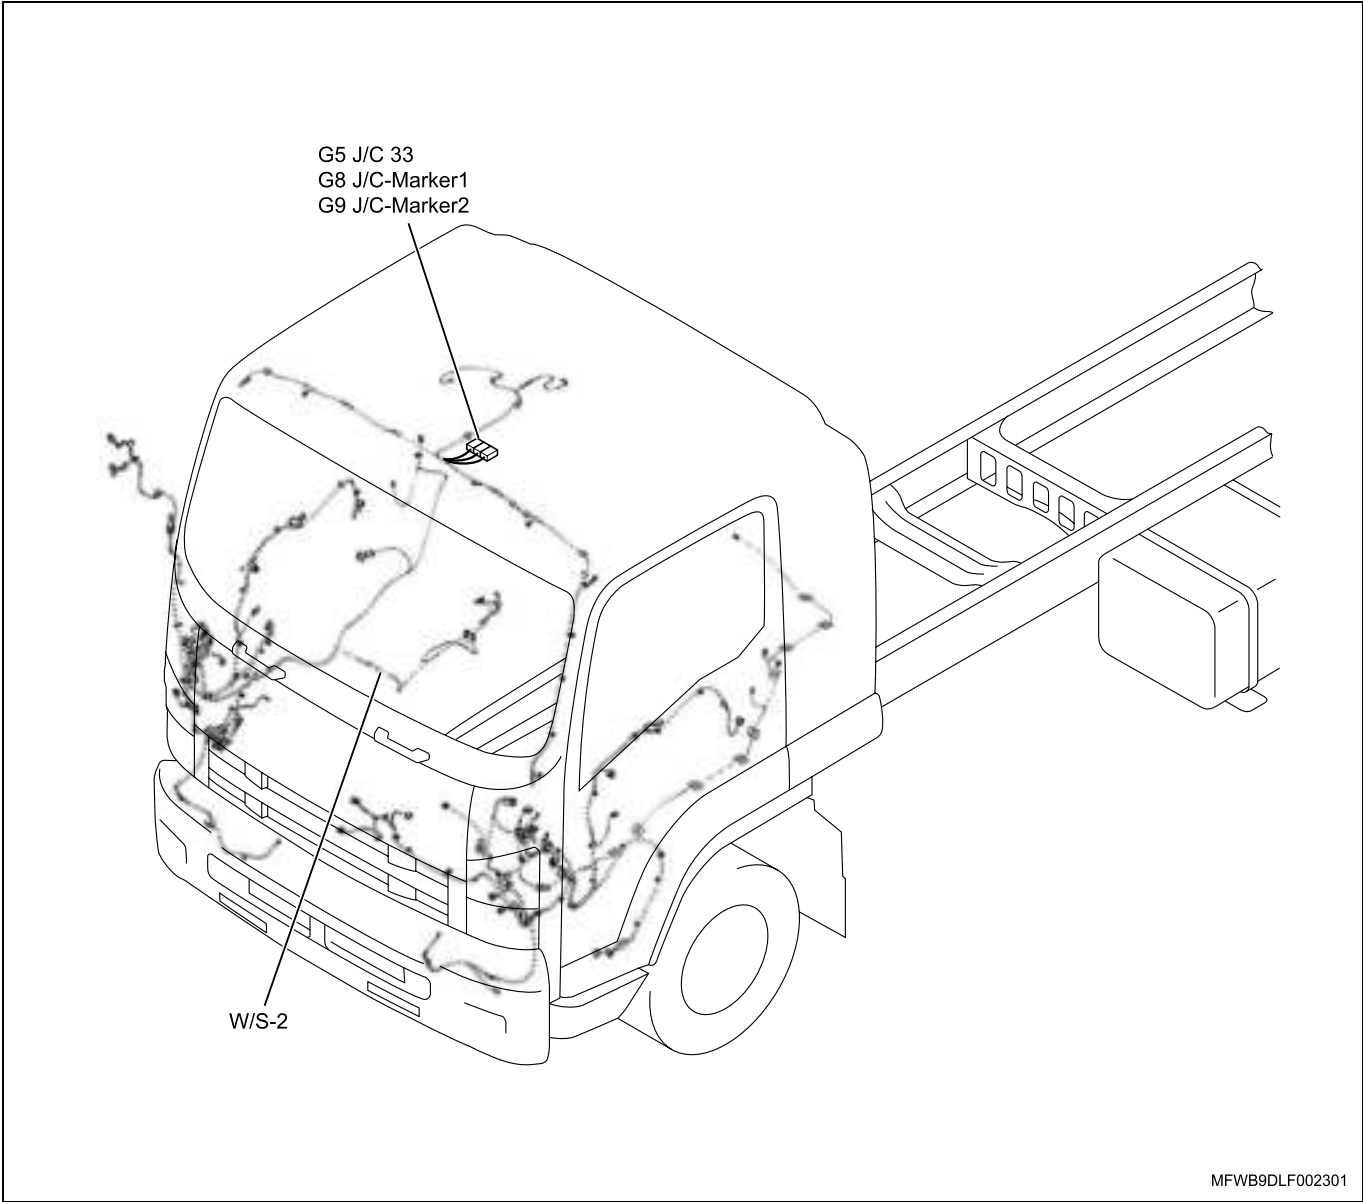Floor ,Roof (Day Cab / Full Cab)



MFWB9DLF002301

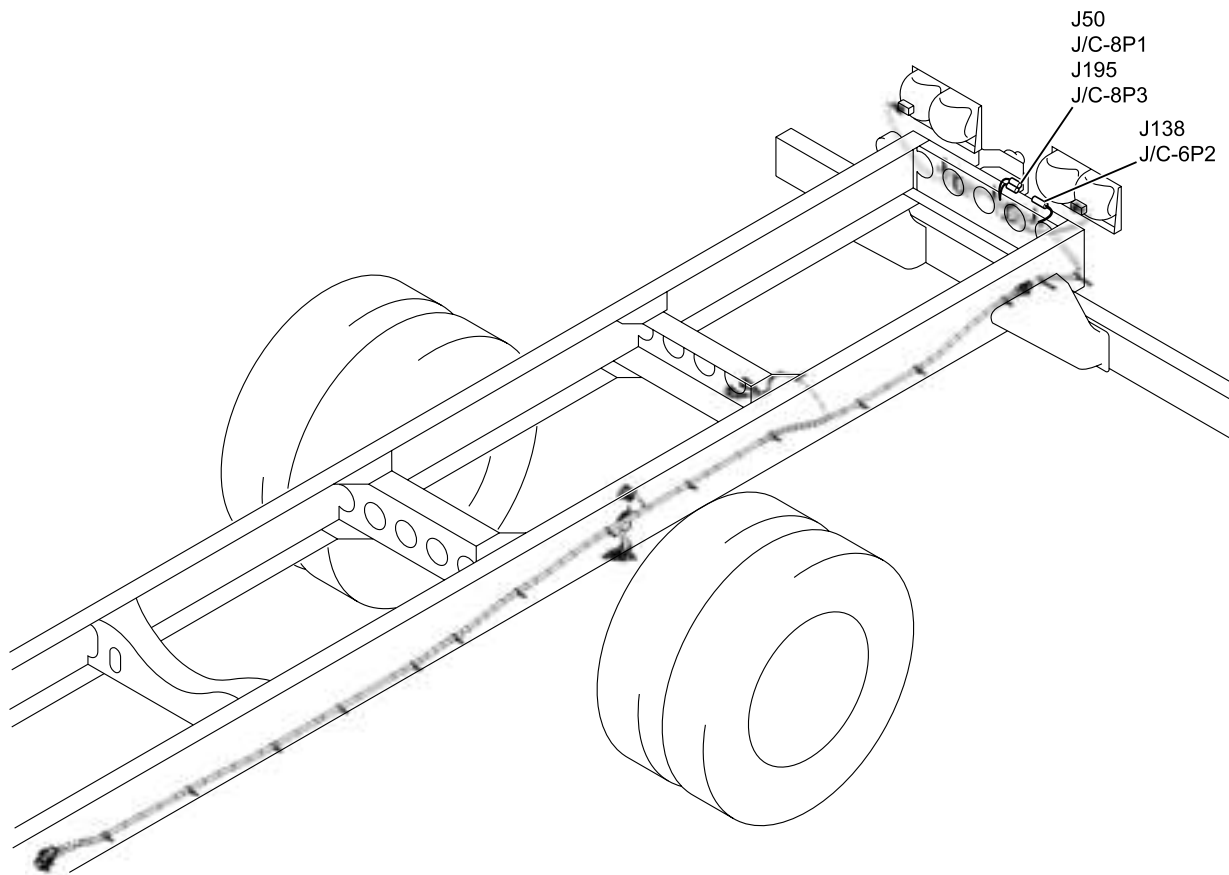
Leaf Suspension




MFWB9DLF002401

Air Tank

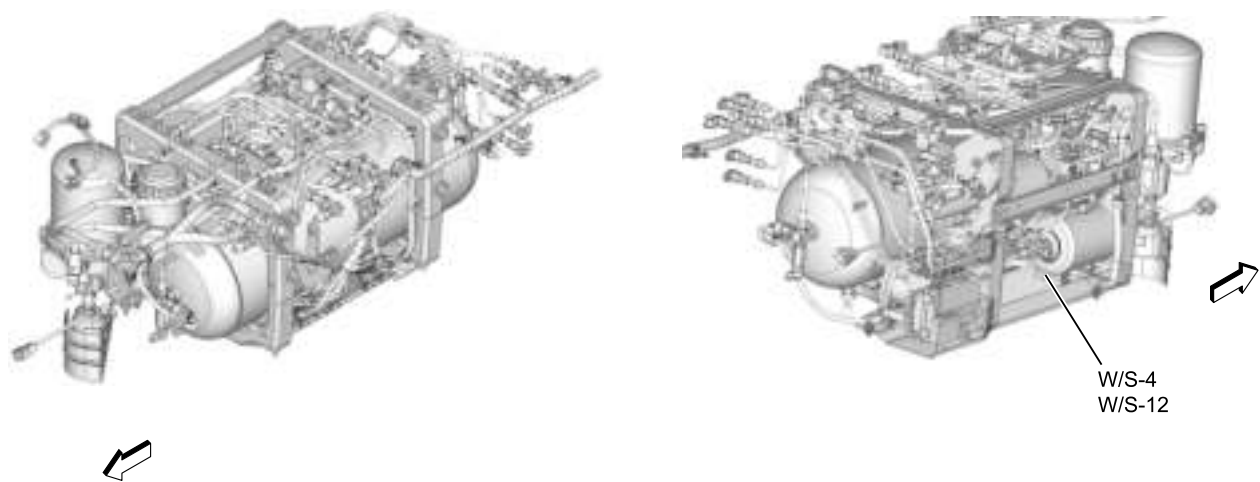
FRR




FTR, FVR

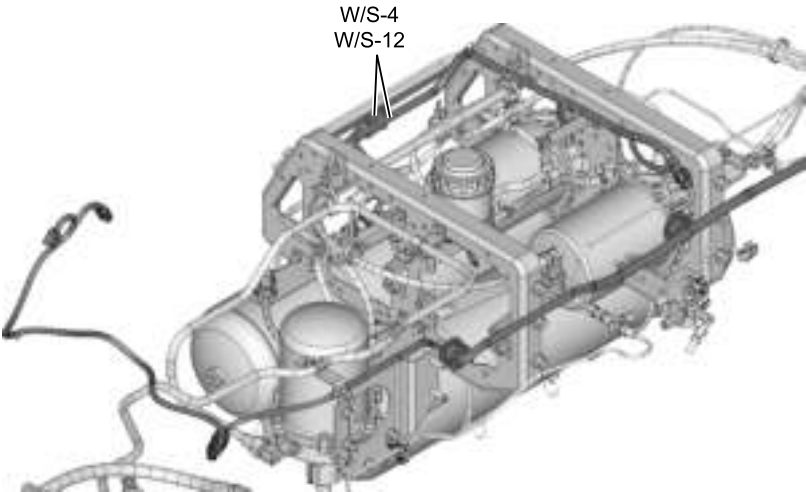


FVM, FVZ

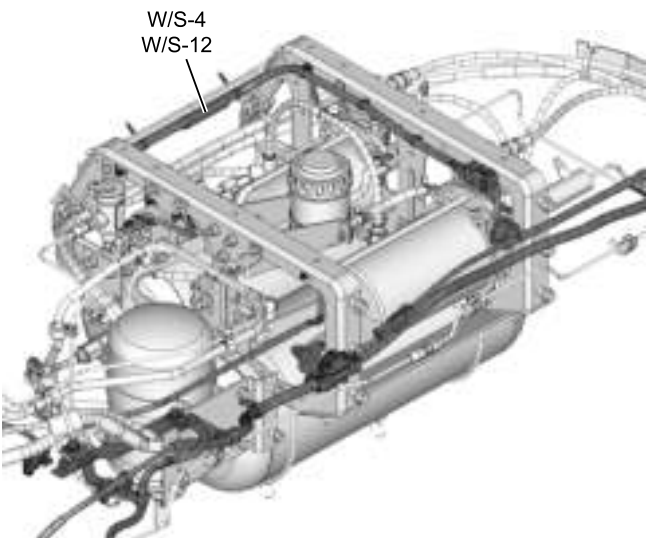

 Joint Connection Circuit**Except Indonesia****FB3 J/C-RH6P1**

MFW79DSH000301


PIN No.	Connection
1	IP Cluster
2	Air Pressure Sensor 1
3	Air Pressure Sensor 2
4	IP Cluster
5	Air Pressure Sensor 1
6	Air Pressure Sensor 2

 FB8 J/C-CAN 6P1

MFW79DSH000301

PIN No.	Connection
1	J/C-CAN 4P2B (4)

PIN No.	Connection
2	J/C-CAN 6P2 (1) (6HK1)
	ECU Turbo (4HK1)
	ECM (4HK1)
3	EHCUC
4	J/C-CAN 4P2A (4)
5	J/C-CAN 6P2 (4) (6HK1)
	ECU Turbo (4HK1)
	ECM (4HK1)
6	EHCUC

 
FB9 J/C-CAN 6P2

MFW79DSH000301

PIN No.	Connection
1	J/C-CAN 6P1 (2)
	J/C-CAN 4P2B (4)
2	Rotary Electric Actuator (REA)
	Terminator (6HK1 Euro2)
3	ECM
4	J/C-CAN 6P1 (5)
	J/C-CAN 4P2A (4)
5	Rotary Electric Actuator (REA)
	Terminator (6HK1 Euro2)
6	ECM

9D-50 Wiring System (RHD model)

 
FB33 J/C-10P5



MF79DSH000401


PIN No.	Connection
1	ECM Main Relay
2	Fuse ; ECM Main
3	—
4	SBF 11 ; ABS
5	EHCUC
6	ECM
7	ECM
8	—
9	—
10	EHCUC

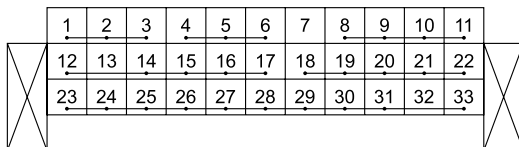FB34 J/C-30P1




MF79DSH000501

PIN No.	Connection
1	Starter Relay (4HK1)
	Starter Relay (6HK1)
2	Fuse ; Starter
3	ECM
4	Starter Cut Relay
5	Starter Relay (4HK1)
	Starter Relay (6HK1)
6	Diode EMR1
7	—
8	ECM
9	Junction Block 2
10	Glow Relay
11	—
12	Backup Light Switch
13	—
14	J/C-R6P2 (6)
15	Junction Block 1
16	Back Buzzer
17	Trailer Socket
18	Stoplight Relay
19	J/C-R6P2 (1)
20	Trailer Socket
21	EHCUC
22	—
23	Fuse ; ECM Main
24	Starter Cut Relay
25	Exhaust Brake Magnetic Valve
26	Dropping Resistor
27	VNT Control Module
28	Exhaust Throttle Magnetic Valve
29	—
30	—
31	—
32	—
33	—

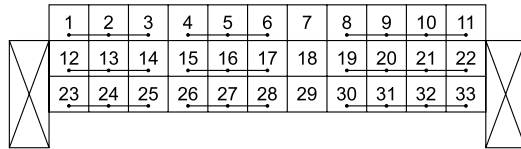FB35 J/C-30P2

MFW79DSH000601

PIN No.	Connection
23	Up Limit Switch
24	Up Down Switch
25	Diode 13
26	Down Limit Switch
27	Up Down Switch
28	Buzzer Cut Relay
29	—
30	—
31	—
32	—
33	—

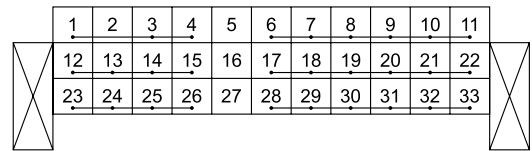FB36 J/C-30P3

MFW89DSH000401


PIN No.	Connection
1	HSA C/U (M/T)
	Junction Block 2
	TCM (Smoother)
2	ECM
3	Neutral Switch
	Starter Cut Relay (A/T)
4	J/C-20PB2 (6)
5	Stoplight Switch 2
6	ECM
7	—
8	ECM
9	Exhaust Differential Pressure Sensor
10	Exhaust Temperature Sensor 2
11	Exhaust Temperature Sensor 1
12	—
13	—
14	—
15	ECM Main Relay
16	ECM
17	ECM
18	—
19	—
20	—
21	—
22	—

PIN No.	Connection
1	ECM
2	Starter Cut Relay
3	TCM (Smoother)
4	—
5	—
6	Junction Block 2
7	Backup Light Switch
8	Front Drive Magnetic Valve
	Valve Box
9	—
10	Valve Box
11	Valve Box

9D-52 Wiring System (RHD model)

PIN No.	Connection
12	Pressure Switch
13	A/C Compressor
14	ECM
15	Diode 3
16	—
17	Junction Block 1
18	—
19	Rear Combination Light (LH)
20	Trailer Socket
21	—
22	—
23	—
24	IP Cluster
25	W/S-17
26	Air Pressure Switch
	Air Pressure Switch 1
27	—
28	Junction Block 1
29	—
30	Rear Combination Light (RH)
31	Trailer Socket
32	—
33	—

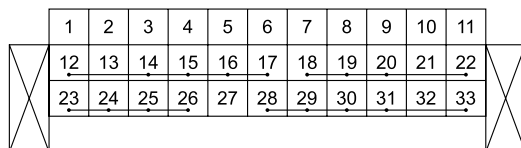
FB37 J/C-30P4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

MFW89DSH000501


PIN No.	Connection
1	Junction Block 1
2	ECM
3	Wheel Parking Brake Switch
4	IP Cluster
5	Water Separator Switch
6	—
7	—
8	—
9	—
10	—
11	—
12	Fuse ; Taillight
13	—
14	J/C-8P3 (1)
15	Trailer Socket
16	—
17	—
18	Junction Block 2
19	PTO Magnetic Valve
20	—
21	—
22	ECM
23	IP Cluster
24	Fuel Tank Unit (LH)
25	Fuel Tank Unit (Rear)
26	—
27	—
28	Fuse ; Meter
29	—
30	—
31	Clutch Oil Pressure Switch
32	Front Drive Switch (4WD Switch)
33	—

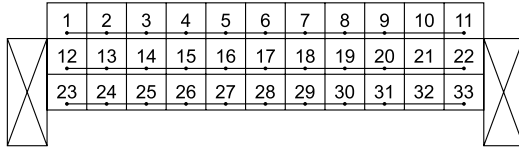FL23 J/C-EB 30P

MFW79DSH001701

PIN No.	Connection
1	J/C-Marker 2 (3)
2	Key On Relay
3	—
4	Combination Switch
5	Dome Light Switch
6	Intermittent Relay
7	Door Lock Switch & Actuator Front-RH
8	—
9	Cigarette Lighter
10	—
11	J/C-EB 30P (17)
12	Audio
13	—
14	—
15	Dome Light Switch
16	GND (Front LH)
17	J/C-EB 30P (11)
18	Hazard Warning Flasher Switch
19	Front Power Window Switch RH
20	GND (Front RH)
21	—
22	J/C-EB 30P (28)
23	Combination Switch
24	Wiper & Exhaust Brake Switch
25	Side Turn Signal Light (RH) (With Door)

PIN No.	Connection
26	Hazard Warning Flasher Switch
27	Side Turn Signal Light (LH) (With Door)
28	J/C-EB 30P (22)
29	RS232 ch 1
30	W/S-2
31	Combination Switch
32	—
33	Hazard Warning Flasher Switch

 FL103 J/C-20PB2


MFW89DSH000601

PIN No.	Connection
1	—
2	J/C-20PB2 (4)
3	Junction Block 2
4	J/C-20PB2 (2)
5	J/C-20PB2 (7)
6	J/C-30P2 (4)
7	J/C-20PB2 (5)
8	Junction Block 1
9	—
10	Stoplight Relay
11	—
12	—
13	—
14	—
15	—

9D-54 Wiring System (RHD model)


PIN No.	Connection
16	—
17	—
18	—
19	—
20	—
21	—
22	—

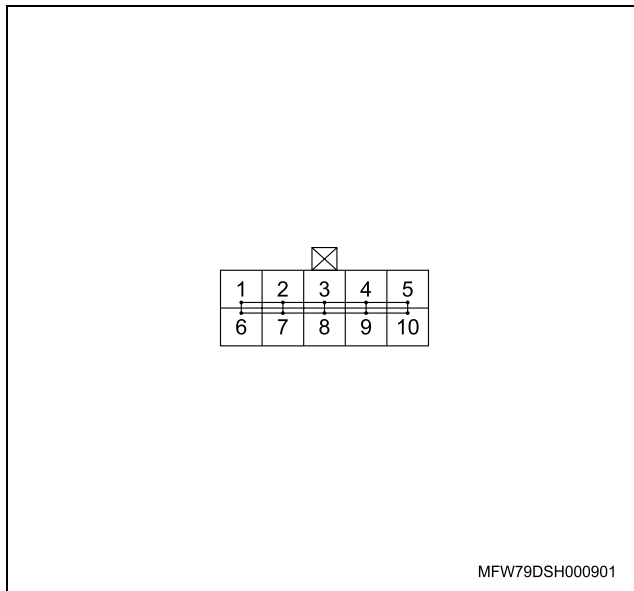FU47 J/C-EA 10P1




PIN No.	Connection
1	W/S-3
	TCM (A/T)
	Distributor
2	J/C-EA 30P1 (33)
3	J/C-EA 30P1 (22)
4	J/C-EA 10P2 (10)
5	Headlight (RH) (with Air Suspension)
	W/S-16
6	J/C-EA 30P1 (11)
7	J/C-EA 30P2 (33)
	W/S-27
8	J/C-EA 30P2 (22)
9	J/C-EA 30P2 (11)
10	GND (Frame RH-Front)

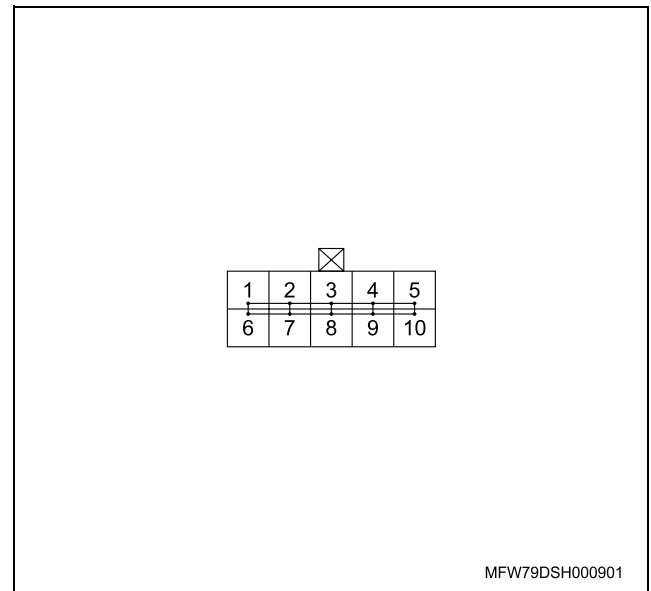FU48 J/C-EA 10P2




PIN No.	Connection
1	BLC
	A/C Switch
2	Auto A/C C/U
	Fan Switch (Type2)
	Blower Resistor
	W/S-30 (Type1)
3	Auto A/C C/U
	Fan Switch
4	Headlight Washer C/U
5	GND (Frame Front-LH)
6	Condenser Fan Motor
7	Headlight (LH)
	J/C-EBUL8P (6)
8	Remote Control Mirror LH (with Heater)
9	J/C-EBUL8P (8)
10	J/C-EA 10P1 (4)

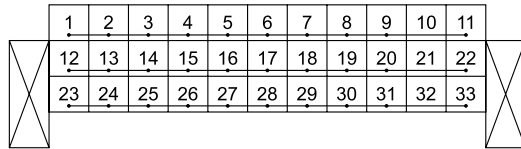FU49 J/C-EA 30P1

MFW79DSH001801

PIN No.	Connection
1	Headlight Washer Switch
2	Fog Light (LH)
3	Smoother Emergency Switch
	TCM (A/T)
	Gate Inter Lock C/U
4	Wiper Motor
5	Front Differential Switch
6	Data Link Connector
7	PTO Cut Relay
8	Rear Differential Lock Switch
	Inter Differential Lock Switch
9	Stoplight Switch 1
10	—
11	J/C-EA 10P1 (6)
12	Speed Control Unit
13	Speed Control Unit
14	Headlight Washer Relay
15	Air Suspension C/U
	ABS Trailer Information
16	Center Differential Lock Switch
	Front Differential Switch
	ASR OFF Switch
17	Power Window Relay
	Door Lock Relay (Unlock)

PIN No.	Connection
18	Transfer Low Relay
	Trailer Information Relay 1
19	Condenser Fan Relay
20	PTO Main Relay
21	—
22	J/C-EA 10P1 (3)
23	Front Turn Signal Light (LH)
24	Front Turn Signal Light (RH)
25	Clearance Light (LH)
26	Clearance Light (RH)
27	Transfer Gear Control Switch
28	Cruise Main Switch
29	Rear Power Window Lock Switch
	Trailer Flasher Relay
30	Rear Power Window Switch (LH)
31	Rear Power Window Switch (RH)
32	—
33	J/C-EA 10P1 (2)

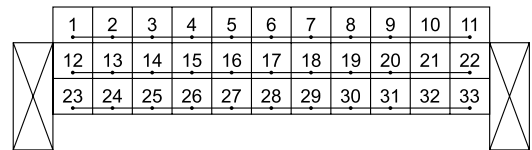FU50 J/C-EA 30P2


MFW79DSH001801

PIN No.	Connection
1	Horn (LH)
2	IP Cluster
3	Smoother Emergency Switch
	Neutral Relay
	Range Inter Lock C/U

9D-56 Wiring System (RHD model)


PIN No.	Connection
4	DPD Switch
5	Fan Control Switch (Type1)
	W/S-30 (Type1)
6	Fog Light (RH)
7	HSA Reset Switch
	Neutral Relay
8	HSA Adjustment Switch
9	W/S-27
10	—
11	J/C-EA 10P1 (9)
12	Retractable Power Mirror C/U
13	Dome Light Switch
14	Remote Control Mirror Switch
15	Dome Light Switch
16	Remote Control Mirror RH (with Heater)
17	Mirror Heater Switch
18	Retractable Power Mirror Switch
19	Condenser Fan Relay
	Mirror Heater Switch
20	—
21	—
22	J/C-EA 10P1 (8)
23	Front Door Power Window Switch (RH)
24	PTO Switch
25	Door Lock Controller
	Keyless Entry Control Unit
26	Air Suspension C/U
27	Horn (RH)
28	Auto A/C C/U
	Electronic Thermostat
29	—
30	Memory Clear Switch
31	Transfer Gear Control Switch
32	—
33	J/C-EA 10P1 (7)

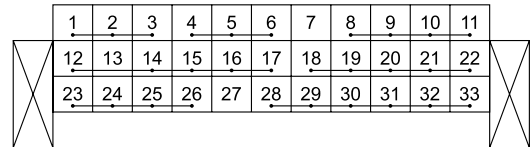FU92 J/C-20PA1




MF79DSH000701

PIN No.	Connection
1	Fuse ; Air Suspension
2	—
3	Trailer Flasher Relay
4	Trailer Information Relay 2
5	Trailer Information Relay 2
6	Trailer Information Relay 1
7	Trailer Stop Relay
8	Trailer Information Relay 1
9	Trailer Information Relay 2
10	ABS Trailer Information
11	ABS Trailer Information
12	Trailer Stop Relay
13	Trailer Socket
14	ABS Trailer Information
15	Diode 1
16	Diode B1-4
17	Stoplight Relay
18	—
19	Trailer Brake Switch
20	Flasher Unit
21	Trailer Flasher Relay
22	—

 FU93 J/C-20PA2

 
MFW79DSH001101

FU94 J/C-6PA2

MFW79DSH001201

PIN No.	Connection
1	TCM
2	TCM
3	Select Solenoid
4	TCM
5	TCM
6	2-4-R Shift Solenoid
7	—
8	TCM
9	Junction Block 2
10	Diode EMR2
11	TCM
12	TCM
13	—
14	TCM
15	1-3-5 Shift Solenoid
16	—
17	TCM
18	TCM
19	Gear Shifter Relay
20	TCM
21	TCM
22	TCM

PIN No.	Connection
1	IP Cluster
	W/S-38
2	HSA C/U
3	Air Suspension C/U
4	Speed Control Unit
5	—
6	ECM

 J29 J/C-EBUL8P


MFW79DSH001501

PIN No.	Connection
1	Front Fog Light (LH)
2	Front Turn Signal Light (LH)

9D-58 Wiring System (RHD model)


PIN No.	Connection
3	Clearance Light (LH)
4	Headlight (LH)
5	—
6	J/C-EA 10P2 (7)
7	Headlight Leveling Actuator (LH)
8	J/C-EA 10P2 (9)

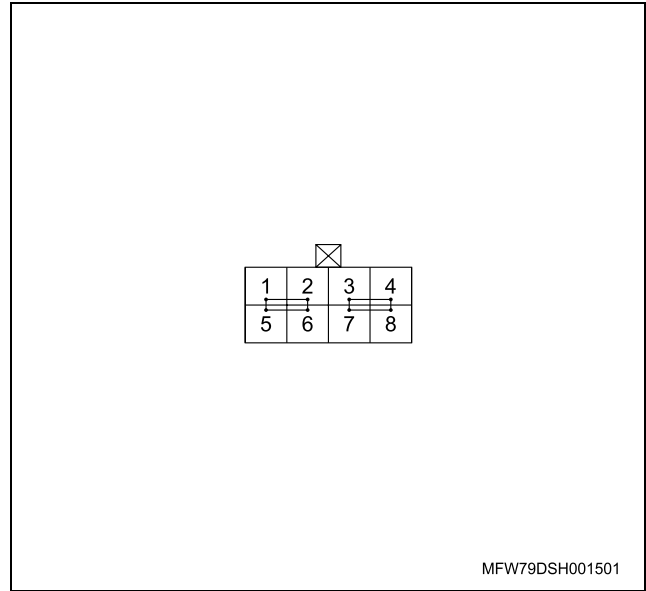J30 J/C-EBUR8P




PIN No.	Connection
1	Front Fog Light (RH)
2	Front Turn Signal Light (RH)
3	Clearance Light (RH)
4	Headlight (RH)
5	—
6	W/S-16
7	Headlight Leveling Actuator (RH)
8	W/S-16

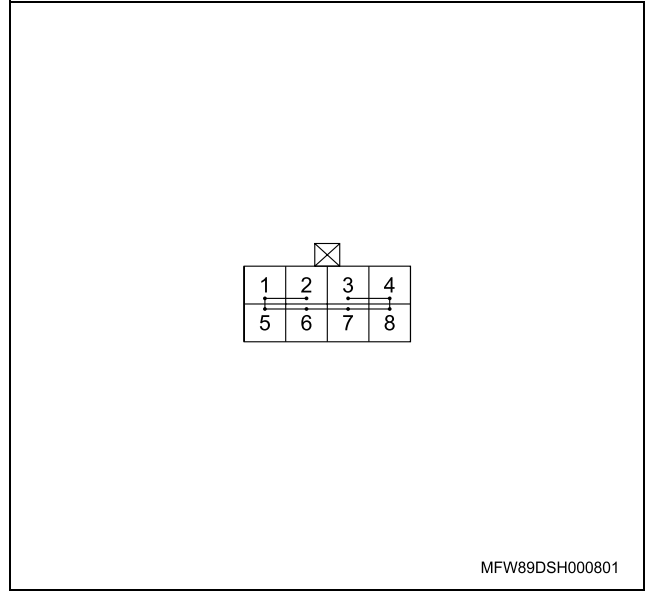J49 J/C-8P2




PIN No.	Connection
1	W/S-B
2	J/C-8P1(6)
3	Wheel Parking Brake Switch
4	Inter Differential Lock Magnetic Valve
5	—
6	Air Pressure Switch 1
	Air Pressure Switch
7	—
8	Brake Wear Indicator (Rear-RH)

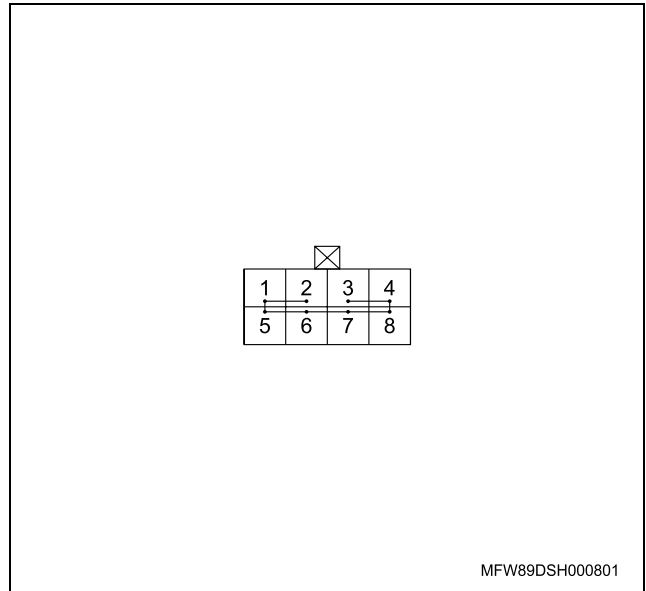J50 J/C-8P1




PIN No.	Connection
1	—
2	Rear Combination Light (LH)
	Backup Light Switch
3	Rear Combination Light (RH)
	Back Buzzer or Voice Warning Speaker
4	License Plate Light
5	—
6	J/C-8P2 (2)
7	Tail Spare (LH) GND
8	Tail Spare (RH) GND

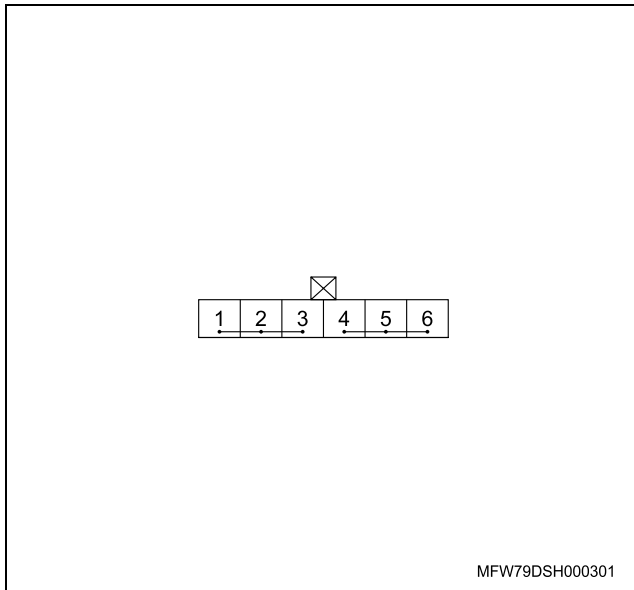J57 J/C-RH6P4


MFW79DSH000301

PIN No.	Connection
1	J/C-8P2 (3)
2	Air Suspension Magnetic Valve
3	Air Suspension Buzzer
4	Air Low Pressure Switch
5	Remote Control (External)
6	—

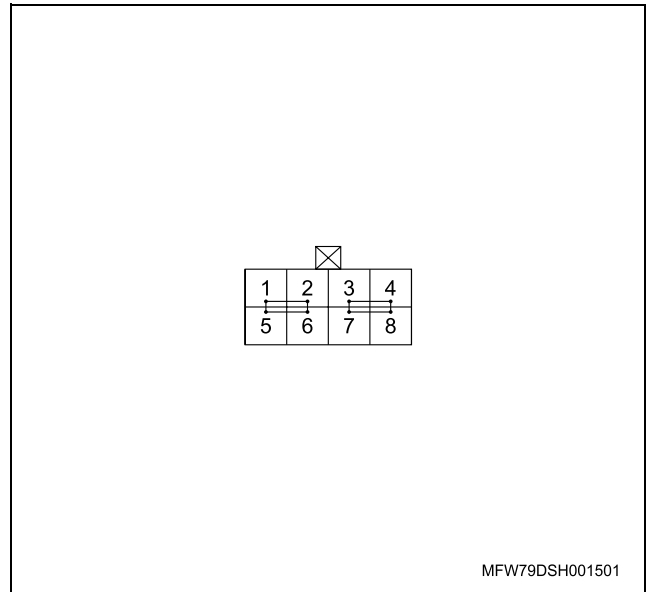J86 J/C-8PW

MFW79DSH001501

PIN No.	Connection
1	Stay Lock Switch
2	Cab Power Tilt Switch
3	Junction Block 2
4	Cab Power Tilt Relay
5	Up Switch
6	Cab Power Tilt Buzzer
7	Cab Power Tilt Buzzer
8	—

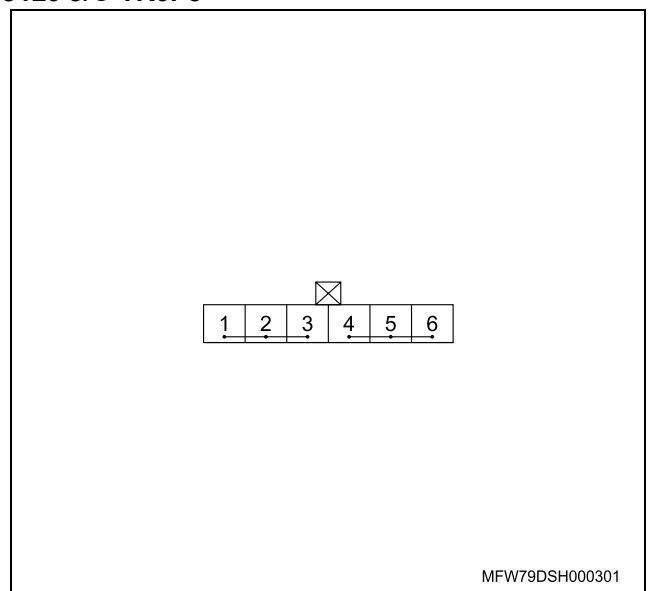J129 J/C-TR6P8


MFW79DSH000301

PIN No.	Connection
1	J/C-5 (2)

9D-60 Wiring System (RHD model)


PIN No.	Connection
2	Shield
3	Shield
4	—
5	—
6	—

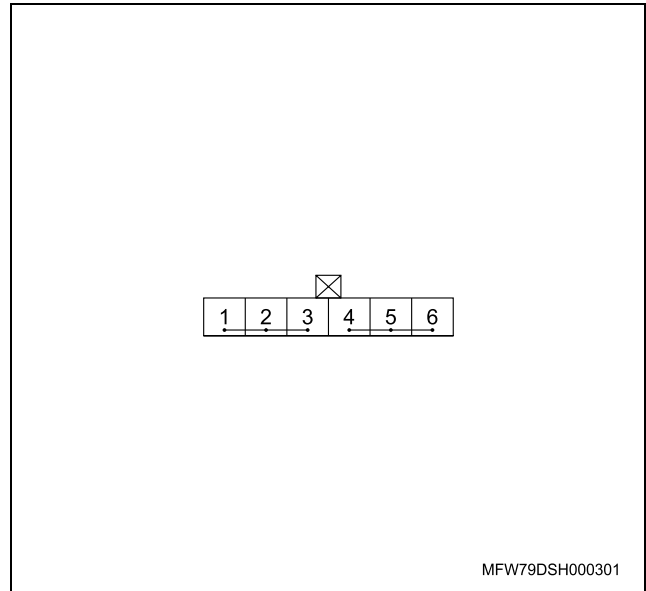J138 J/C-R6P2




PIN No.	Connection
1	J/C-30P1 (19)
2	Rear Combination Light (LH)
3	Rear Combination Light (RH)
4	Backup Light (LH)
5	Backup Light (RH)
6	J/C-30P1 (14)

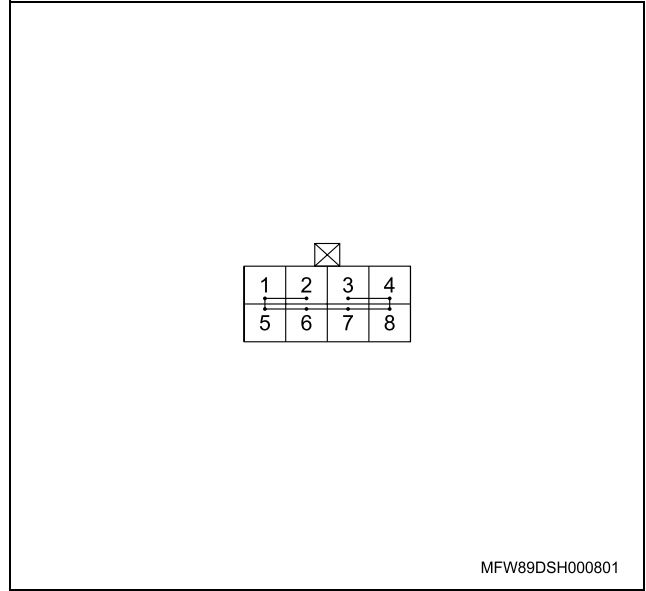J195 J/C-8P3




PIN No.	Connection
1	J/C-30P4 (14)
2	Rear Combination Light (LH)
3	Rear Combination Light (RH)
4	License Plate Light
5	—
6	—
7	Tail Spare (RH)
8	Tail Spare (LH)

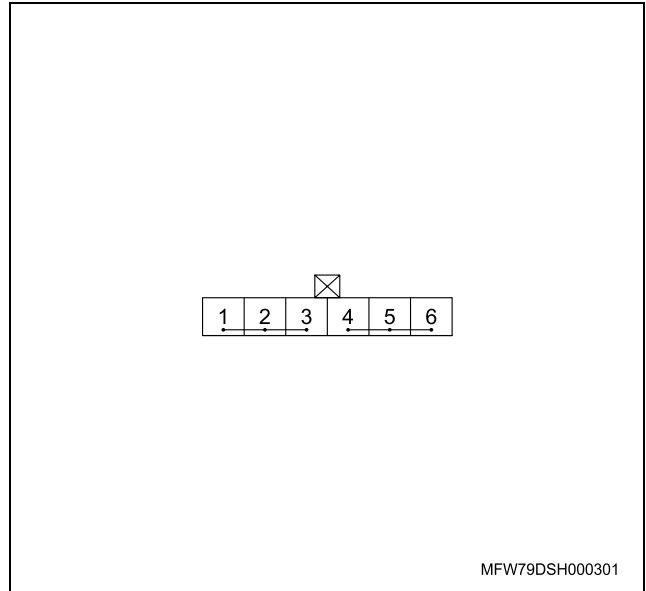J211 J/C-PT6P1



PIN No.	Connection
1	Cab Power Tilt Buzzer

PIN No.	Connection
2	Cab Power Tilt Relay
3	Cab (Front-LH)
4	Up Down Switch
5	Cab Power Tilt Switch
6	Diode 13

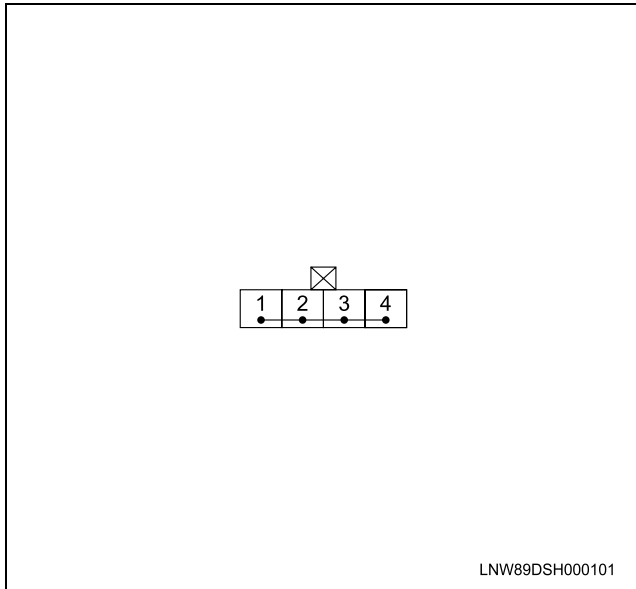**F1 J/C-10**

PIN No.	Connection
1	Front Door Switch (LH) (Crew Cab)
2	Rear Door Switch (RH) (Crew Cab)
3	Junction Block 2
4	Rear Door Switch (LH) (Crew Cab)

F26 CAN Joint 4P6A

PIN No.	Connection
1	J/C-CAN 4P3A (3)
2	J/C-CAN 4P2A (1)
3	Shift Selector (A/T)
4	—

F27 CAN Joint 4P6B

PIN No.	Connection
1	J/C-CAN 4P3B (3)
2	J/C-CAN 4P2B (1)
3	Shift Selector (A/T)
4	—

FB119 J/C-11

PIN No.	Connection
1	All Speed Accel Sensor
2	ECM
3	—
4	J/C-APS1G (1)

FB120 J/C-13

PIN No.	Connection
1	ECM
2	MAF & IAT Sensor
3	J/C-APS2G (1)
4	—

FB121 J/C-5

PIN No.	Connection
1	J/C-Shield (1)
2	J/C-TR6P8 (1)
3	J/C-Shield (2)
4	—

FB122 J/C-8

PIN No.	Connection
1	All Speed Accel Sensor
2	ECM
3	J/C-APS1D (4)
4	—

FB123 J/C-9

PIN No.	Connection
1	All Speed Accel Sensor
2	ECM
3	J/C-APS1V (1)
4	—

FL81 J/C-APS1D

PIN No.	Connection
1	Shield
2	Shield
3	—
4	J/C-8 (3)

9D-62 Wiring System (RHD model)

FL83 J/C-APS1G

PIN No.	Connection
1	J/C-11 (4)
2	Cruise Switch
3	Accelerator Pedal Position (APP) Sensor
4	Idle Up Volume

FL84 J/C-APS1V

PIN No.	Connection
1	J/C-9 (3)
2	—
3	Accelerator Pedal Position (APP) Sensor
4	Idle Up Volume

FL85 J/C-APS2G

PIN No.	Connection
1	J/C-13 (3)
2	—
3	Accelerator Pedal Position (APP) Sensor
4	Barometric Pressure (BARO) Sensor

FL86 J/C-APS2V

PIN No.	Connection
1	ECM
2	—
3	Accelerator Pedal Position (APP) Sensor
4	Barometric Pressure (BARO) Sensor

FL117 J/C-LAN 4P1A

PIN No.	Connection
1	J/C-LAN 4P2A (3)
2	Immobilizer C/U
3	ECM
4	—

FL118 J/C-LAN 4P1B

PIN No.	Connection
1	J/C-LAN 4P2B (3)
2	Immobilizer C/U
3	ECM

PIN No.	Connection
4	—

FL119 J/C-CAN 4P2A

PIN No.	Connection
1	IP Cluster
	J/C-CAN 4P3A (3)
	J/C-CAN 4P5B (1)
	CAN Joint 4P6A (2)
2	BCM
3	DRM
4	J/C-CAN 6P1 (4)
	J/C-CAN 6P2 (4)

FL120 J/C-CAN 4P2B

PIN No.	Connection
1	IP Cluster
	J/C-CAN 4P3B (3)
	J/C-CAN 4P5A (1)
	CAN Joint 4P6B (2)
2	BCM
3	DRM
4	J/C-CAN 6P1 (1)
	J/C-CAN 6P2 (1)

FU19 J/C-LAN 4P2A

PIN No.	Connection
1	TCM (A/T)
	Terminator 2
2	Data Link Connector
3	J/C-LAN 4P1A (1)
4	—

FU20 J/C-LAN 4P2B

PIN No.	Connection
1	TCM (A/T)
	Terminator 2
2	Data Link Connector
3	J/C-LAN 4P1B (1)
4	—

FU21 J/C-CAN 4P3A

PIN No.	Connection
1	TCM
2	IP Cluster
3	J/C-CAN 4P2A (1)
4	—

FU22 J/C-CAN 4P3B

PIN No.	Connection
1	TCM
2	IP Cluster
3	J/C-CAN 4P2B (1)
4	—

FU87 J/C-25

PIN No.	Connection
1	Mode Actuator
2	Mix Actuator
3	Auto A/C C/U
4	Solar Radiation Sensor

FU174 J/C-2

PIN No.	Connection
1	J/C-6PA2 (1)
2	Speed Sensor Control Unit
3	IP Cluster
4	—

FU176 J/C-7

PIN No.	Connection
1	Junction Block 2
2	Clutch Switch (PTO)
3	Transfer Clutch Switch
4	—

FU185 J/C-Shield

PIN No.	Connection
1	J/C-5 (1)
2	J/C-5 (3)
3	W/S-3
4	—

FU194 J/C-CAN 4P5A

PIN No.	Connection
1	J/C-CAN 4P2B (1)
2	Air Suspension C/U
3	IP Cluster
4	ABS/ASR C/U

FU195 J/C-CAN 4P5B

PIN No.	Connection
1	J/C-CAN 4P2A (1)
2	Air Suspension C/U
3	IP Cluster
4	ABS/ASR C/U

FU210 J/C-99

PIN No.	Connection
1	IP Cluster
2	HSA C/U (17)
3	Air Suspension C/U (1)
4	ECM (19)

FU225 J/C-Service Terminal

PIN No.	Connection
1	Service Terminal (3)
2	ECM(8)
3	Tachograph (9)
4	—

G4 J/C-3

PIN No.	Connection
1	Junction Block 1
2	Fluorescent Light
3	Dome Light
4	Rear Dome Light

G5 J/C-33

PIN No.	Connection
1	—
2	Dome Light Switch
3	Junction Block 1
4	Dome Light

9D-64 Wiring System (RHD model)

G8 J/C-Marker 1


PIN No.	Connection
1	Junction Block 2
2	—
3	Roof-Mounted Clearance Light 2
4	Roof-Mounted Clearance Light 1

G9J/C-Marker 2

PIN No.	Connection
1	Roof-Mounted Clearance Light 1
2	Roof-Mounted Clearance Light 2
3	J/C-EB30P (1)
4	—

Indonesia

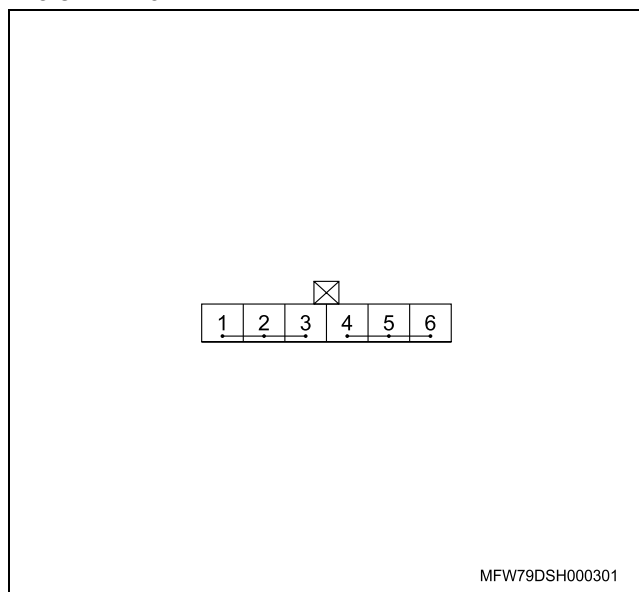
FB3 J/C-RH6P1



MF79DSH000301

PIN No.	Connection
1	IP Cluster
2	Air Pressure Sensor 1
3	Air Pressure Sensor 2
4	IP Cluster
5	Air Pressure Sensor 1
6	Air Pressure Sensor 2

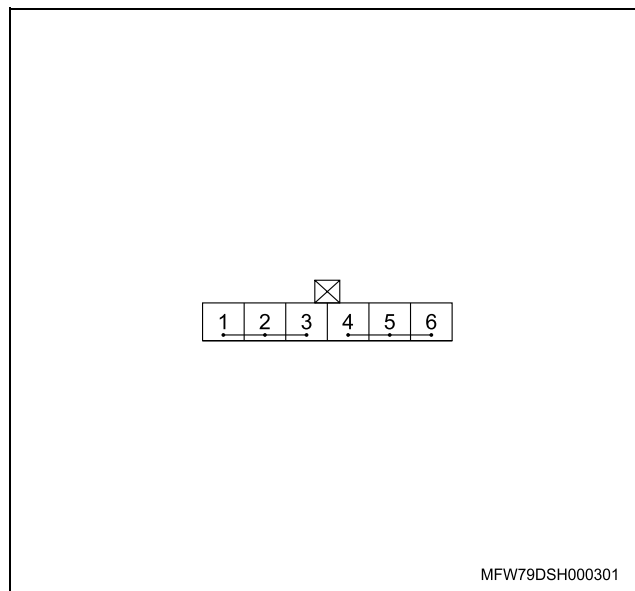
FB9 J/C-CAN 6P2



MF79DSH000301

PIN No.	Connection
1	J/C-CAN 6P1 (2)
	J/C-CAN 4P2B (4)
2	Terminator (6HK1)
3	ECM
4	J/C-CAN 6P1 (5)
	J/C-CAN 4P2A (4)
5	Terminator (6HK1)
6	ECM

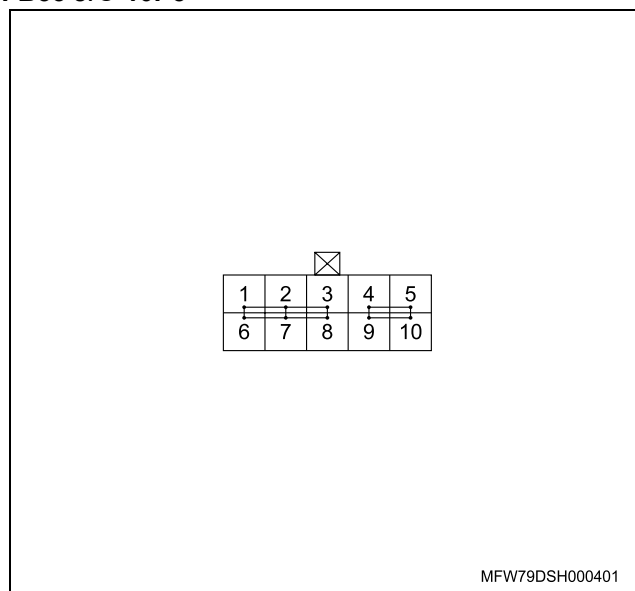
FB33 J/C-10P5



MF79DSH000401

PIN No.	Connection
1	ECM Main Relay


PIN No.	Connection
2	Fuse ; ECM Main
3	—
4	—
5	—
6	ECM
7	ECM
8	—
9	—
10	—

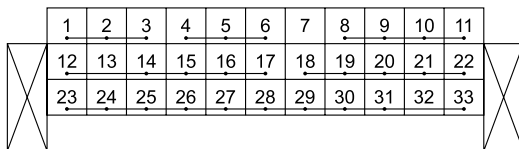FB34 J/C-30P1

MFW79DSH000501

PIN No.	Connection
1	Starter Relay (4HK1)
	Starter Relay (6HK1)
2	Fuse ; Starter
3	ECM
4	Starter Cut Relay
5	Starter Relay (4HK1)
	Starter Relay (6HK1)
6	—
7	—
8	ECM
9	Junction Block 2
10	—
11	—
12	Backup Light Switch

PIN No.	Connection
13	—
14	J/C-R6P2 (6)
15	Junction Block 1
16	Back Buzzer
17	—
18	Stoplight Relay
19	J/C-R6P2 (1)
20	—
21	—
22	—
23	Fuse ; ECM Main
24	Starter Cut Relay
25	Exhaust Brake Magnetic Valve
26	—
27	—
28	—
29	—
30	—
31	—
32	—
33	—

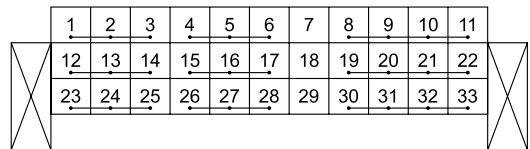FB35 J/C-30P2


MFW79DSH000601

PIN No.	Connection
1	—
2	ECM

9D-66 Wiring System (RHD model)

PIN No.	Connection
3	Neutral Switch
	Starter Cut Relay (A/T)
4	J/C-20PB2 (6)
5	Stoplight Switch 2
6	ECM
7	—
8	ECM
9	Exhaust Differential Pressure Sensor
10	Exhaust Temperature Sensor 2
11	Exhaust Temperature Sensor 1
12	—
13	—
14	—
15	ECM Main Relay
16	ECM
17	ECM
18	—
19	ECM
20	IAT Sensor
21	—
22	—
23	—
24	—
25	—
26	—
27	—
28	—
29	—
30	Air Flow Sensor3
31	Air Flow Sensor3
32	—
33	—

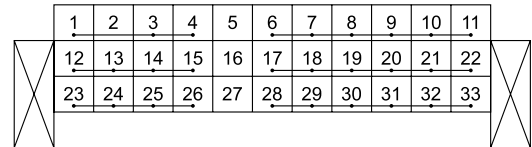
FB36 J/C-30P3



MFV89DSH000401


PIN No.	Connection
1	ECM
2	Starter Cut Relay
3	—
4	—
5	—
6	Junction Block 2
7	Backup Light Switch
8	—
9	—
10	—
11	—
12	—
13	A/C Compressor
14	ECM
15	Diode 3
16	—
17	Junction Block 1
18	—
19	Rear Combination Light (LH)
20	—
21	—
22	—
23	—
24	Air Low Pressure Switch(Out)
25	Air Low Pressure Switch(Out)

PIN No.	Connection
26	—
27	—
28	IP Cluster
	Flasher Unit
29	—
30	Rear Combination Light (RH)
31	—
32	—
33	—

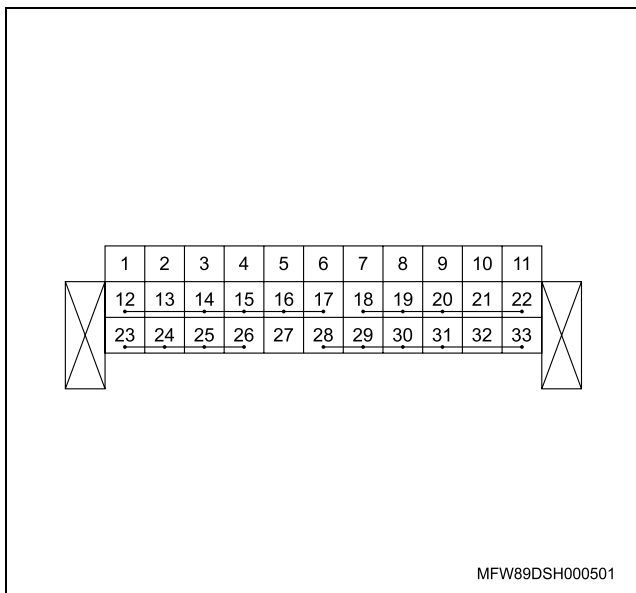FB37 J/C-30P4

PIN No.	Connection
1	—
2	—
3	—
4	IP Cluster
5	Water Separator Switch
6	—
7	—
8	—
9	—
10	—
11	—
12	Fuse ; Taillight
13	—
14	J/C-8P3 (1)

PIN No.	Connection
15	—
16	—
17	—
18	PTO Main Relay
	Diode 2
	IP Cluster
19	PTO Magnetic Valve
20	—
21	—
22	ECM
23	IP Cluster
24	Fuel Tank Unit (LH)
25	Fuel Tank Unit (Rear)
26	—
27	—
28	—
29	—
30	—
31	—
32	—
33	—

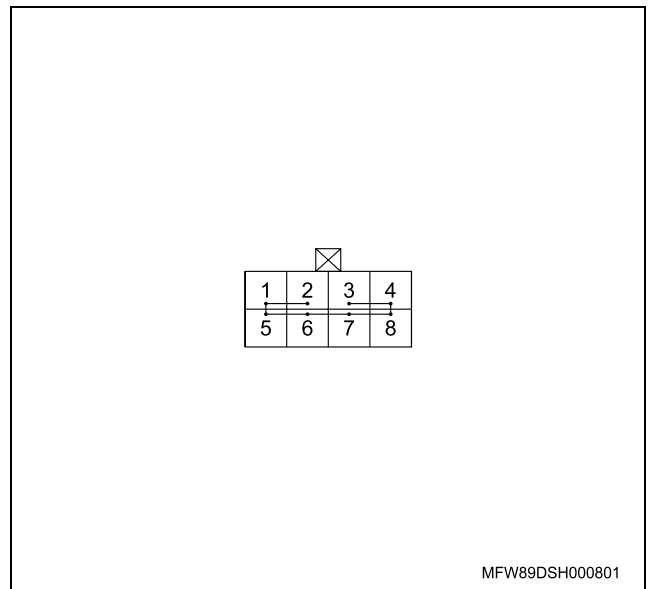
J50 J/C-8P1

PIN No.	Connection
1	—
2	Rear Combination Light (LH)

9D-68 Wiring System (RHD model)


PIN No.	Connection
3	Rear Combination Light (RH)
	Back Buzzer or Voice Warning Speaker
4	License Plate Light
5	—
6	Weld Splice B
7	—
8	Tail Spare (RH) GND

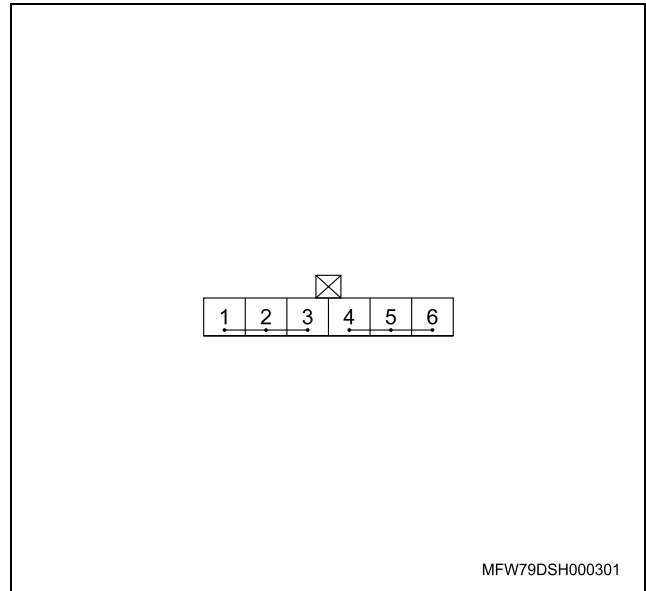J138 J/C-R6P2




PIN No.	Connection
1	J/C-30P1 (19)
2	Rear Combination Light (LH)
3	Rear Combination Light (RH)
4	Backup Light (LH)
5	Backup Light (RH)
6	J/C-30P1 (14)

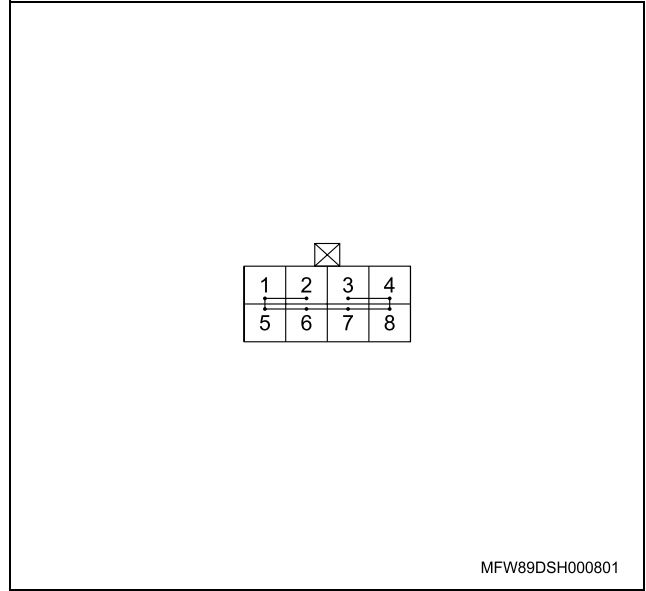J195 J/C-8P3



PIN No.	Connection
1	J/C-30P4 (14)
2	Rear Combination Light (LH)
3	Rear Combination Light (RH)
4	License Plate Light
5	—
6	—
7	Tail Spare (RH)
8	—

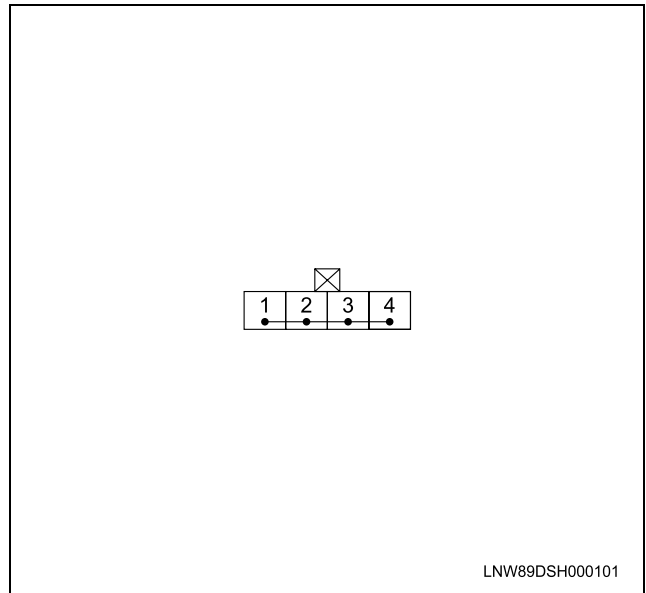

FB119 J/C-11

PIN No.	Connection
1	All Speed Accel Sensor

PIN No.	Connection
2	ECM
3	—
4	Idle Up Volume
4	Accelerator Pedal Position (APP) Sensor

FB120 J/C-13

PIN No.	Connection
1	ECM
2	IAT Sensor
3	Barometric Pressure(BARO) Sensor Accelerator Pedal Position (APP) Sensor
4	—

FB122 J/C-8

PIN No.	Connection
1	Shield Line
2	ECM
3	Shield Line
4	—

FB123 J/C-9

PIN No.	Connection
1	All Speed Accel Sensor
2	ECM
3	Barometric Pressure(BARO) Sensor Accelerator Pedal Position (APP) Sensor
4	—

G5 J/C-33

PIN No.	Connection
1	—
2	—
3	Door Switch (RH)
4	Dome Light

G8 J/C-Marker 1

PIN No.	Connection
1	Cab Junction Block
2	—

PIN No.	Connection
3	Roof-Mounted Clearance Light 2
4	Roof-Mounted Clearance Light 1

G9J/C-Marker 2

PIN No.	Connection
1	Roof-Mounted Clearance Light 1
2	Roof-Mounted Clearance Light 2
3	GND (Cab Front LH-Side)
4	—

Reference Table of Weld Splice**Except Indonesia**

Connector No.	No. Usage
W/S-2	ISRI Seat Belt Switch
	Driver Pre-tensioner and Seat Belt Switch
	Seat Belt Switch
	J/C-EB 30P (30)
	Stay Lock Switch
	Parking Brake Switch
	Wheel Parking Brake Switch
	Wheel Parking Brake Switch
	Shift Lever Switch
	Shift Lever Switch
	Remote Control (Internal)
	Shift Selector
	Remote Control Mirror Switch (Door)
	Remote Control Mirror Switch (Under)
W/S-3	Remote Control Mirror Switch (Door)
	Mirror Remote Control Switch (Under)
	Transmission Control Module (TCM)
	Transmission Control Module (TCM)
	Transmission Control Module (TCM)
	Transmission Control Module (TCM)
	Transmission Control Module (TCM)
	J/C-Shield (3)
	J/C-EA 10P1 (1)

9D-70 Wiring System (RHD model)

Connector No.	No. Usage
W/S-4	IP Cluster
	Brake Fluid Level Switch
	Air Master Stroke Switch 1
	Air Master Stroke Switch 2
	Air Master Stroke Switch 5 (Euro2 FSS, FTS)
	Air Master Stroke Switch 2 (Euro2 FSS, FTS)
W/S-5	Rear Power Window Relay
	Rear Power Window Switch RH
	Rear Power Window Switch RH (Instrument Panel)
	Rear Power Window Switch LH
	Rear Power Window Switch LH (Instrument Panel)
W/S-7	Cab Junction Block
	SBF12
	Fuse Block 1
W/S-9	Gear Shifter Relay
	Gear Shifter Relay
	SBF7
	SBF7
W/S-10	Junction Block 1
	Parking Brake Switch
	Wheel Parking Brake Switch
	Wheel Parking Brake Switch
W/S-11	SBF2
	Cab Power Tilt Relay
	Starter Relay (4HK1)
	Starter Relay (6HK1)

Connector No.	No. Usage
W/S-12	Air Low Pressure Switch 1
	Air Low Pressure Switch 2
	Air Low Pressure Switch 3
	Air Low Pressure Switch 4
	Air Low Pressure Switch WPA1
	Air Low Pressure Switch
	W/S-F
	W/S-F
	W/S-F
	Brake Fluid Level Switch
	Air Master Stroke Switch 1
	Air Master Stroke Switch 2
W/S-13	Air Master Stroke Switch 5 (Euro2 FSS, FTS)
	Air Master Stroke Switch 6 (Euro2 FSS, FTS)
	Air Flow Sensor
	Auto-Air Conditioner C/U
	Mode Actuator
	Mix Actuator
	Coolant Temperature Sensor
W/S-14	Evaporator Temperature Sensor
	Outside Air Temperature Sensor
	Inside Air Temperature Sensor
	Heater A/C Control Panel
W/S-15	Blower Resistor
	Blower Motor
	Cab Junction Block
W/S-15	Washer Motor
	Wiper Motor

Connector No.	No. Usage
W/S-16	Headlight (RH)
	J/C-EA 10P1 (5)
	J/C-EBUR8P (6)
	J/C-EBUR8P (8)
	DC-DC Converter
	DC-DC Converter
	Headlight Leveling Switch
	Headlight Leveling Switch
	Headlight Leveling Actuator (RH)
	Headlight Leveling Actuator (LH)
	Headlight (RH) (High Halogen)
	Headlight (RH) (Low HID)
	Headlight (LH) (High Halogen)
	Headlight (LH) (Low HID)
W/S-17	Junction Block 2
	IP Cluster
	J/C-30P3 (25)
	Air Low Pressure Switch 1
	Air Low Pressure Switch 2
	Air Low Pressure Switch 3
	Air Low Pressure Switch WPA1
W/S-20	Cab Junction Block
	Wiper Motor
	Intermittent Relay
W/S-21	Mirror Heater Switch
	Mirror Heater Switch
	Remote Control Mirror with Heater (RH)
W/S-23	Cab Junction Block
	Remote Control Mirror Switch
	Retractable Power Mirror Switch
	Retractable Power Mirror C/U
W/S-24	Cab Junction Block
	Front Fog Light (RH)
	Front Fog Light (LH)
	Front Fog Light Switch
W/S-25	Remote Control Mirror Switch
	Remote Control Mirror with Heater (RH)
	Remote Control Mirror with Heater (LH)

Connector No.	No. Usage
W/S-27 (Type 1)	Front Fog Light Switch
	Front Fog Light Switch
	Front Fog Light Switch
	J/C-EA 30P2 (9)
W/S-30	Blower Resistor
	Heater A/C Control Panel
	J/C-EA 10P2 (2)
W/S-31	Cab Junction Block
	A/C Compressor Relay
	BLC
	A/C Switch
W/S-34	Junction Block 1
	Parking Brake Switch
	Wheel Parking Brake Switch
	Wheel Parking Brake Switch
W/S-50	Cab Junction Block
	Remote Control Mirror Switch (Door)
	Remote Control Mirror Switch (Under)
W/S-A	EHCUC
	EHCUC
	ABS/ASR C/U
	ABS/ASR C/U
W/S-B	GND (Frame RH-Side)
	Air Dryer
	Diode 3
	GND (Frame RH-Side)
	GND (Frame RH-Side)
	J/C-8P1 (8)
	J/C-8P2 (1)
	W/S-E
	1-3-5 Shift Solenoid
	2-4-R Shift Solenoid
	Select Solenoid
	Power Assist Magnetic Valve

9D-72 Wiring System (RHD model)

Connector No.	No. Usage
W/S-C	Buzzer Cut Relay
	GND (Frame RH-Side)
	GND (Frame RH-Side)
	Transfer Low Switch
	Starter Cut Relay
	Trailer Socket
	PTO Magnetic Valve
	Center Differential Lock Magnetic Valve
W/S-D	ECM Main Relay
	GND (Frame RH-Side)
	Neutral Switch
	Neutral Switch (Fuller)
	Neutral Switch (ZF)
	Neutral Switch (4WD,M/T)
	W/S-F
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
W/S-E	GND (Cab Front-LH)
	W/S-B
	GND (Frame RH-Side)

Connector No.	No. Usage
W/S-F	IP Cluster
	IP Cluster (Except ABS)
	IP Cluster (Except Brake Wear Indicator)
	Stoplight Switch 2
	GND (Frame RH-Side)
	Fuel Tank Unit (Rear)
	Fuel Tank Unit (LH)
	W/S-12
	W/S-12
	W/S-12
	W/S-D
	Water Separator Switch
	Air Flow Sensor 2
	Air Flow Sensor 3


Indonesia


Connector No.	No. Usage
W/S-2	Seat Belt Switch
W/S-4	IP Cluster
	Brake Fluid Level Switch
	Air Master Stroke Switch 1
	Air Master Stroke Switch 2
	Air Master Stroke Switch 5
W/S-12	Air Master Stroke Switch 6
	Air Low Pressure Switch 5
	Air Low Pressure Switch 6
	Air Low Pressure Switch Out
	W/S-F
	Brake Fluid Level Switch
W/S-B	Air Flow Sensor(FVM,FVZ)
	J/C-8P1 (6)
	Diode 3
	GND (Frame RH-Side)
	GND (Frame RH-Side)

Connector No.	No. Usage
W/S-C	Starter Cut Relay
	GND (Frame RH-Side)
	GND (Frame RH-Side)
	Transfer Low Switch
	PTO Magnetic Valve
W/S-D	ECM Main Relay
	GND (Frame RH-Side)
	Neutral Switch
	Neutral Switch (Fuller)
	Neutral Switch (ZF)
	Neutral Switch (M/T)
	W/S-F
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
	Engine Control Module (ECM)
W/S-F	IP Cluster
	IP Cluster(Except ABS)
	Stoplight Switch 2
	GND (Frame RH-Side)
	Fuel Tank Unit (Rear)
	Fuel Tank Unit (LH)
	W/S-12
	W/S-D
	Water Separator Switch
	Low Range Switch
	Air Flow Sensor 3




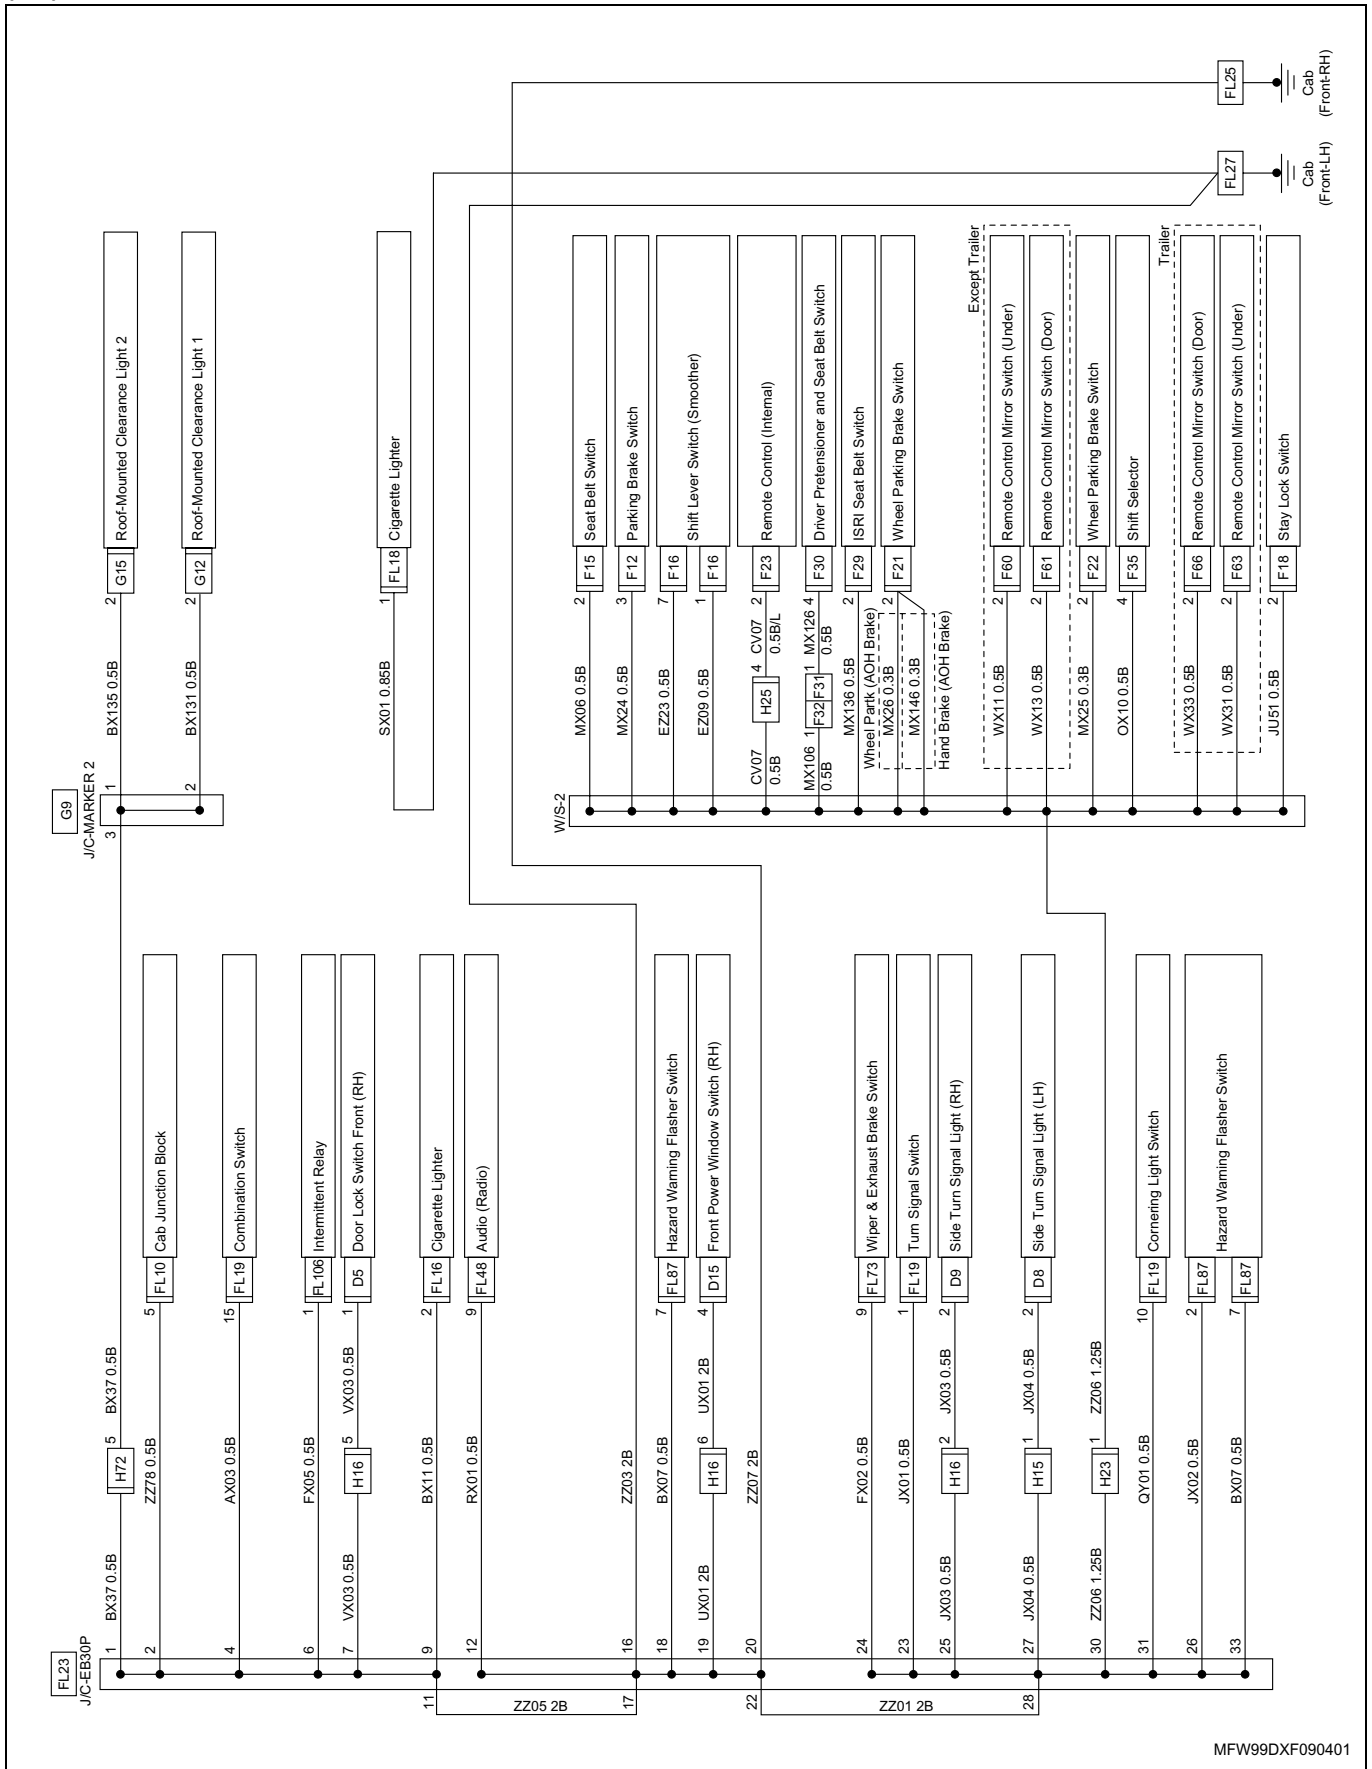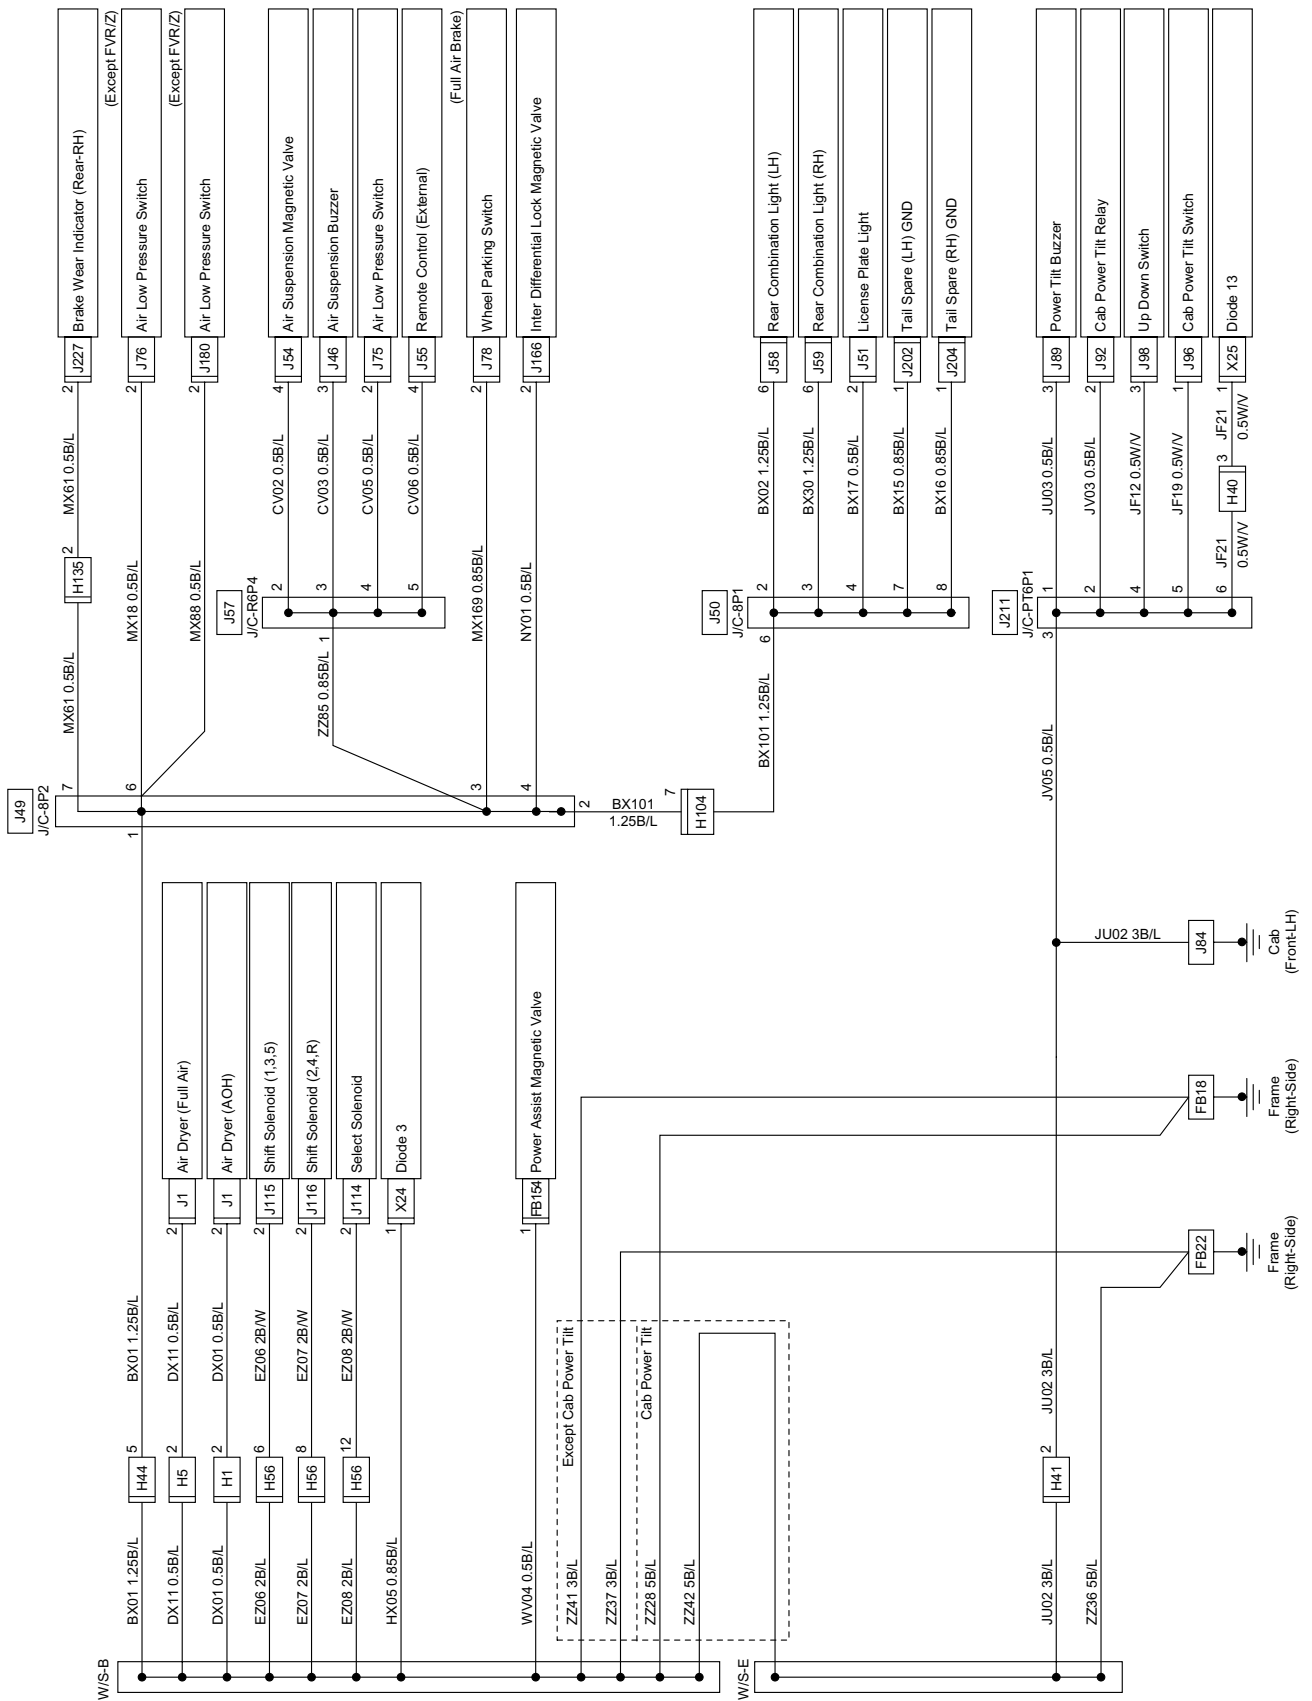
(2/8)






(4/8)

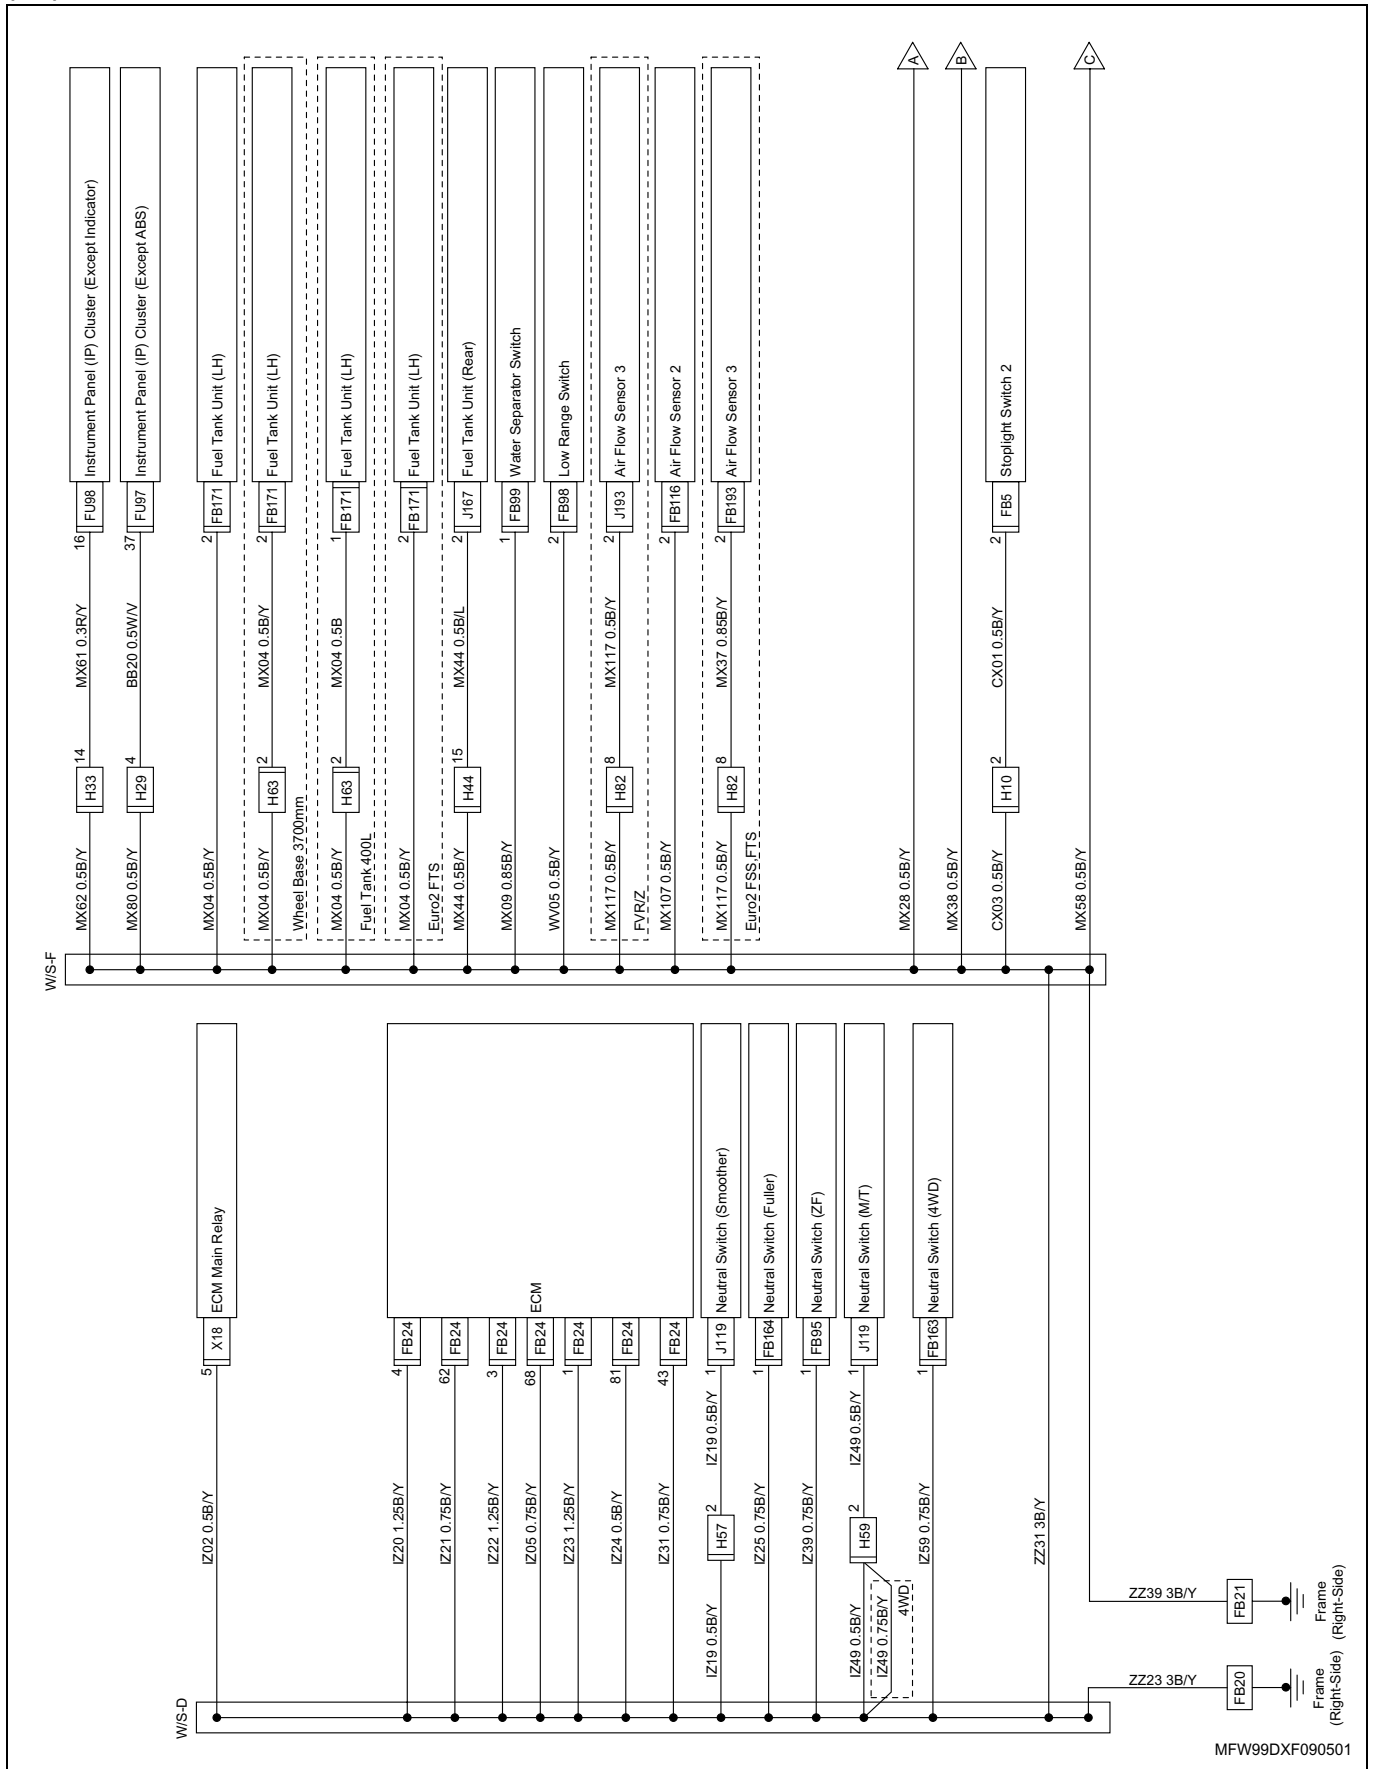


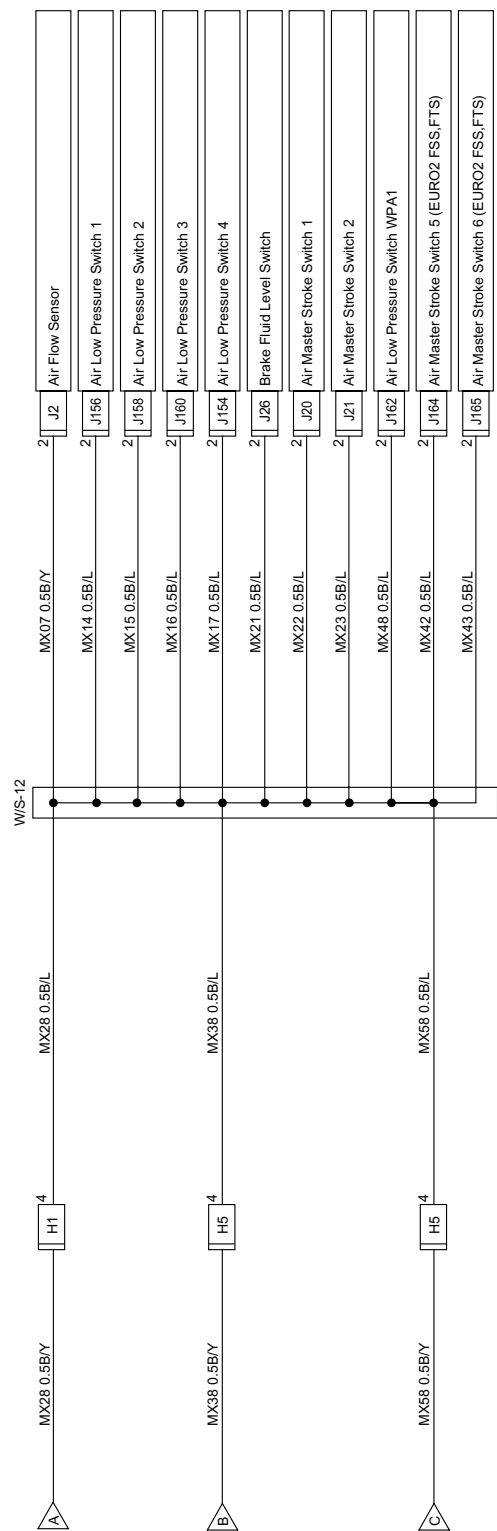


(6/8)

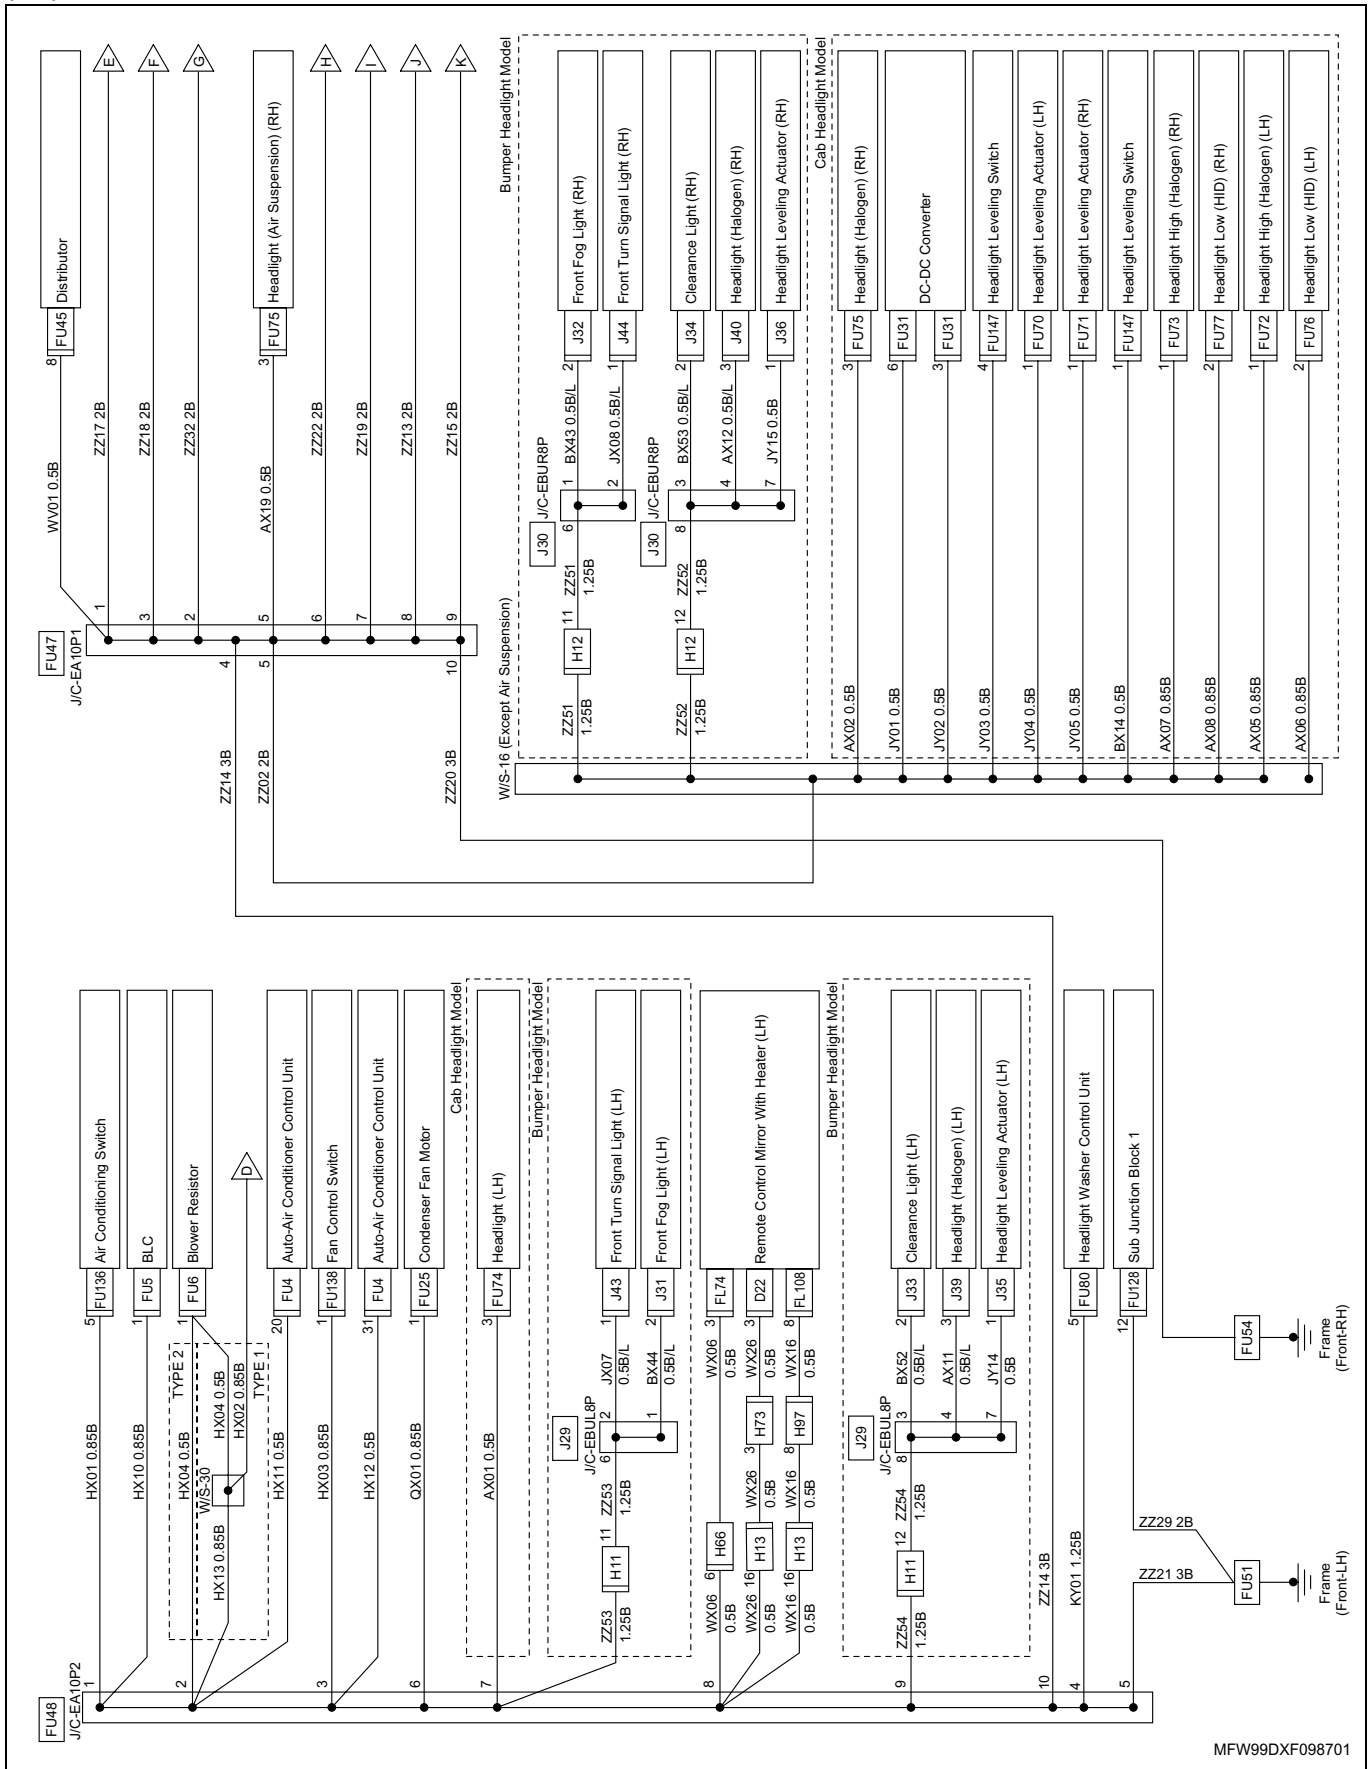


MF99DXF098701

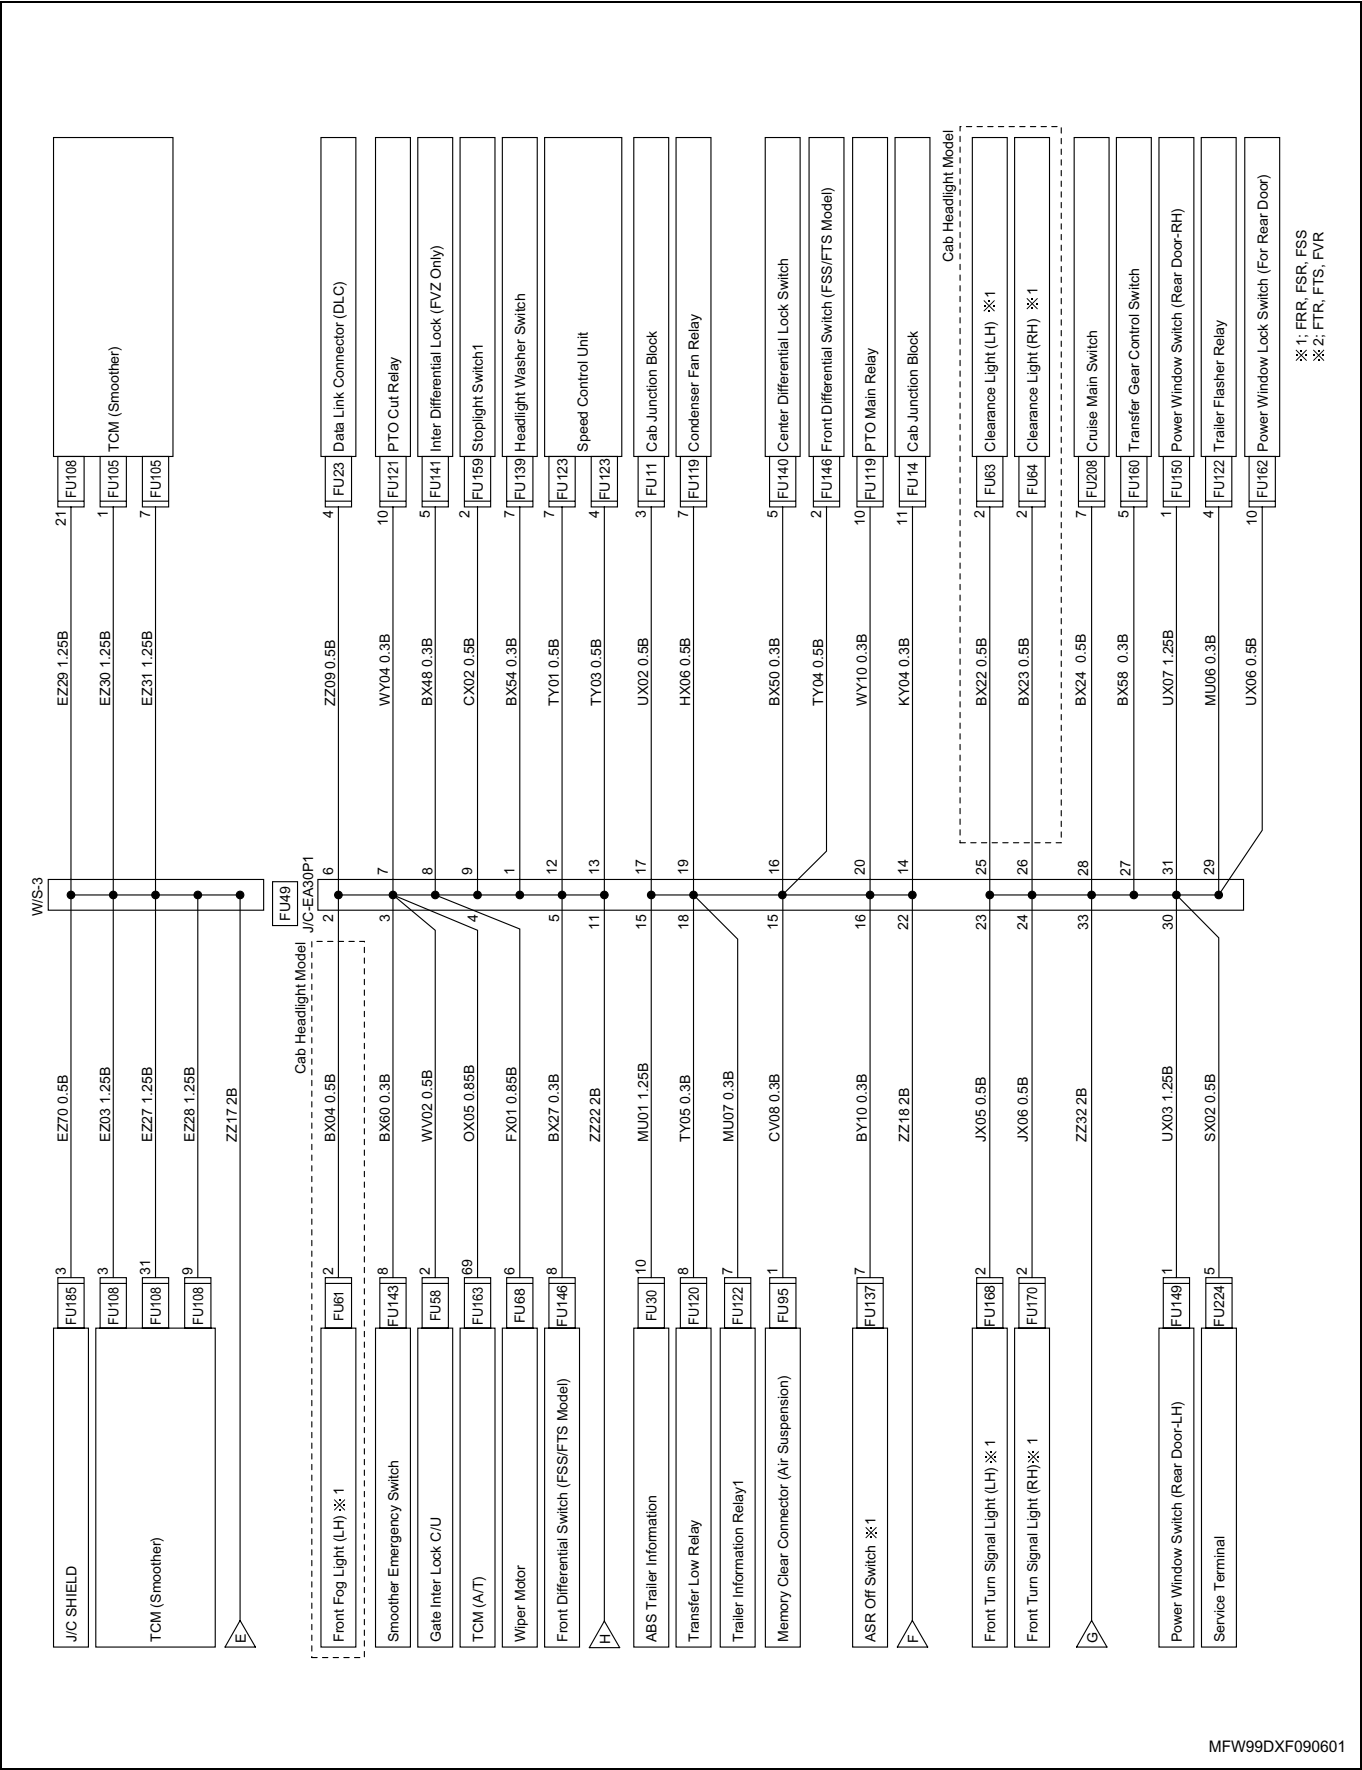


(8/8)

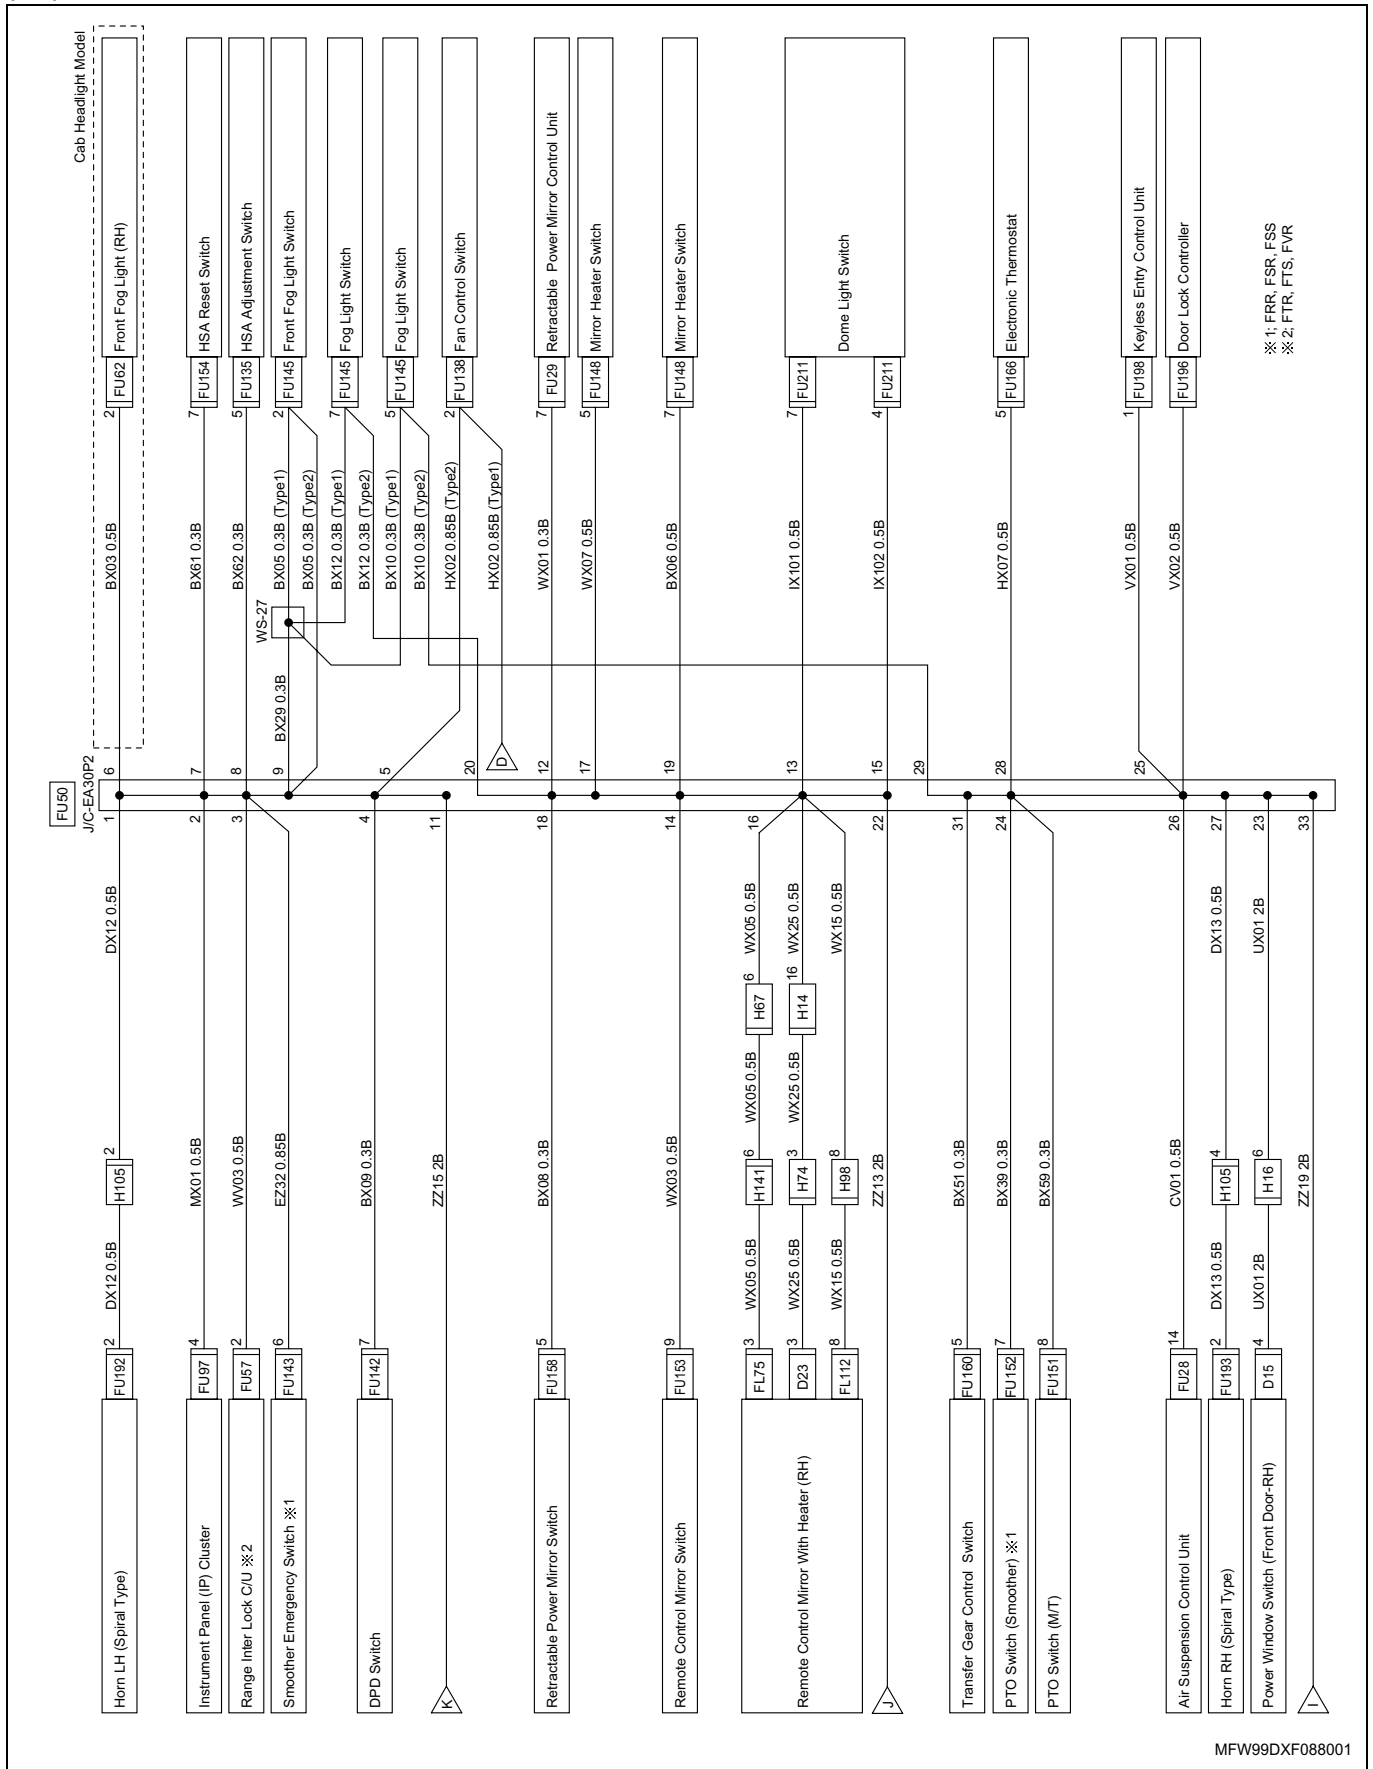


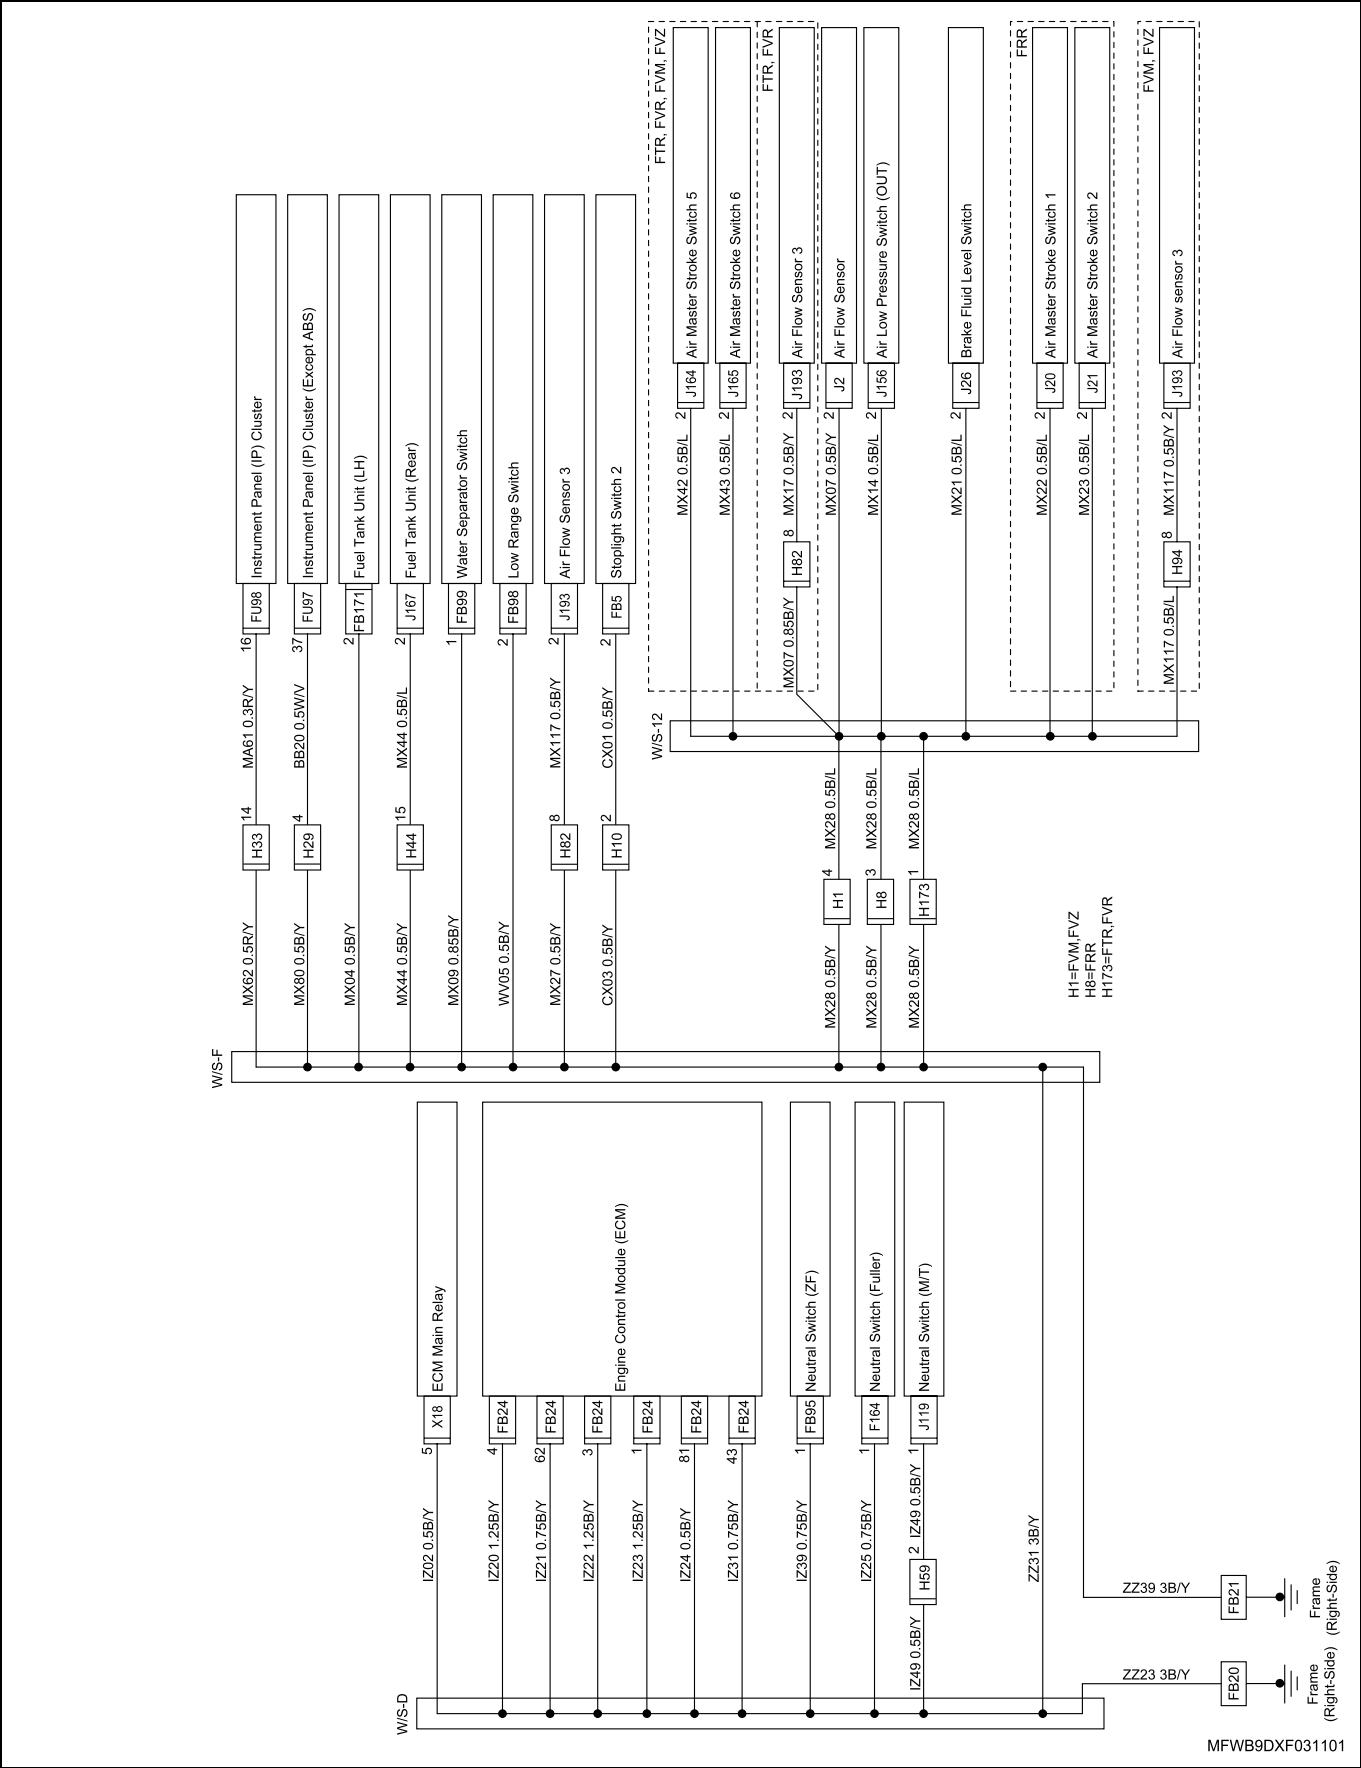


(2/5)

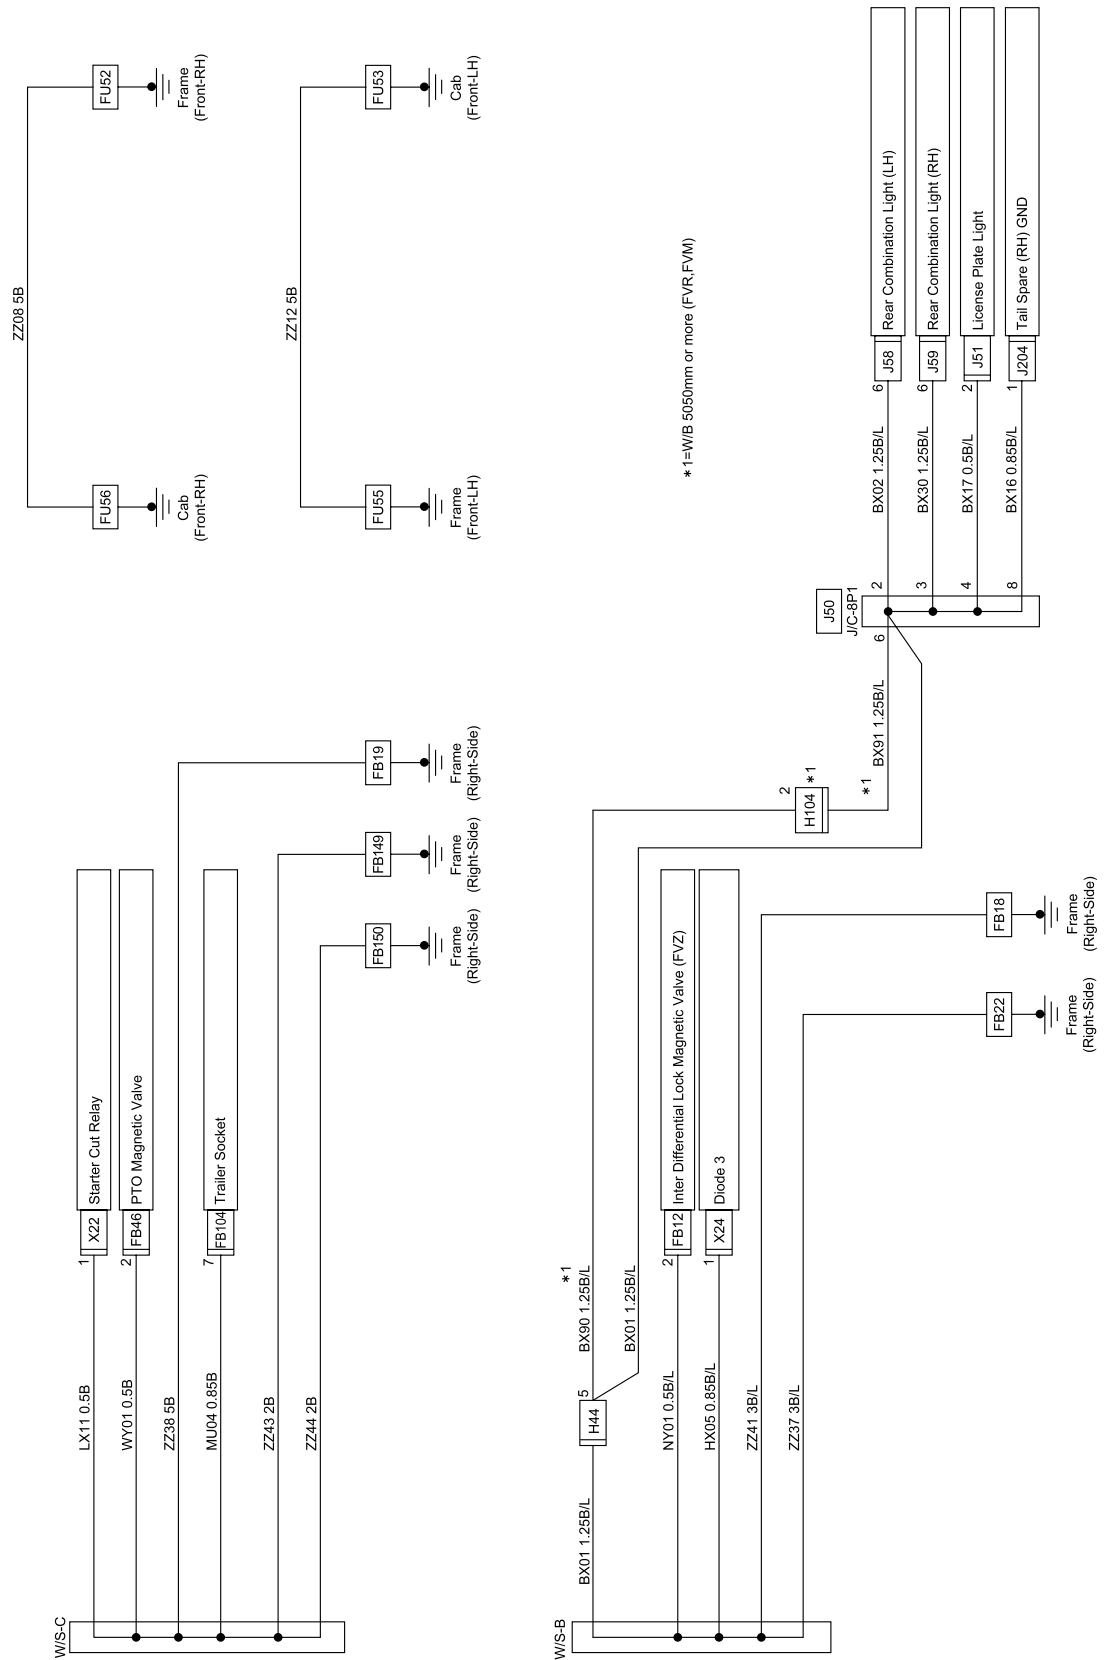


(3/5)

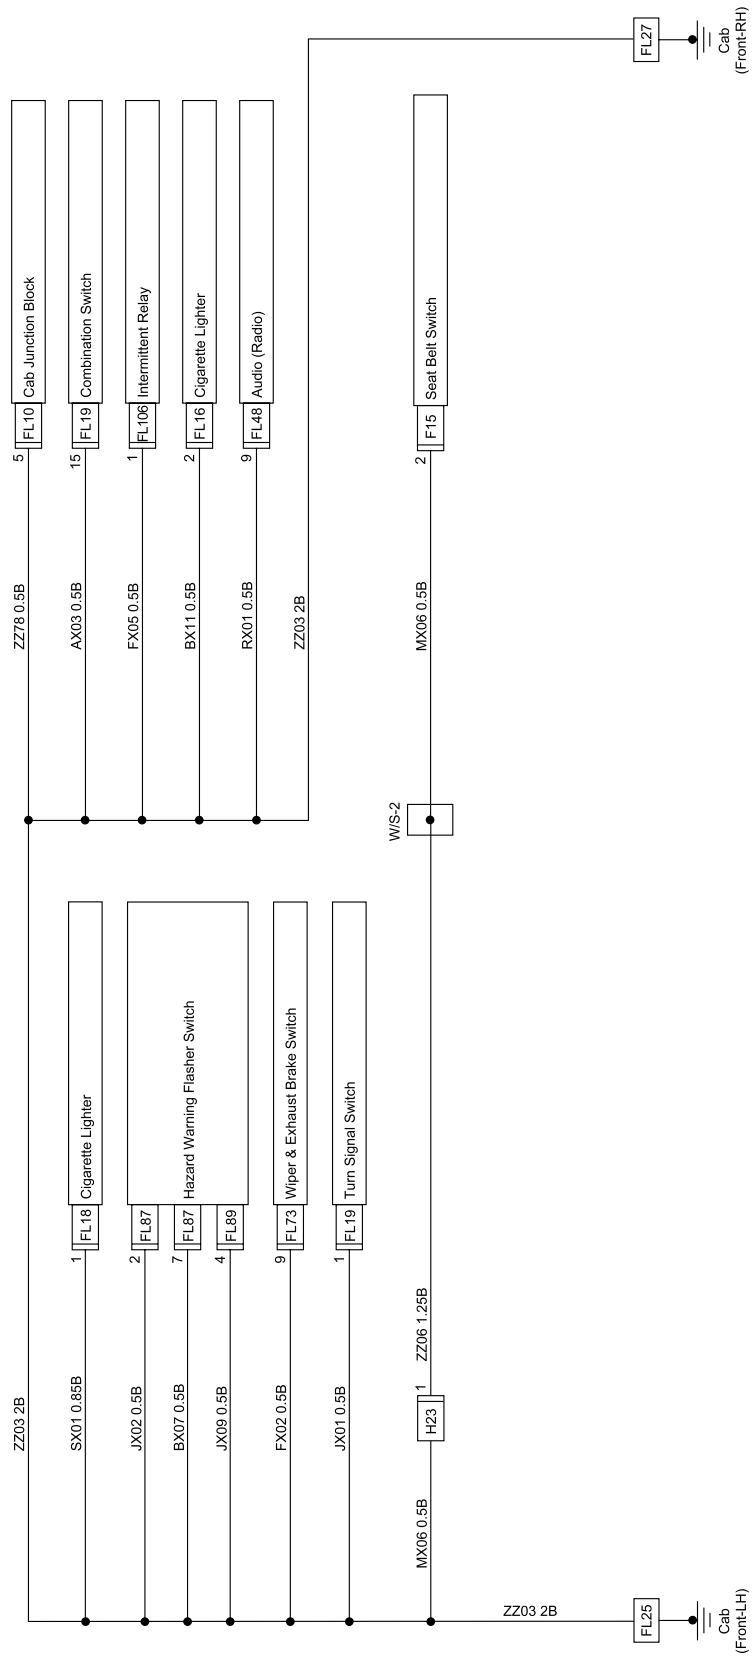




(4/5)

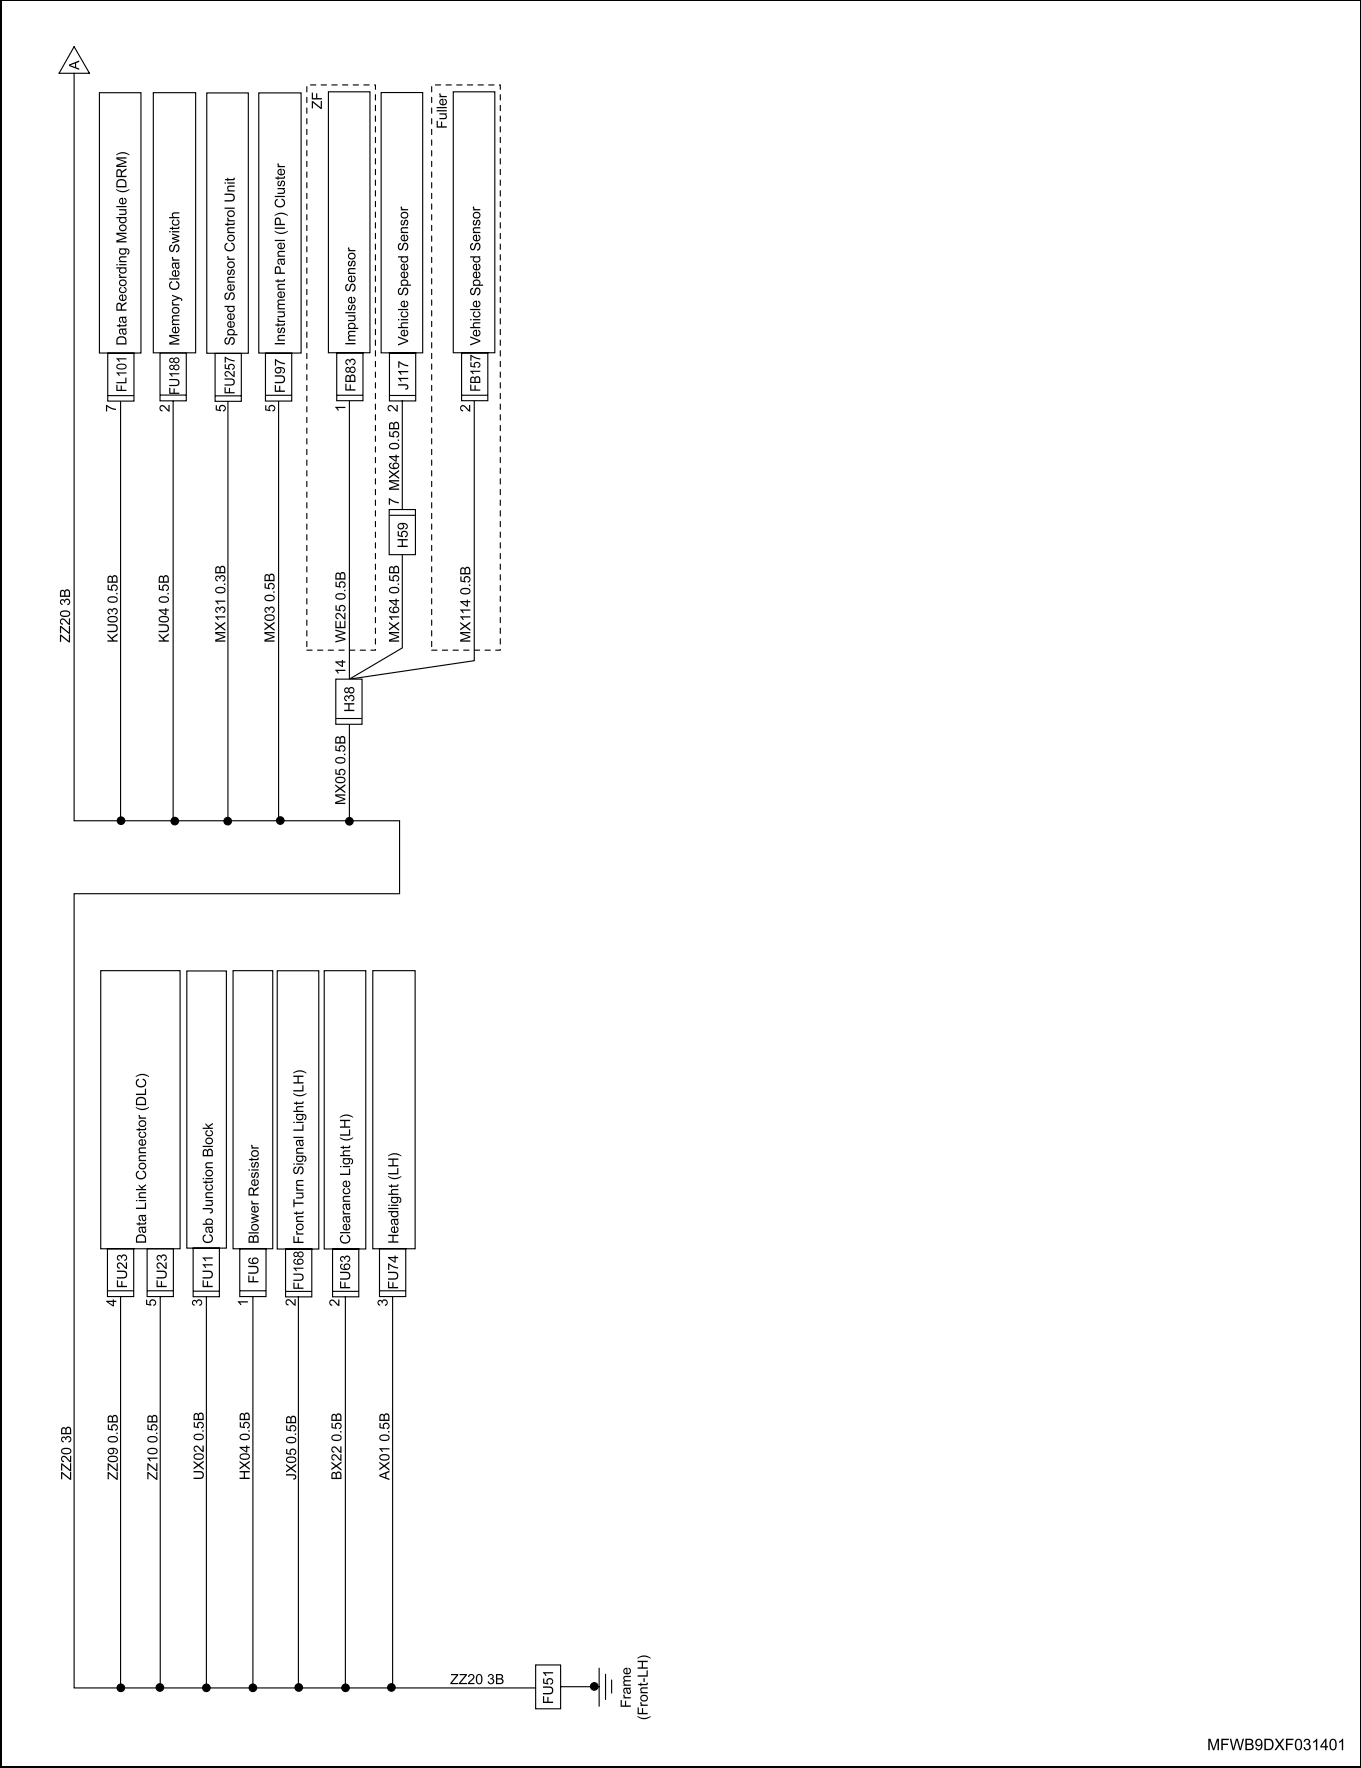

(5/5)

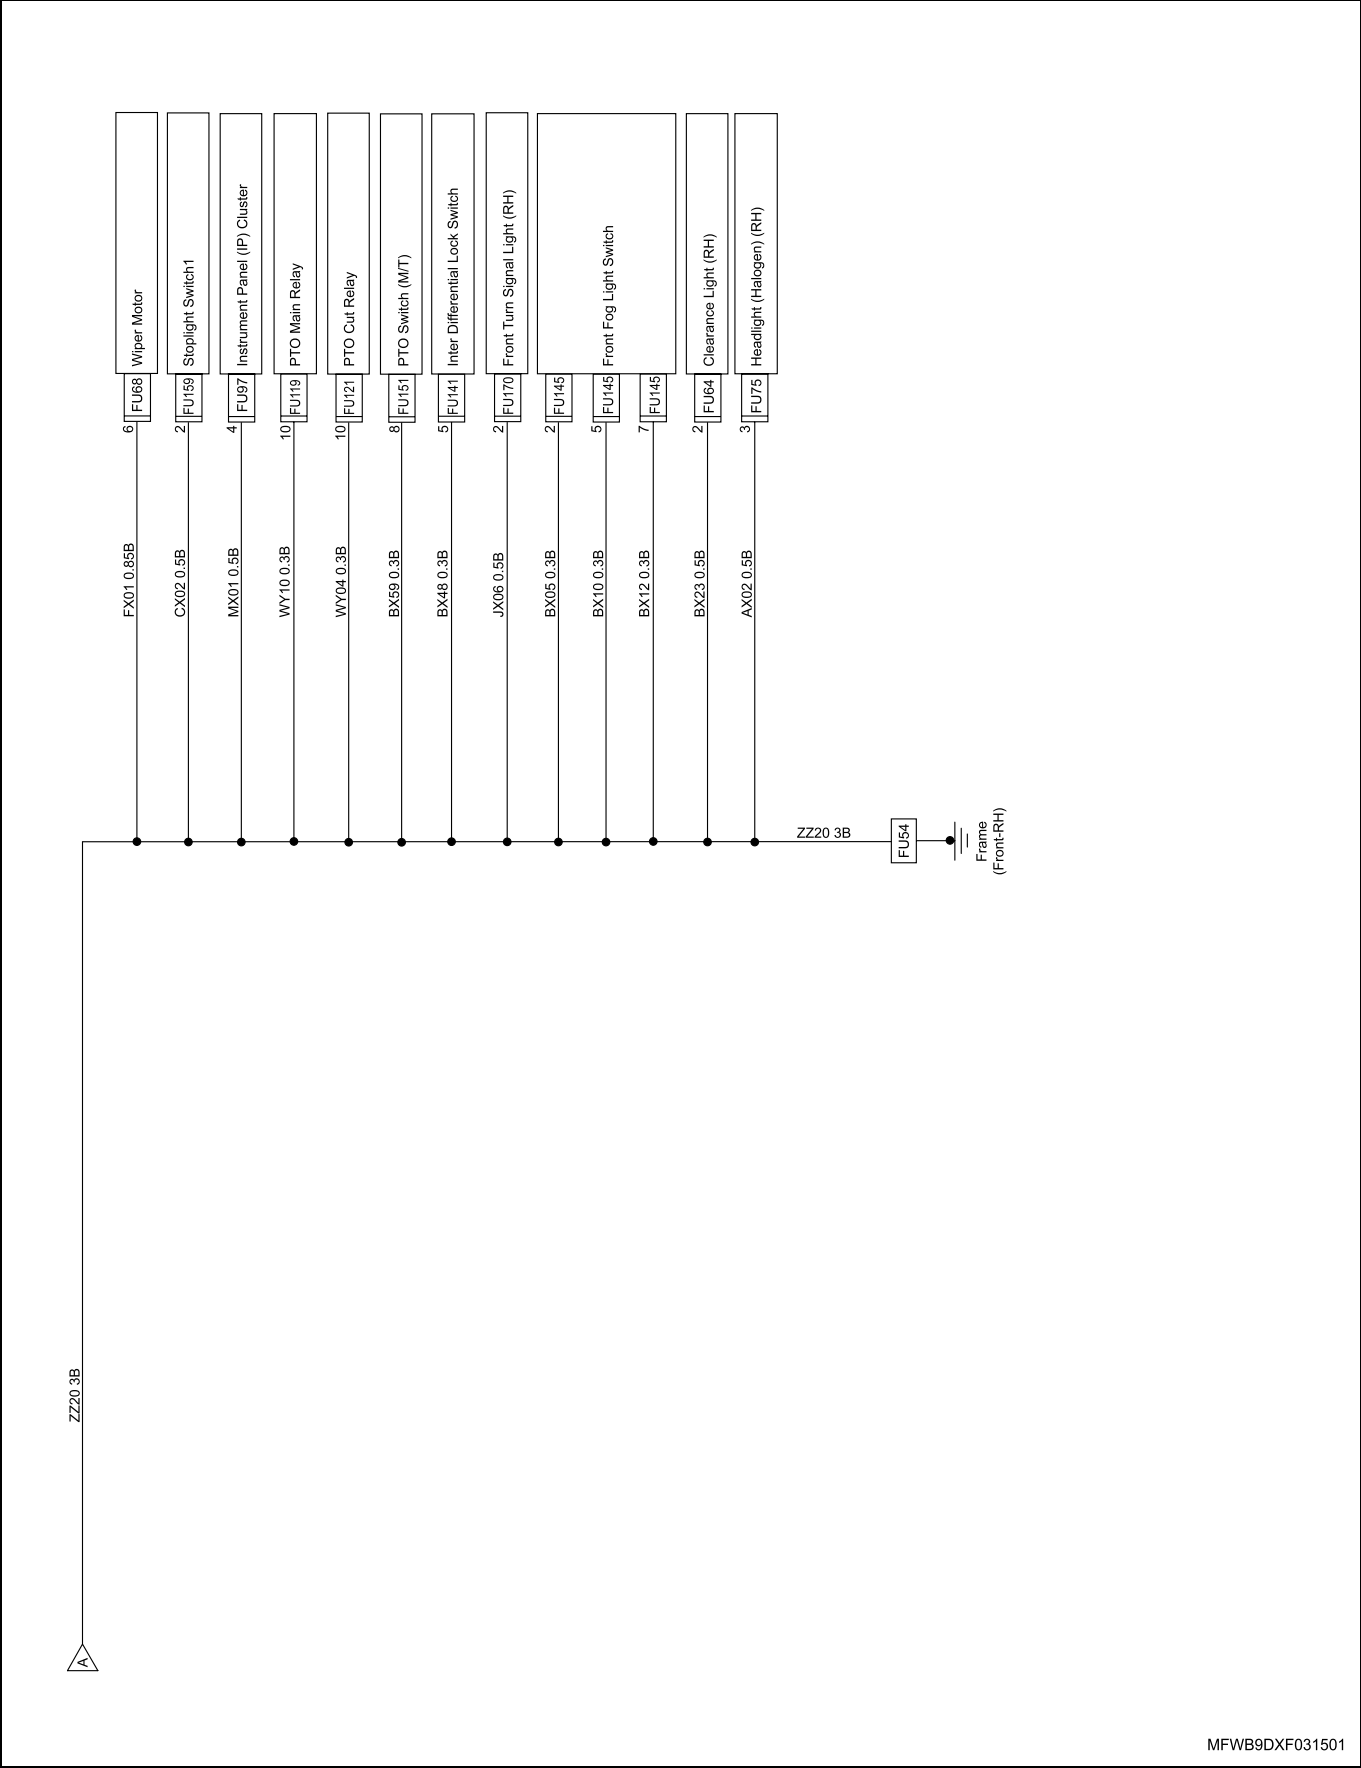


Ground Point Location

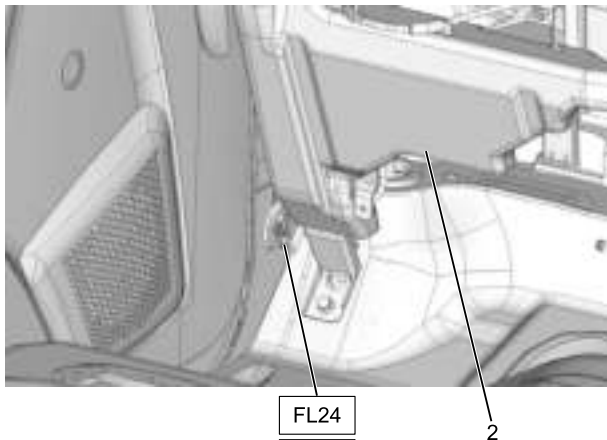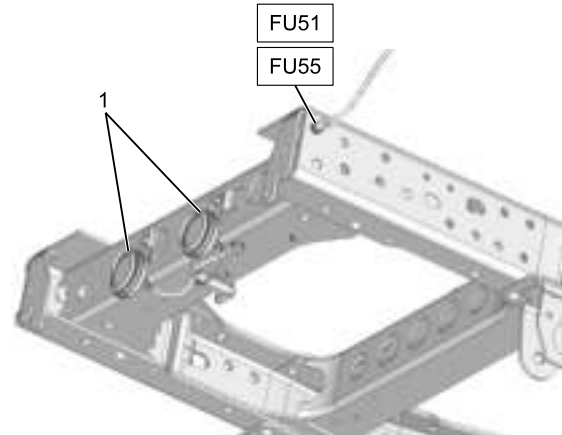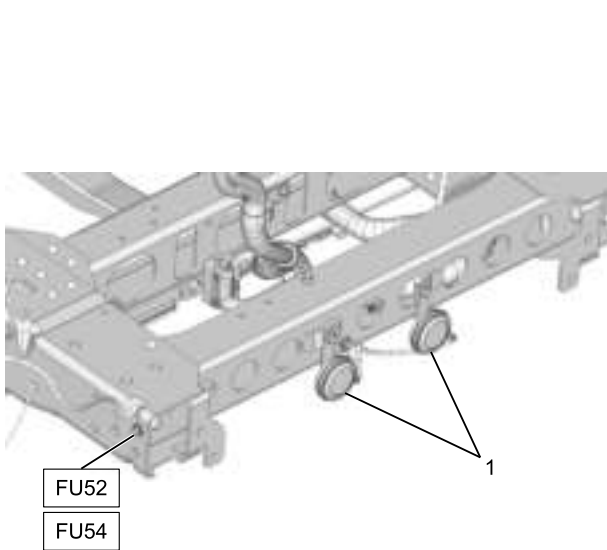

※1: FRR,FSR,FSS
※2: FTR,FTS,FVR,
FVM,FVZ,GVR

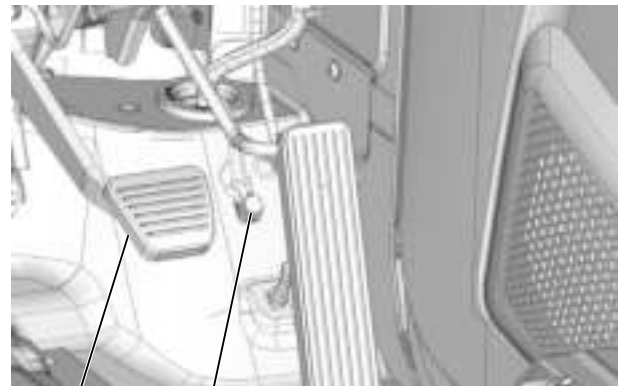FL27 ※1
FU53





※2
※1

MFW89DLF001701

Legend

- 1. Horn
- 2. Front Washer Tank

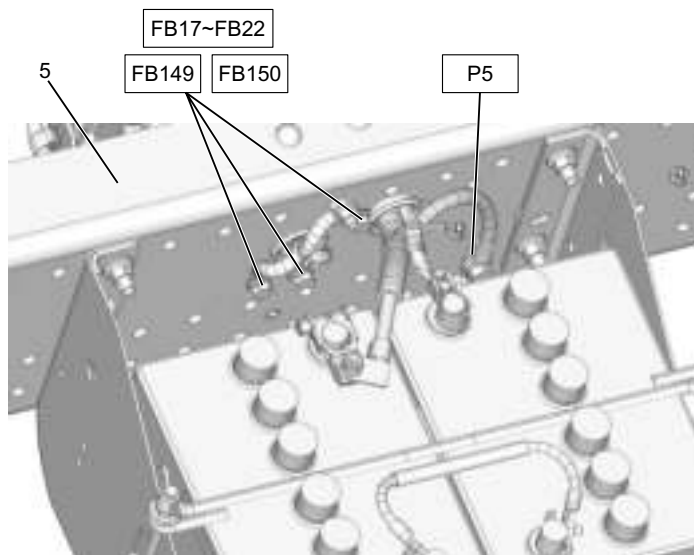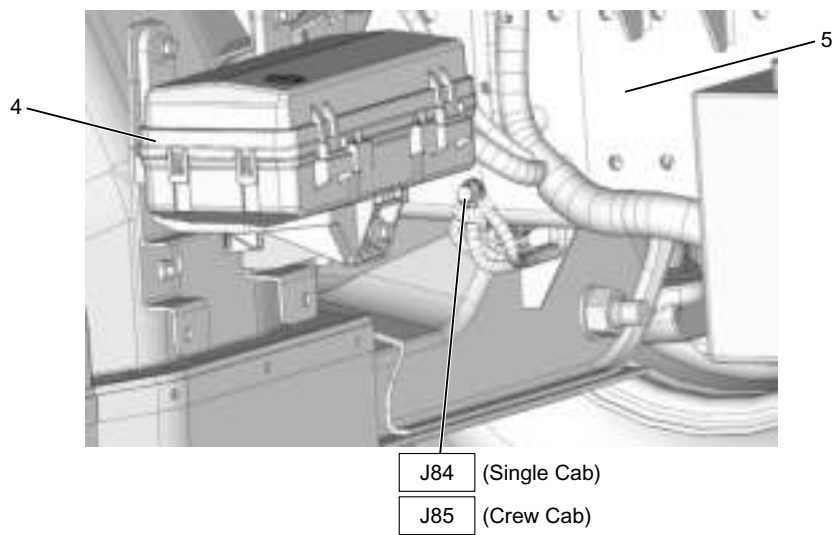- 3. Brake Pedal




MFW99DLF000501

Legend

4. Chassis Relay Box

5. Right Side Member

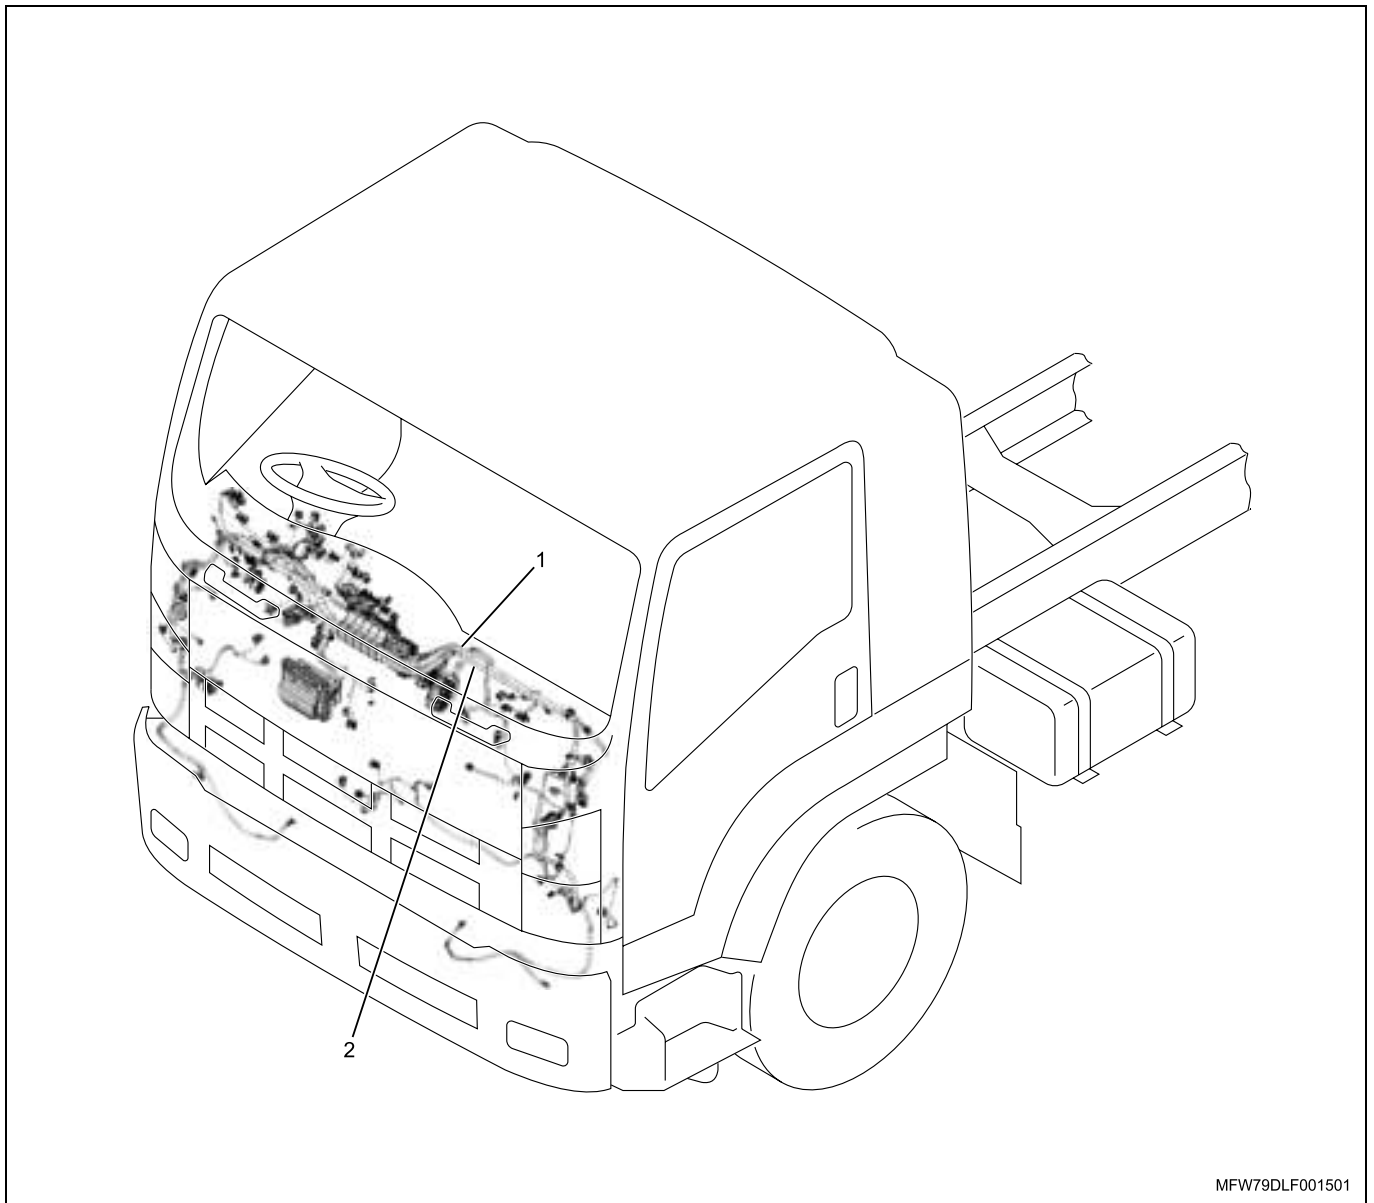
Cable Harness Routing



Legend

1. Instrument Panel (IP) Cluster Upper Harness

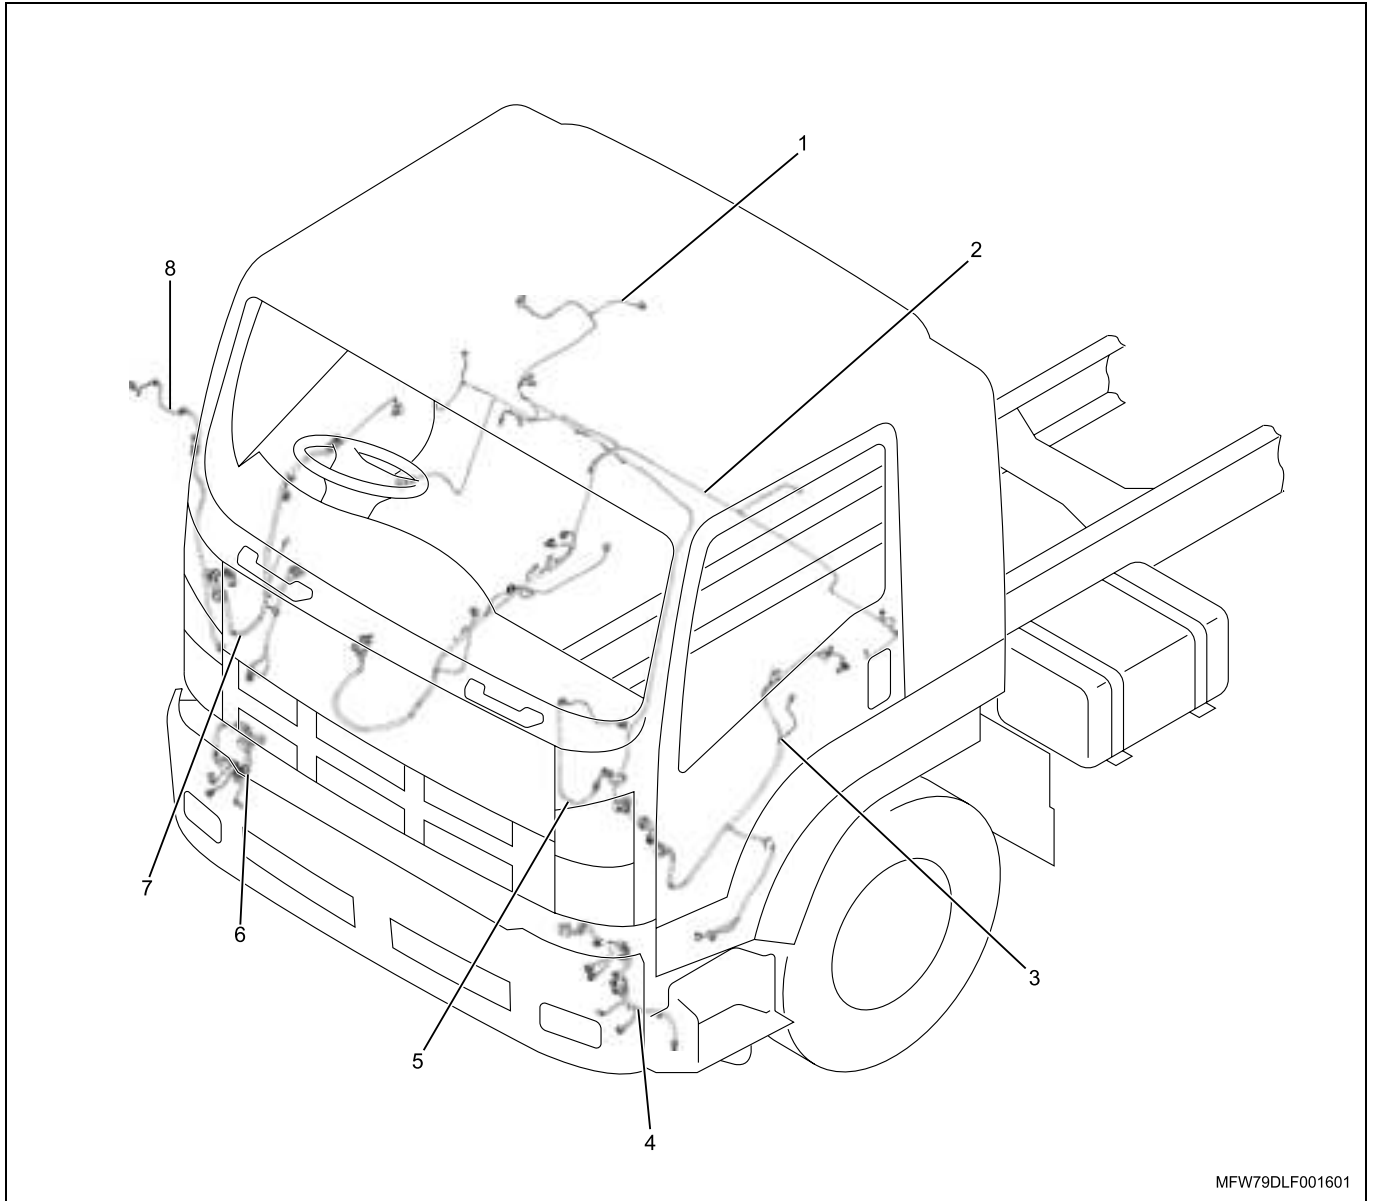
2. Instrument Panel (IP) Cluster Lower Harness



MFW79DLF001601

Legend

- | | |
|--------------------------------|---------------------------------|
| 1. Roof Harness | 5. Mirror Harness Left Side |
| 2. Floor Harness | 6. Headlight Harness Right Side |
| 3. Door Harness Left Side | 7. Door Harness Right Side |
| 4. Headlight Harness Left Side | 8. Mirror Harness Right Side |

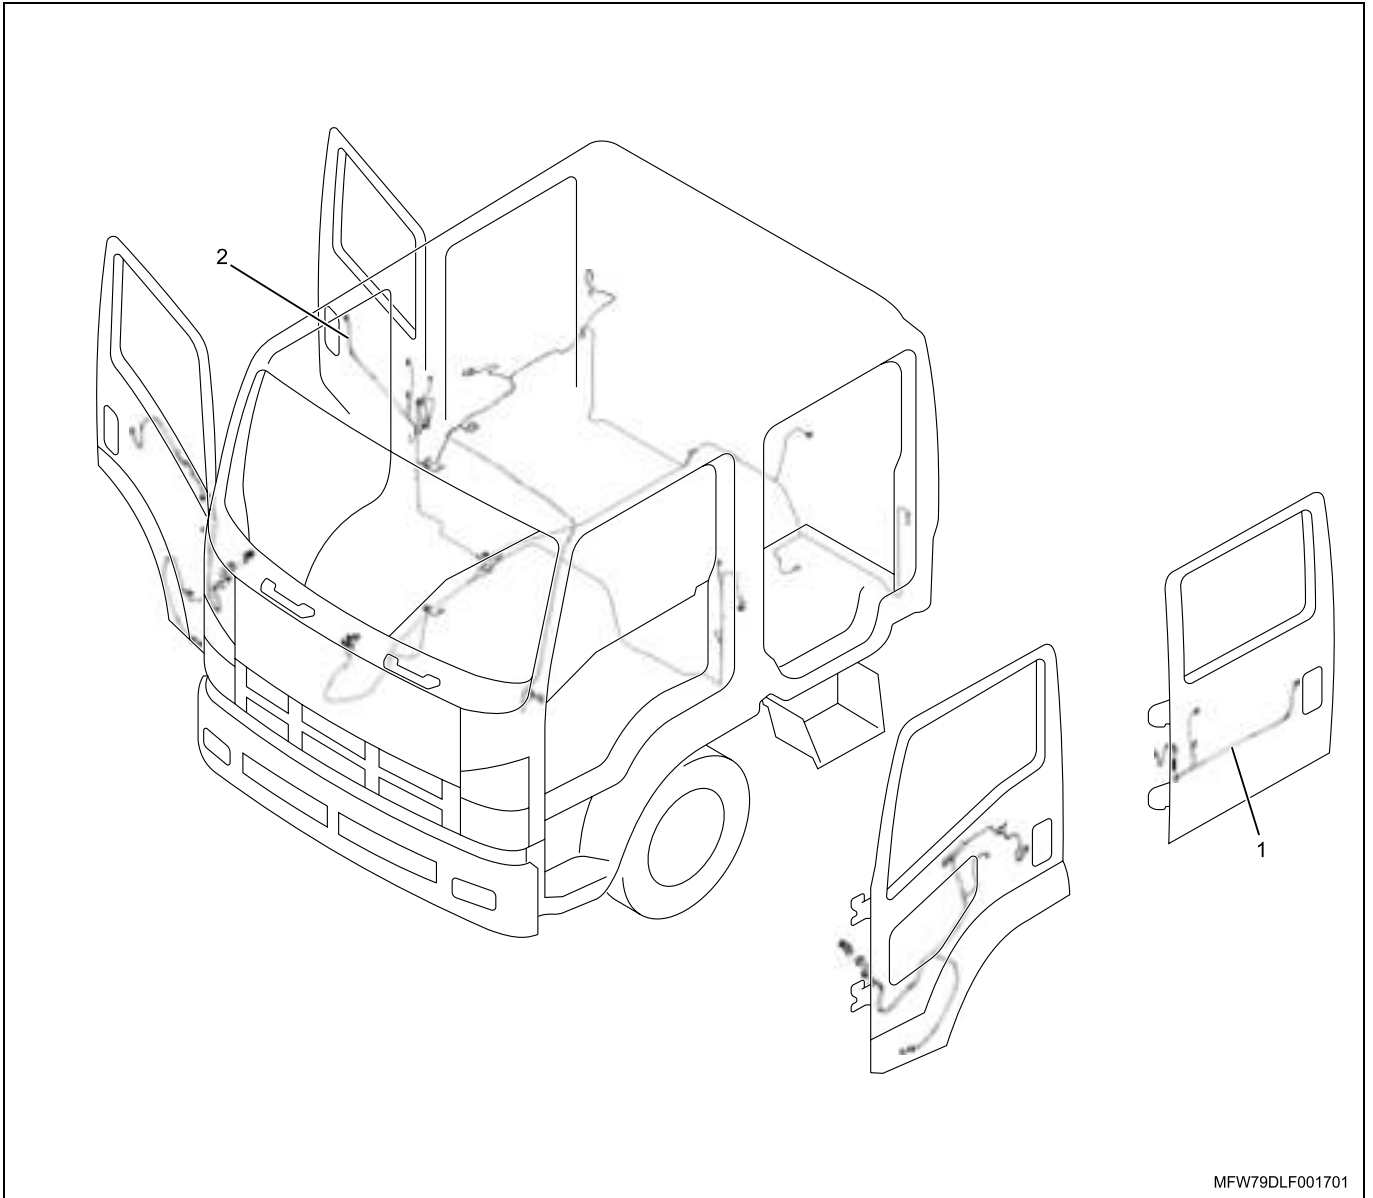

MF79D9LF001701

Legend

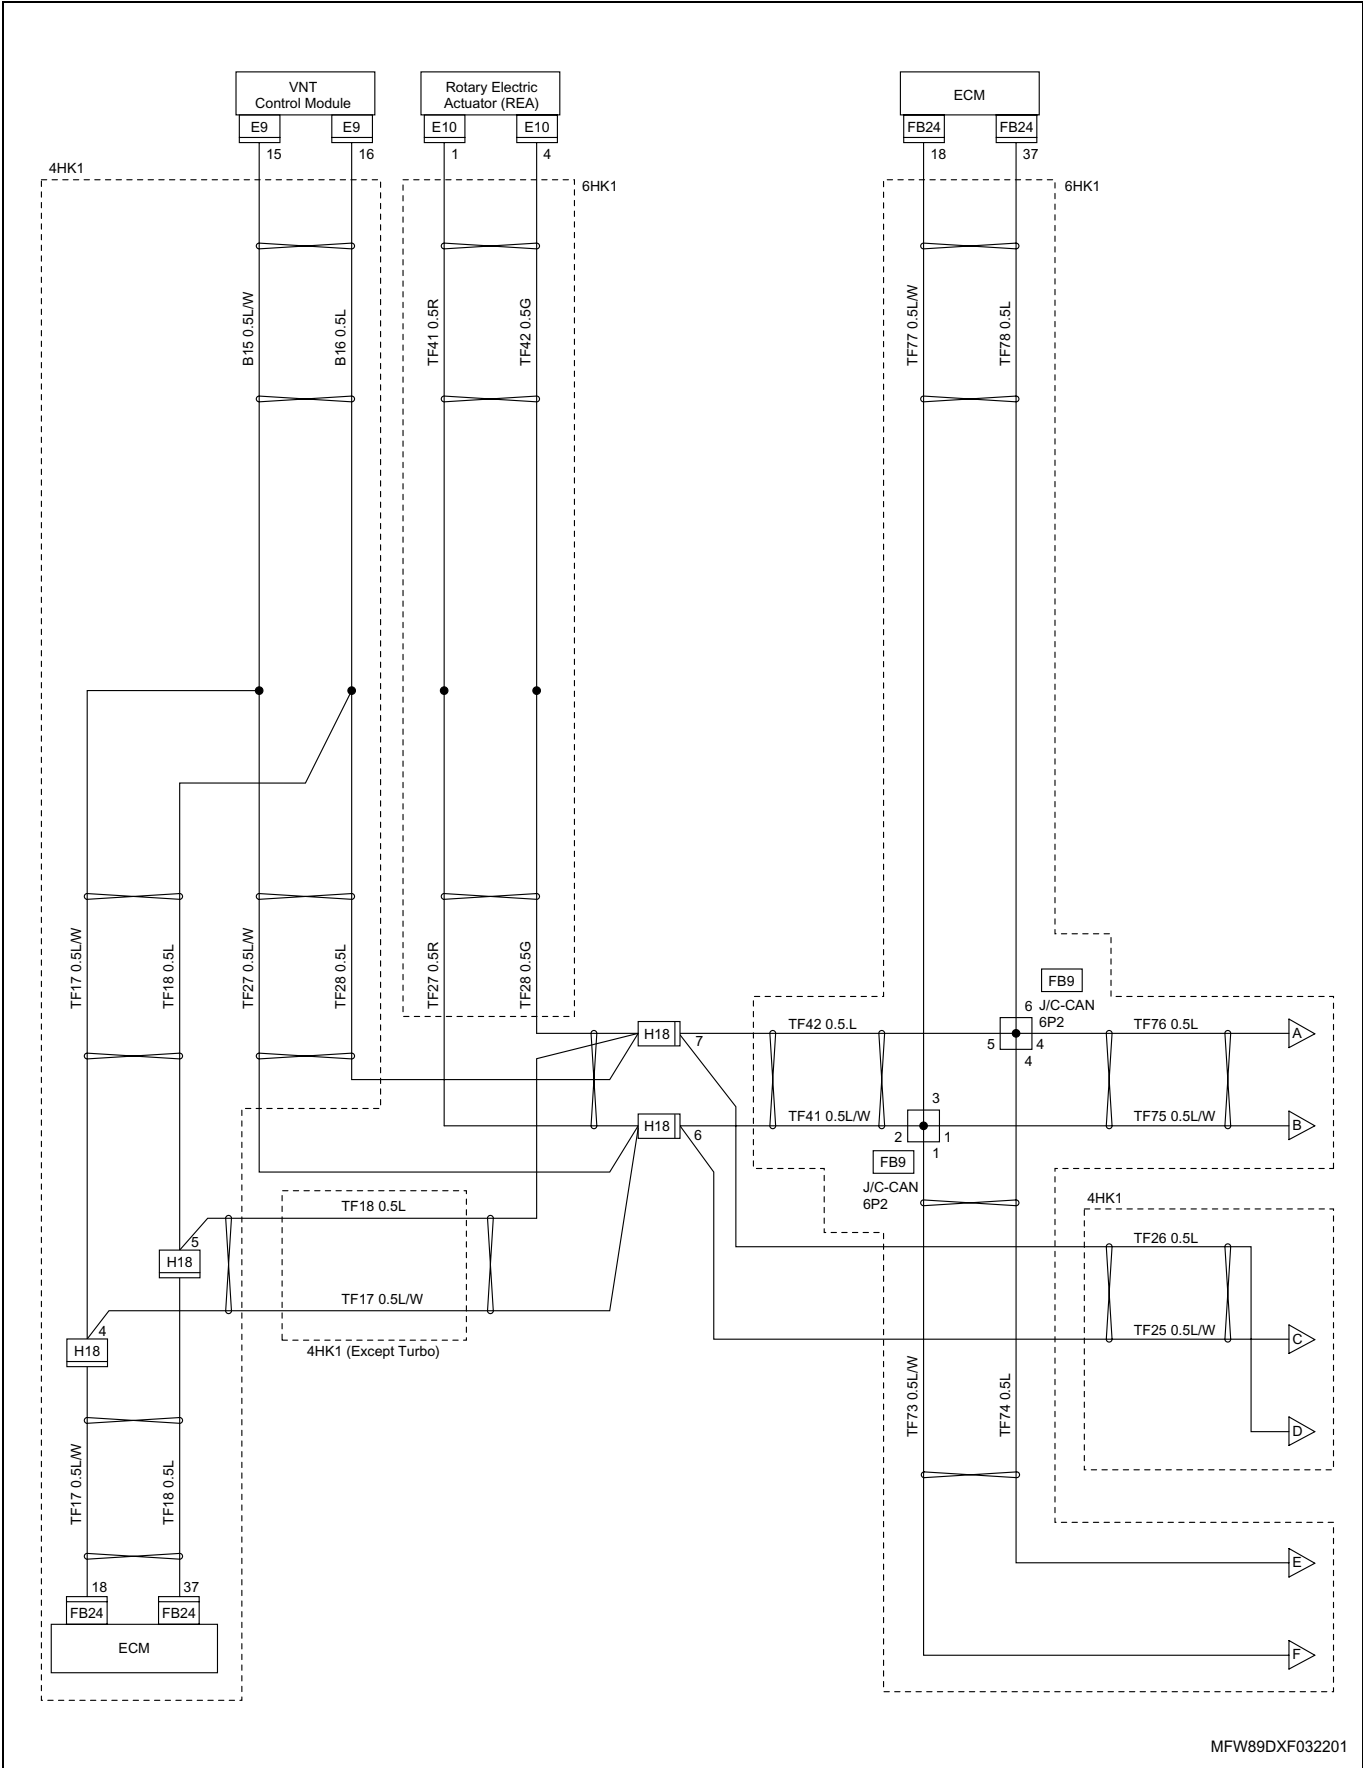
1. Door Harness Rear Left Side (Crew Cab)

2. Door Harness Rear Right Side (Crew Cab)


Controller Area Network (CAN)

Circuit Diagram


Except Indonesia (1/2)




Except Indonesia (2/2)

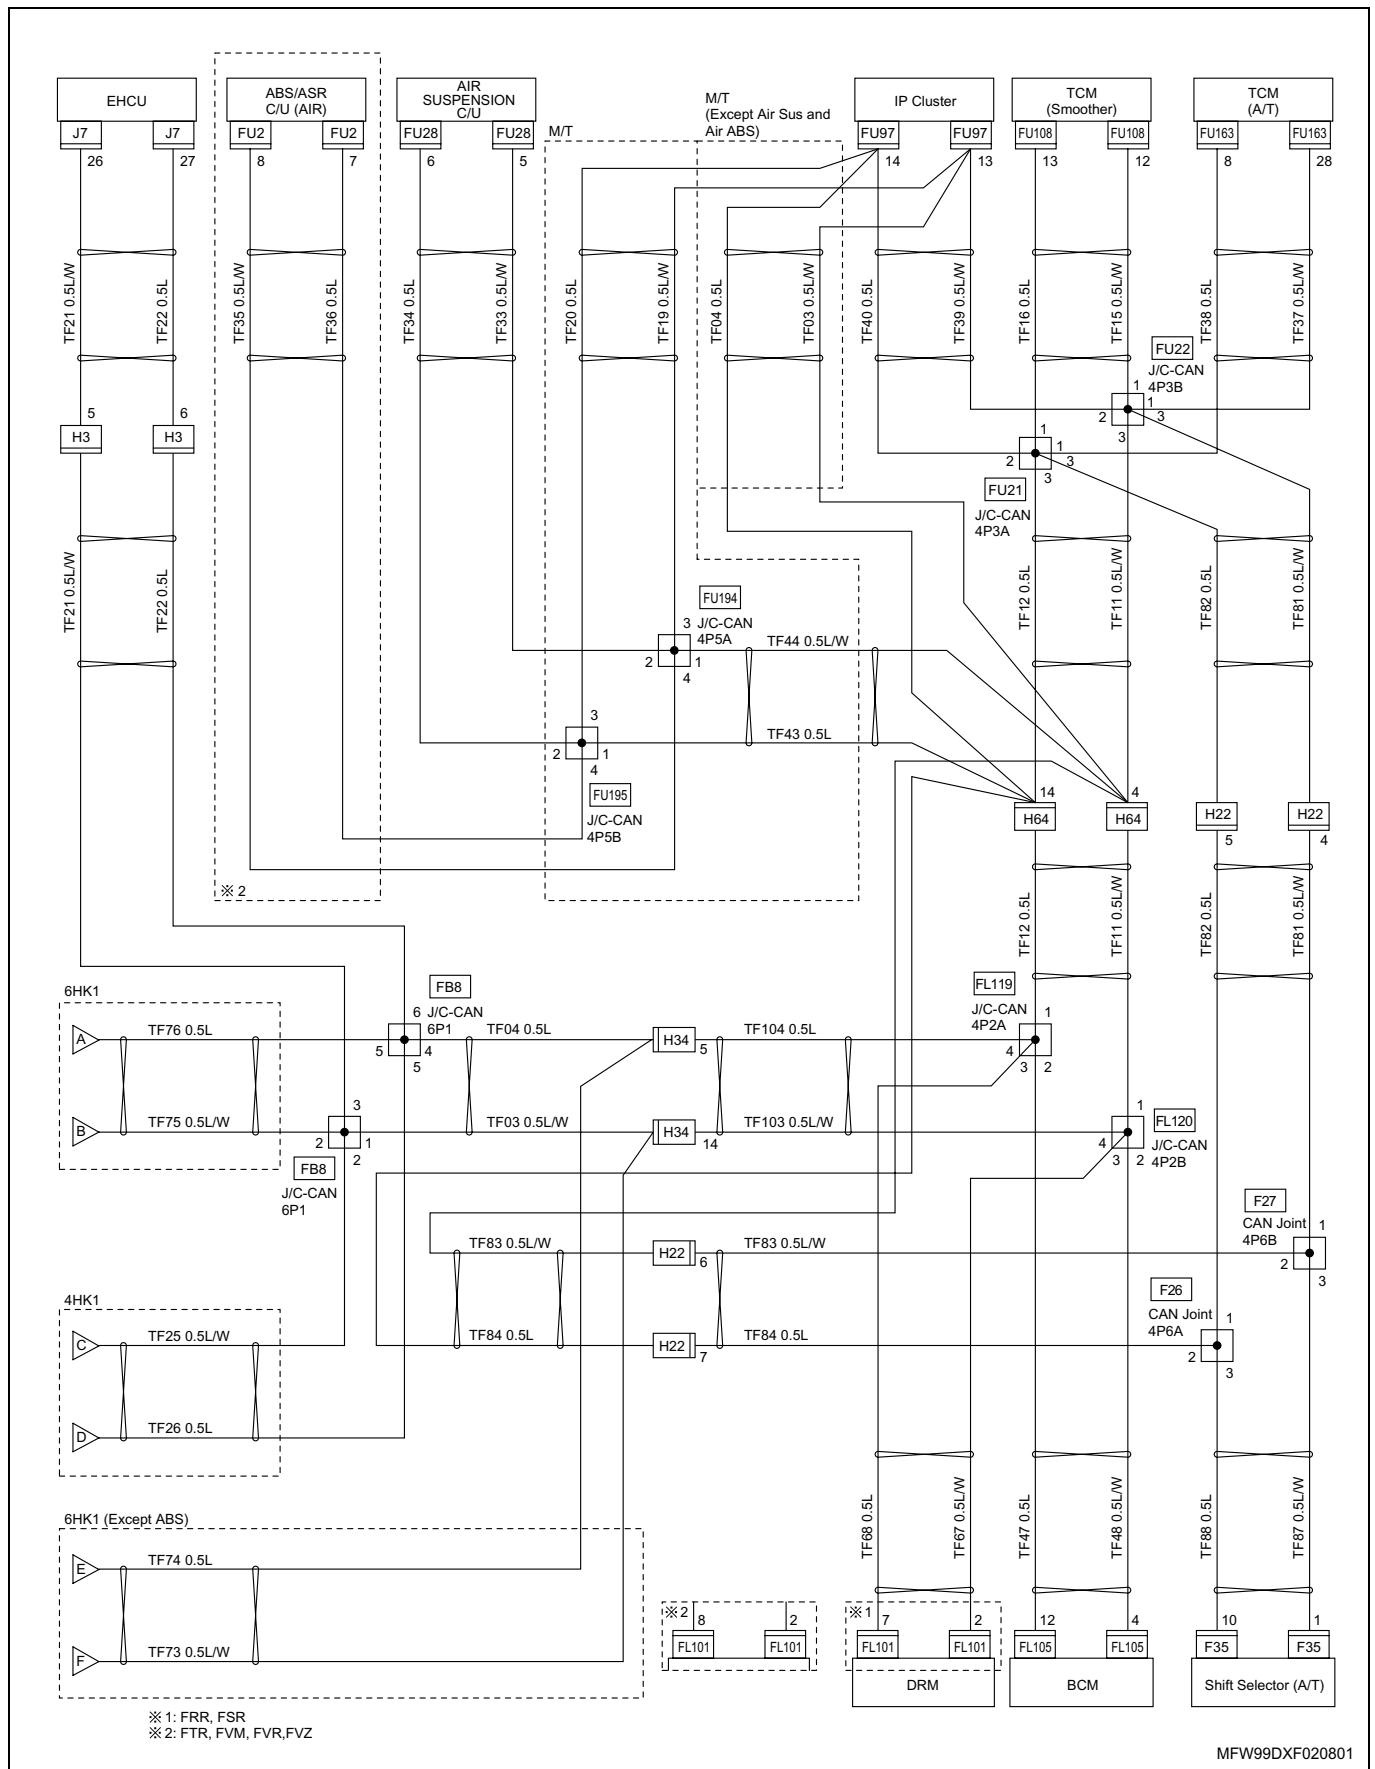

Except Indonesia Euro2

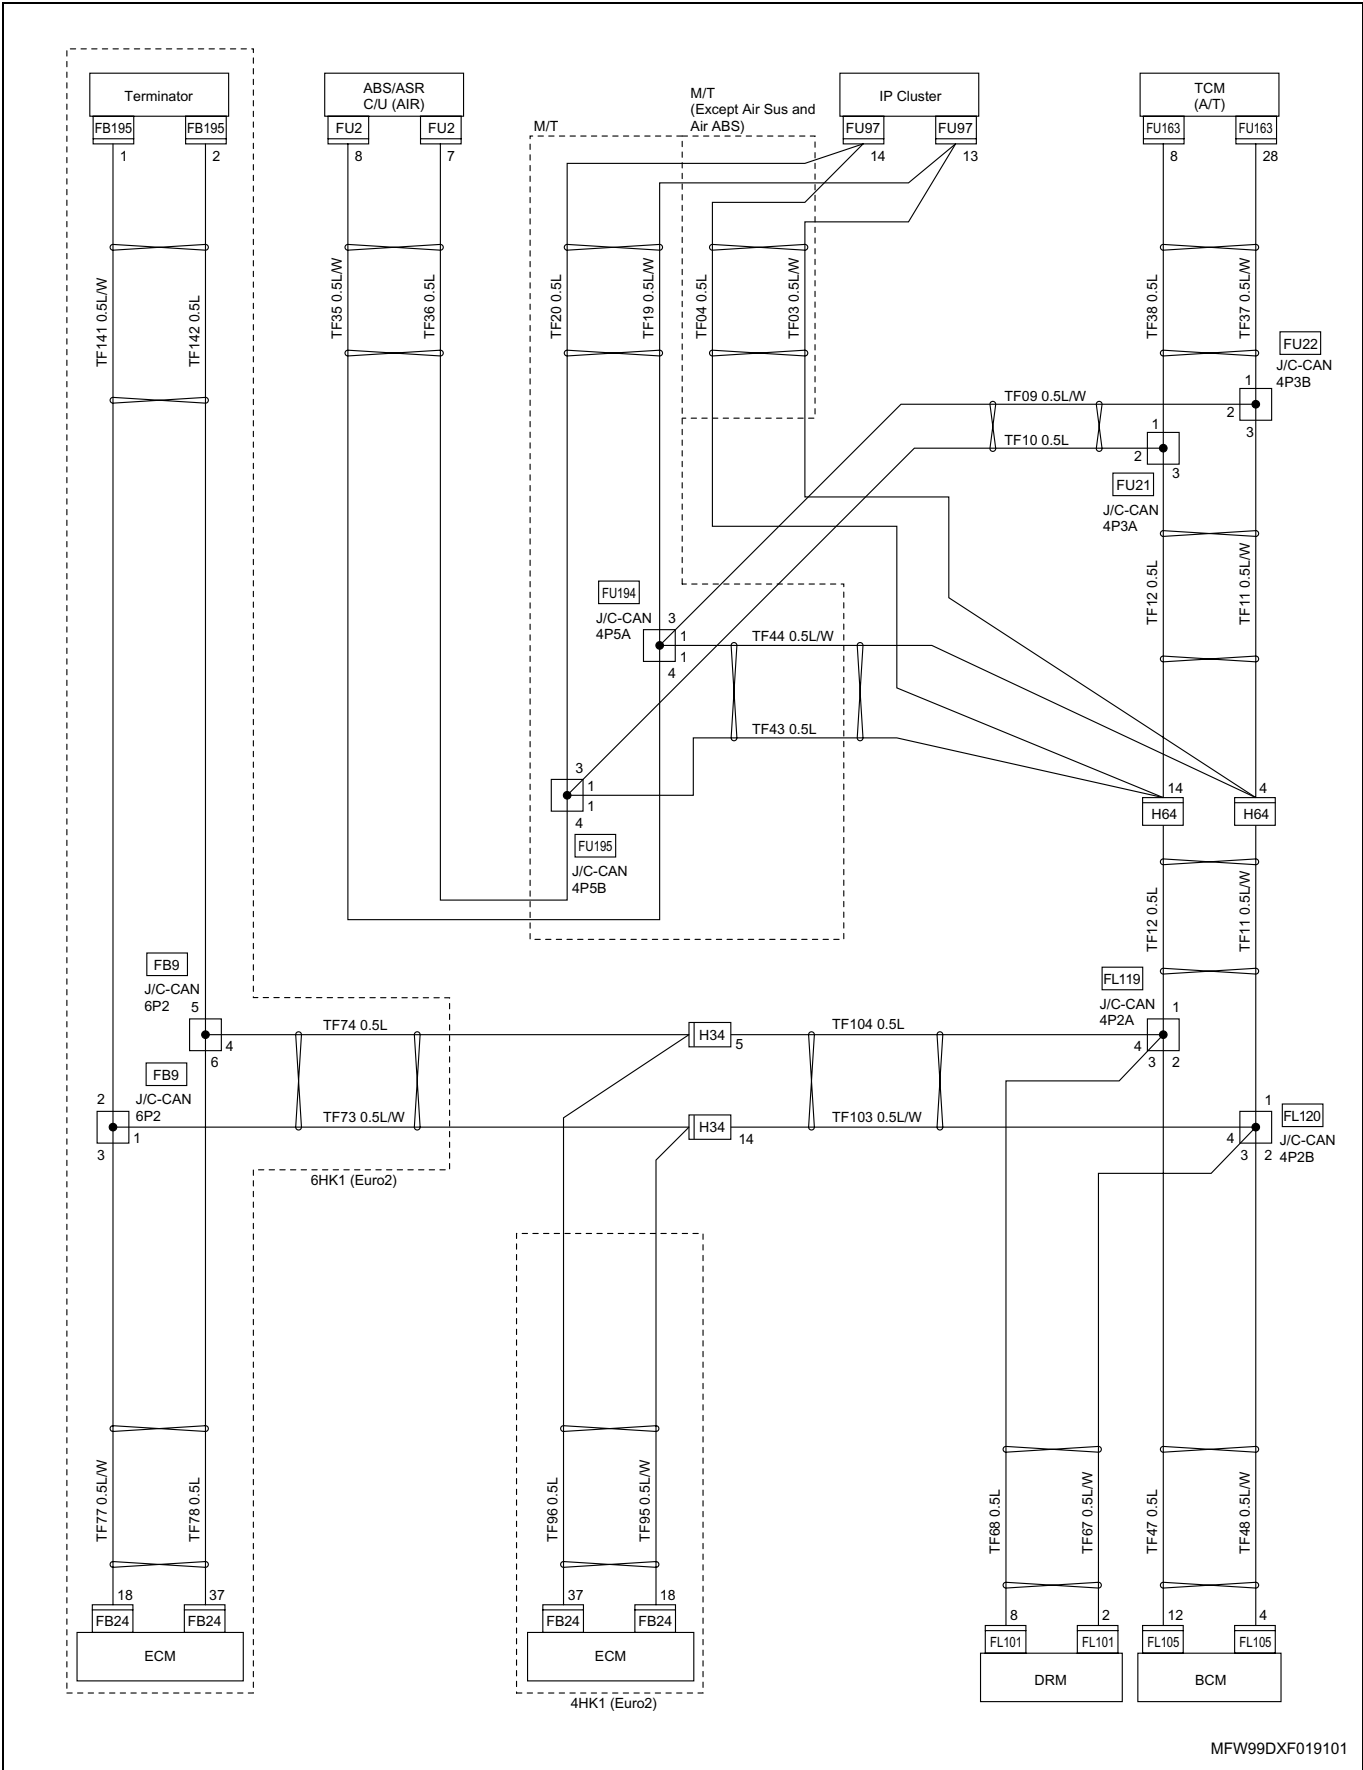


Indonesia

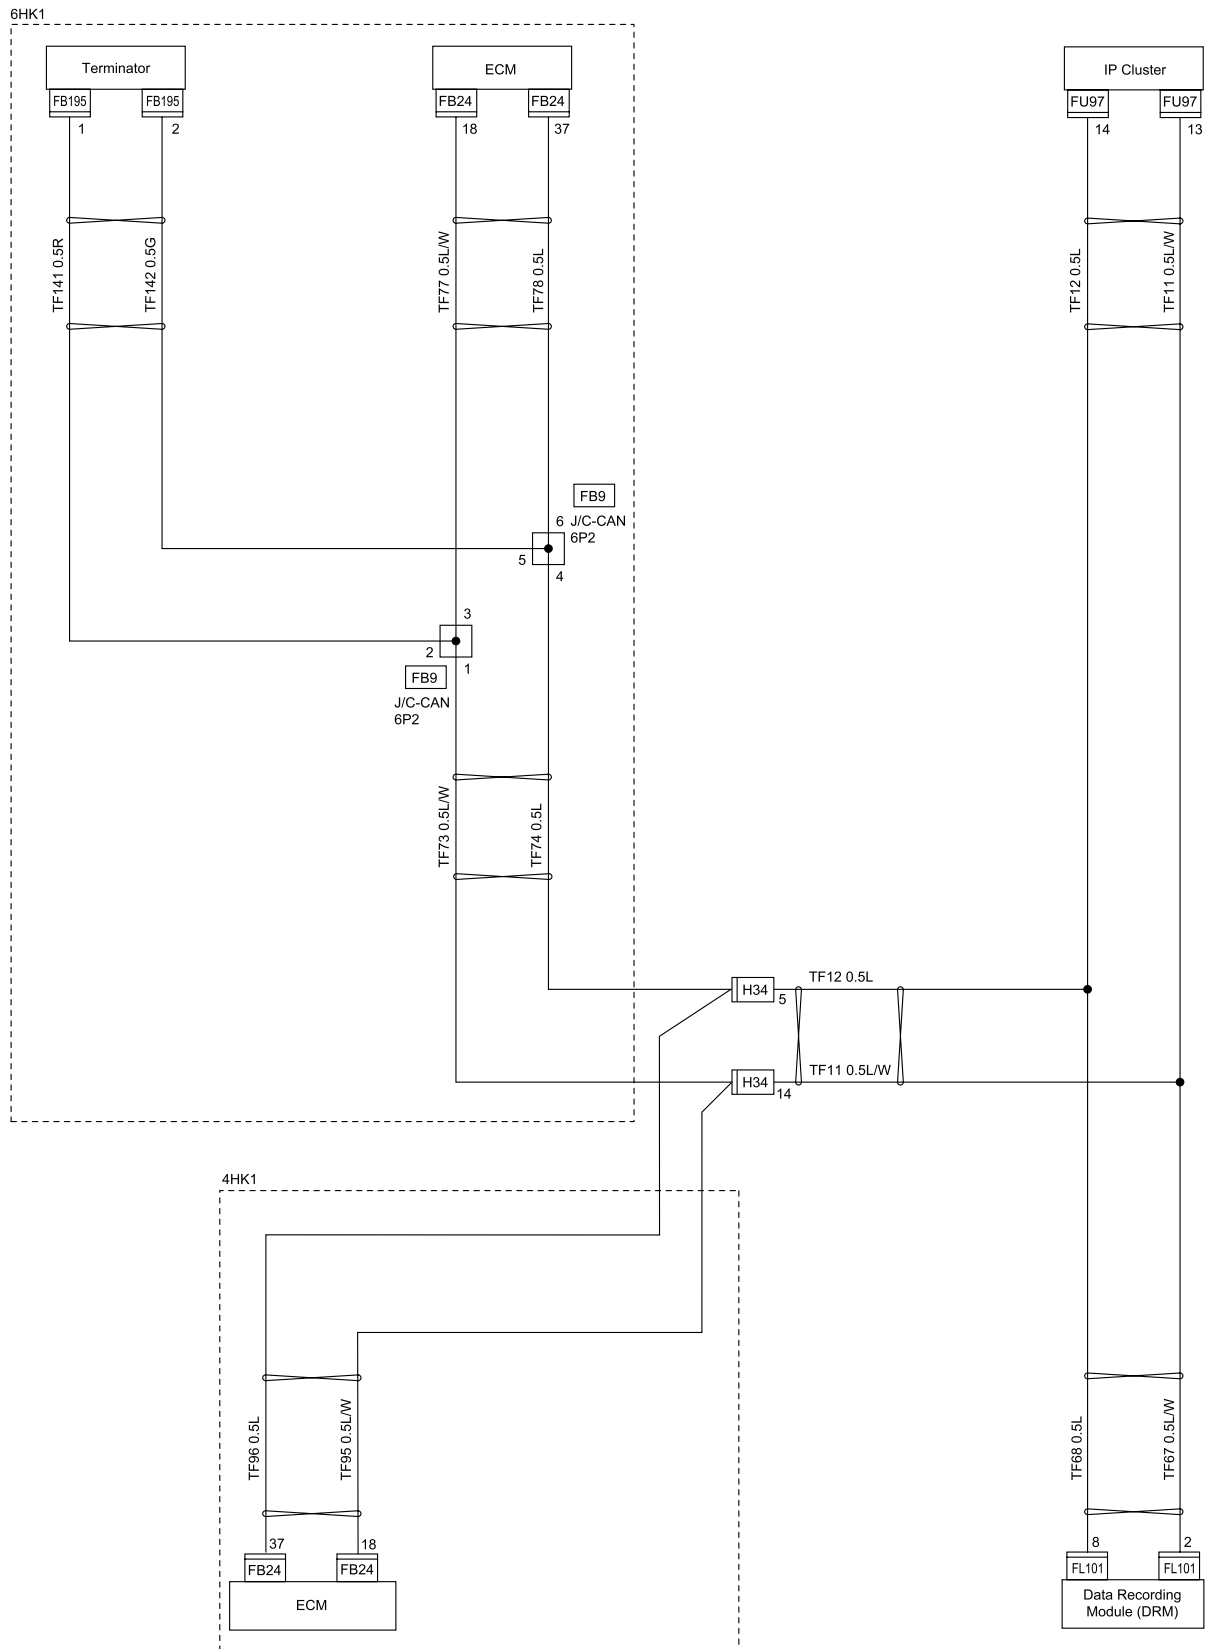


Starter and Charging

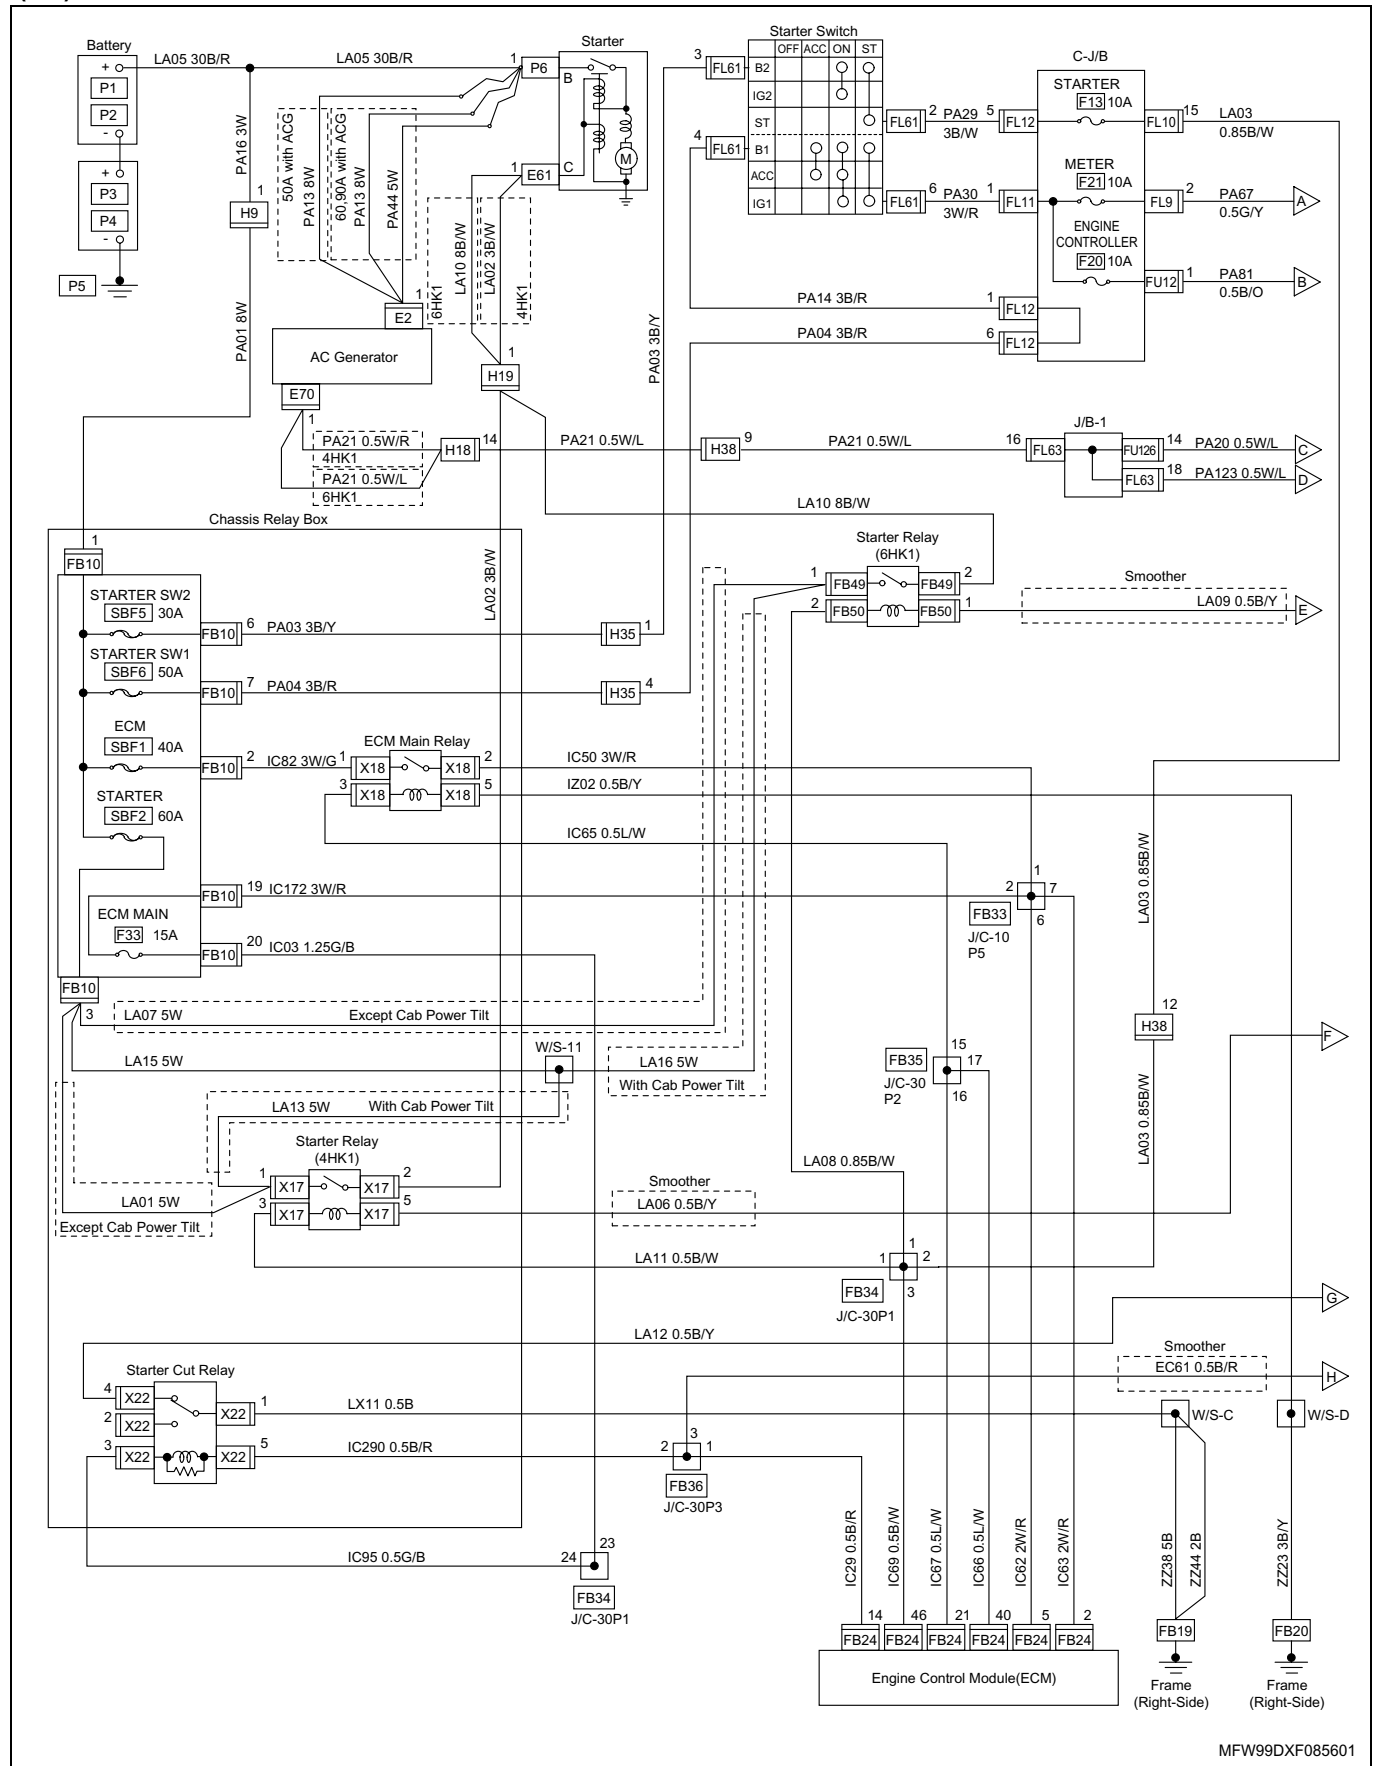Circuit Diagram Except Indonesia (1/2)




(2/2)

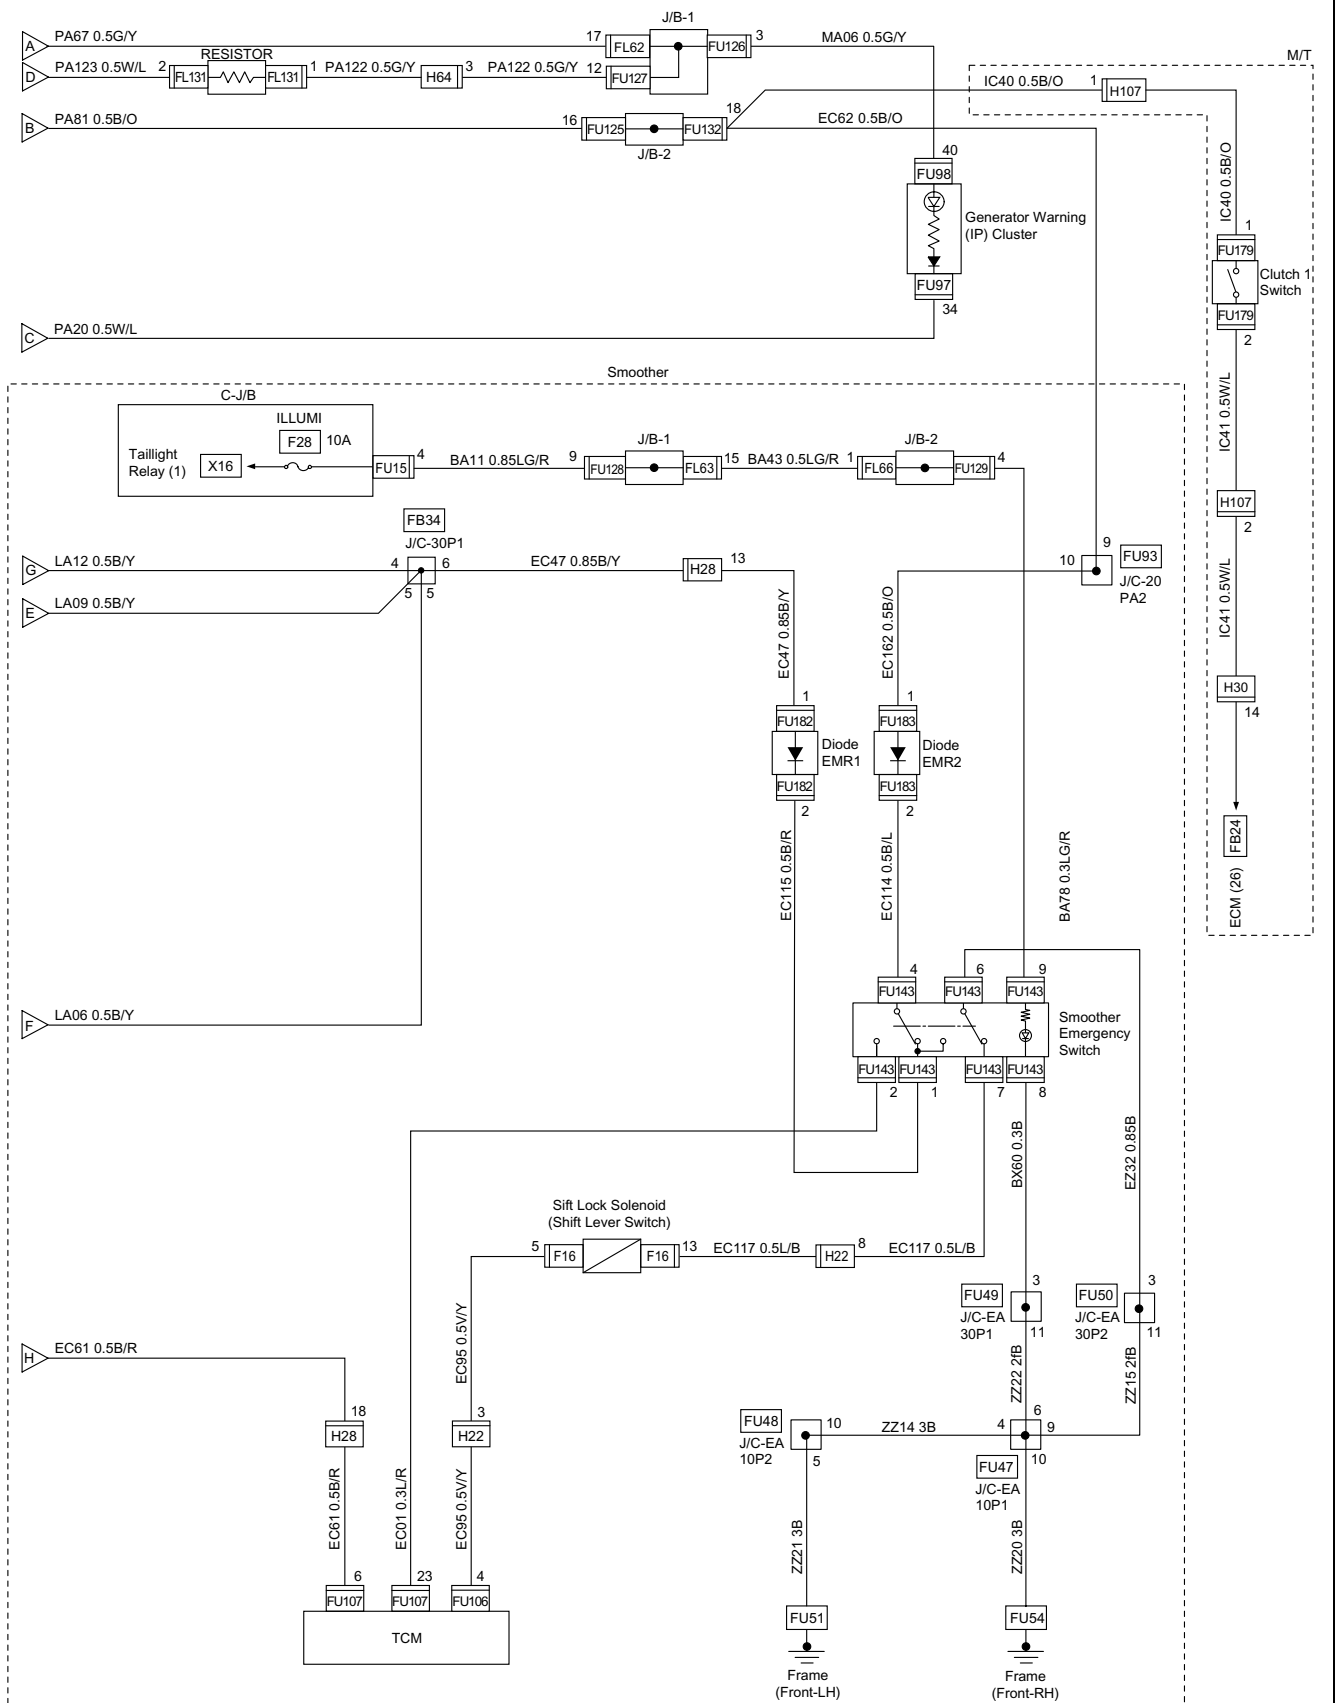


MF09DXF020601

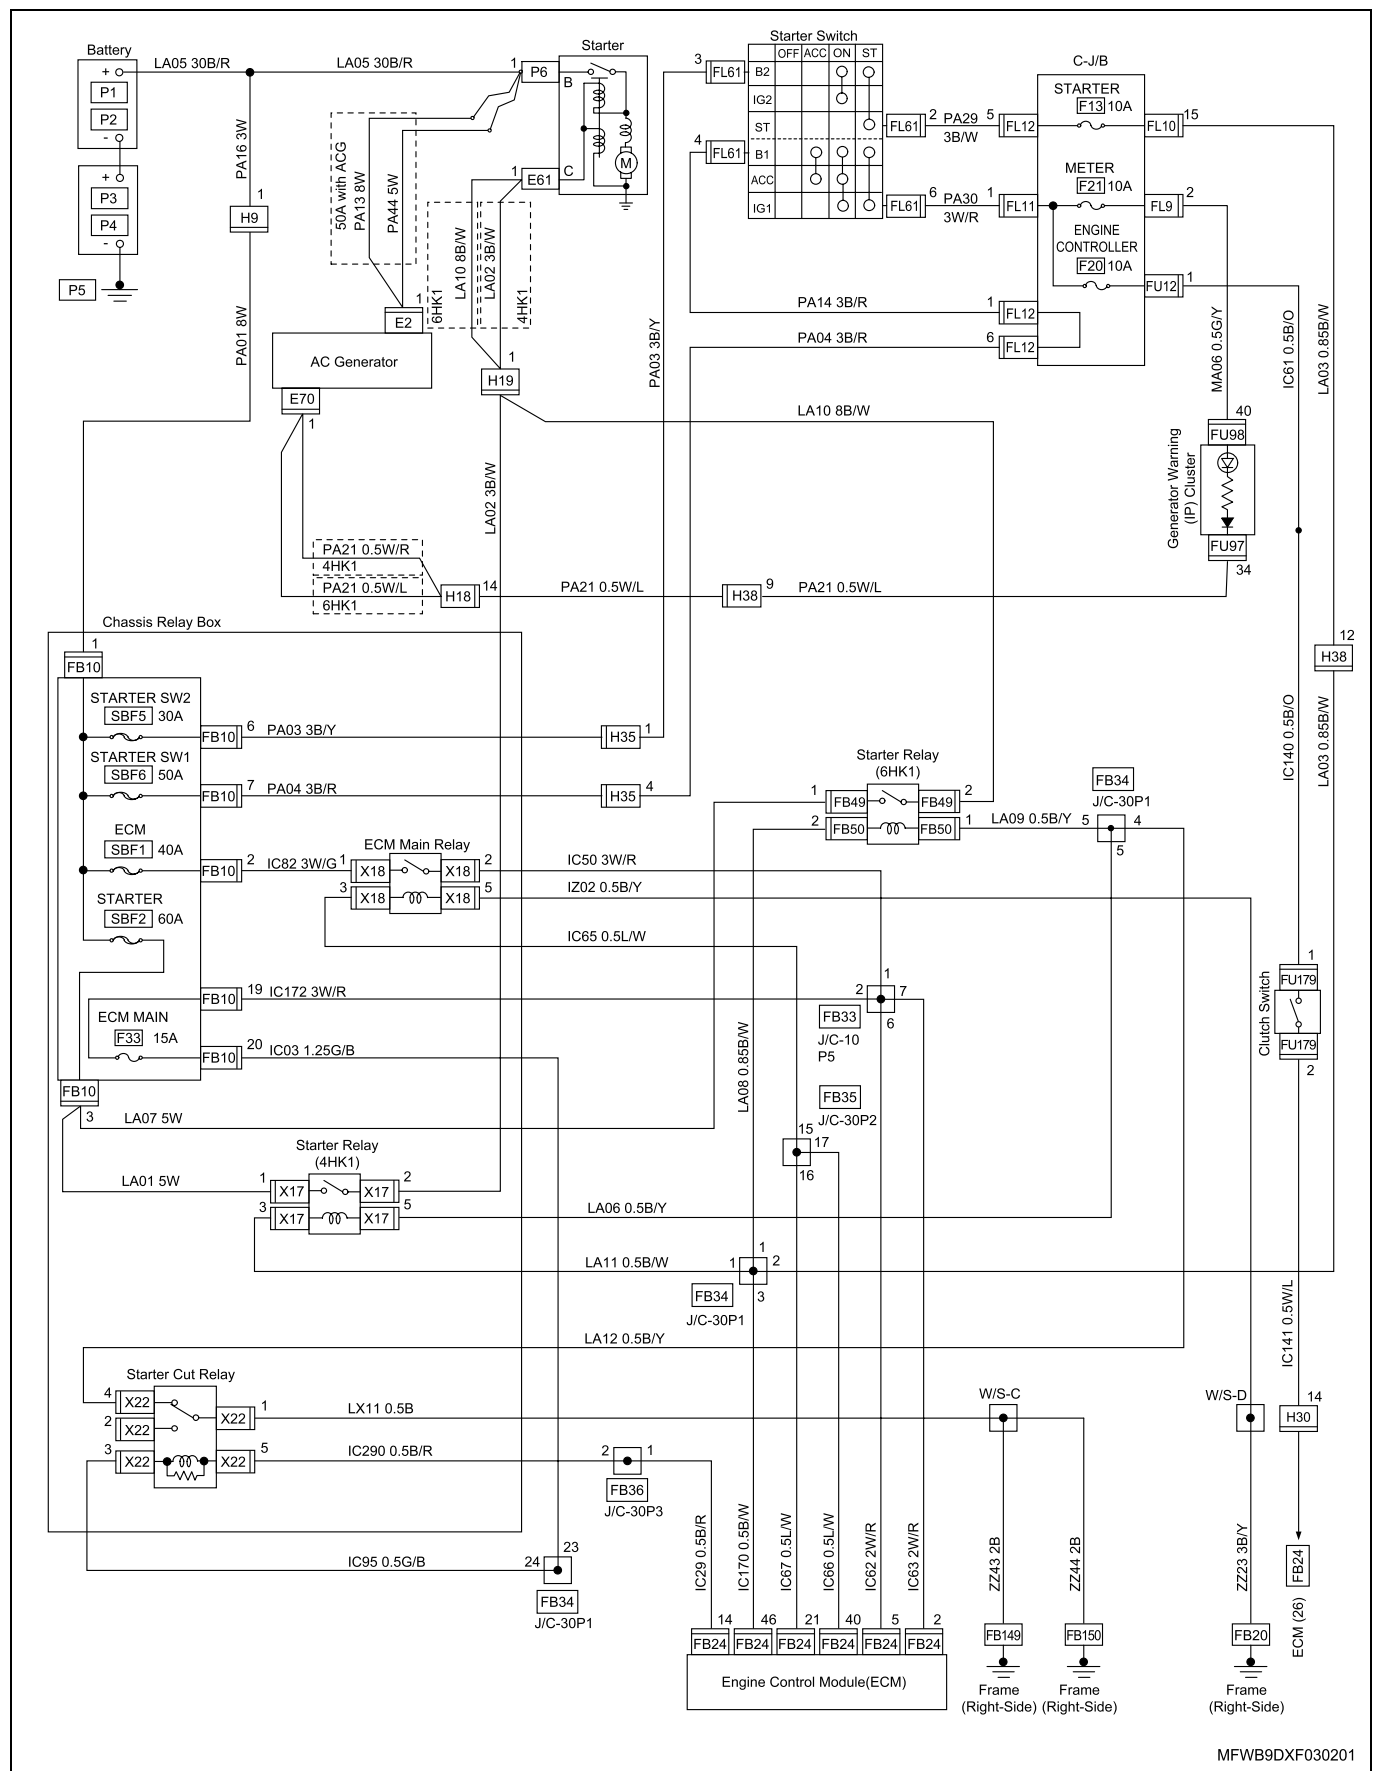
Indonesia




Instrument Panel (IP) Cluster and Warning

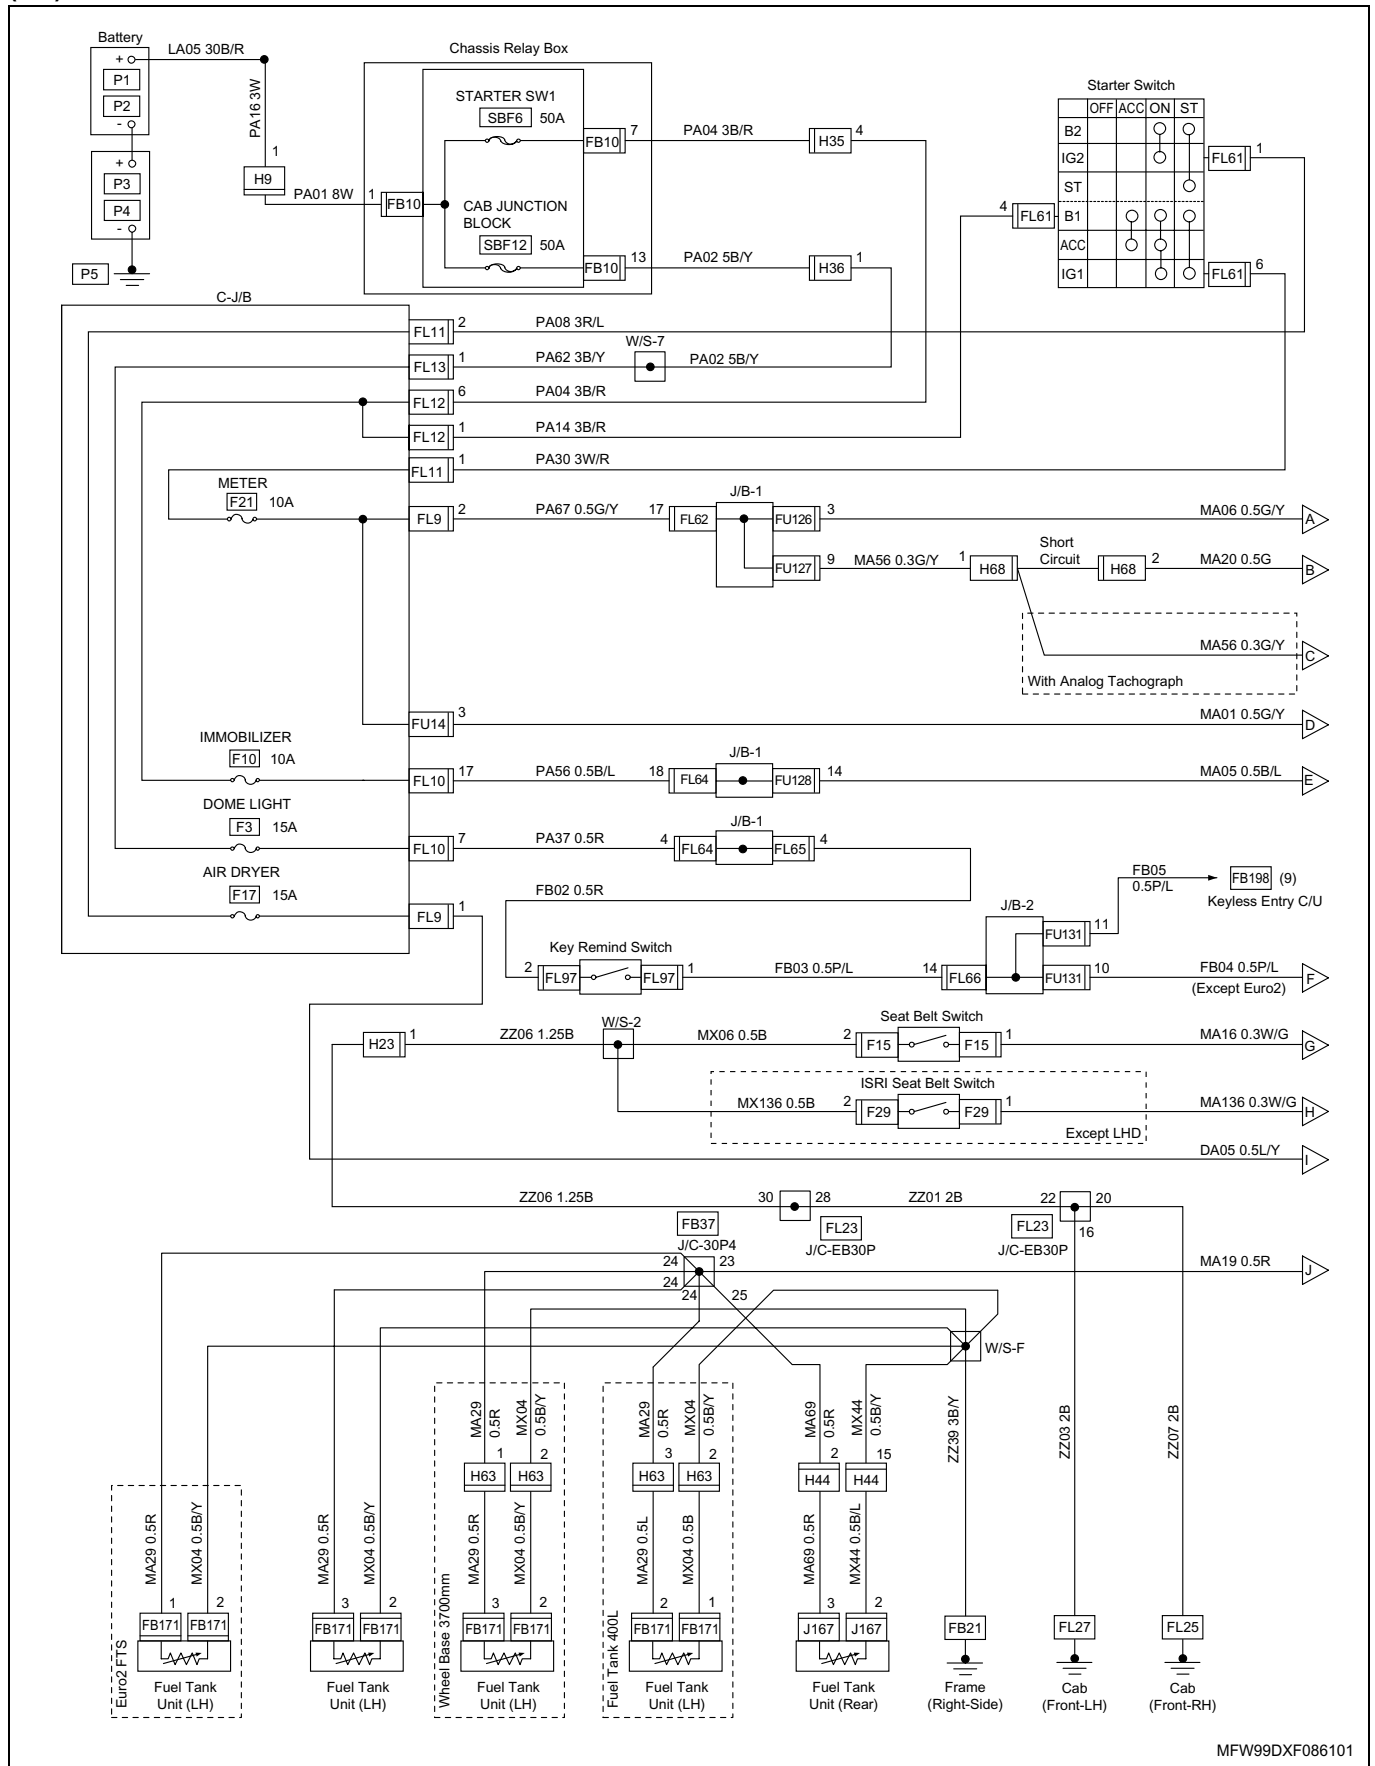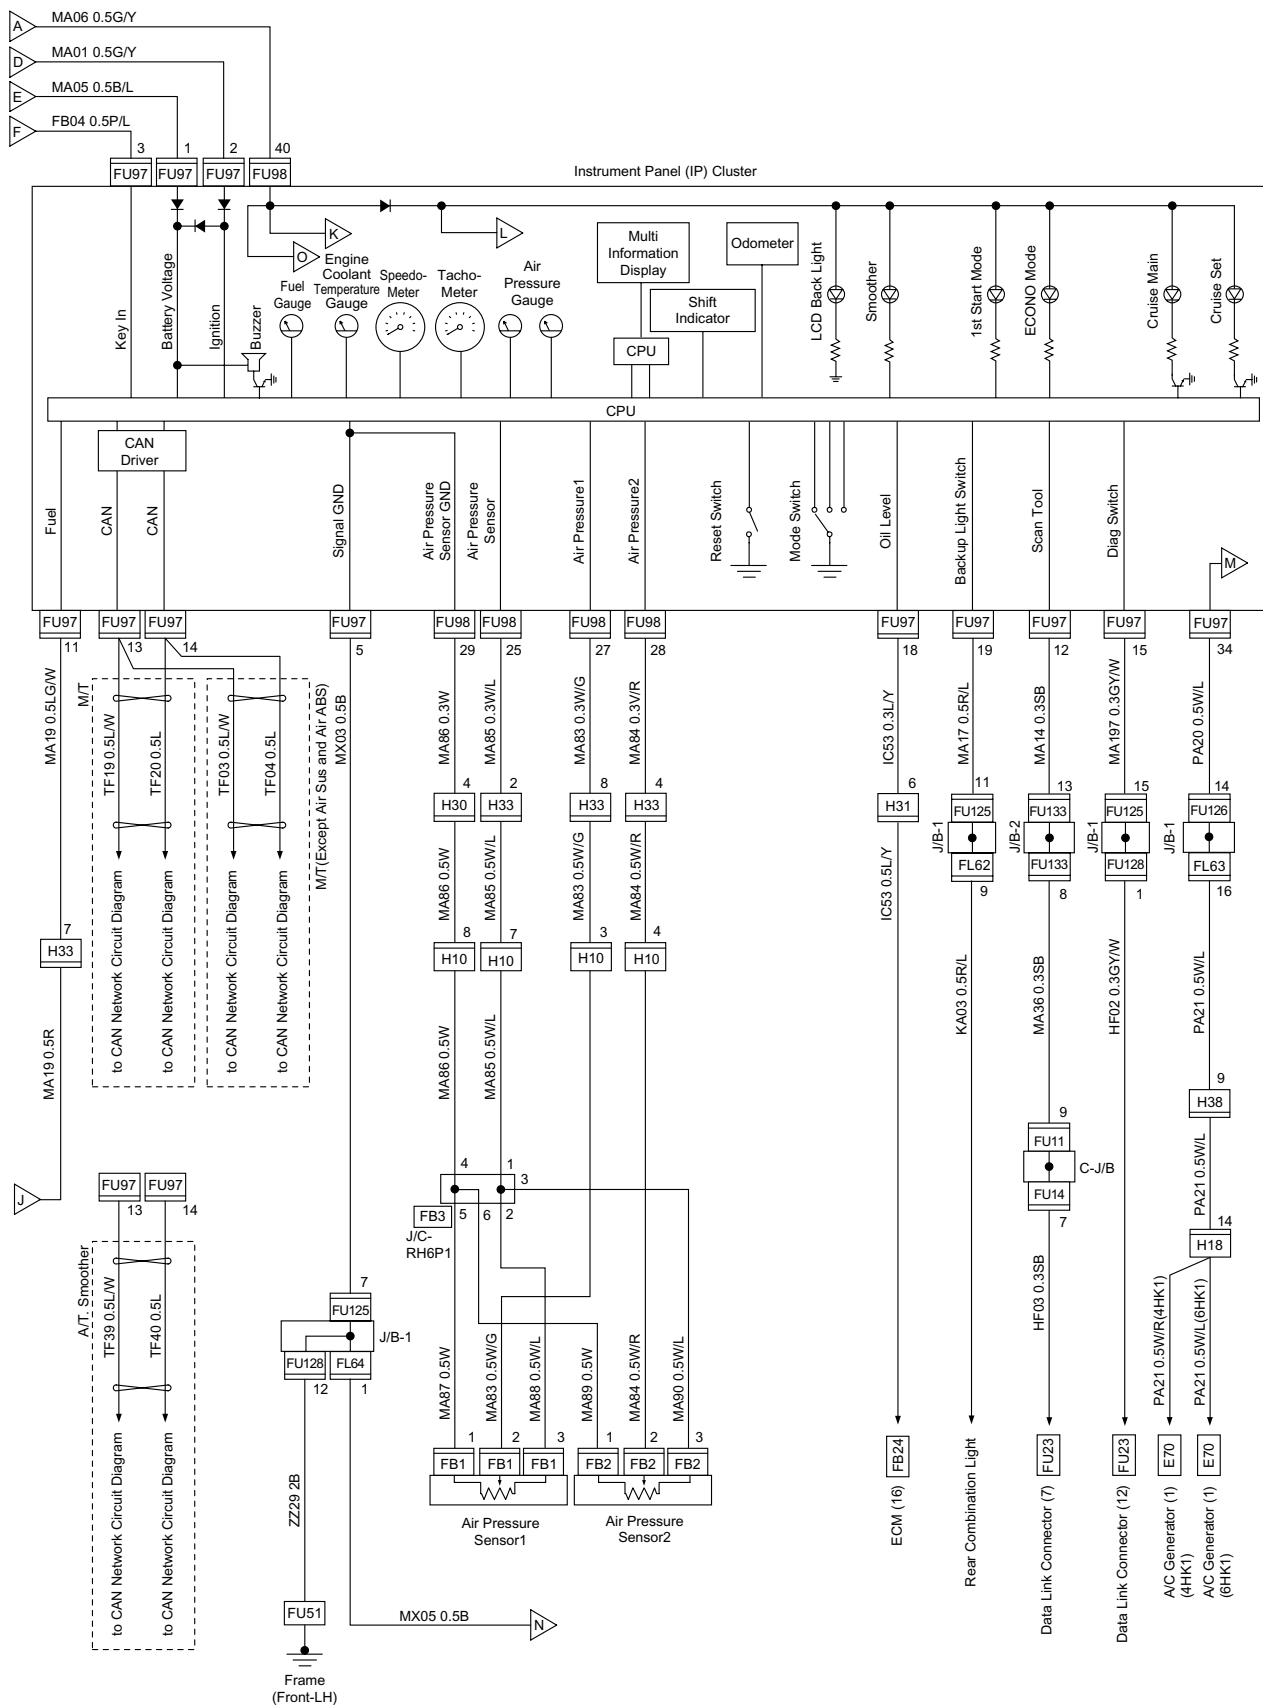Circuit Diagram Except Indonesia (1/8)






(3/8)

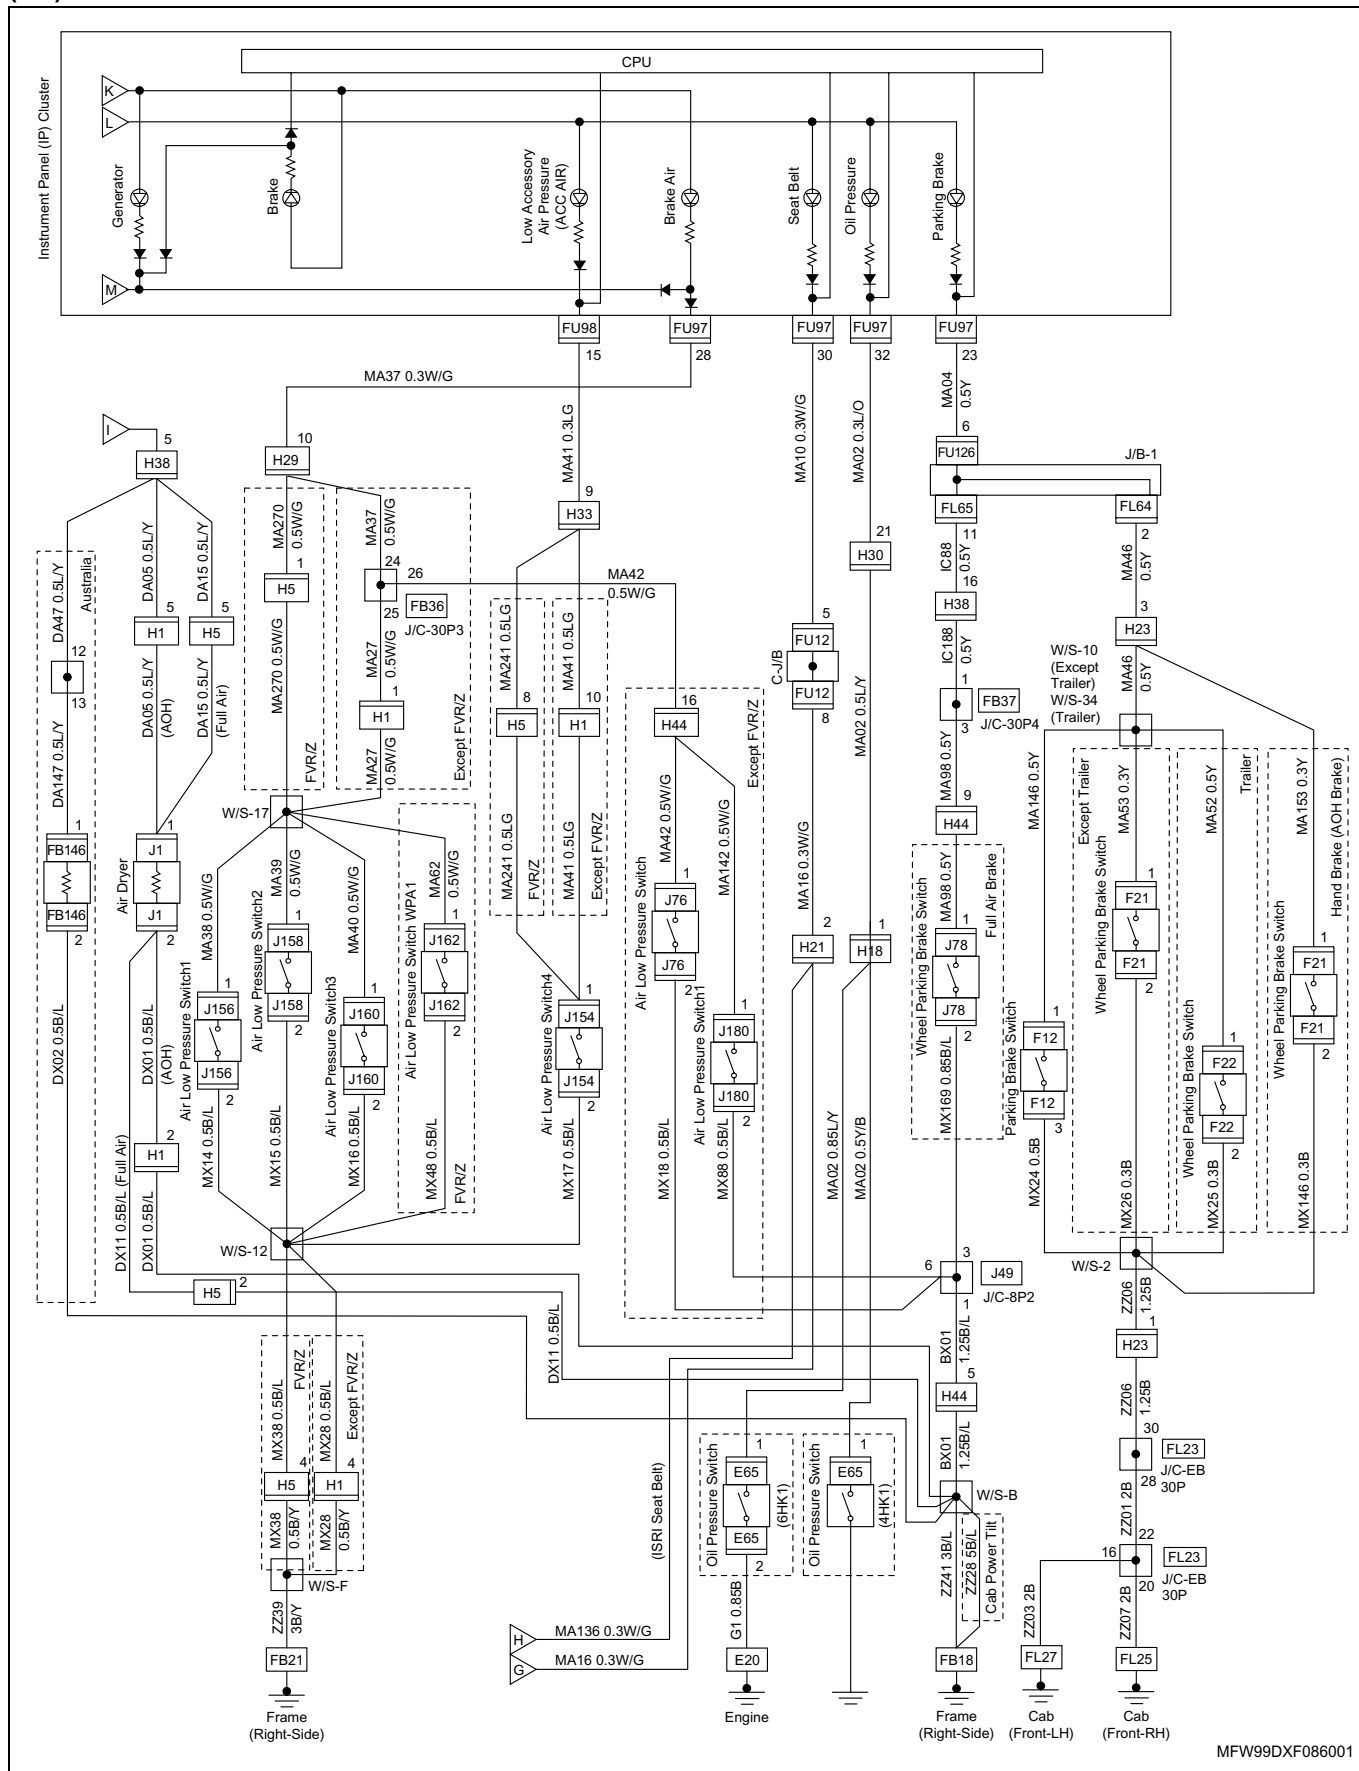


MFW99DXF086001



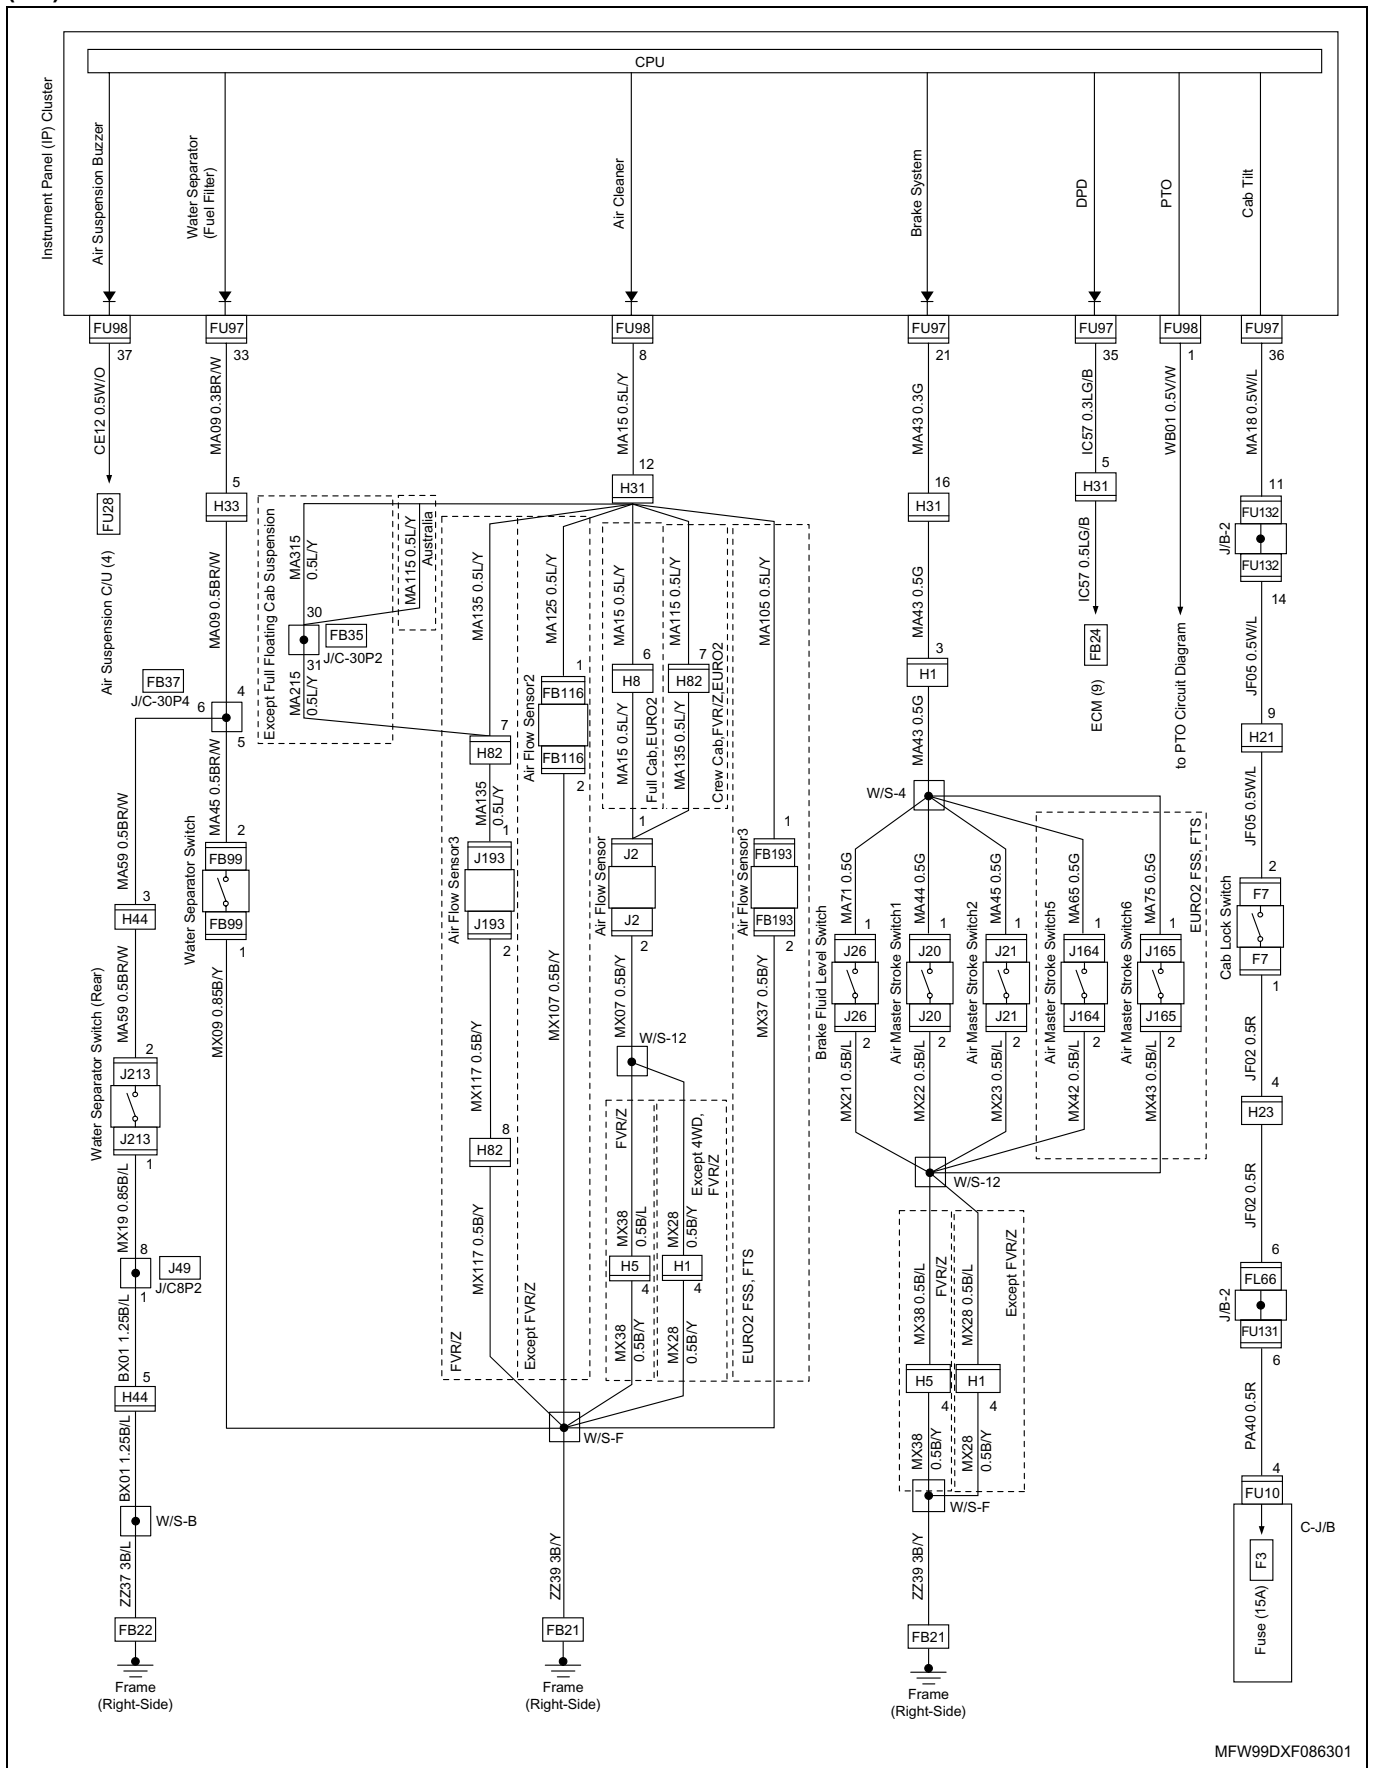
(5/8)




(6/8)

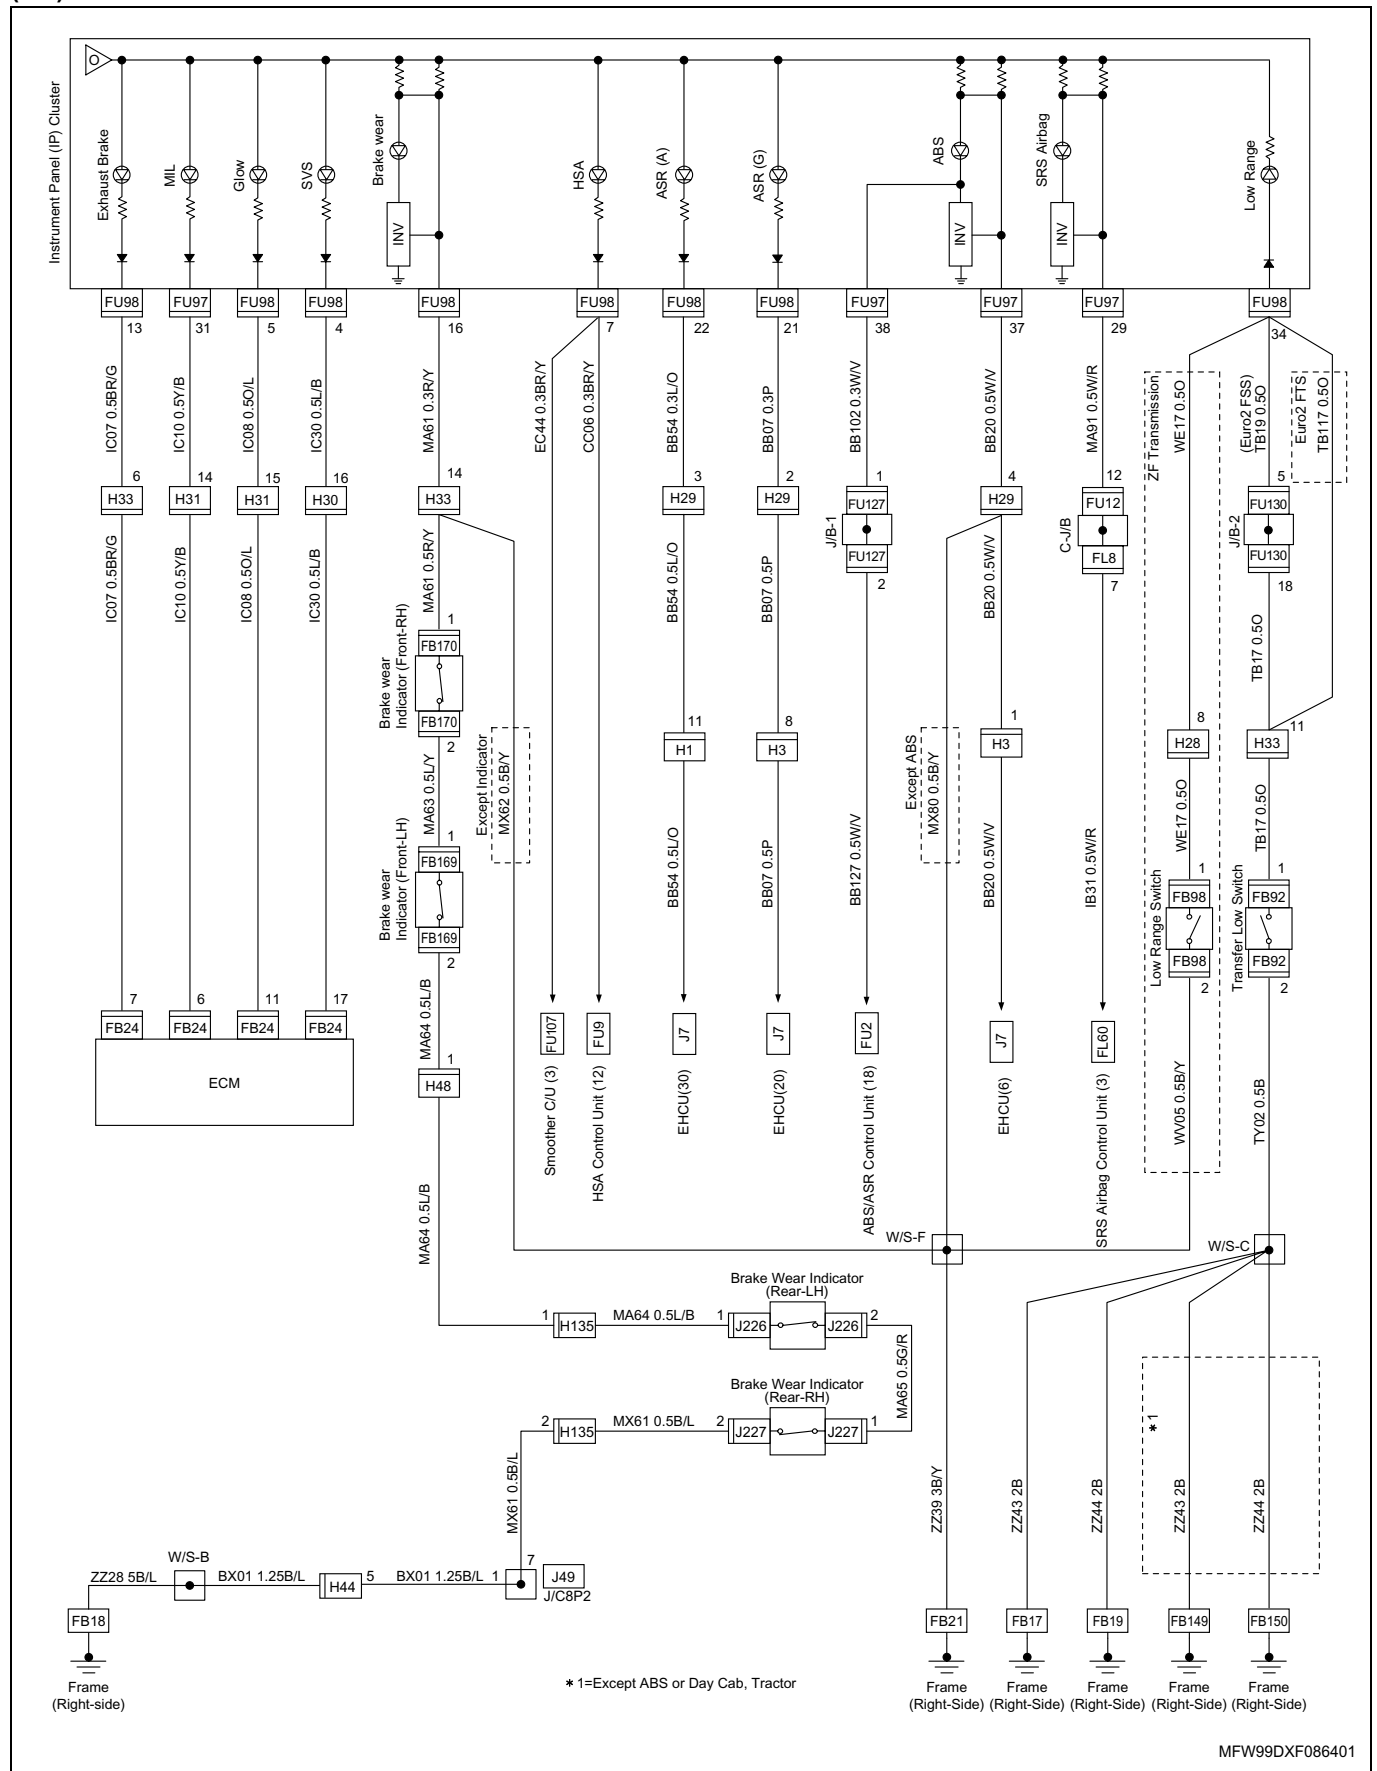


(7/8)

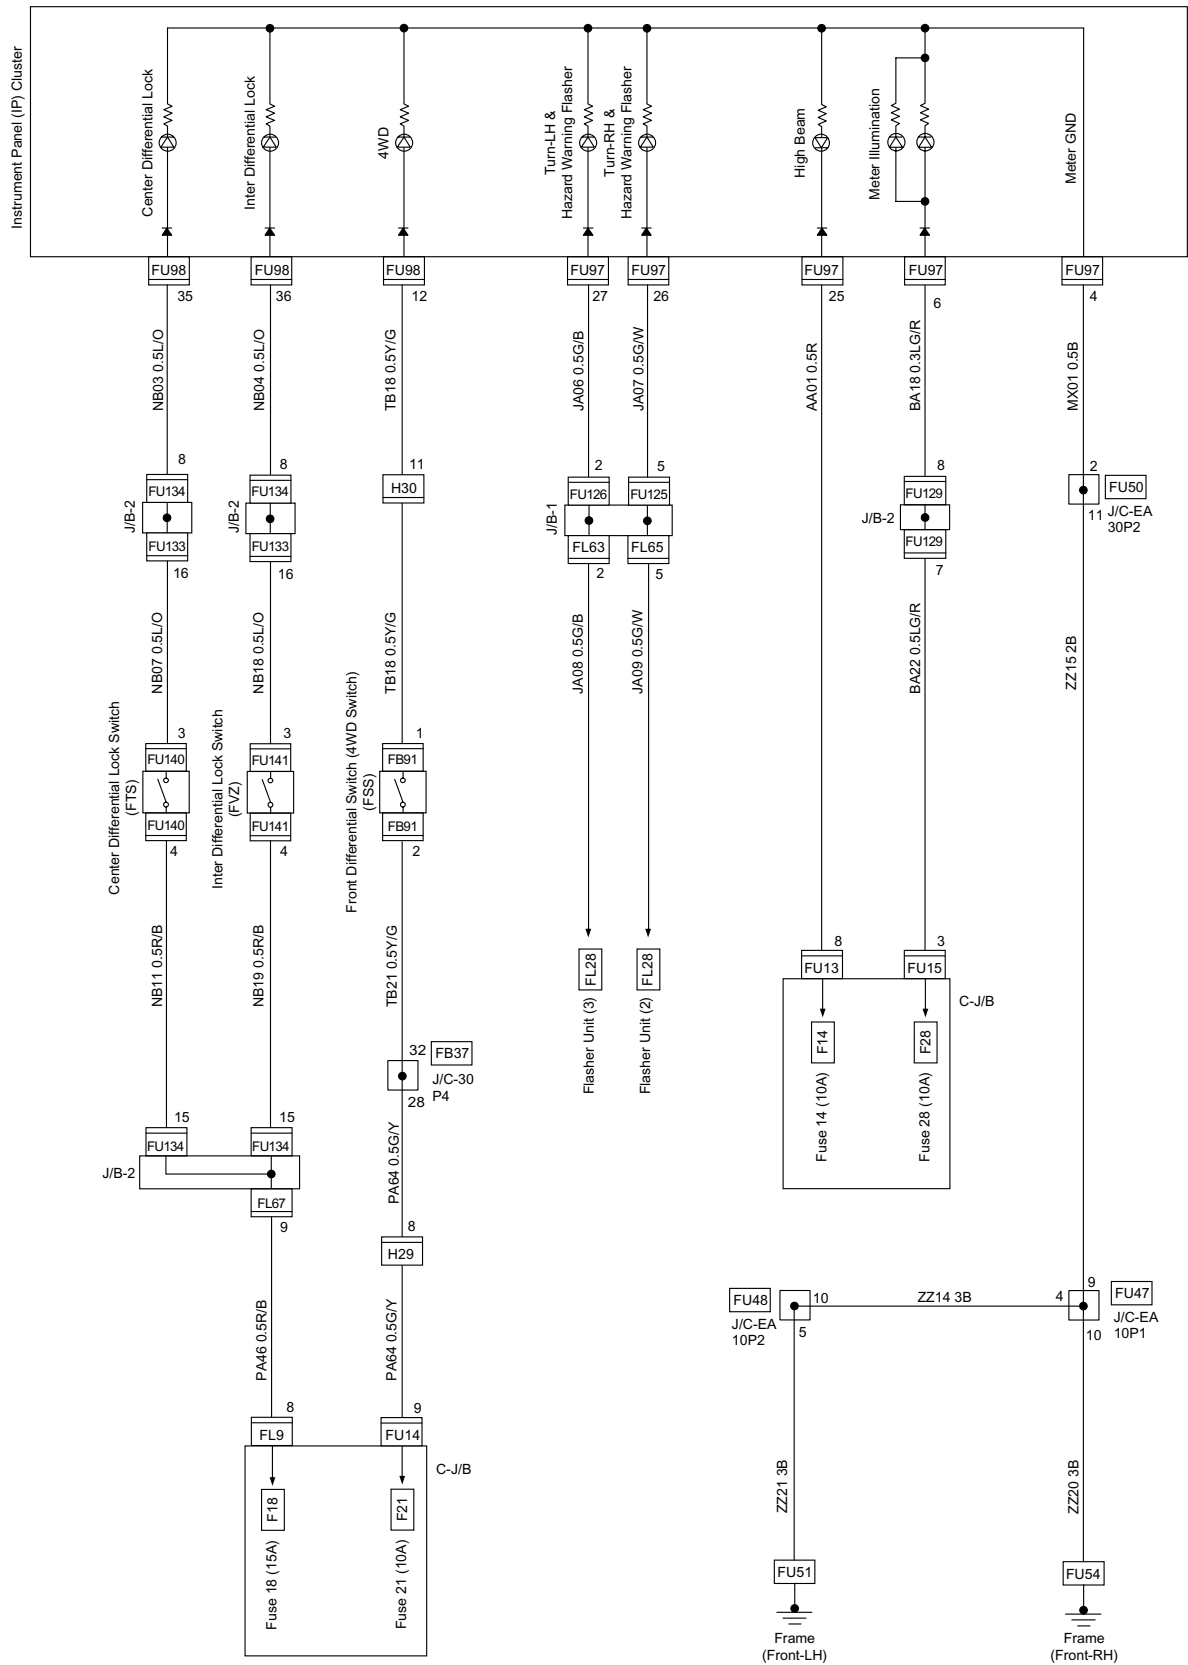

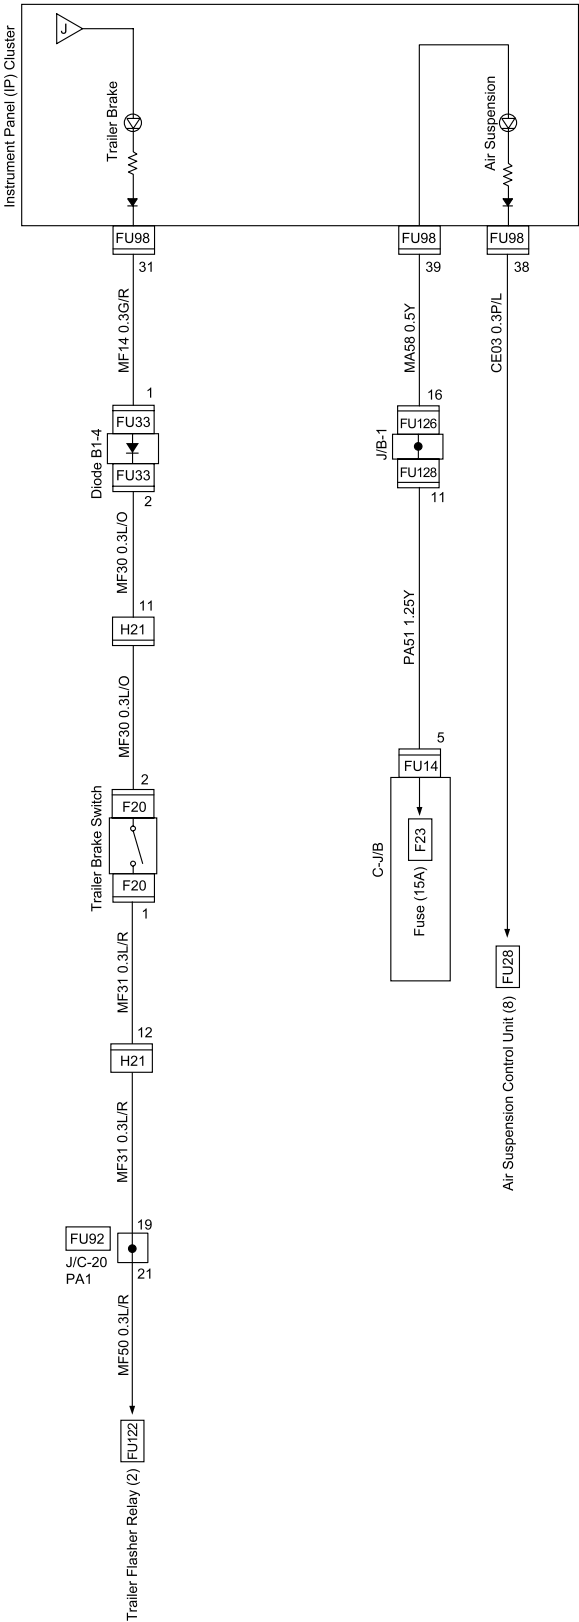


Indonesia

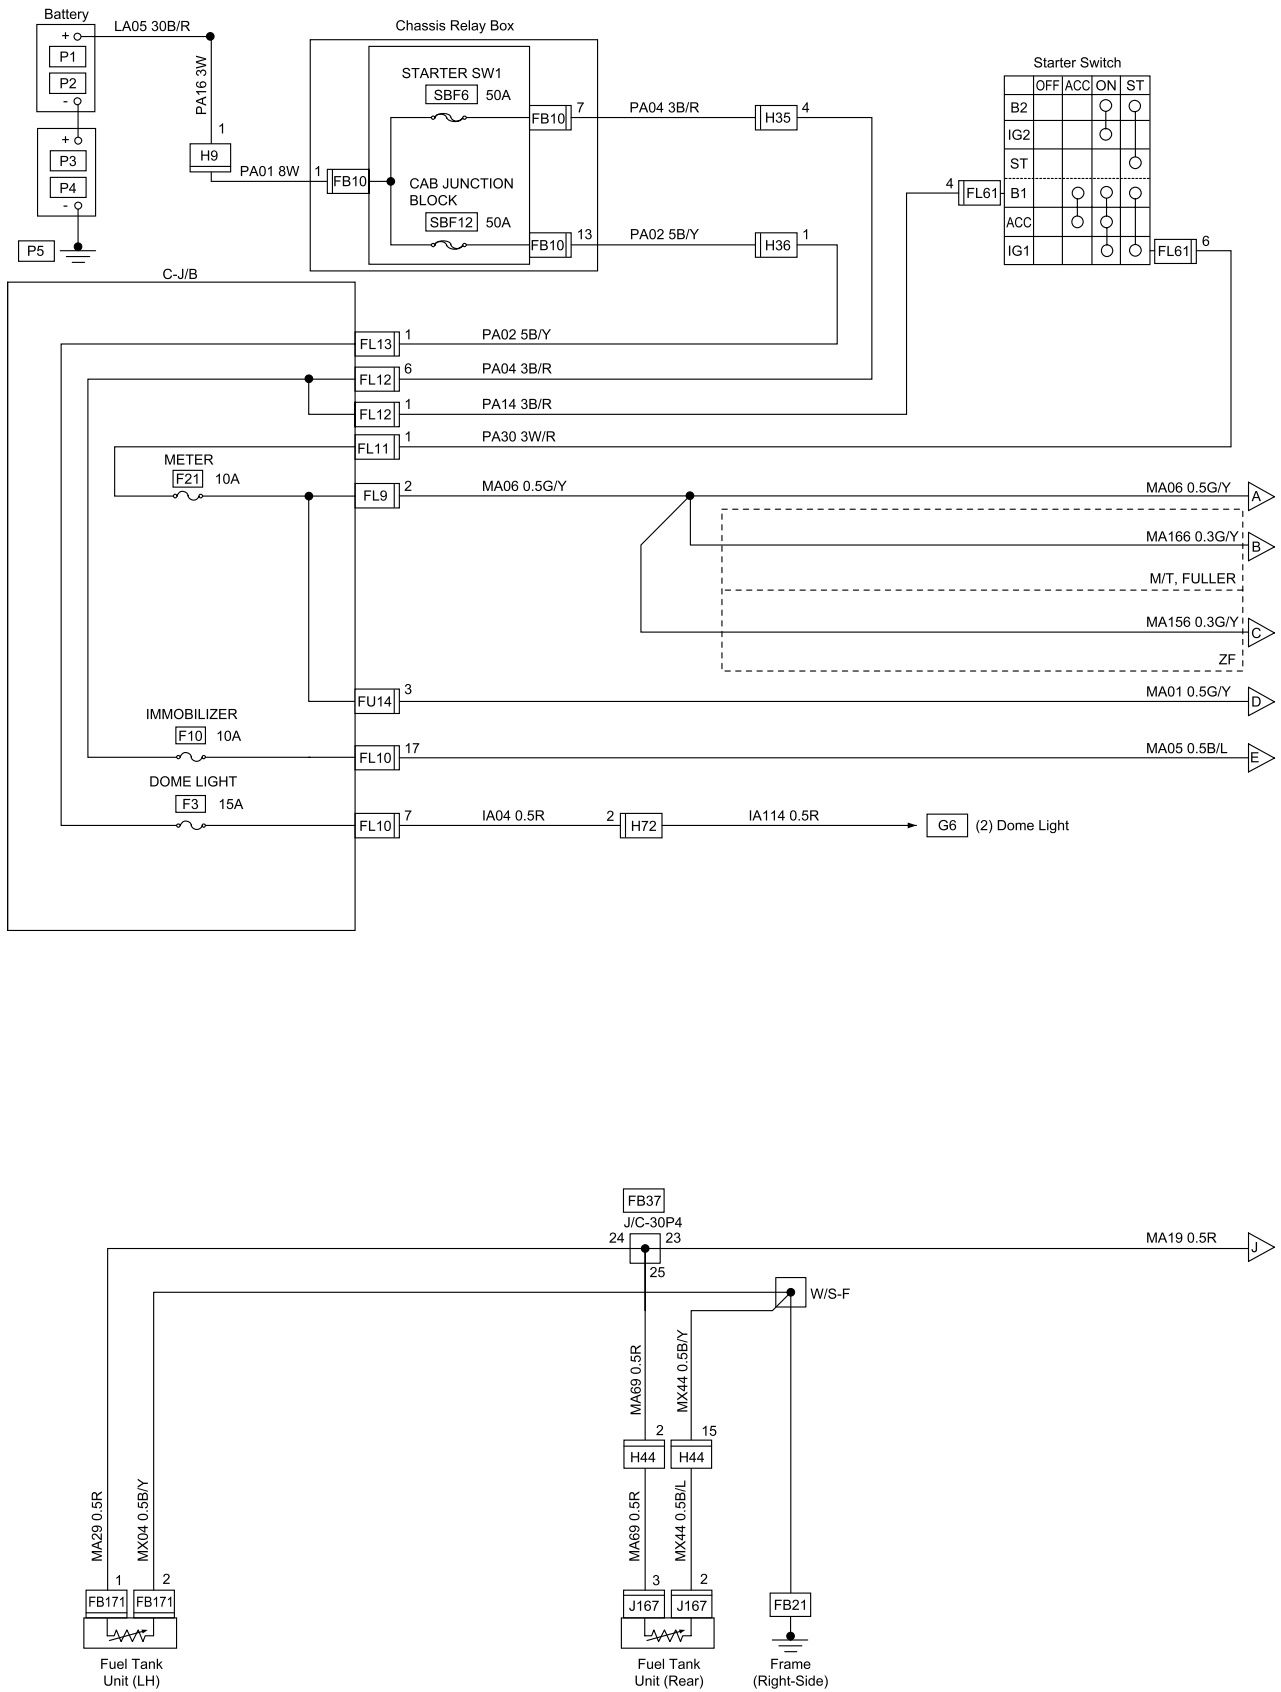
(1/7)



(2/7)

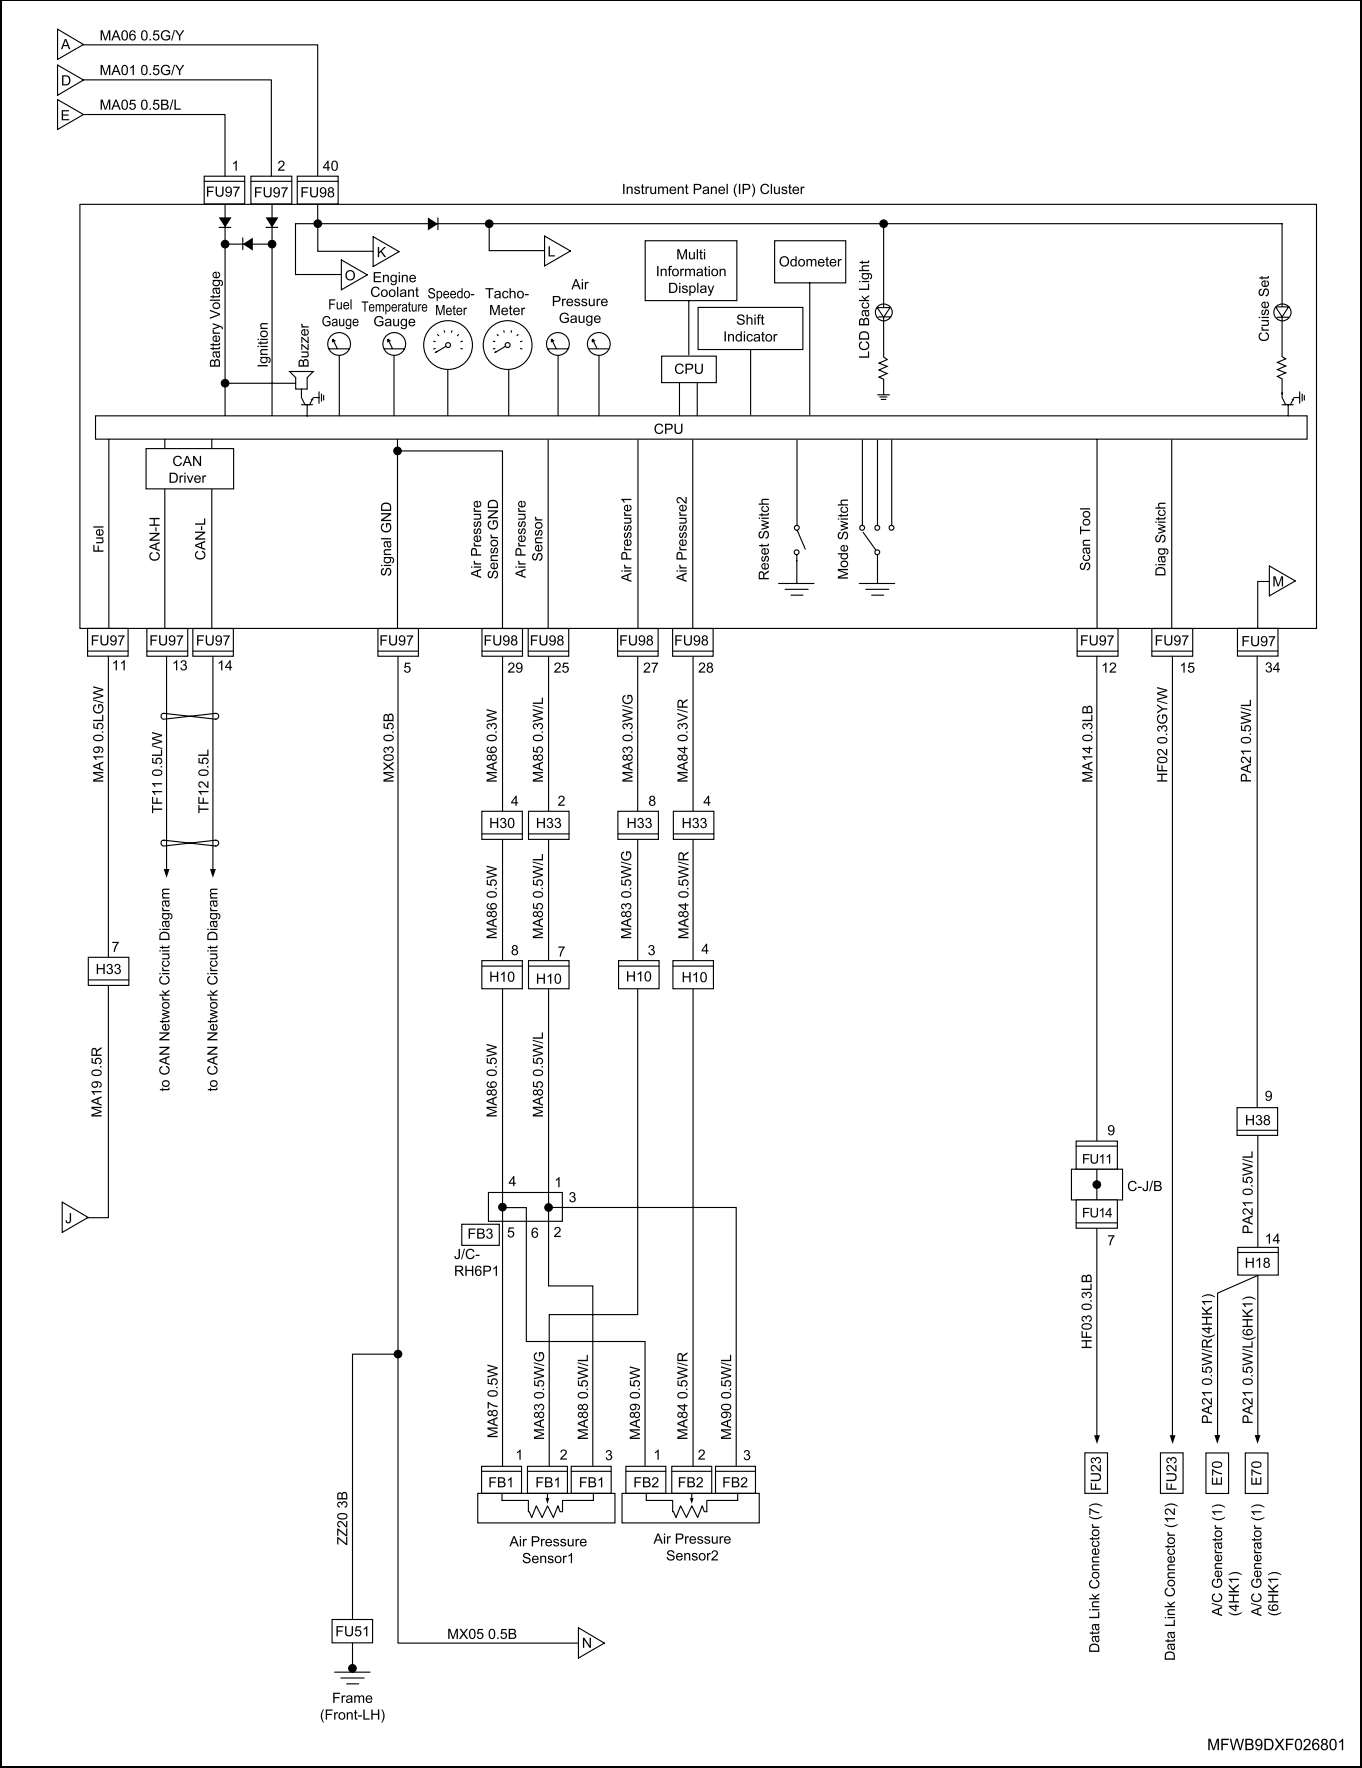


(3/7)

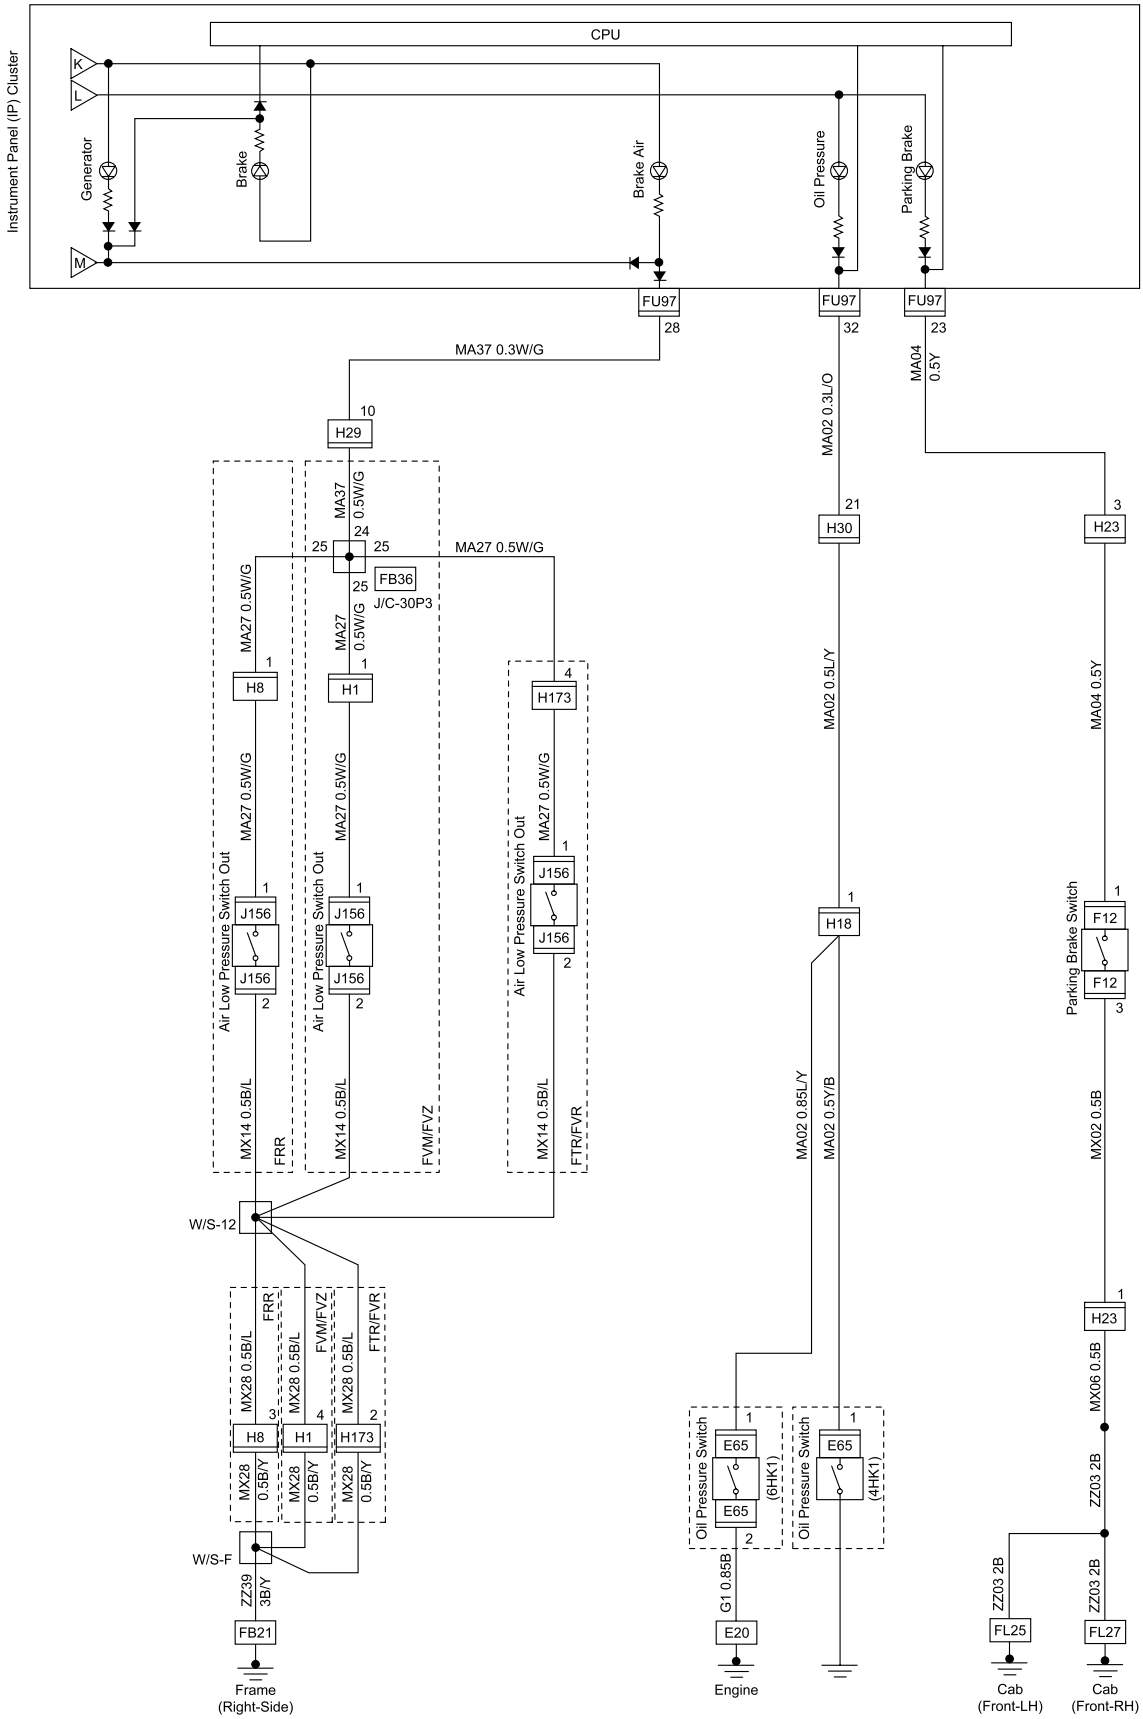


MFWB9DXF026901



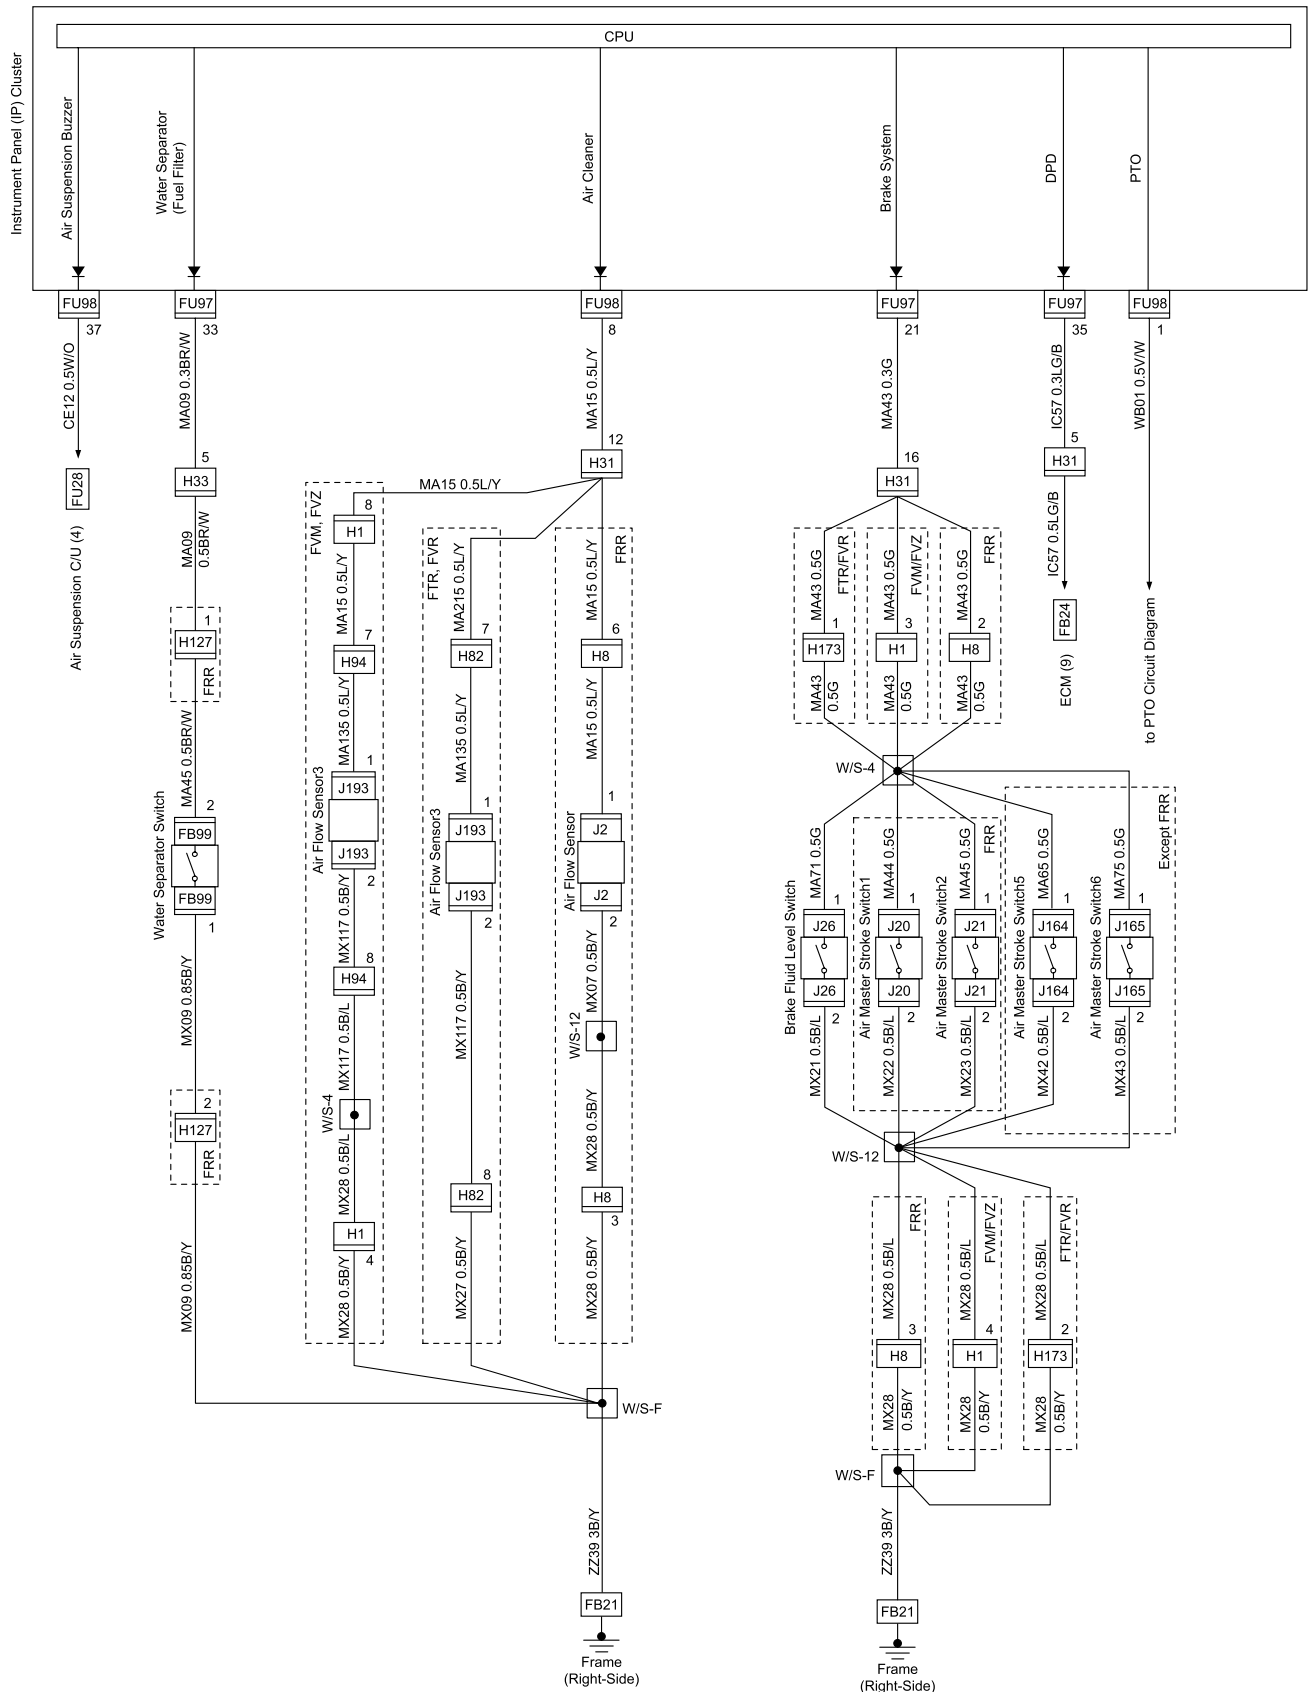
(5/7)



(6/7)

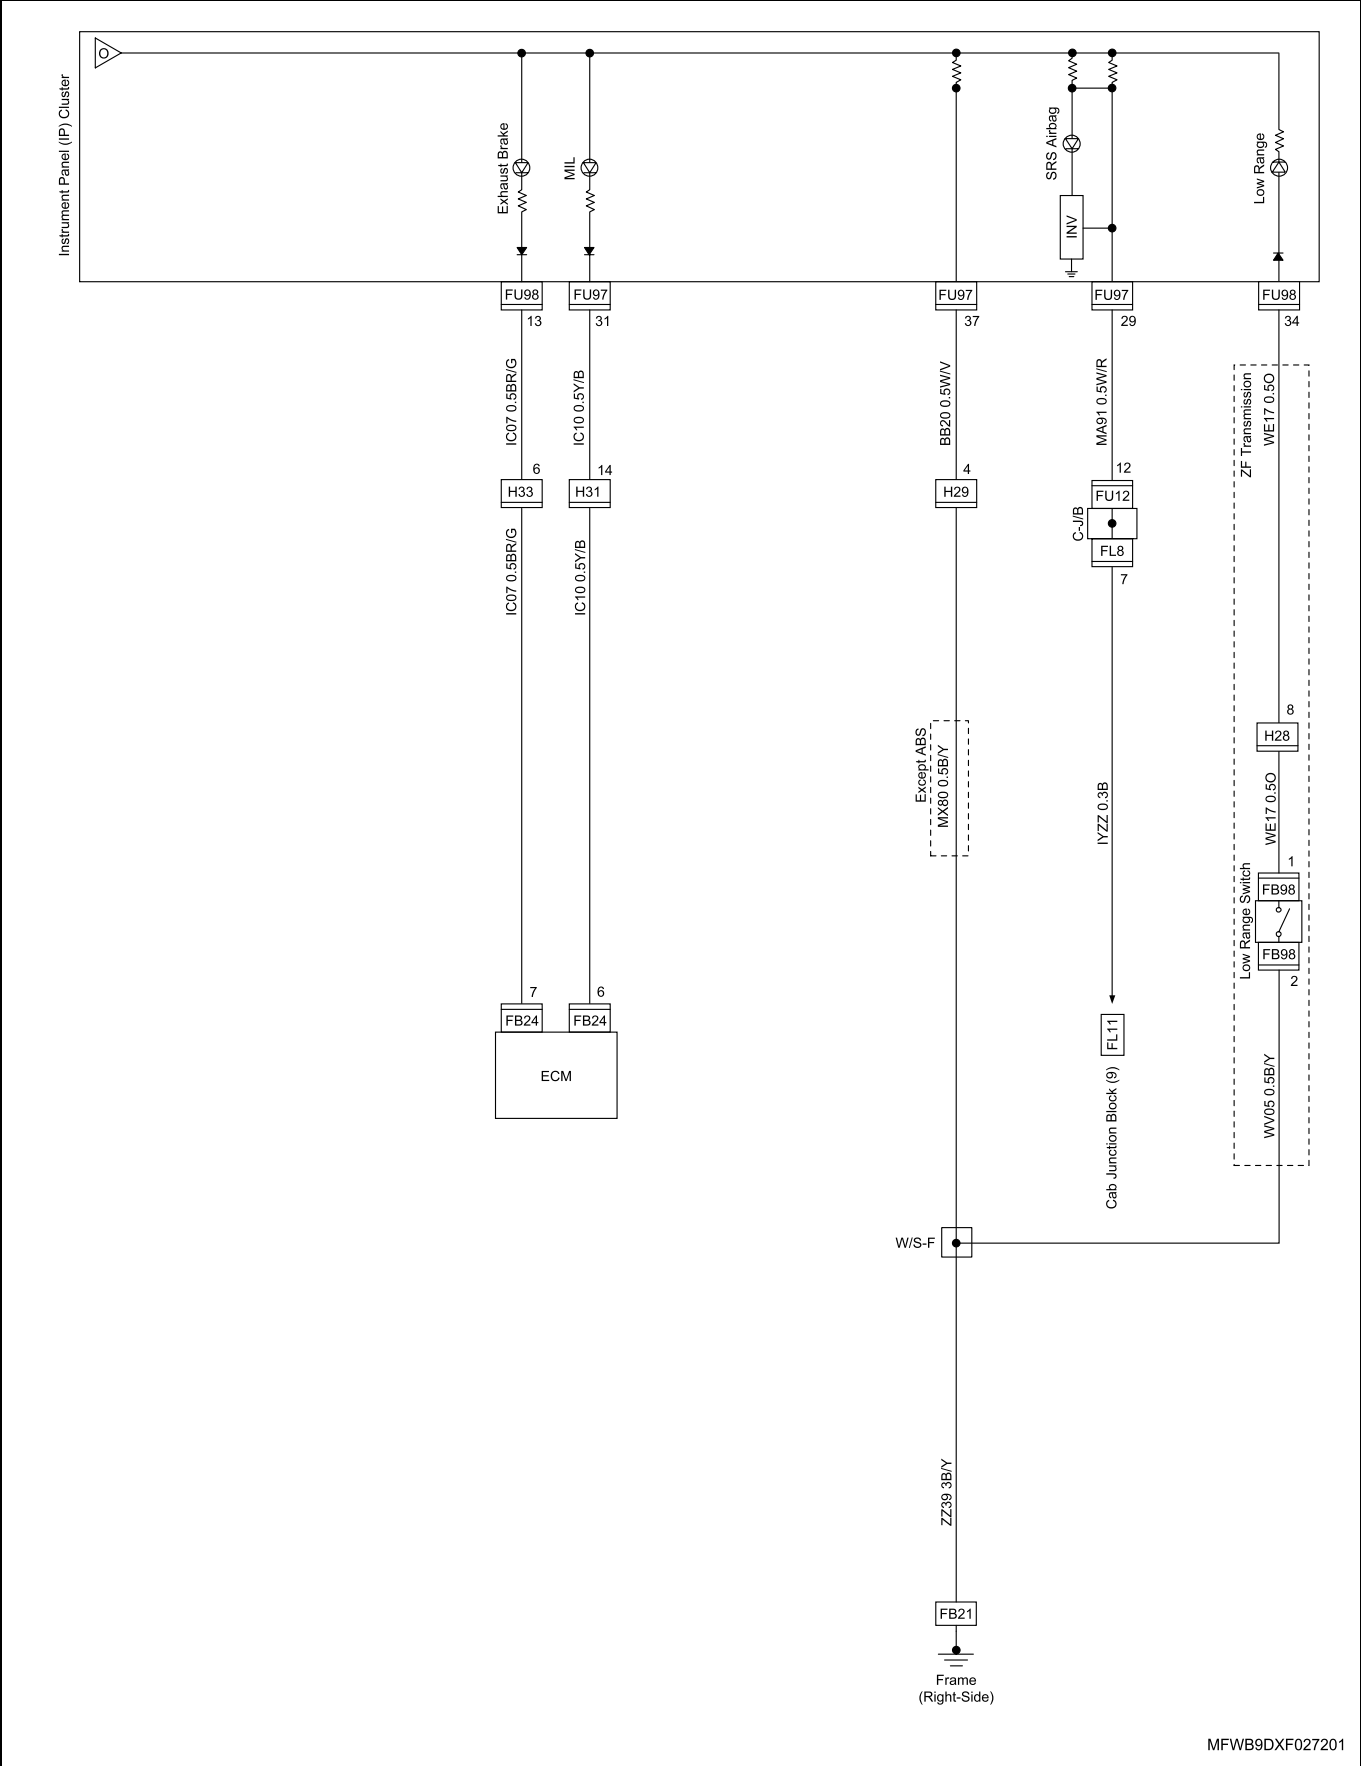


(7/7)

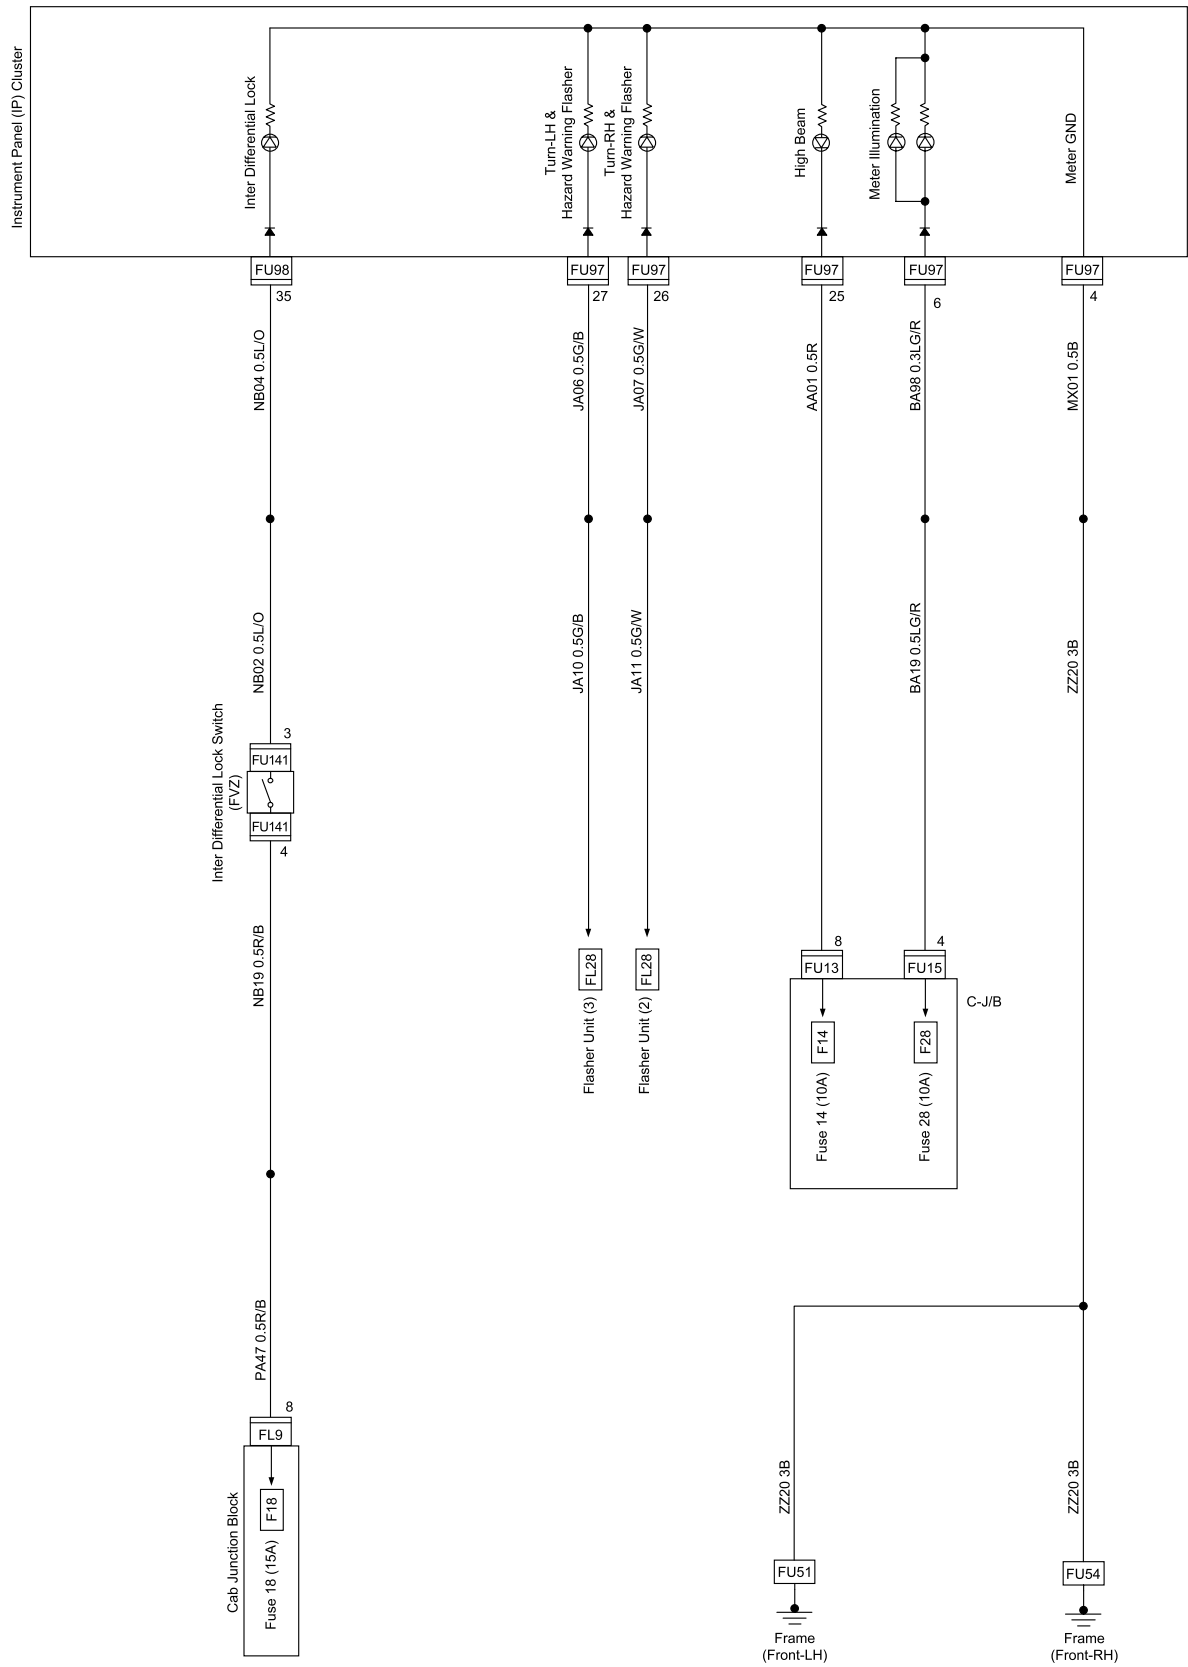


Data Link Connector (DLC)

Circuit Diagram

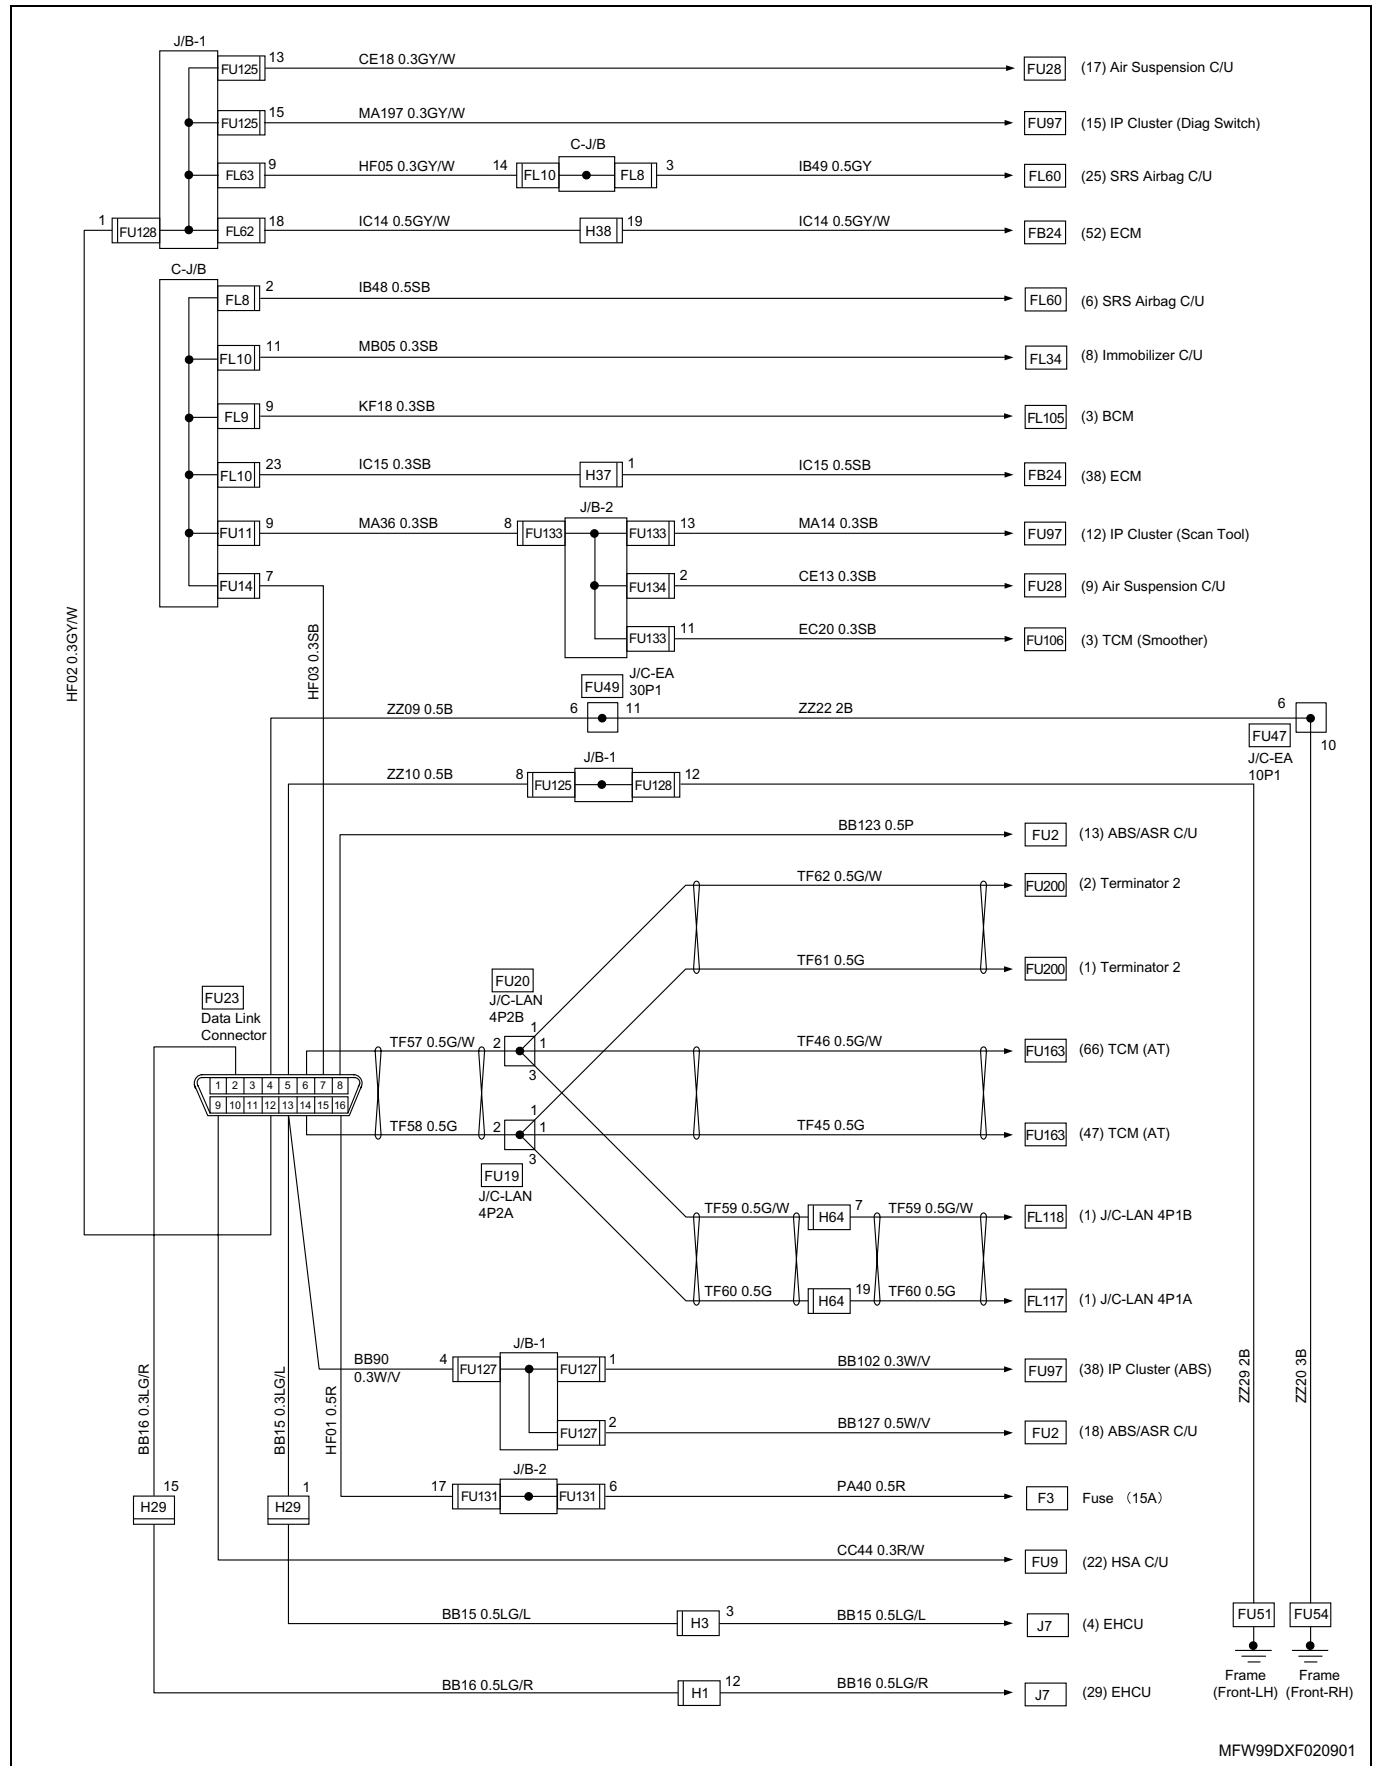Except Indonesia




Indonesia

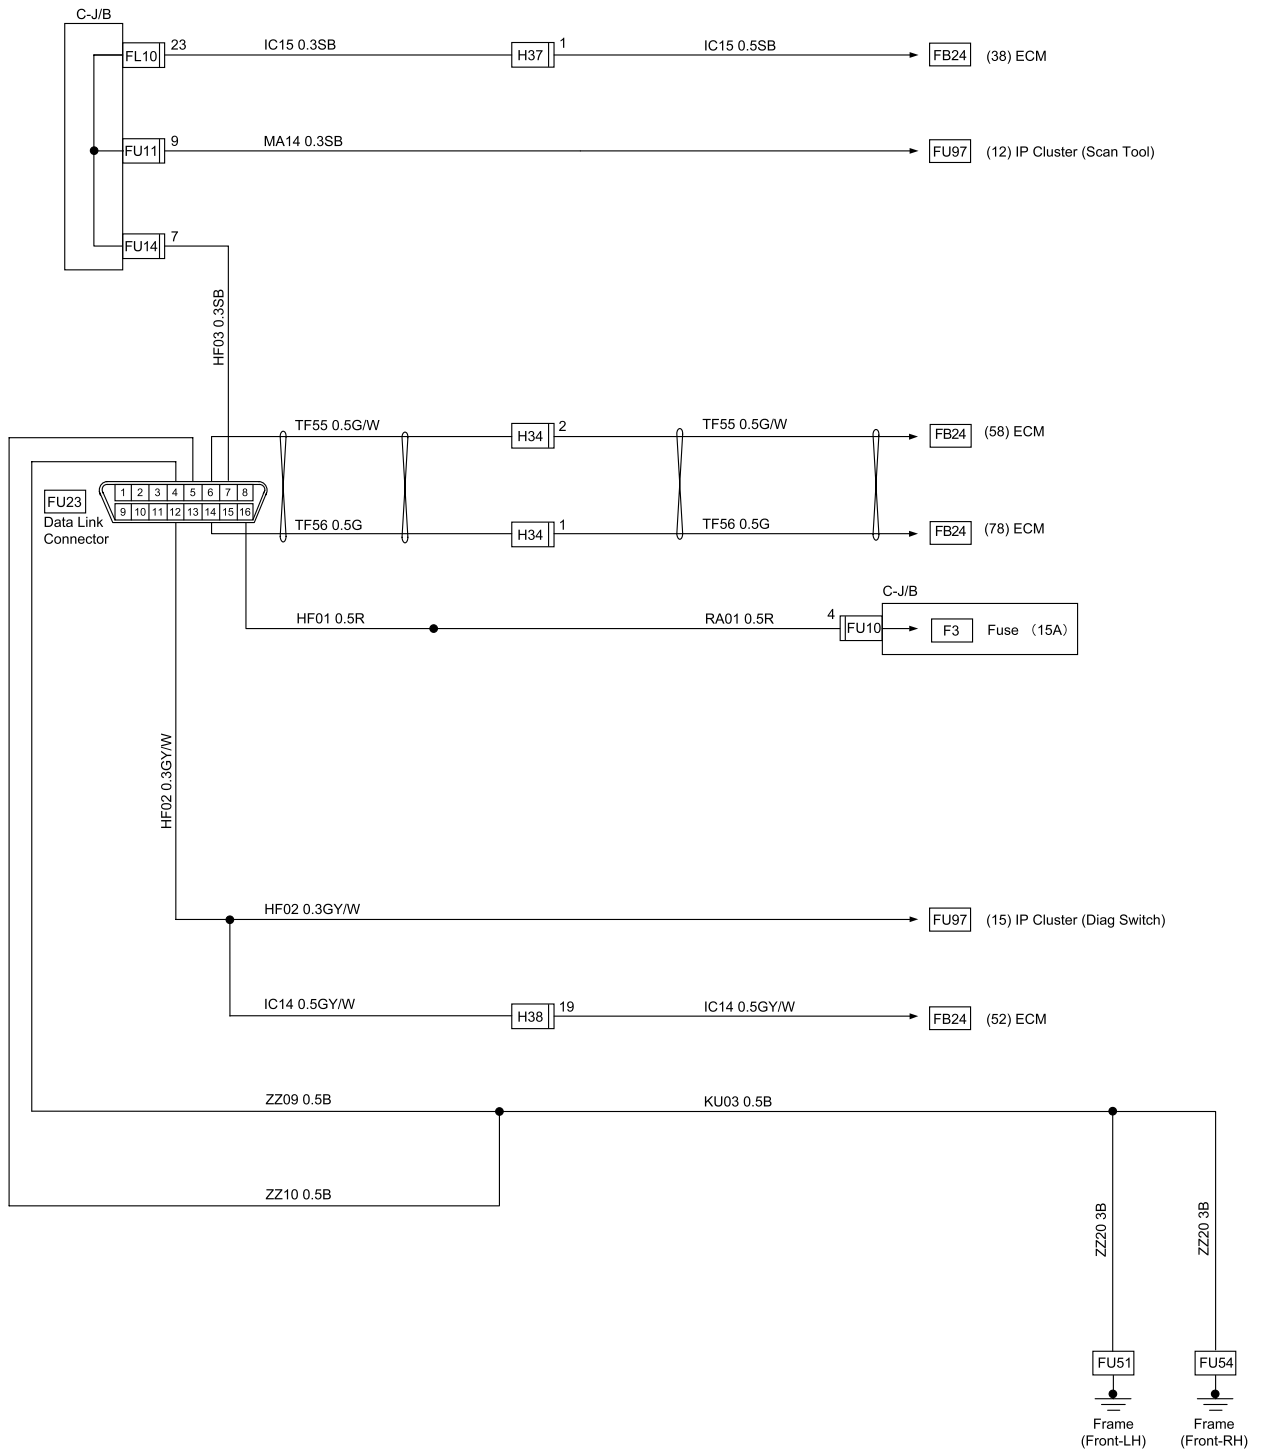


Engine Control Module (ECM)

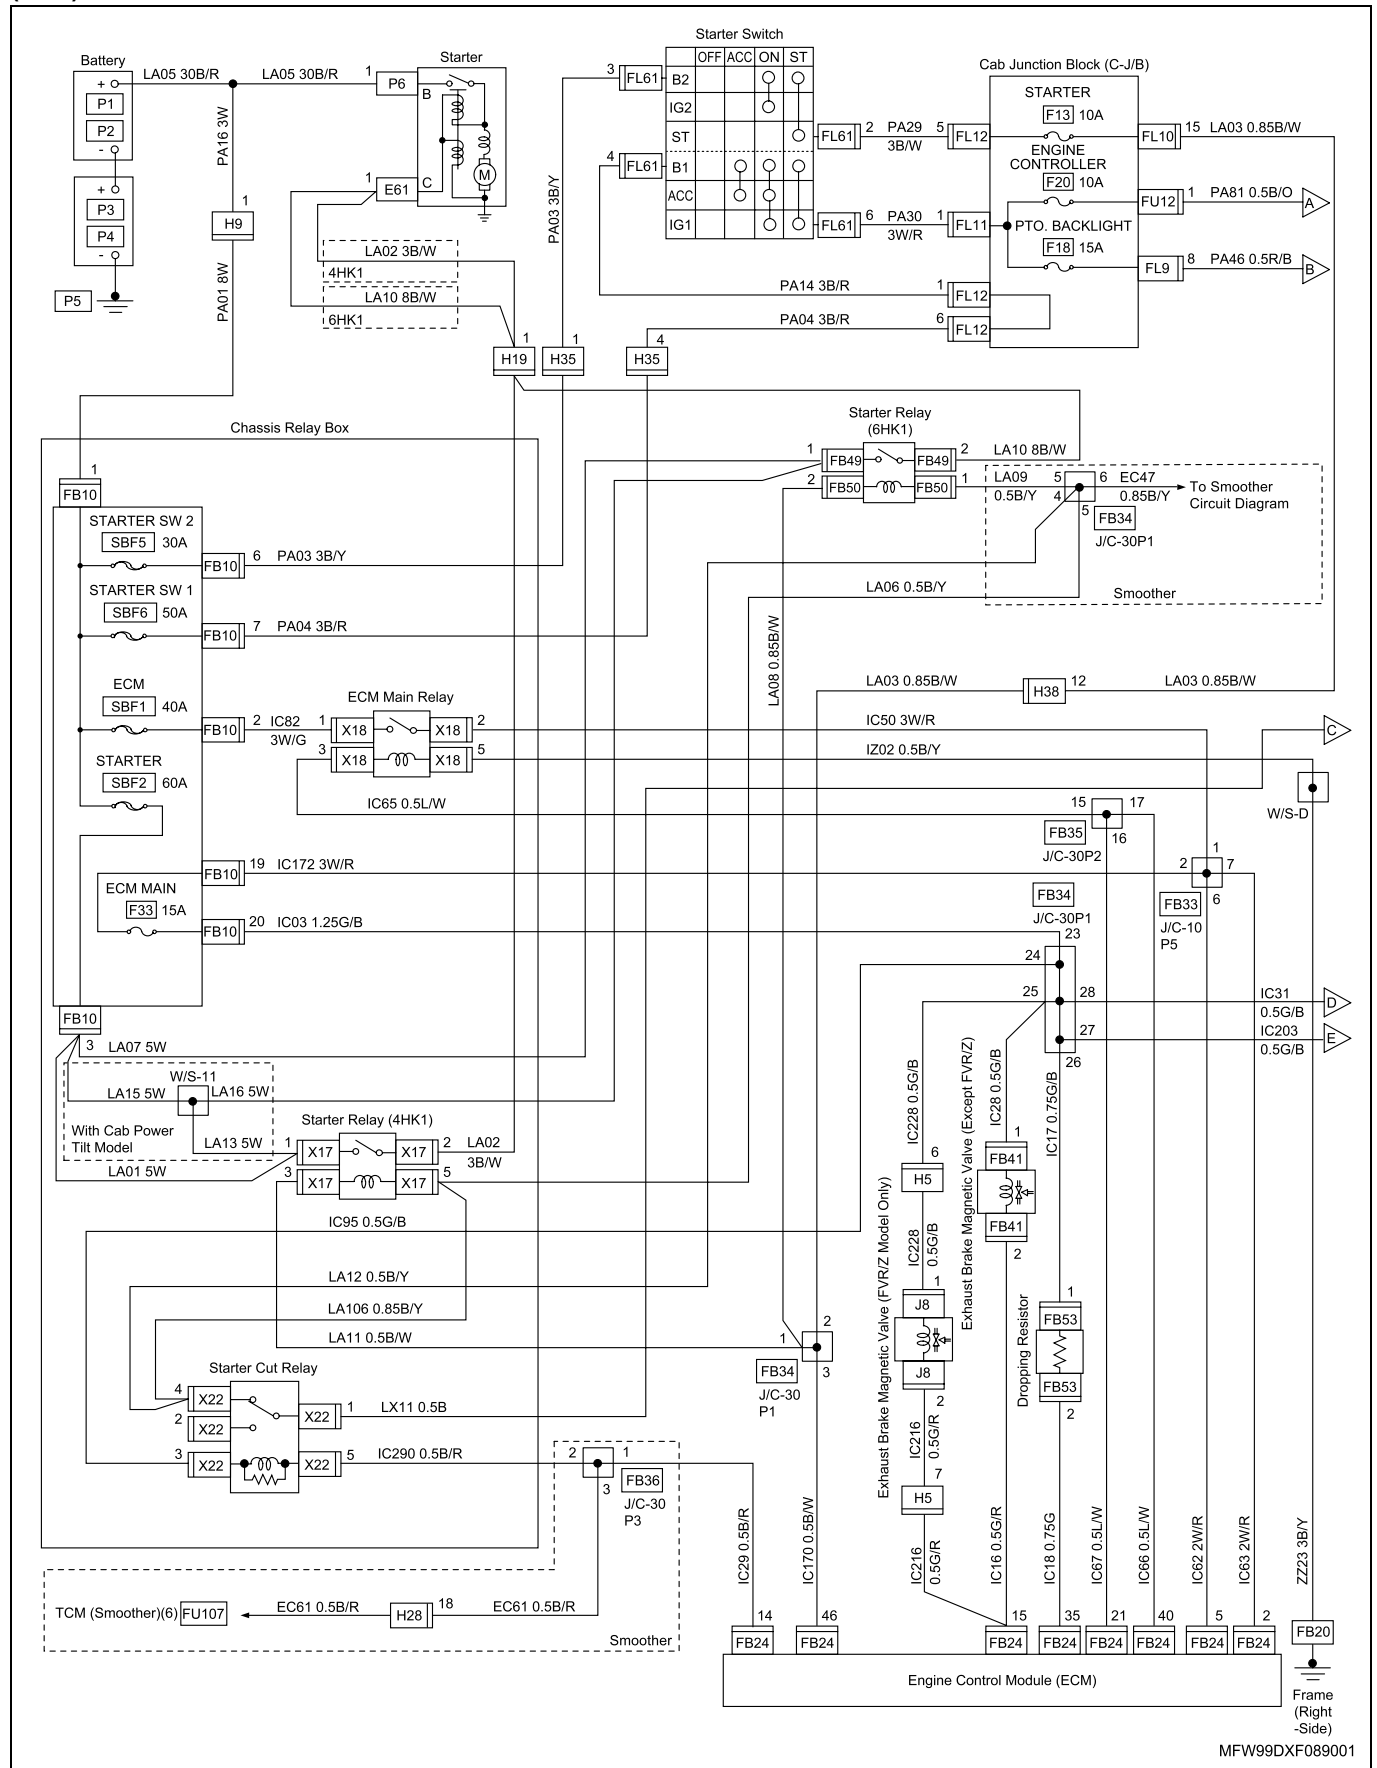Circuit Diagram Except Indonesia (1/13)




(2/13)

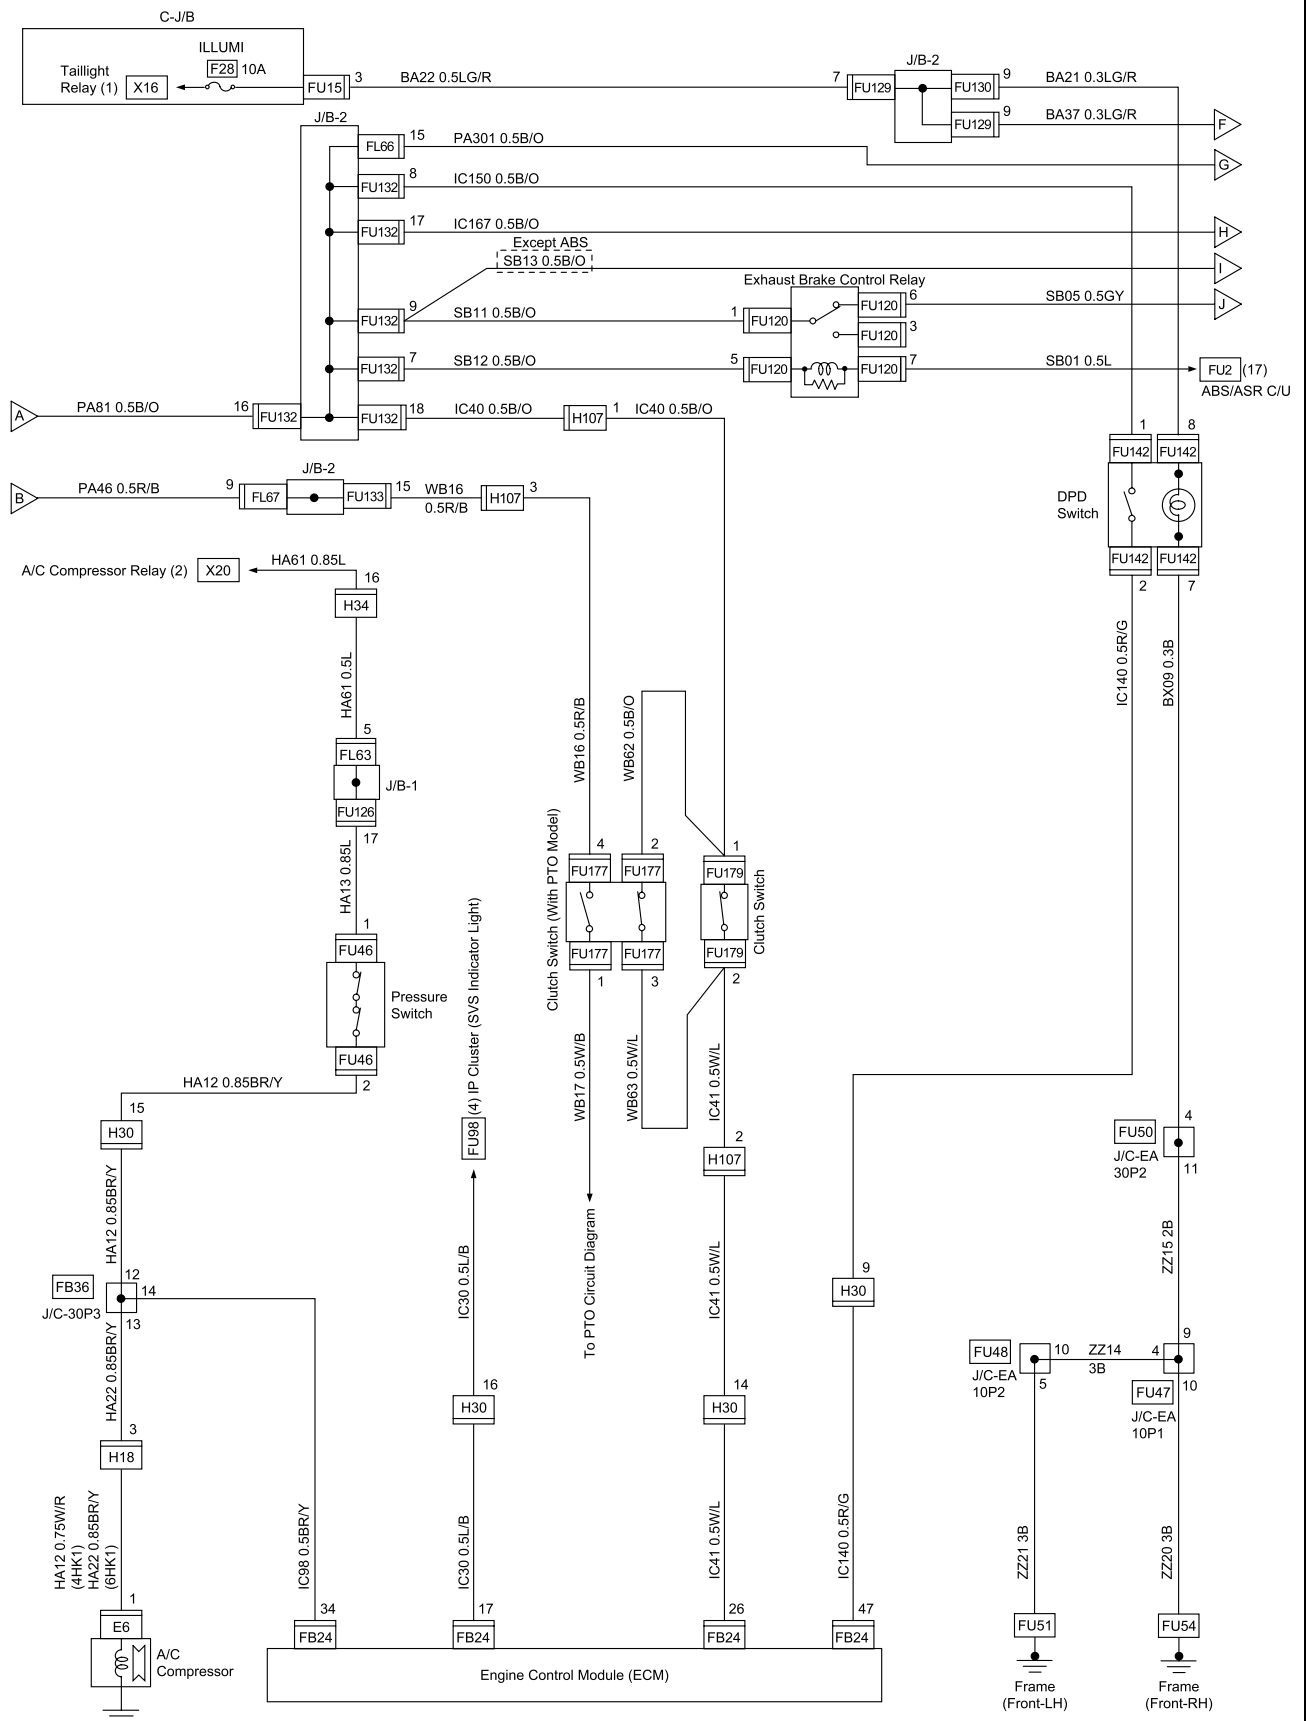


MFW99DXF089101



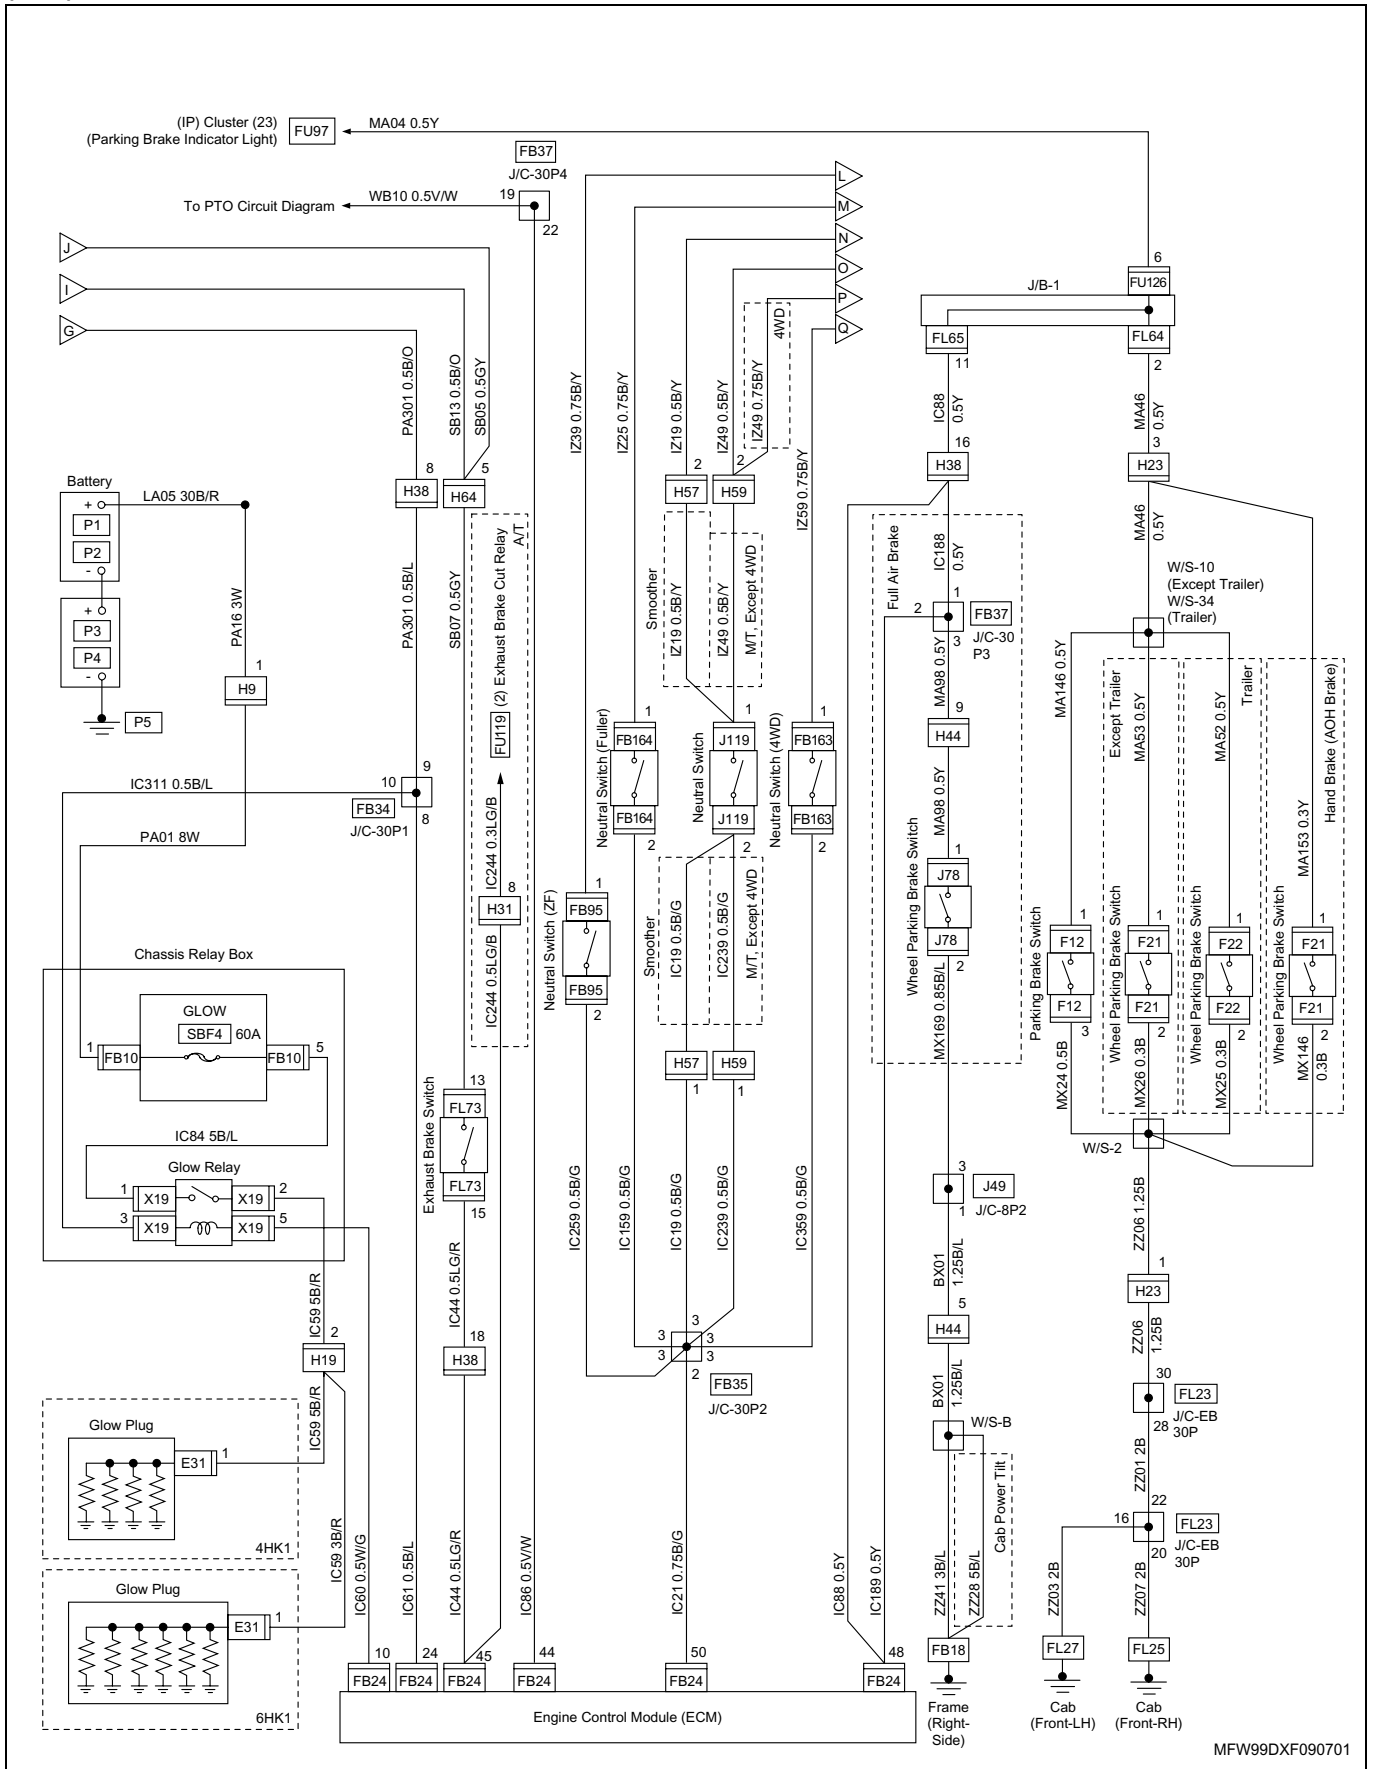
(4/13)




MF99DXF090701

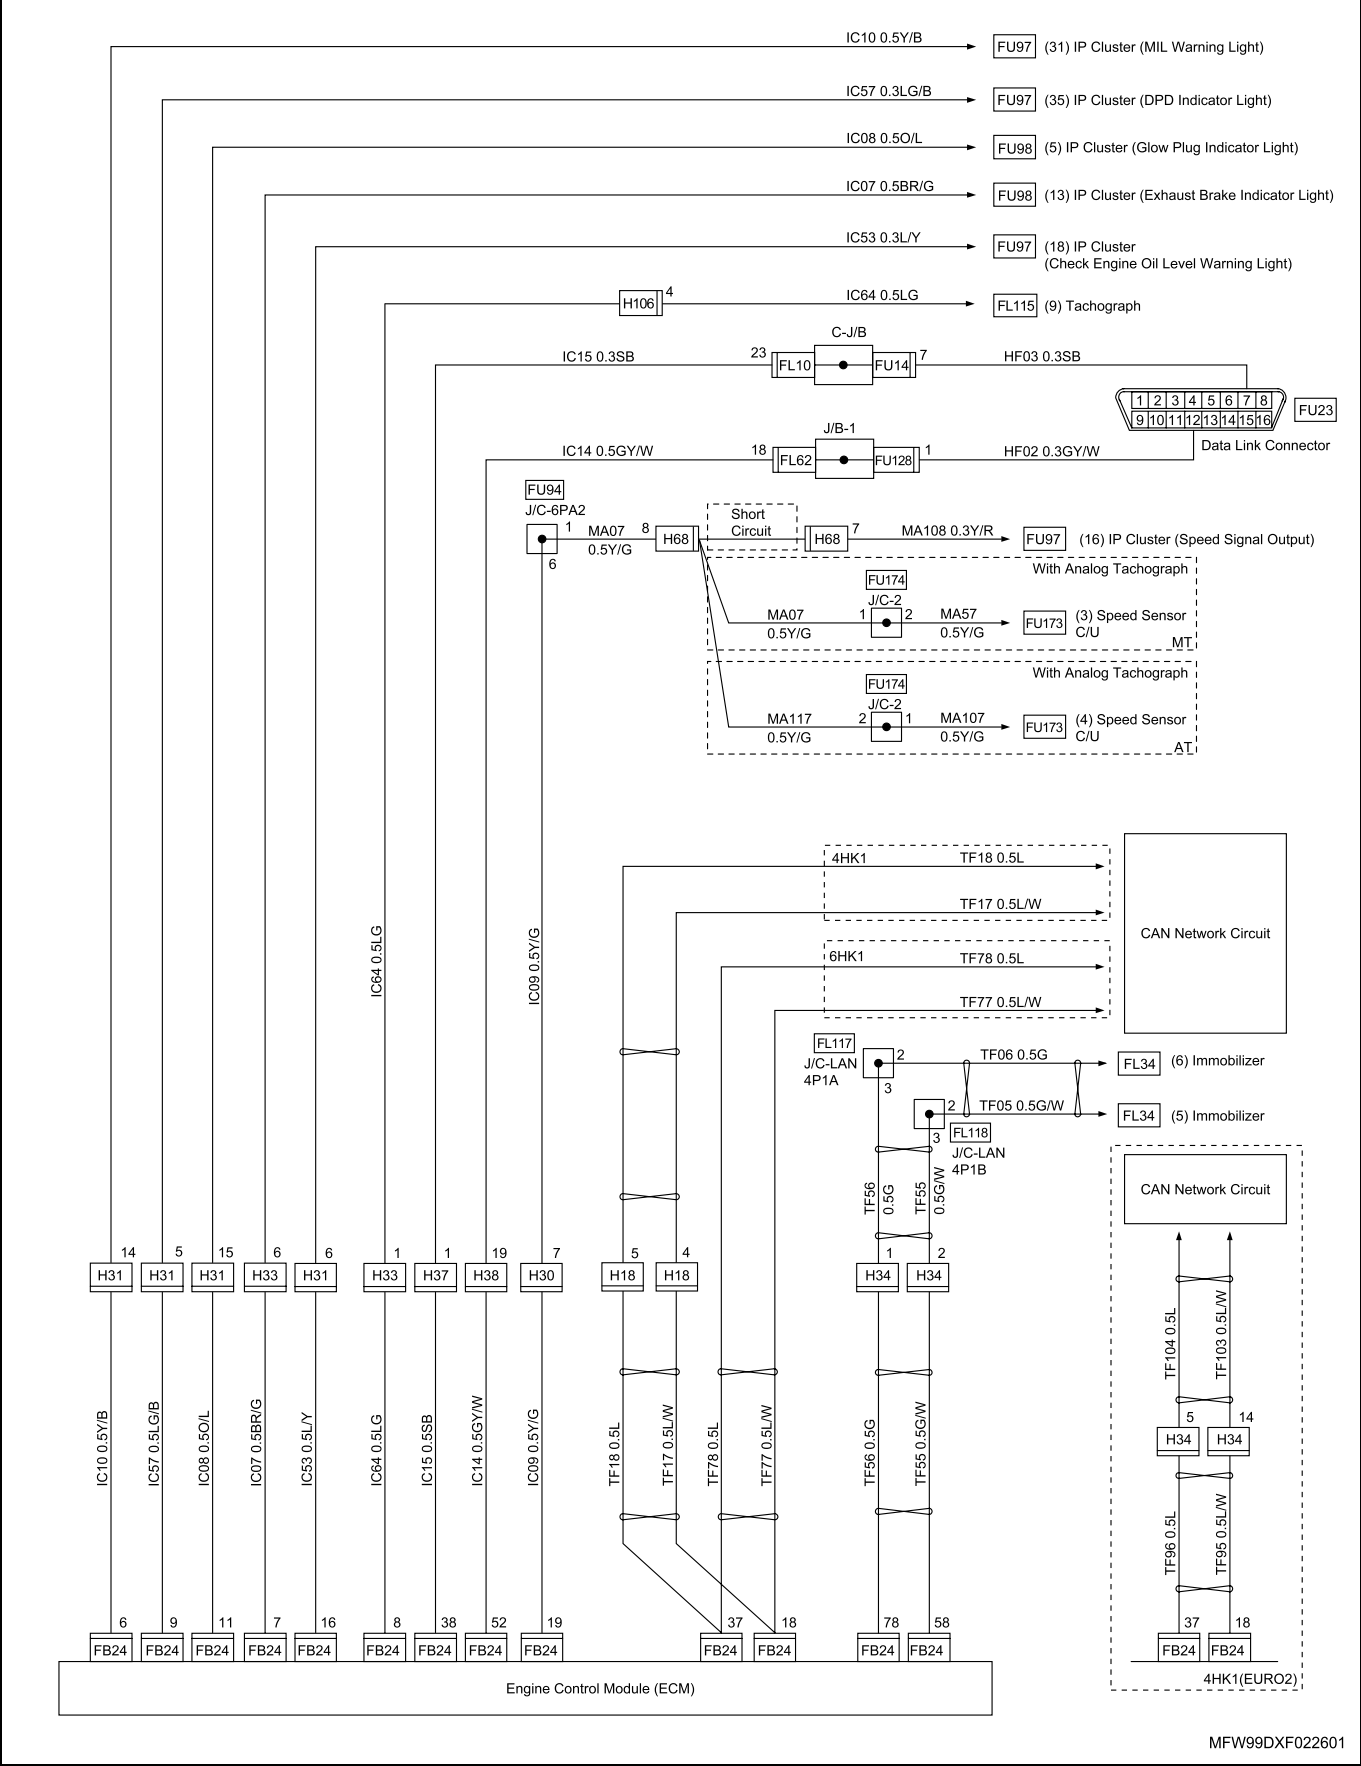



(6/13)

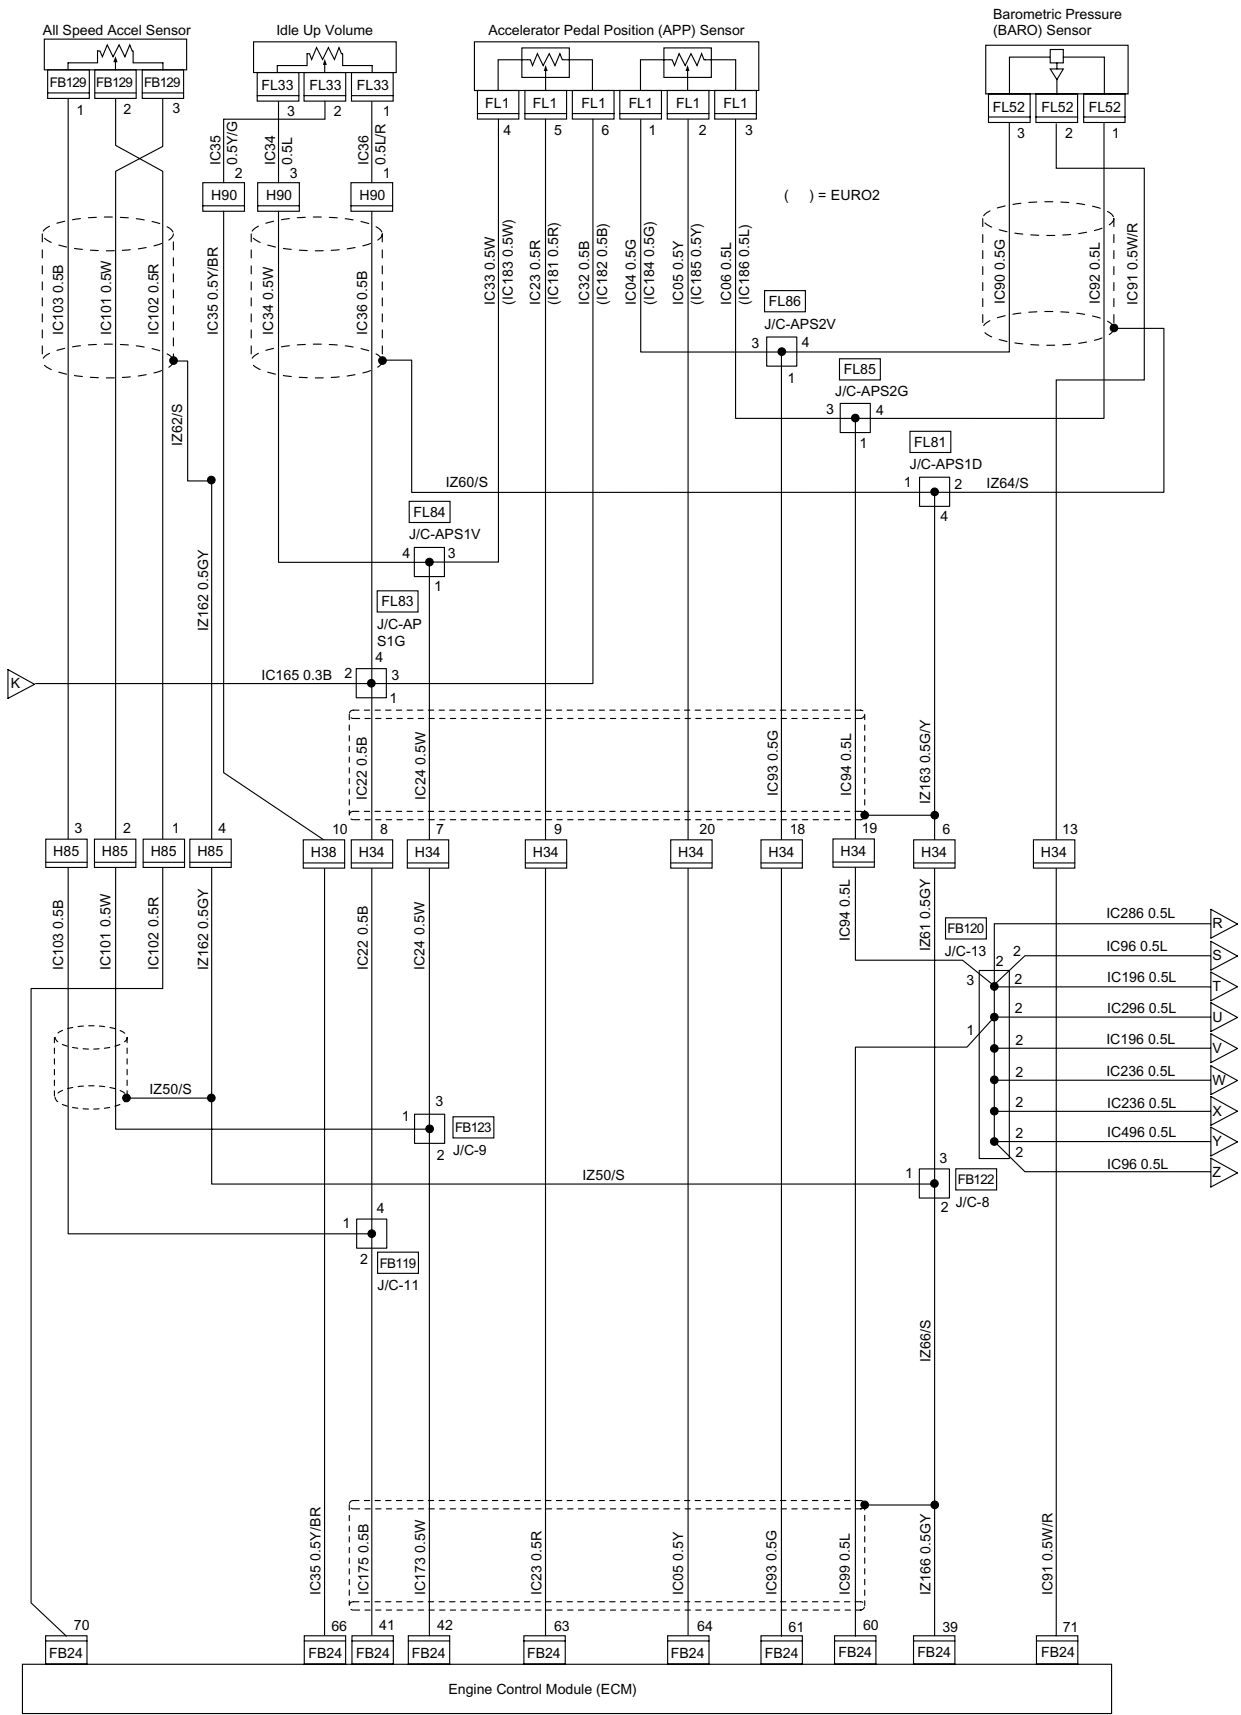

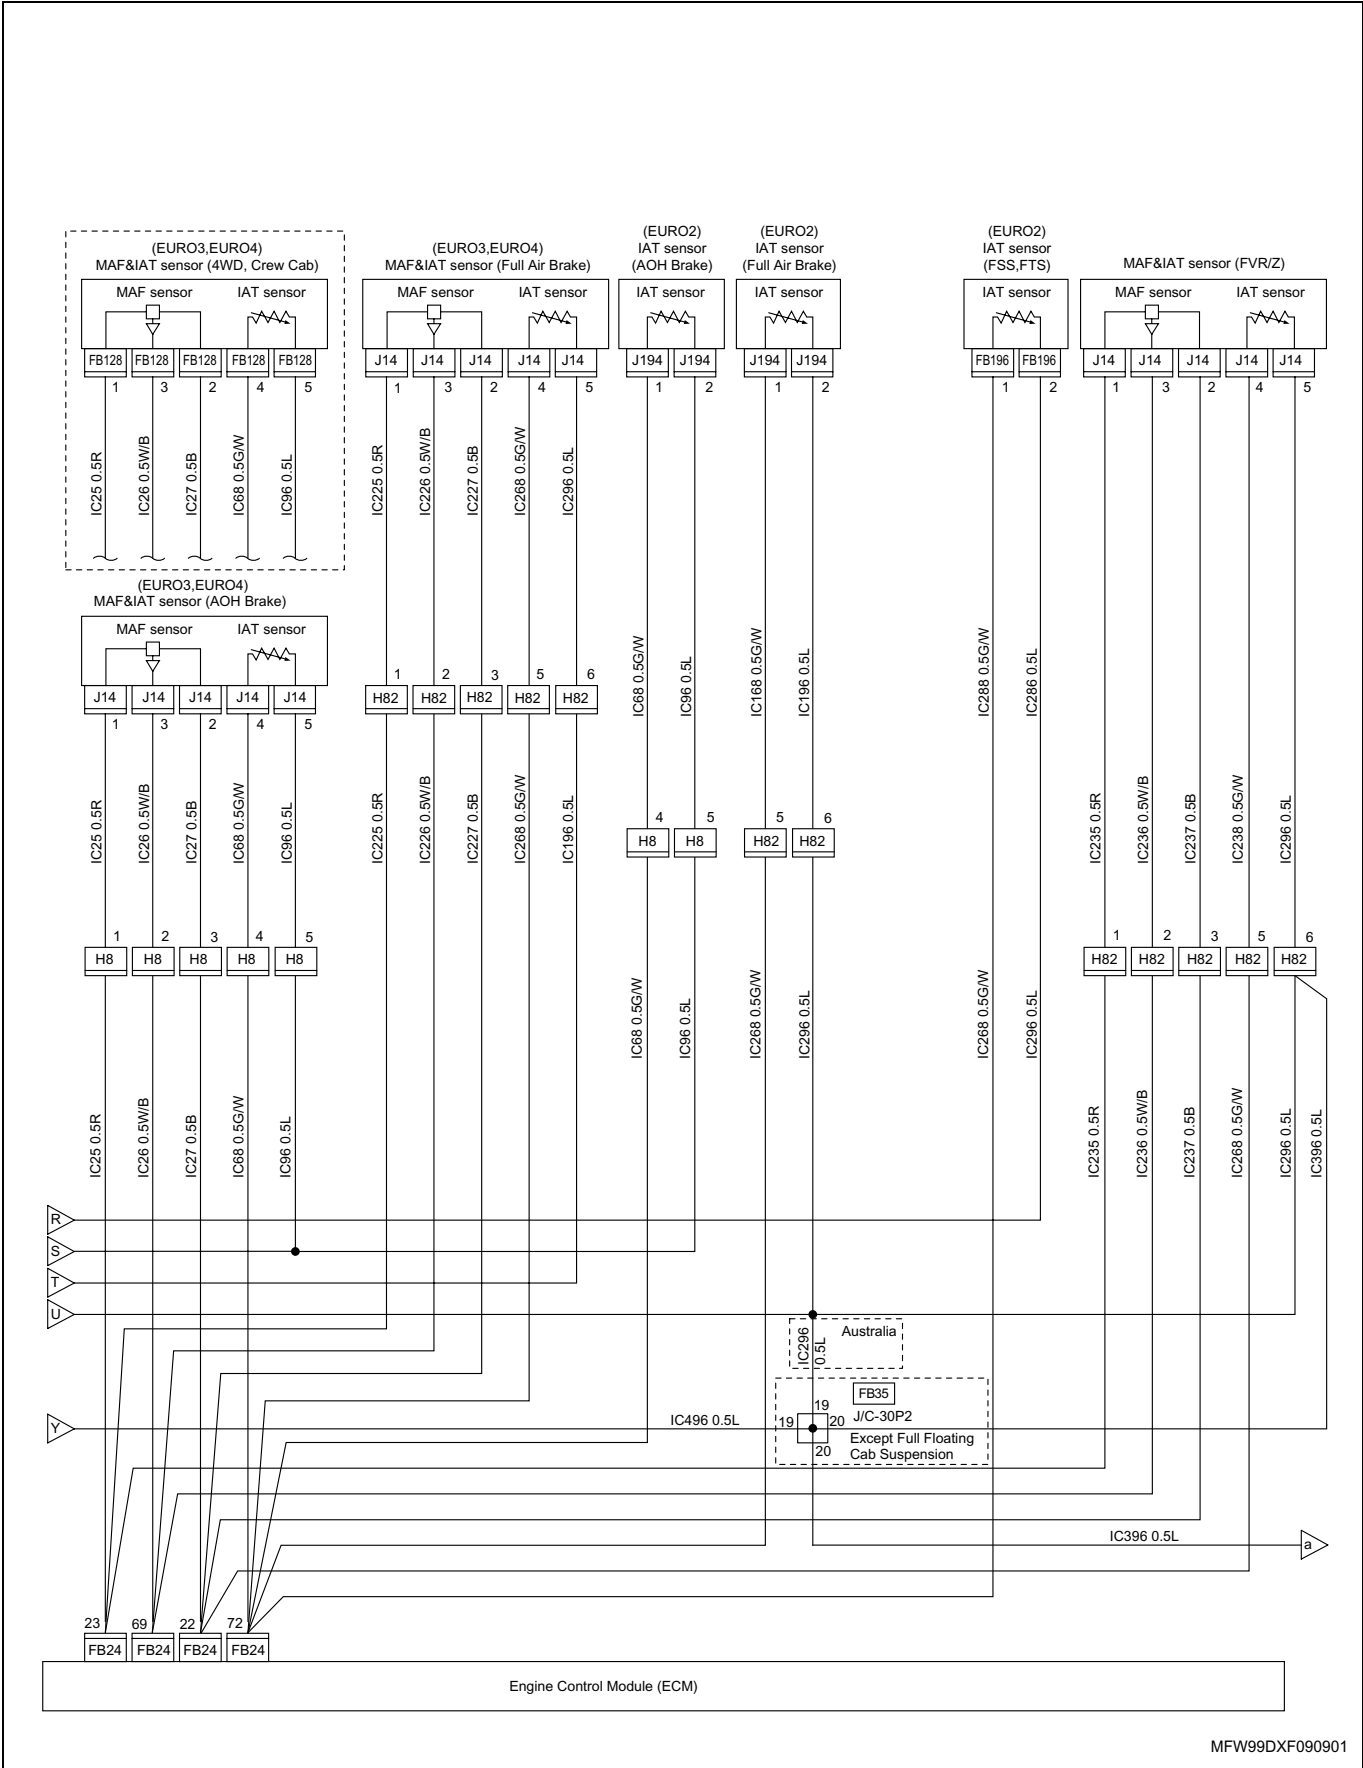



(8/13)

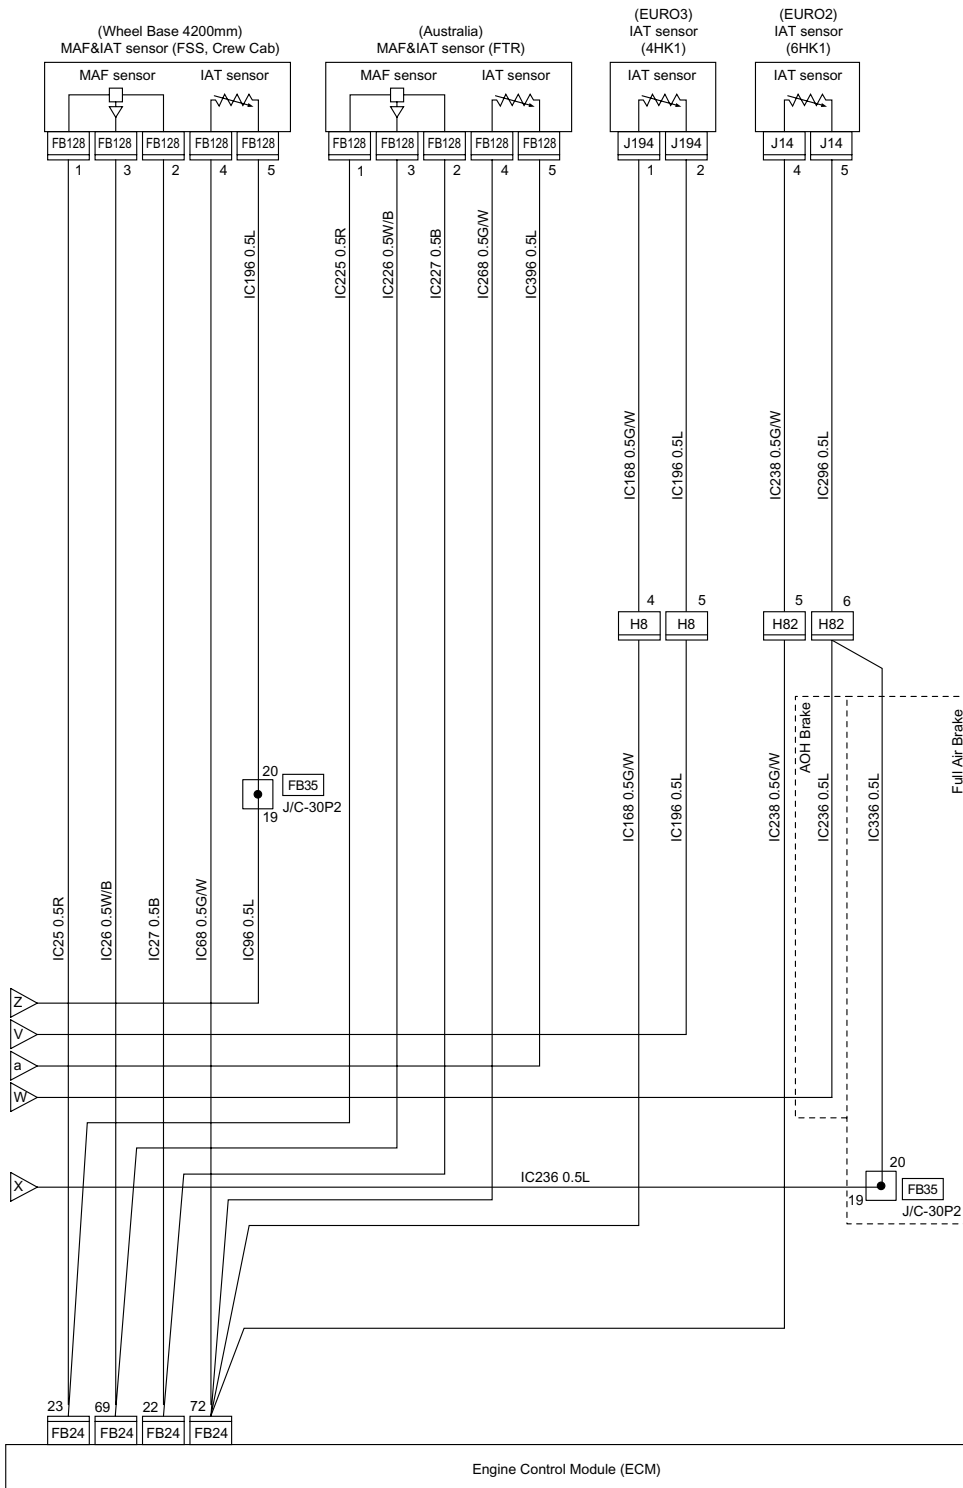

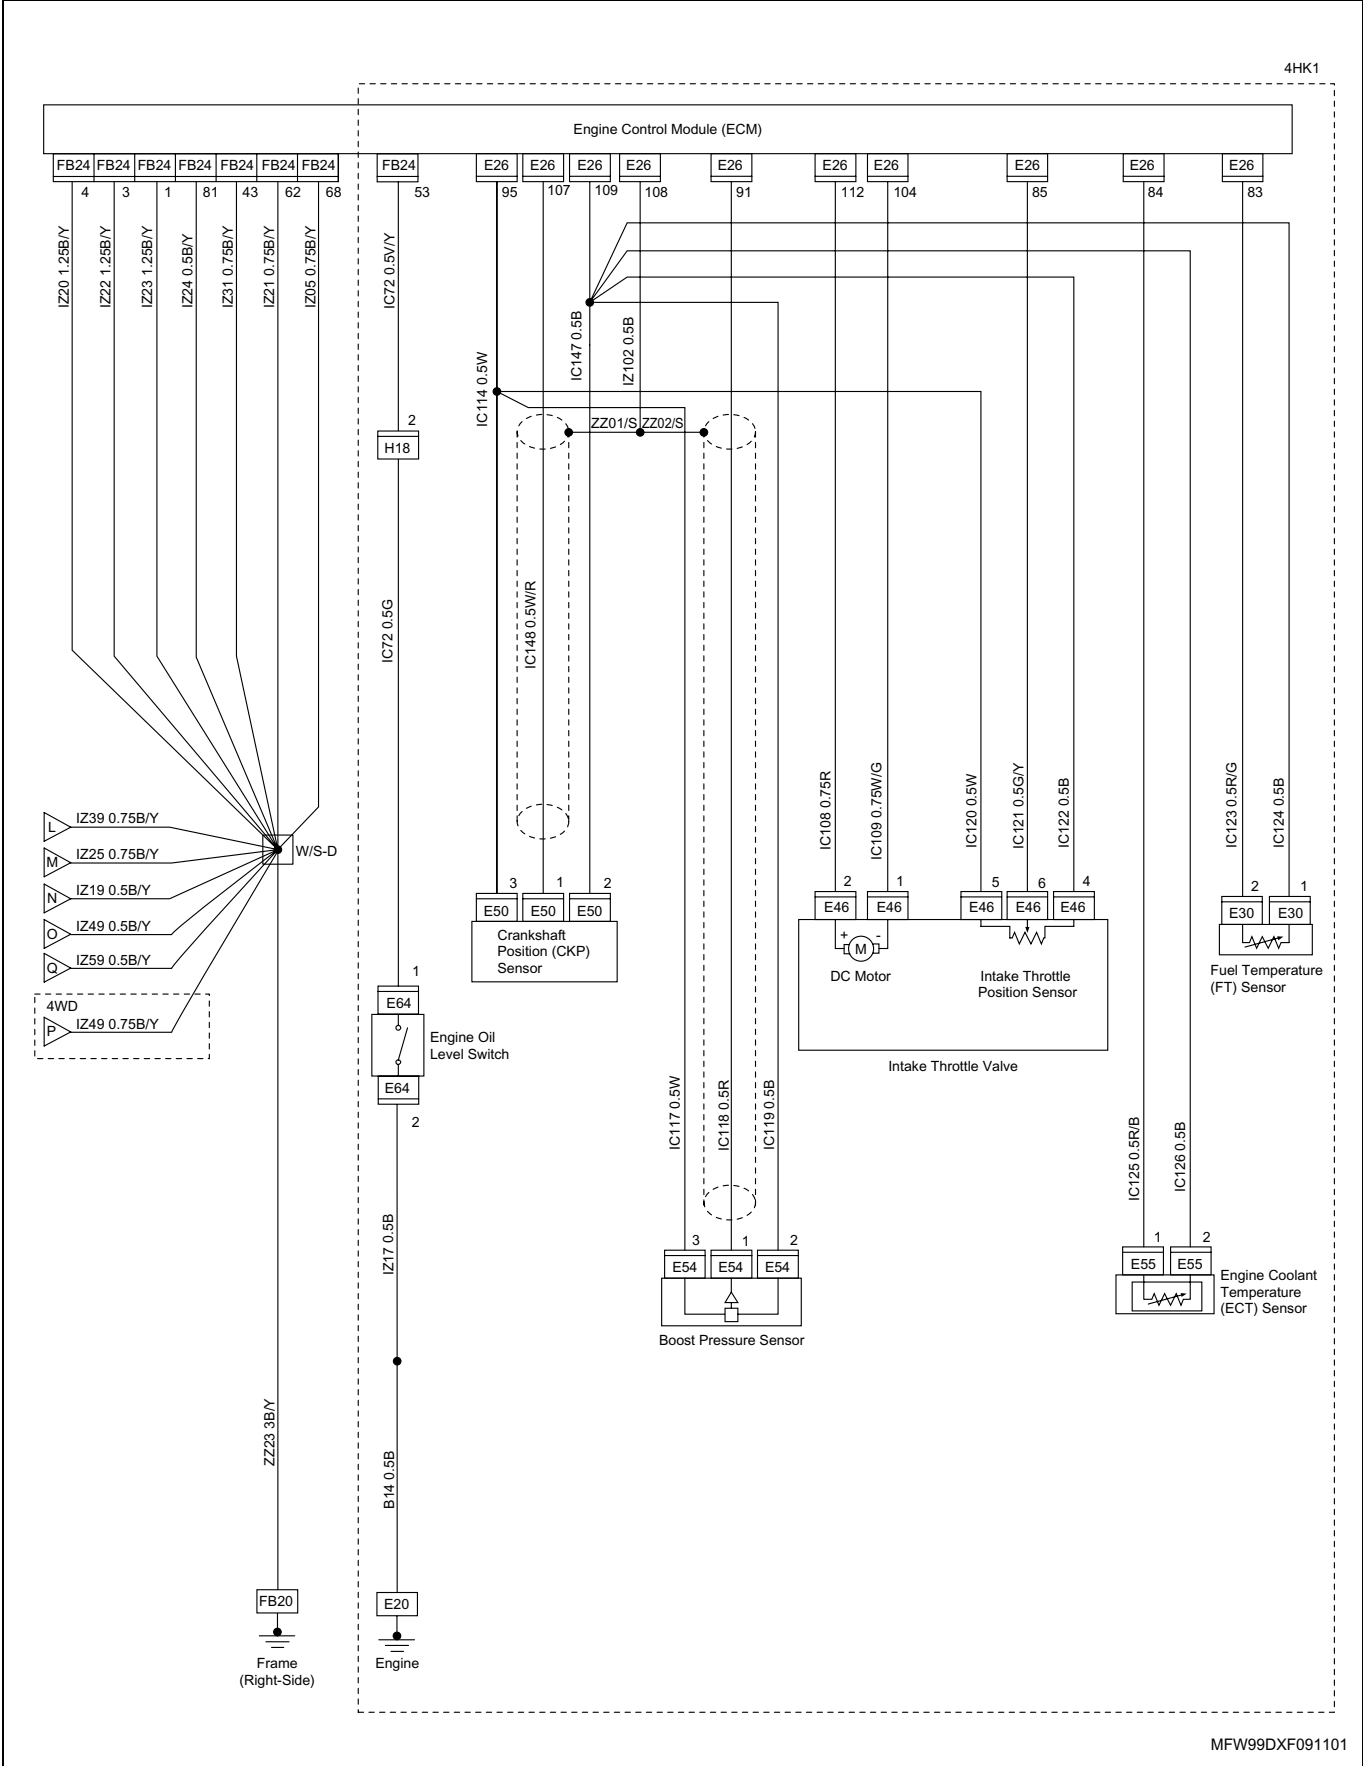


(10/13)

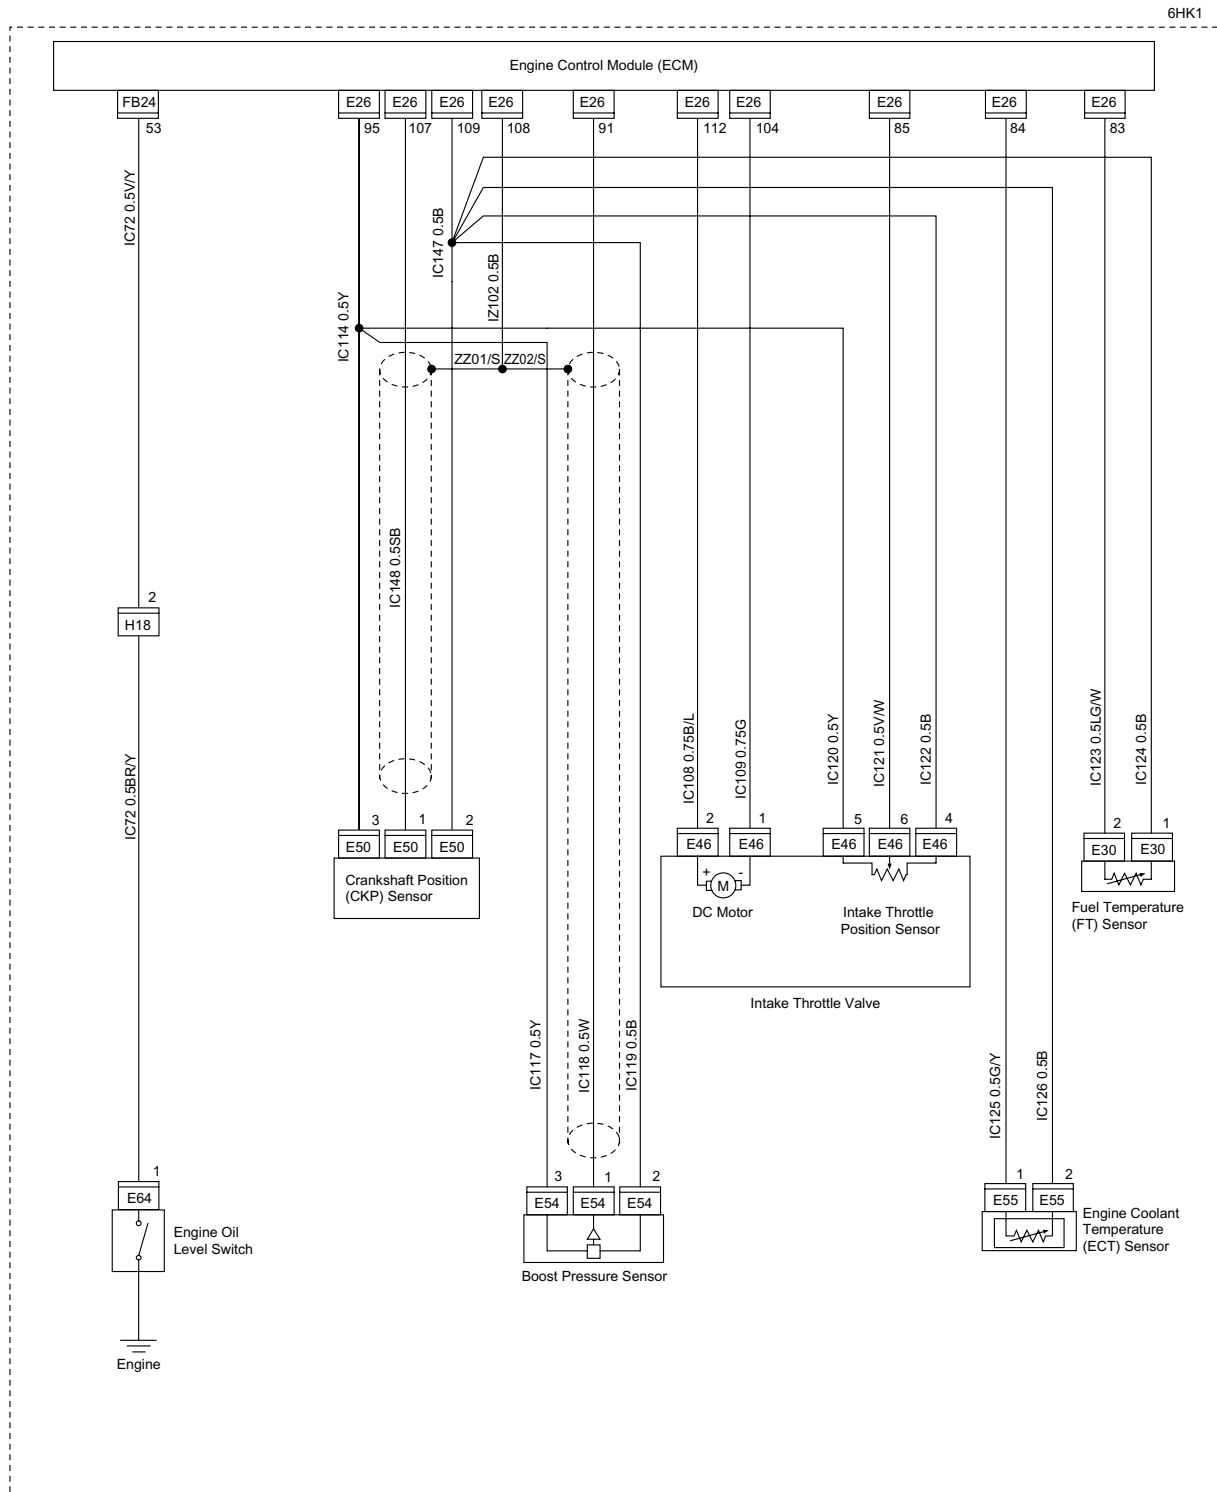


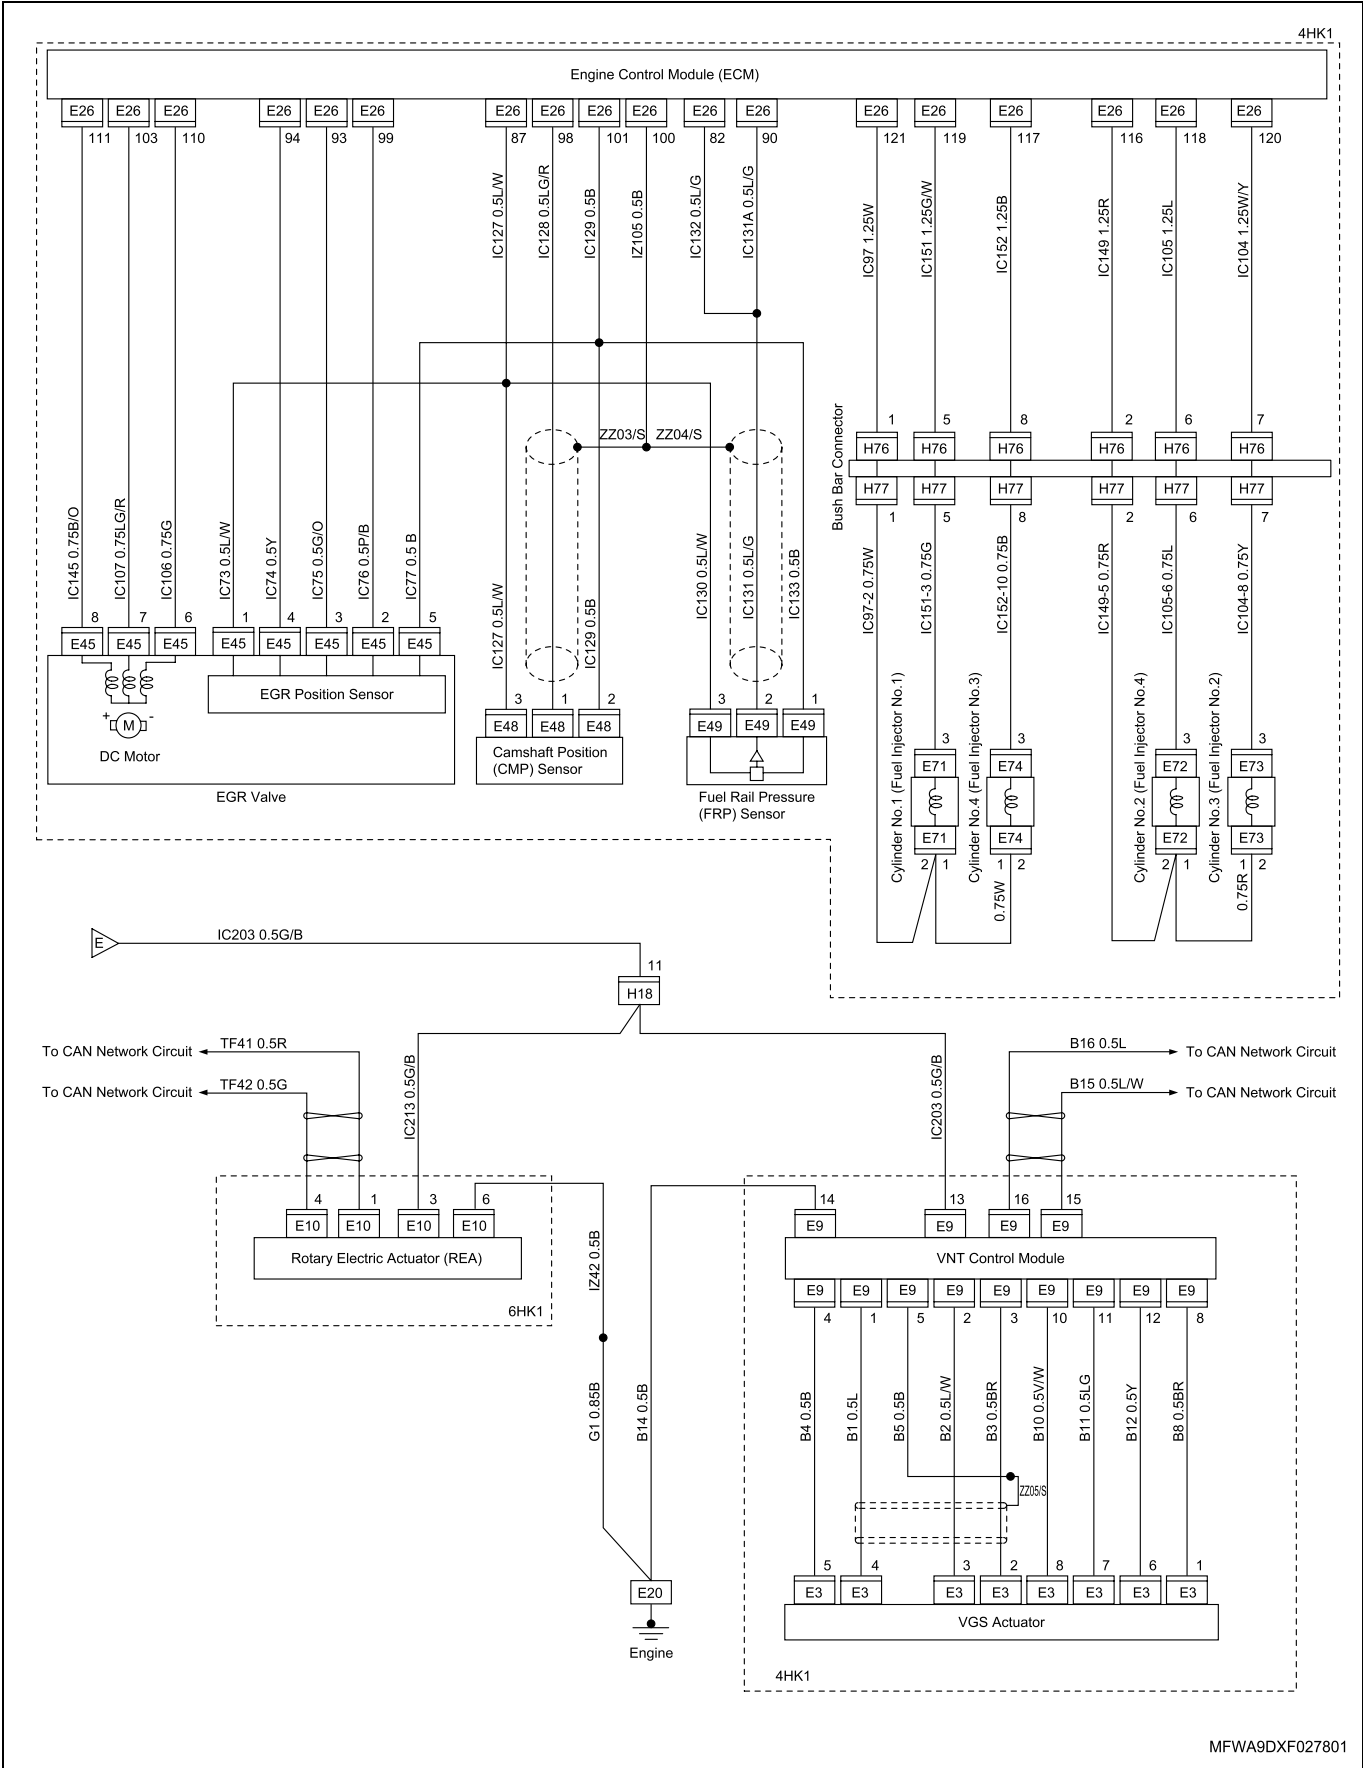

(12/13)

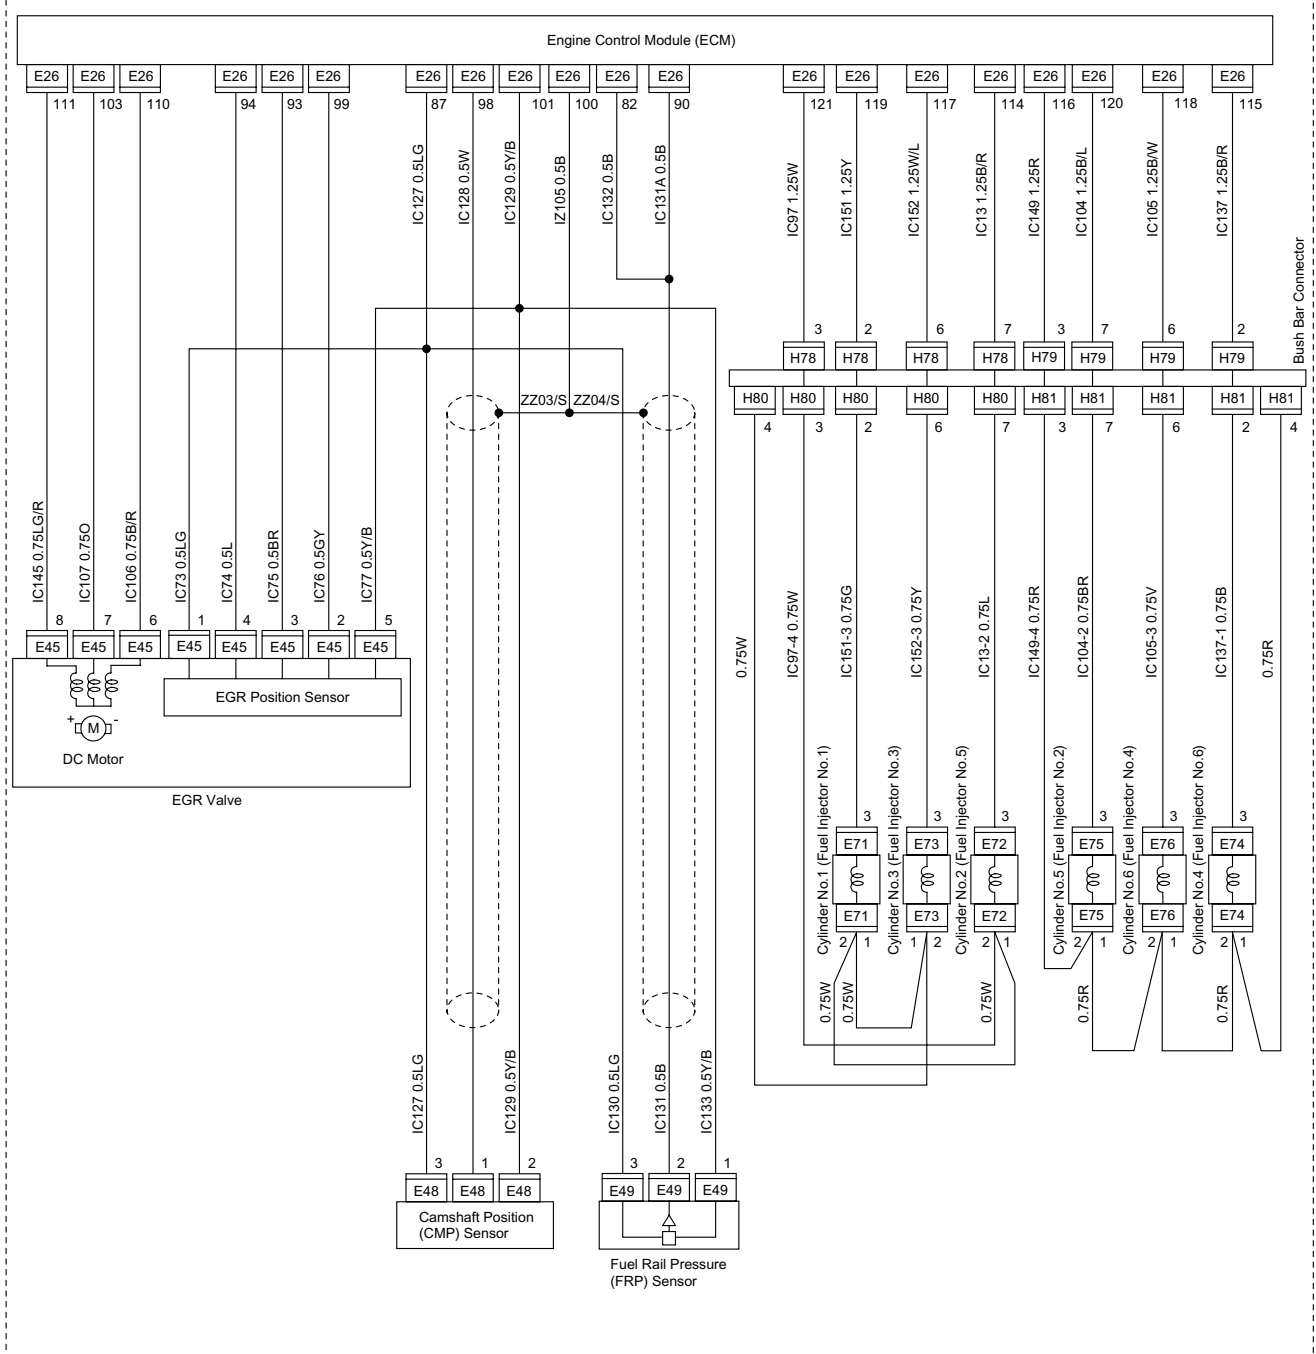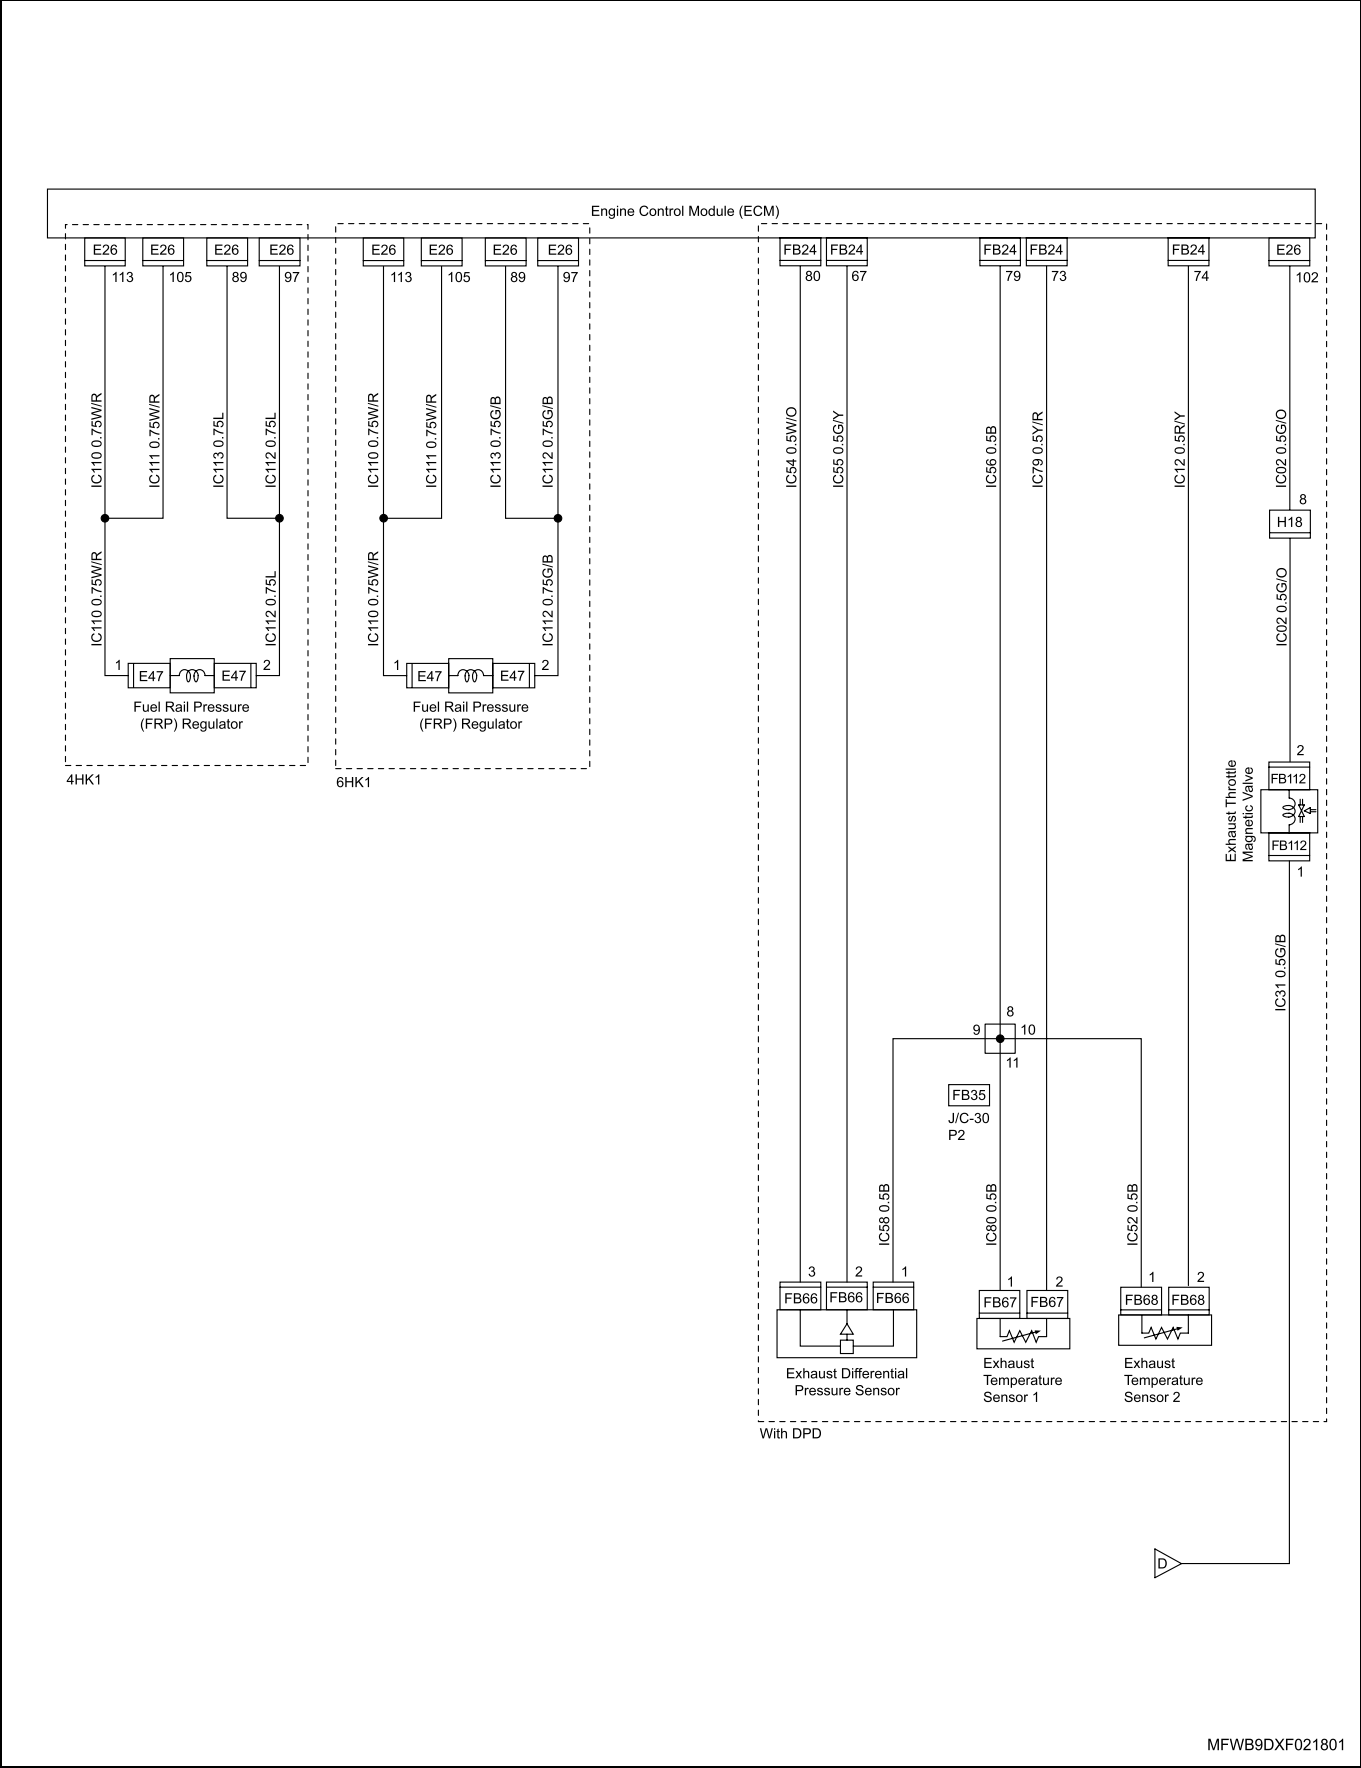
6HK1







Indonesia

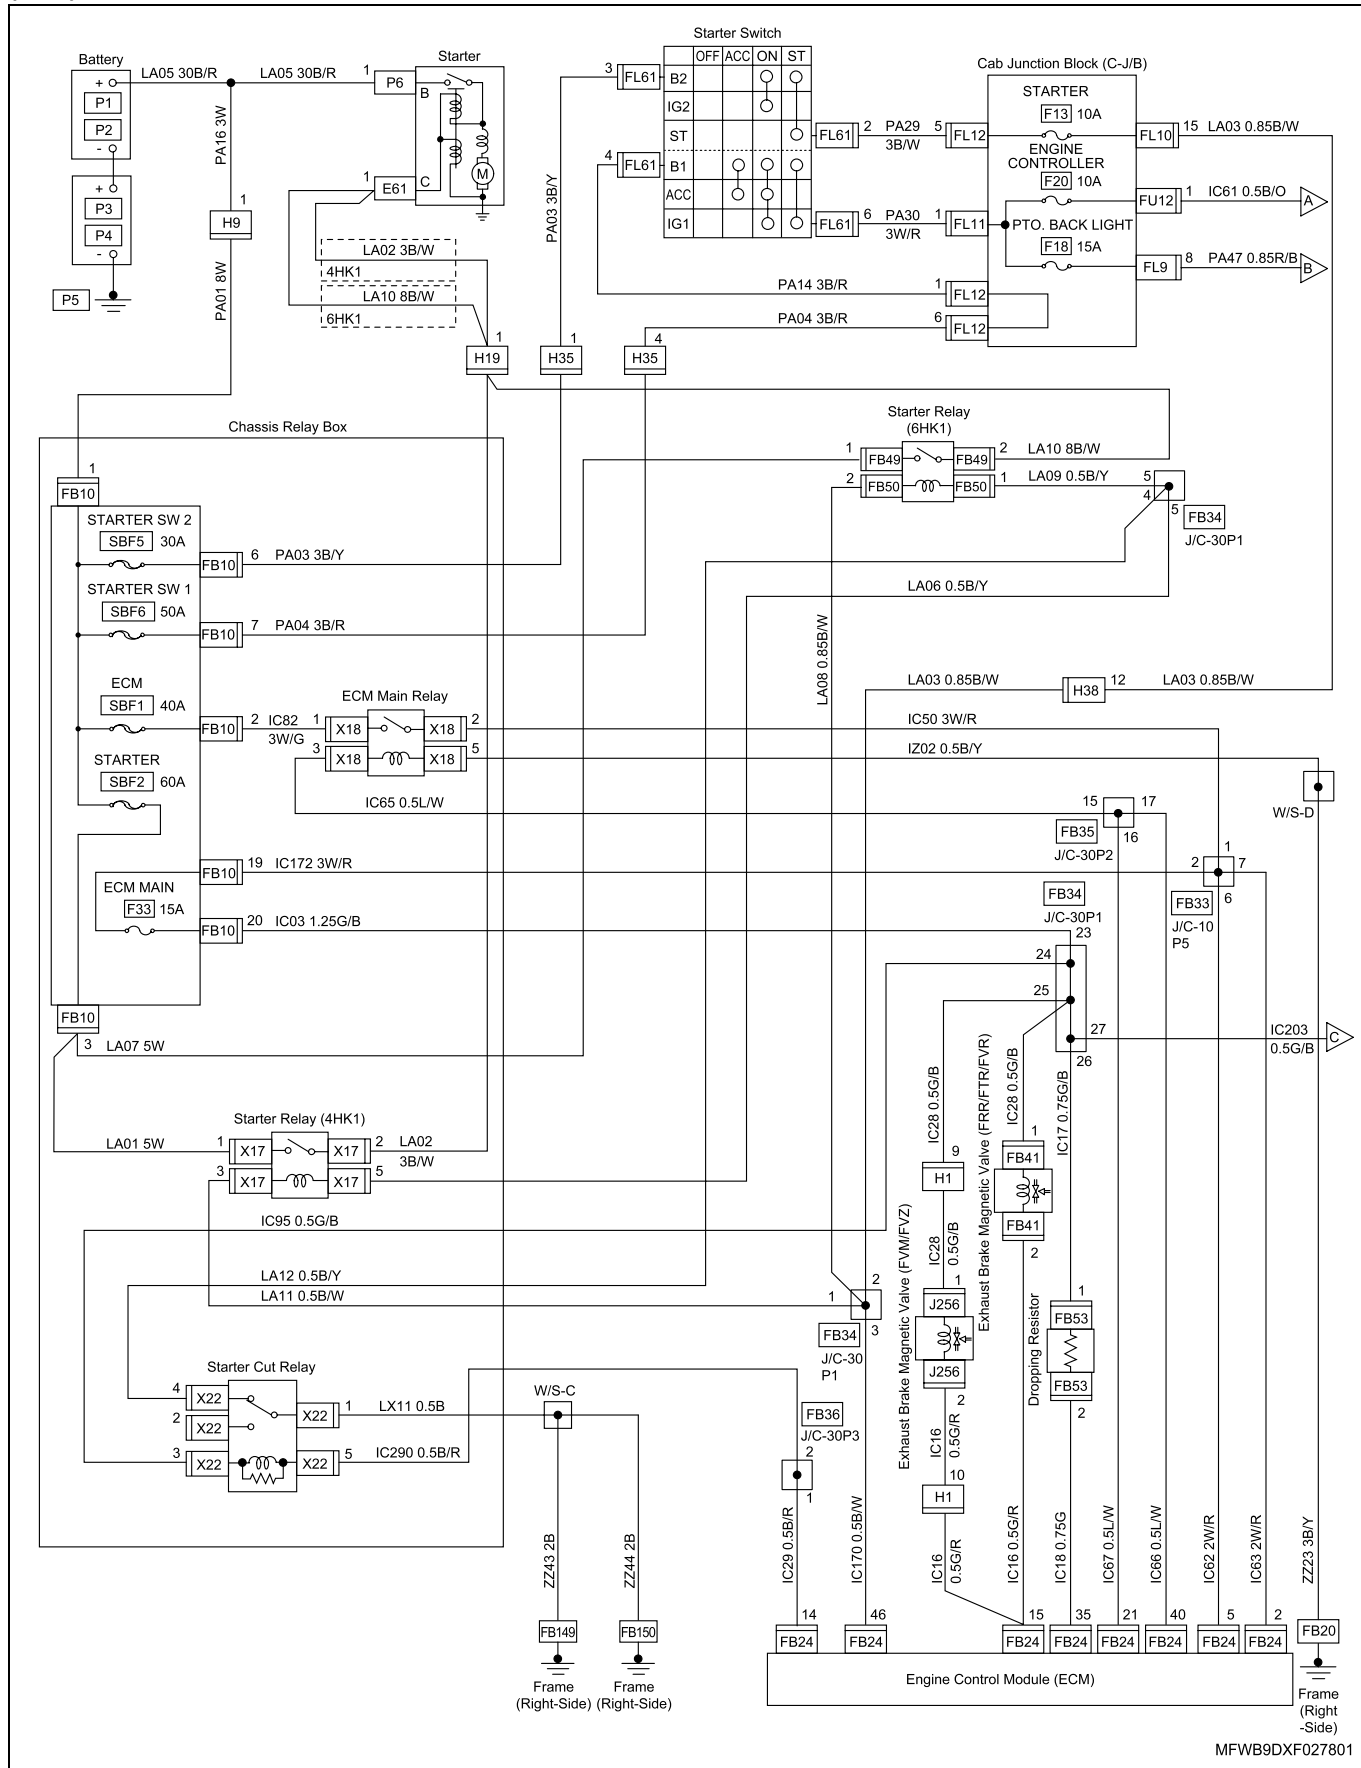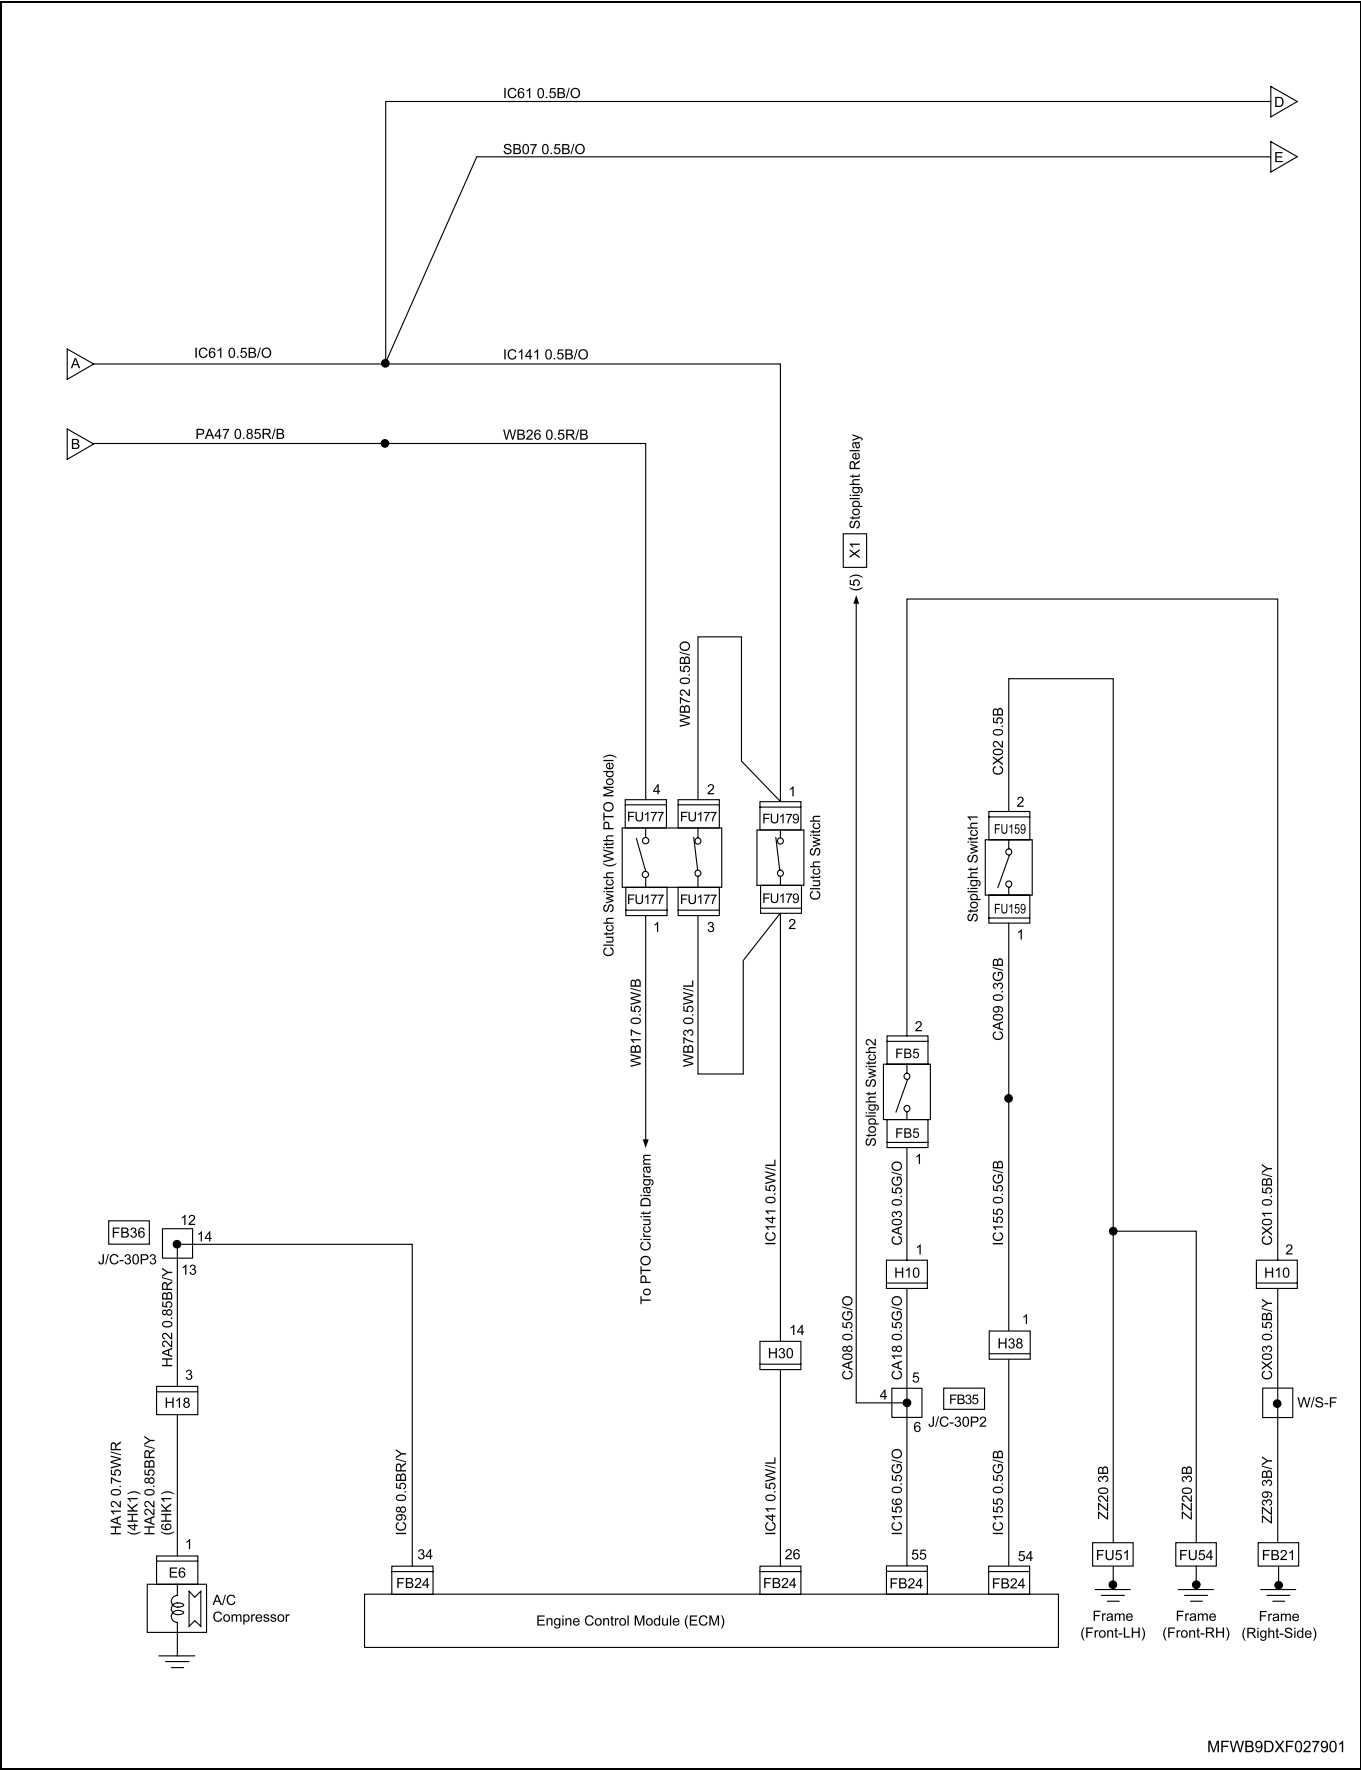(1/10)






(3/10)

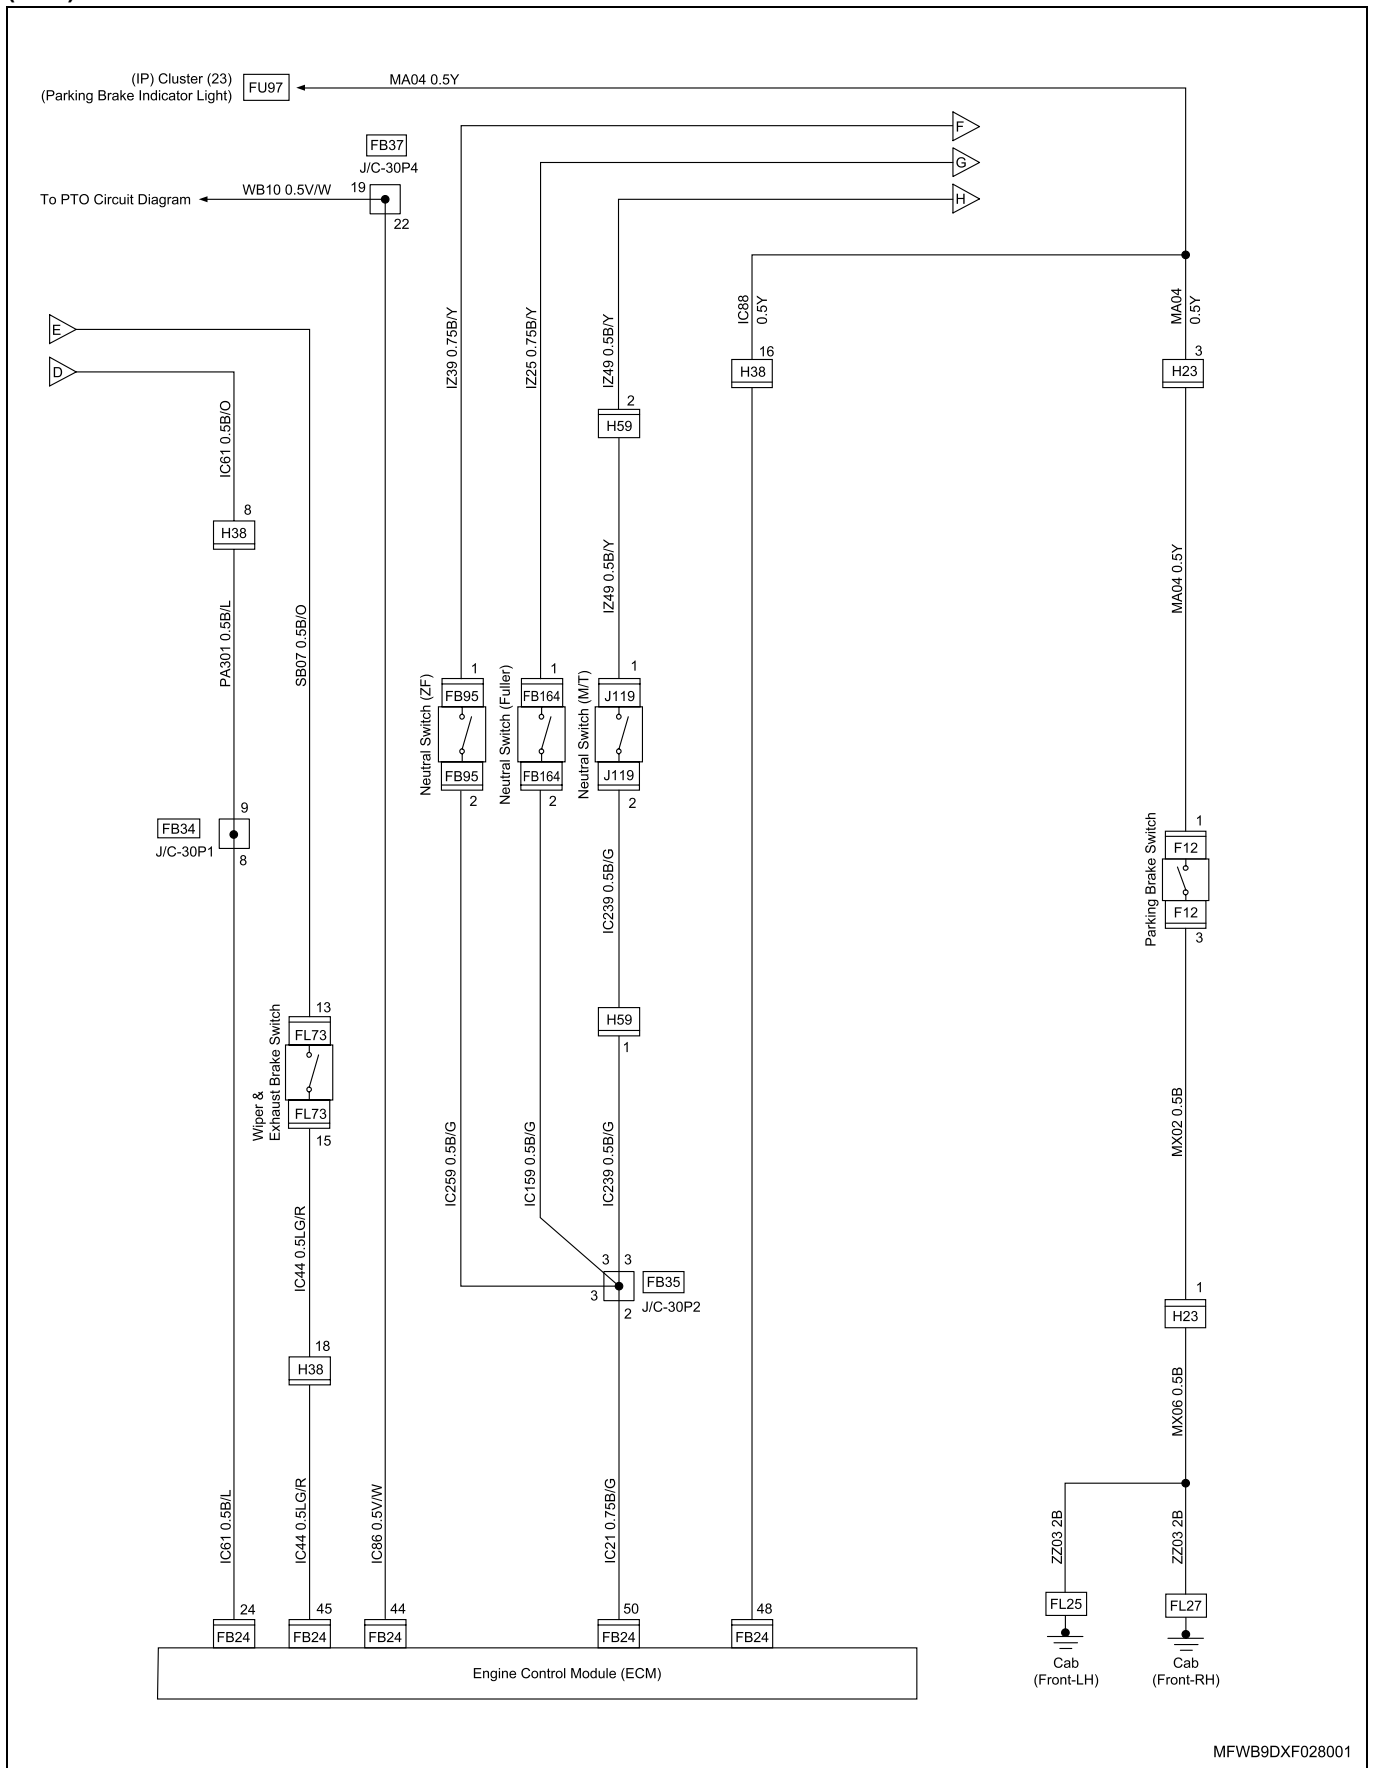





(5/10)

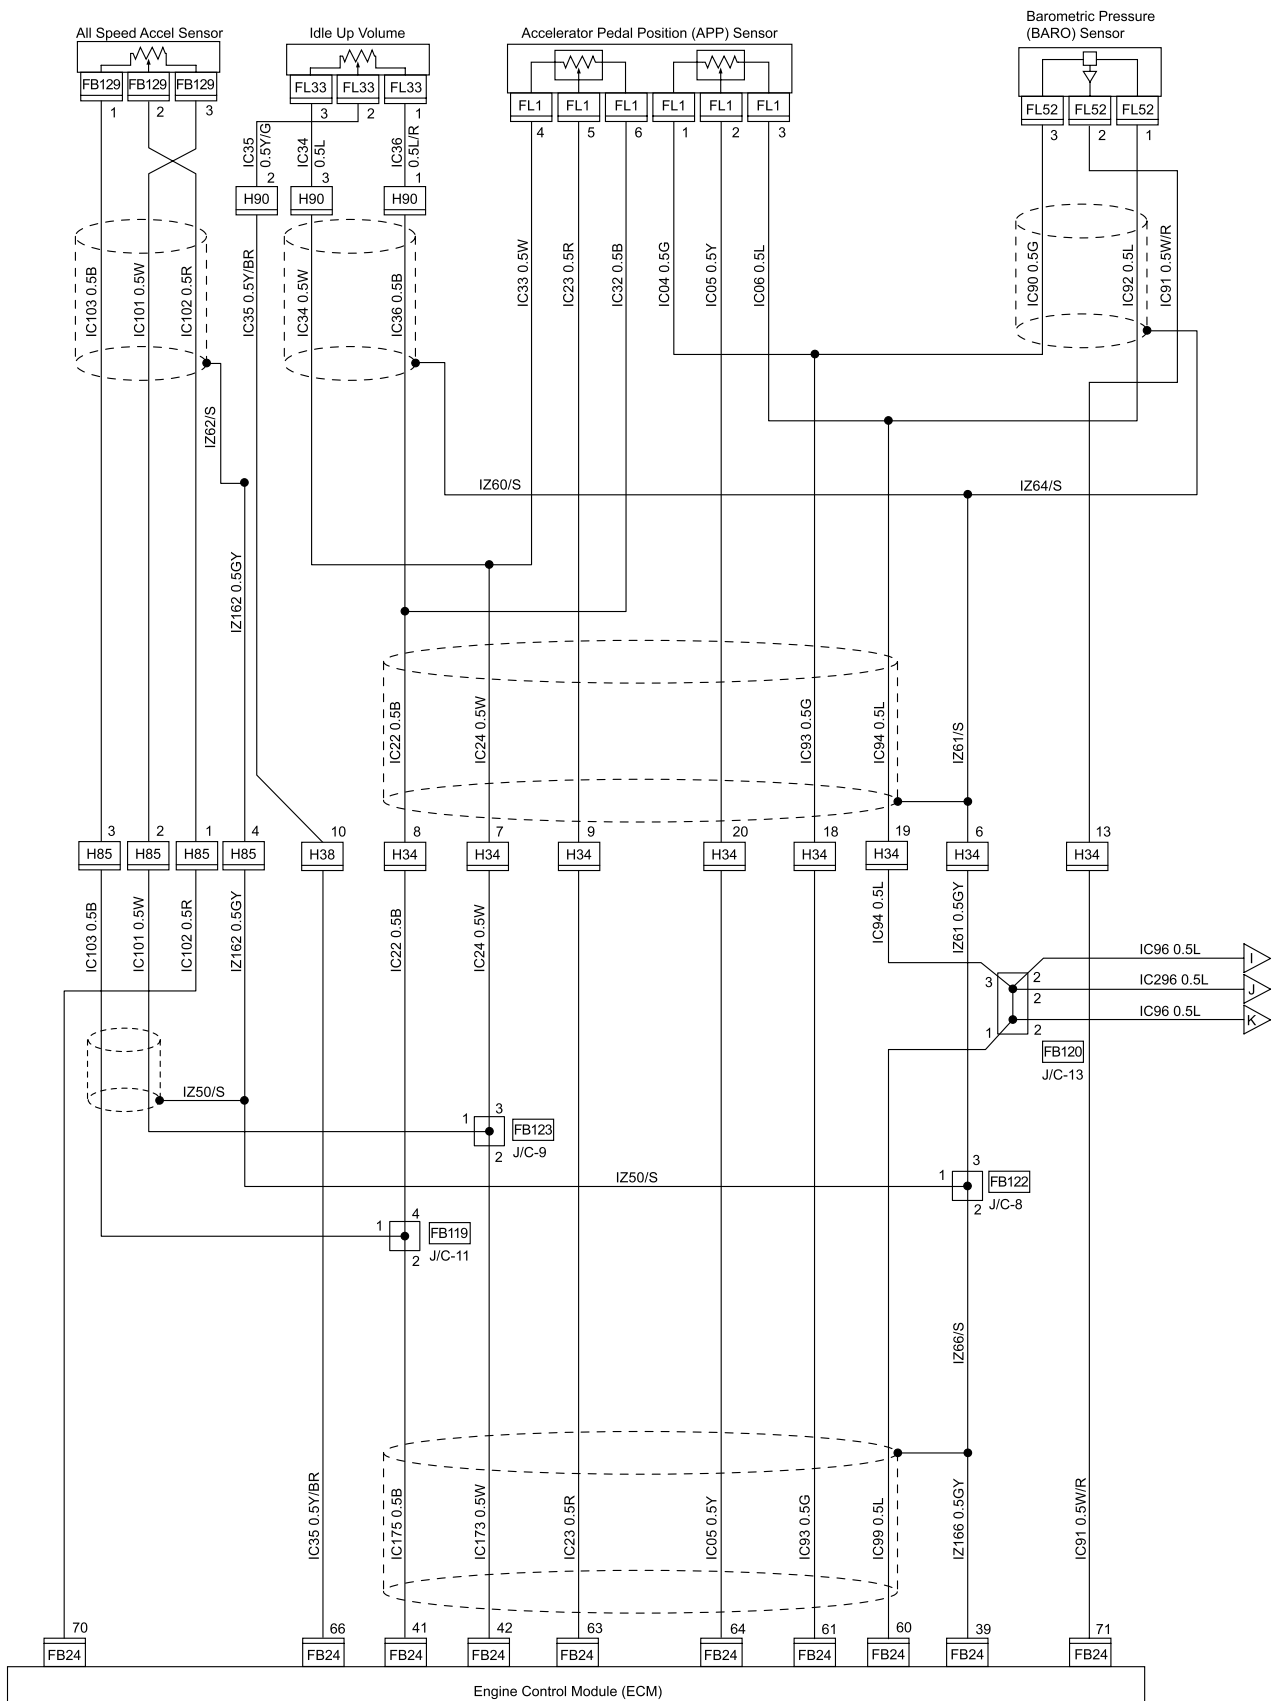


(6/10)

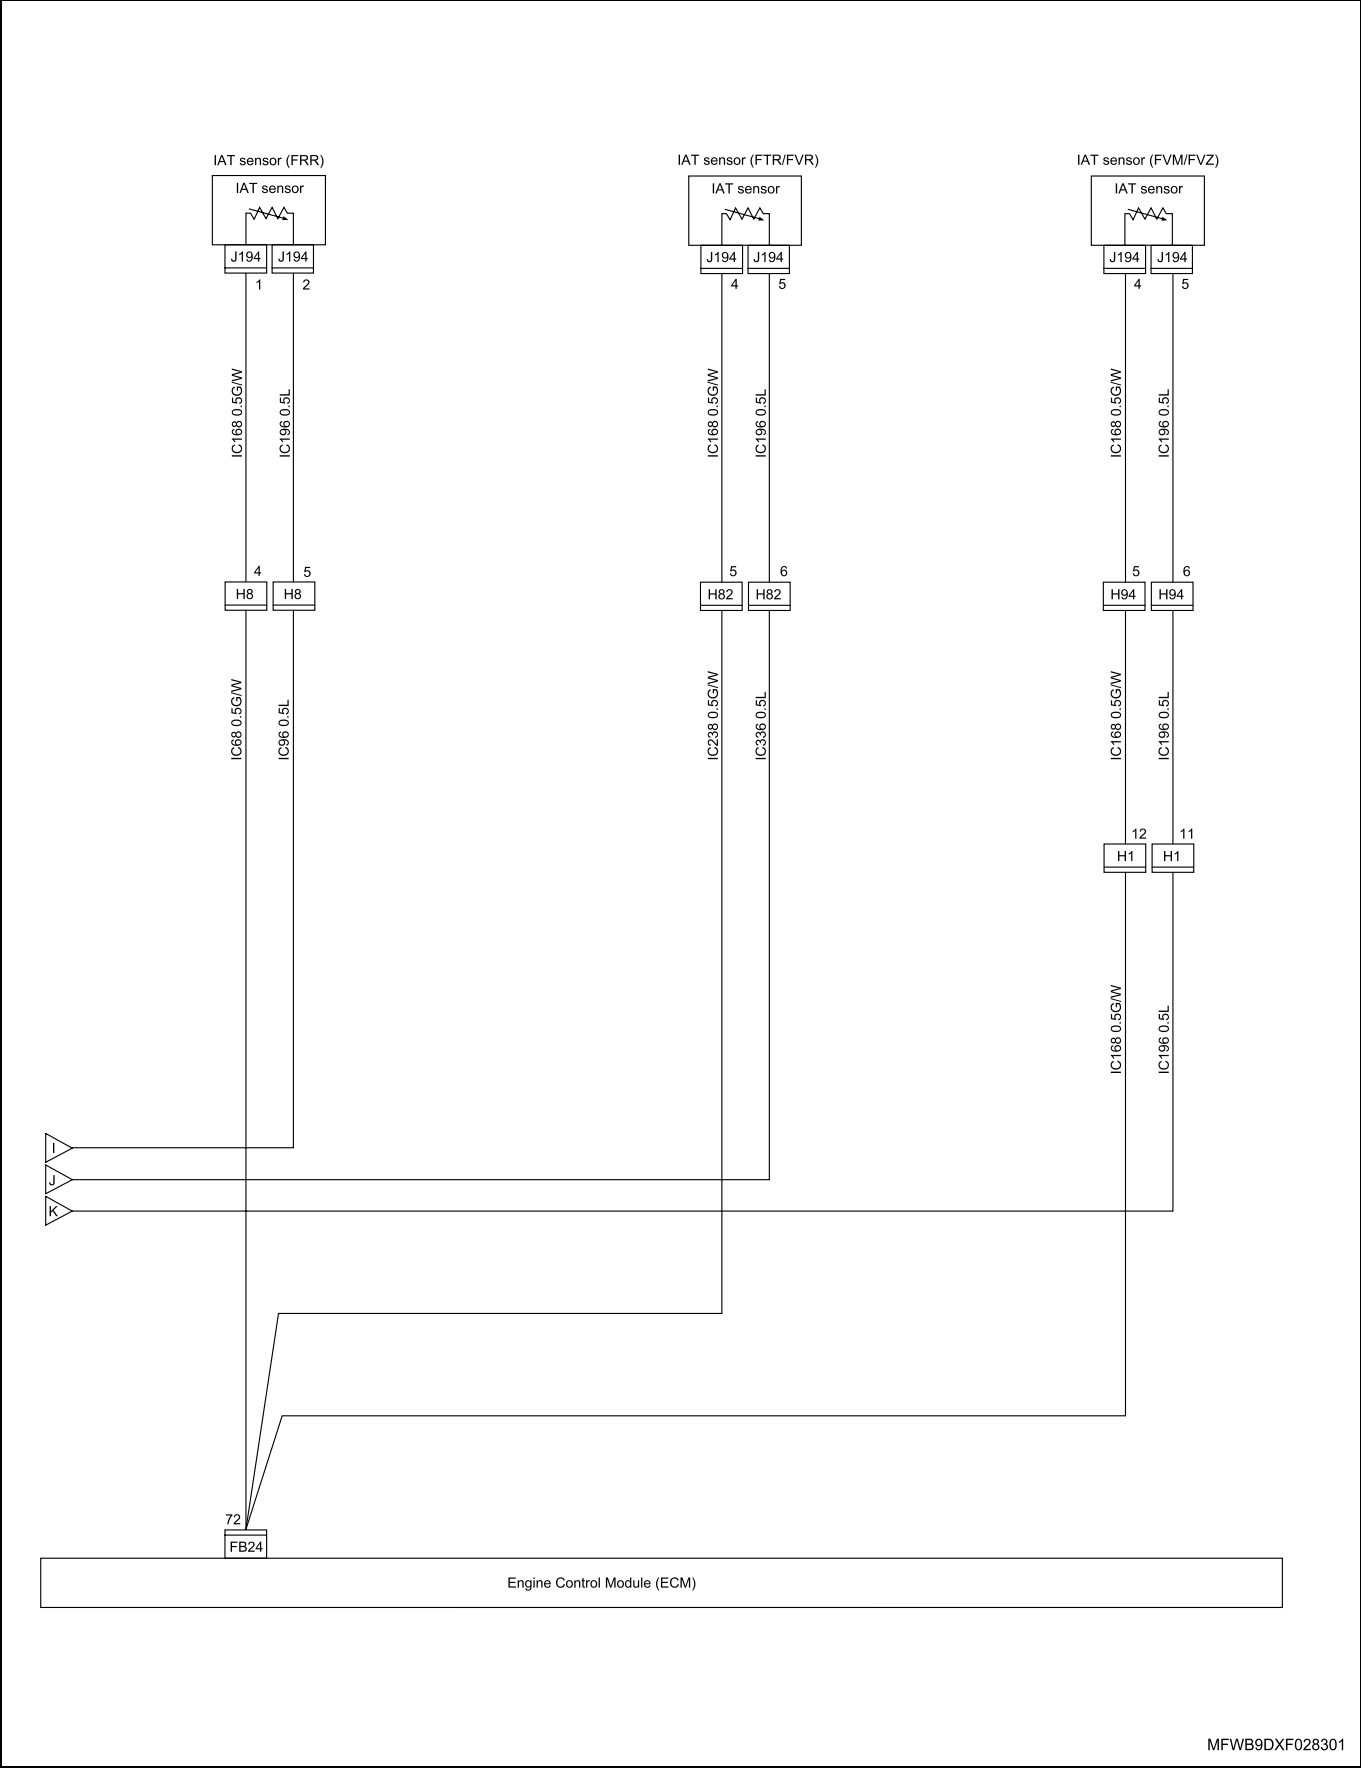



(7/10)

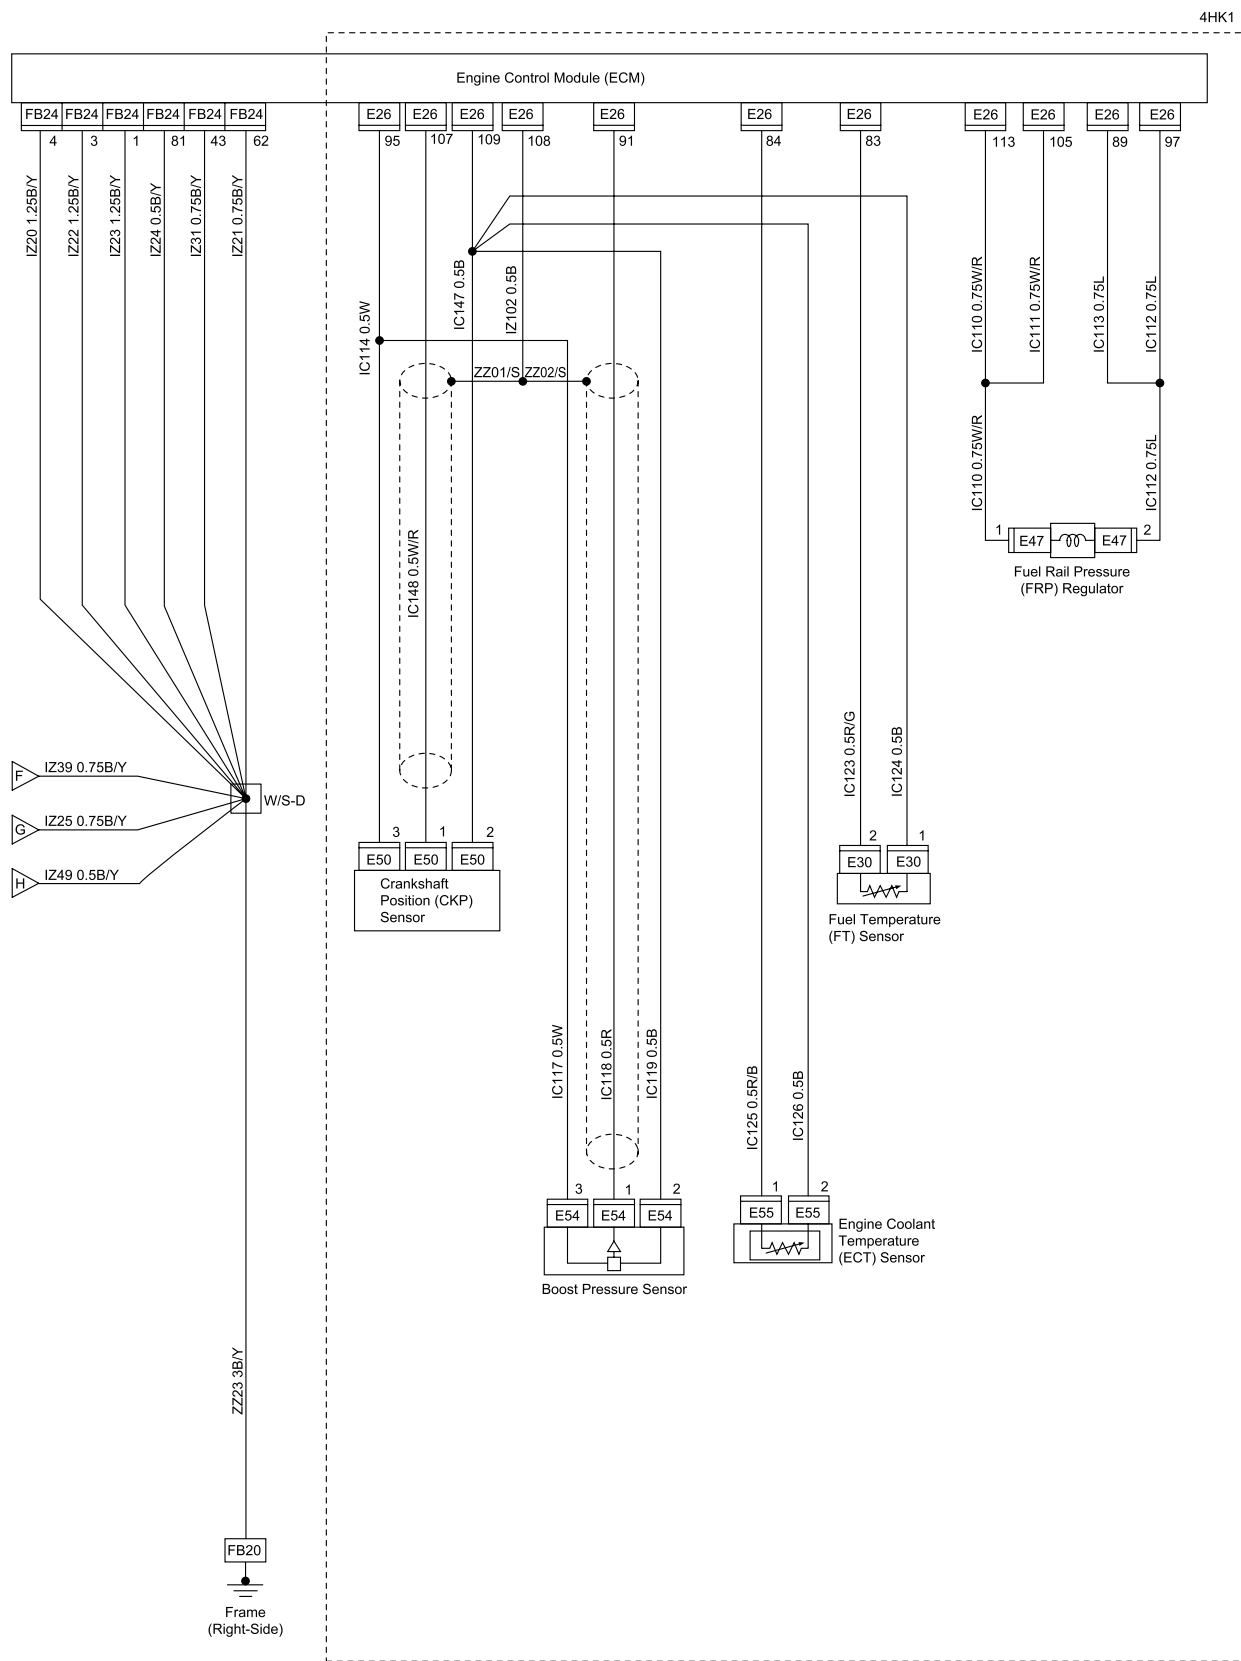

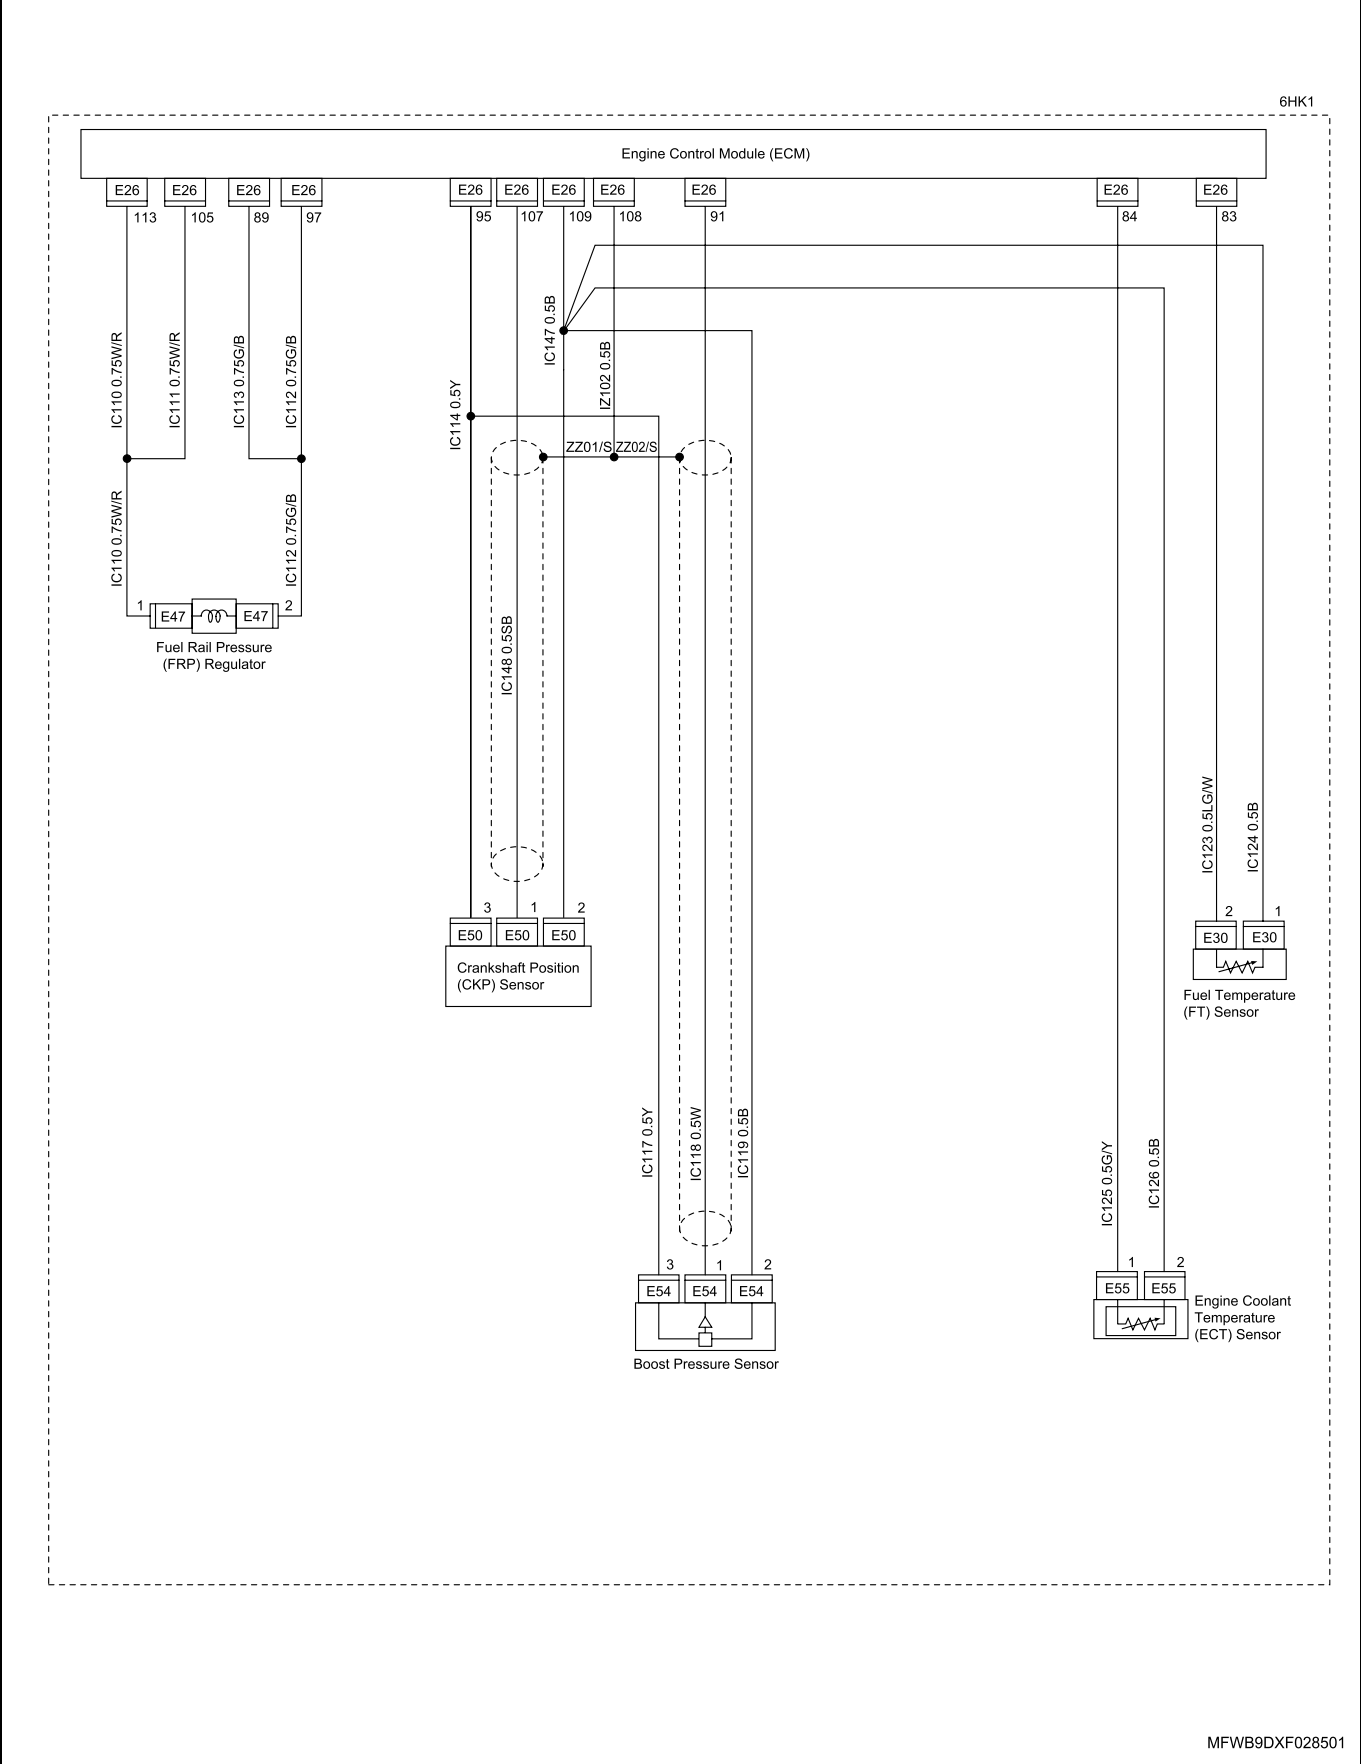


(9/10)

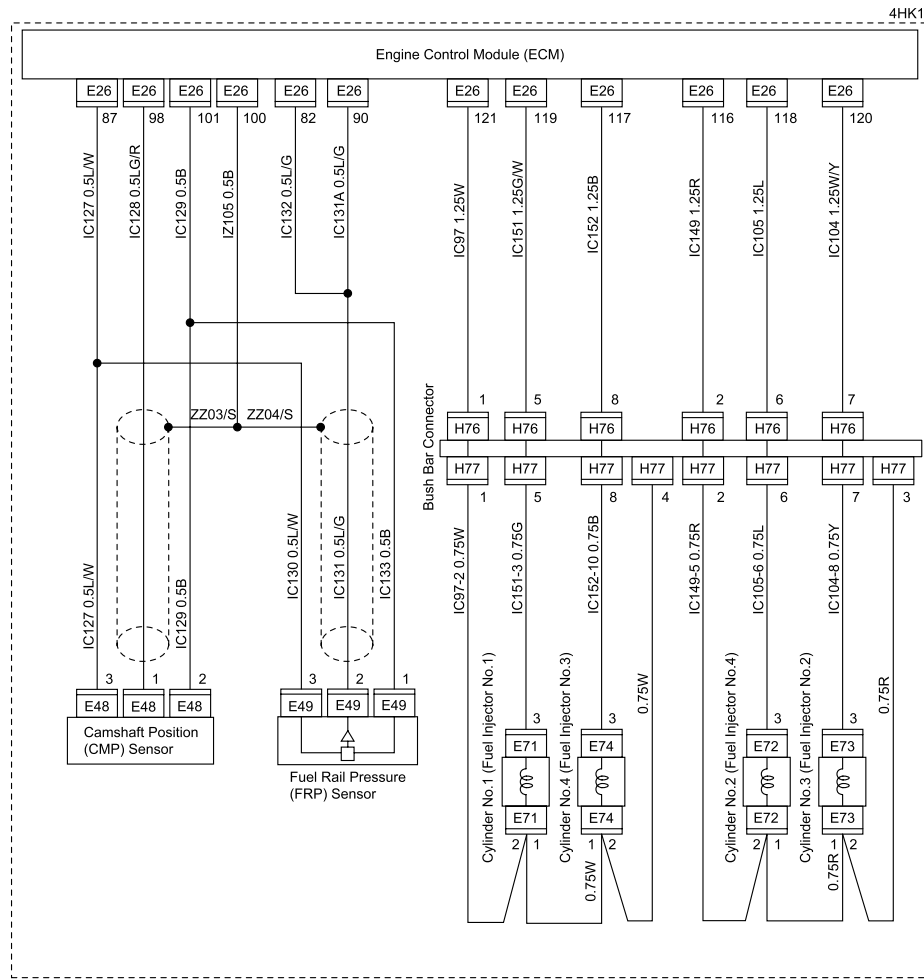


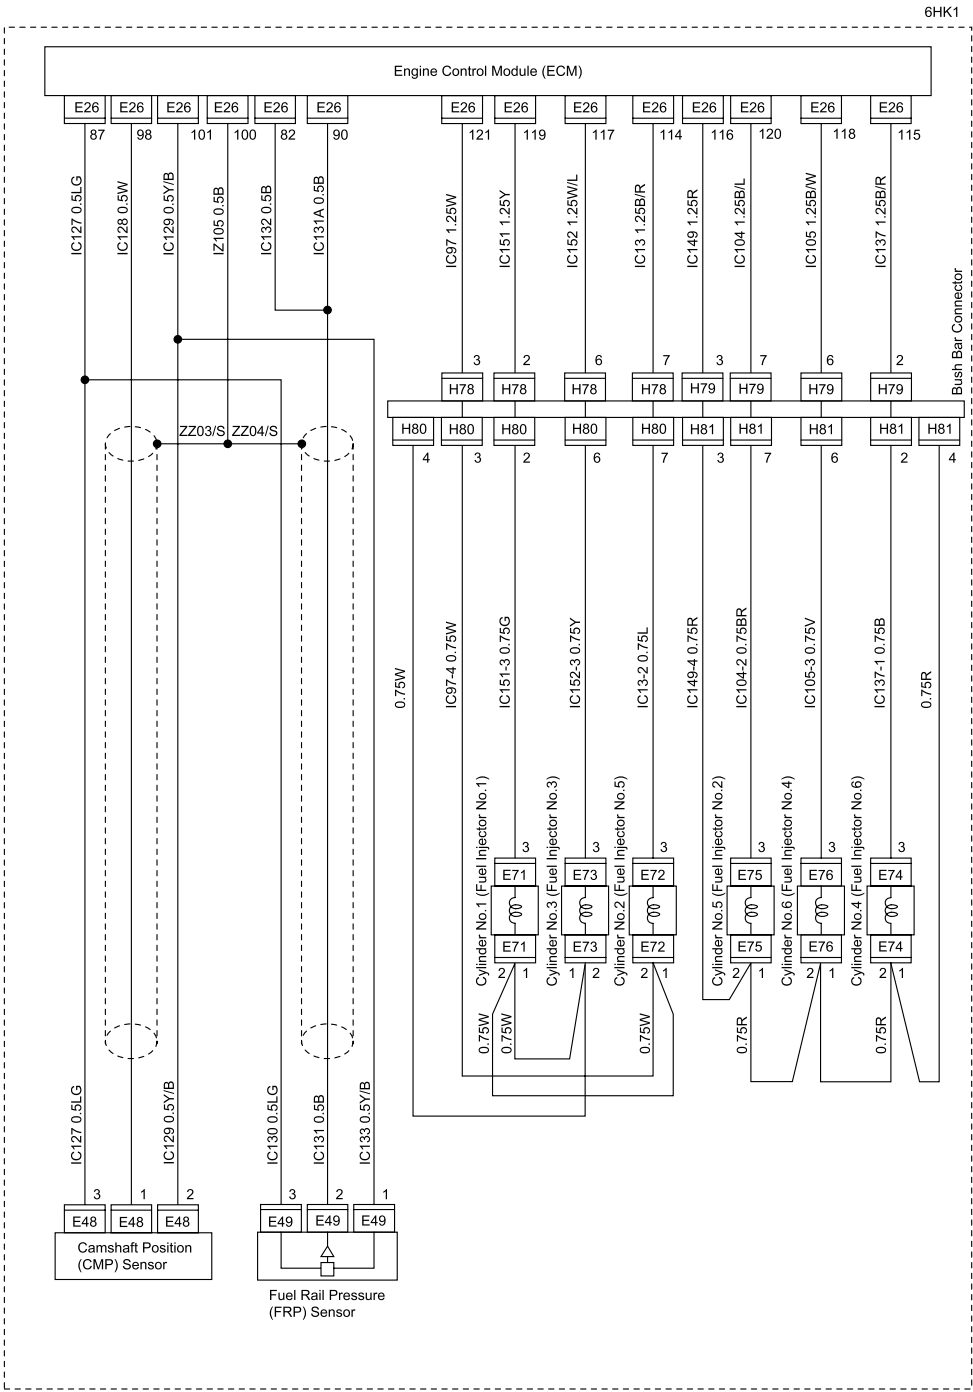


Transmission Control Module (Smoother)

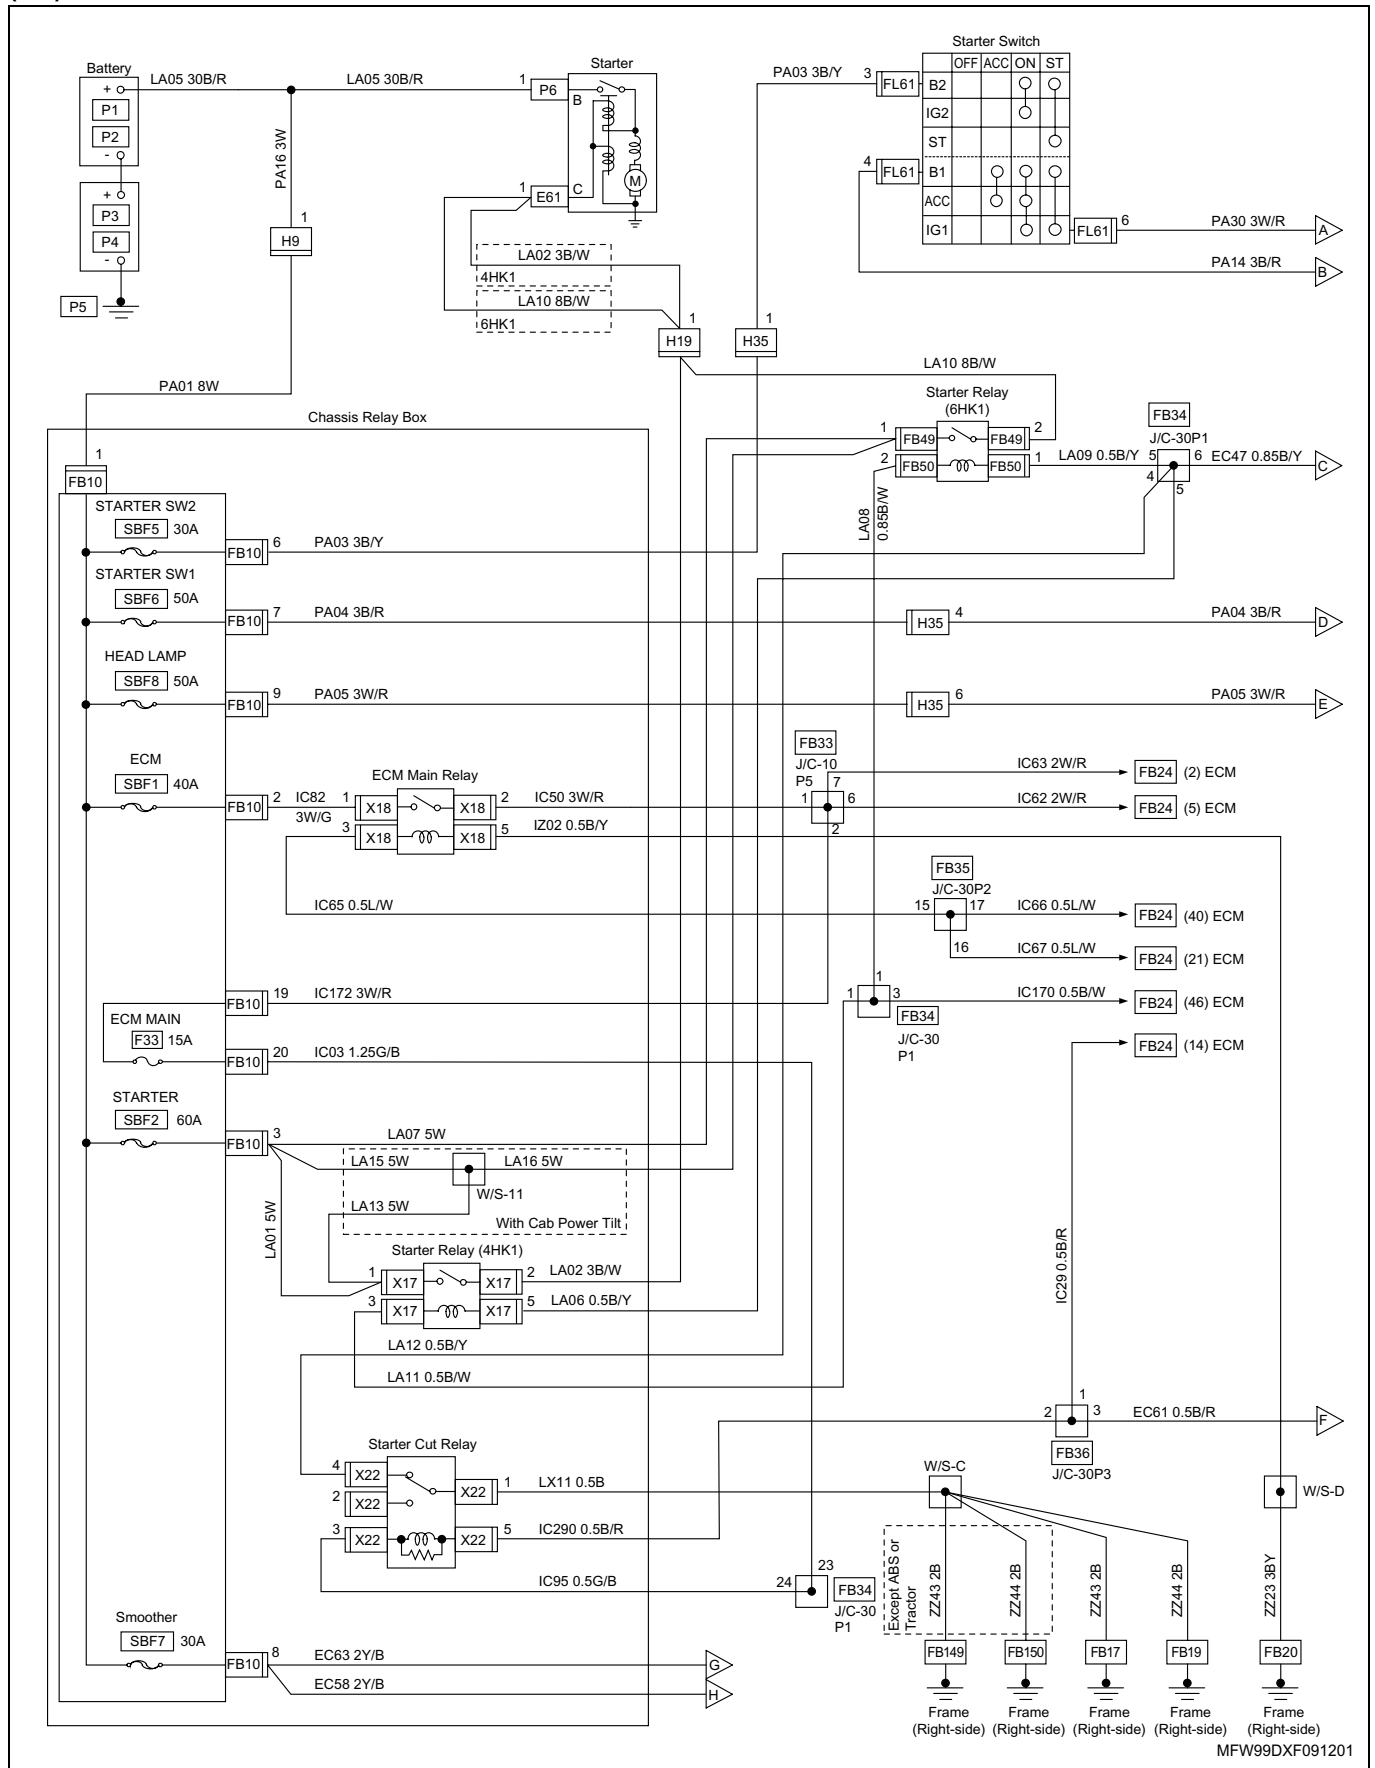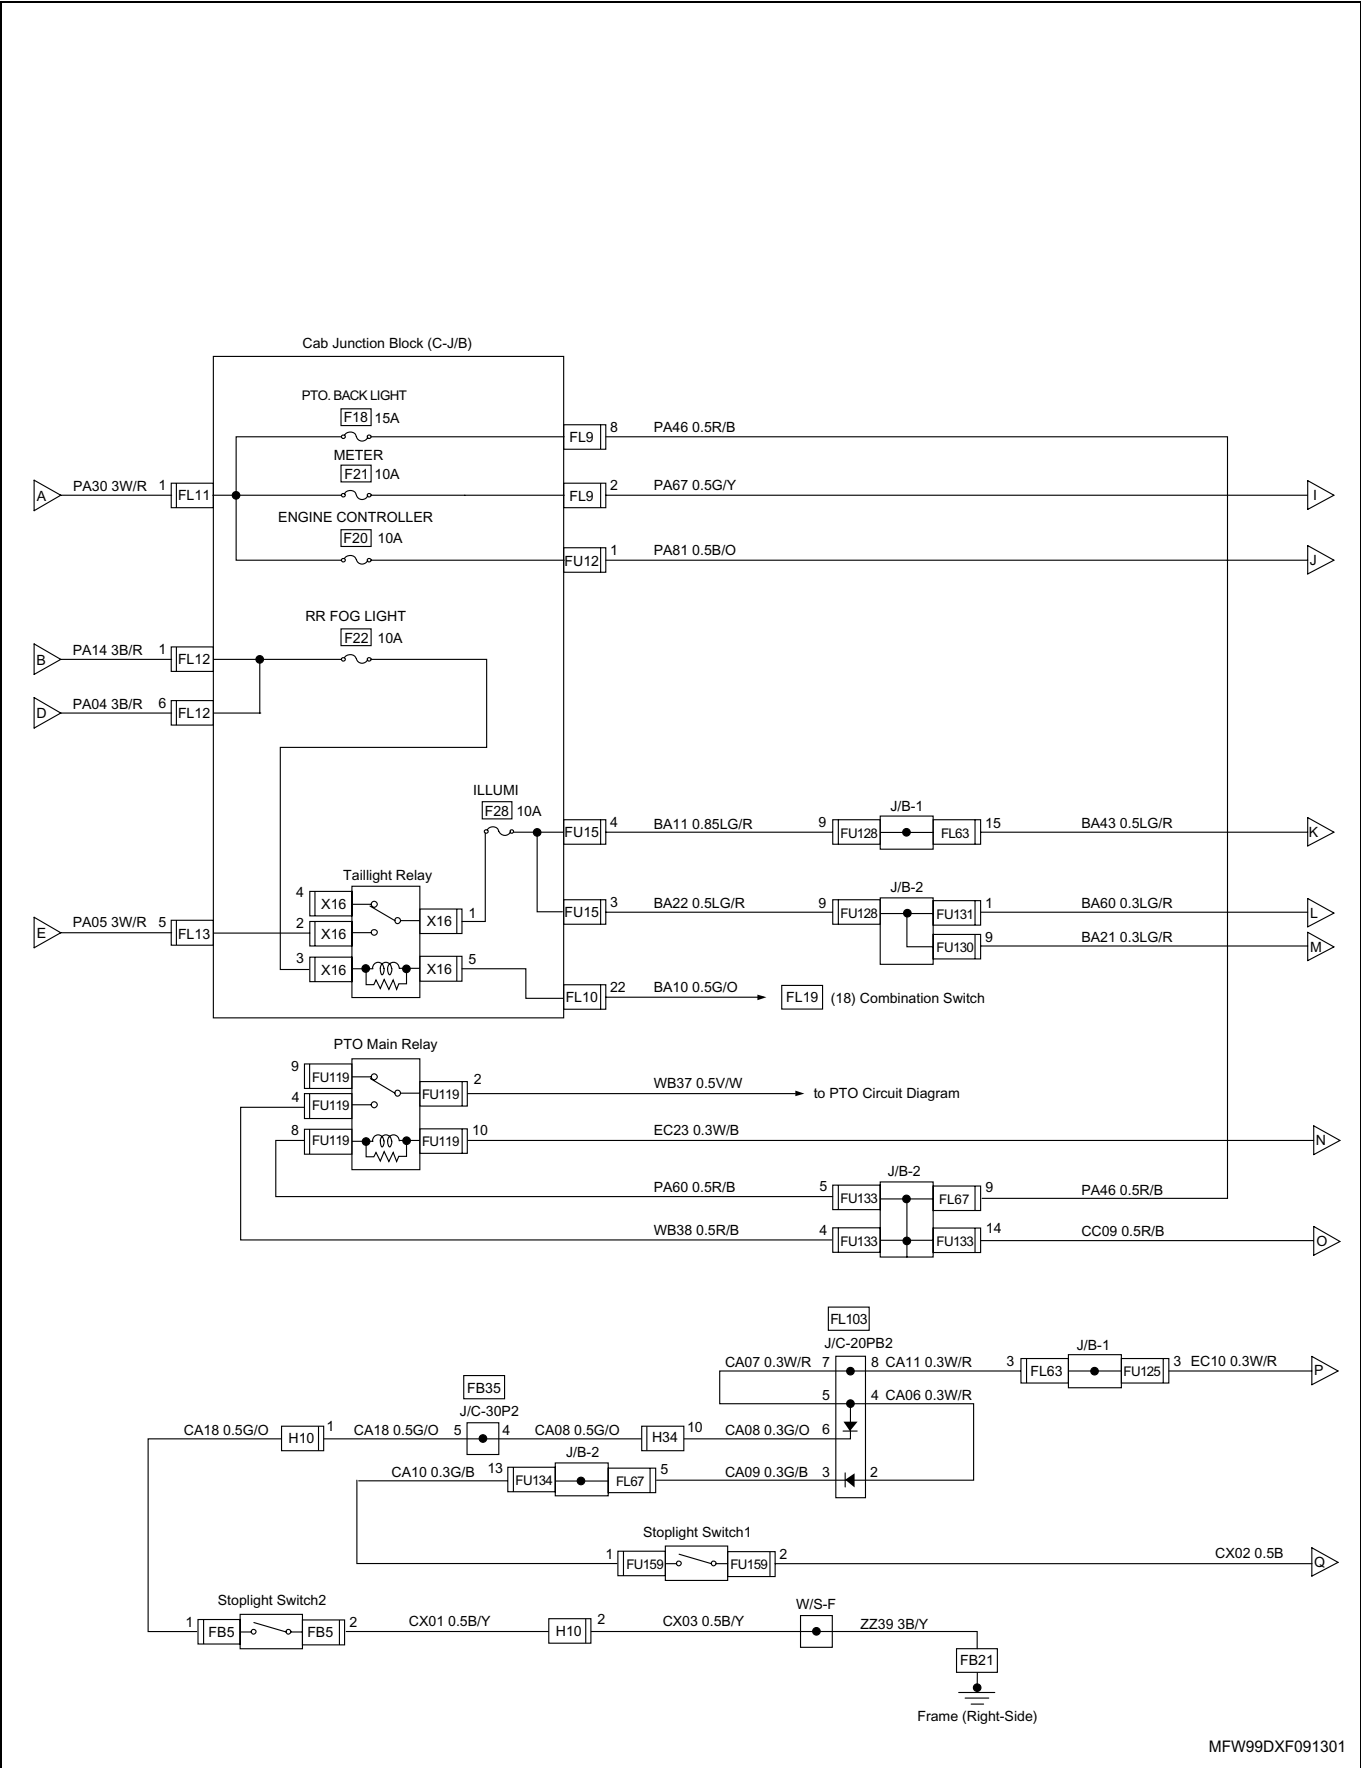
Circuit Diagram Except Indonesia (1/7)






(3/7)

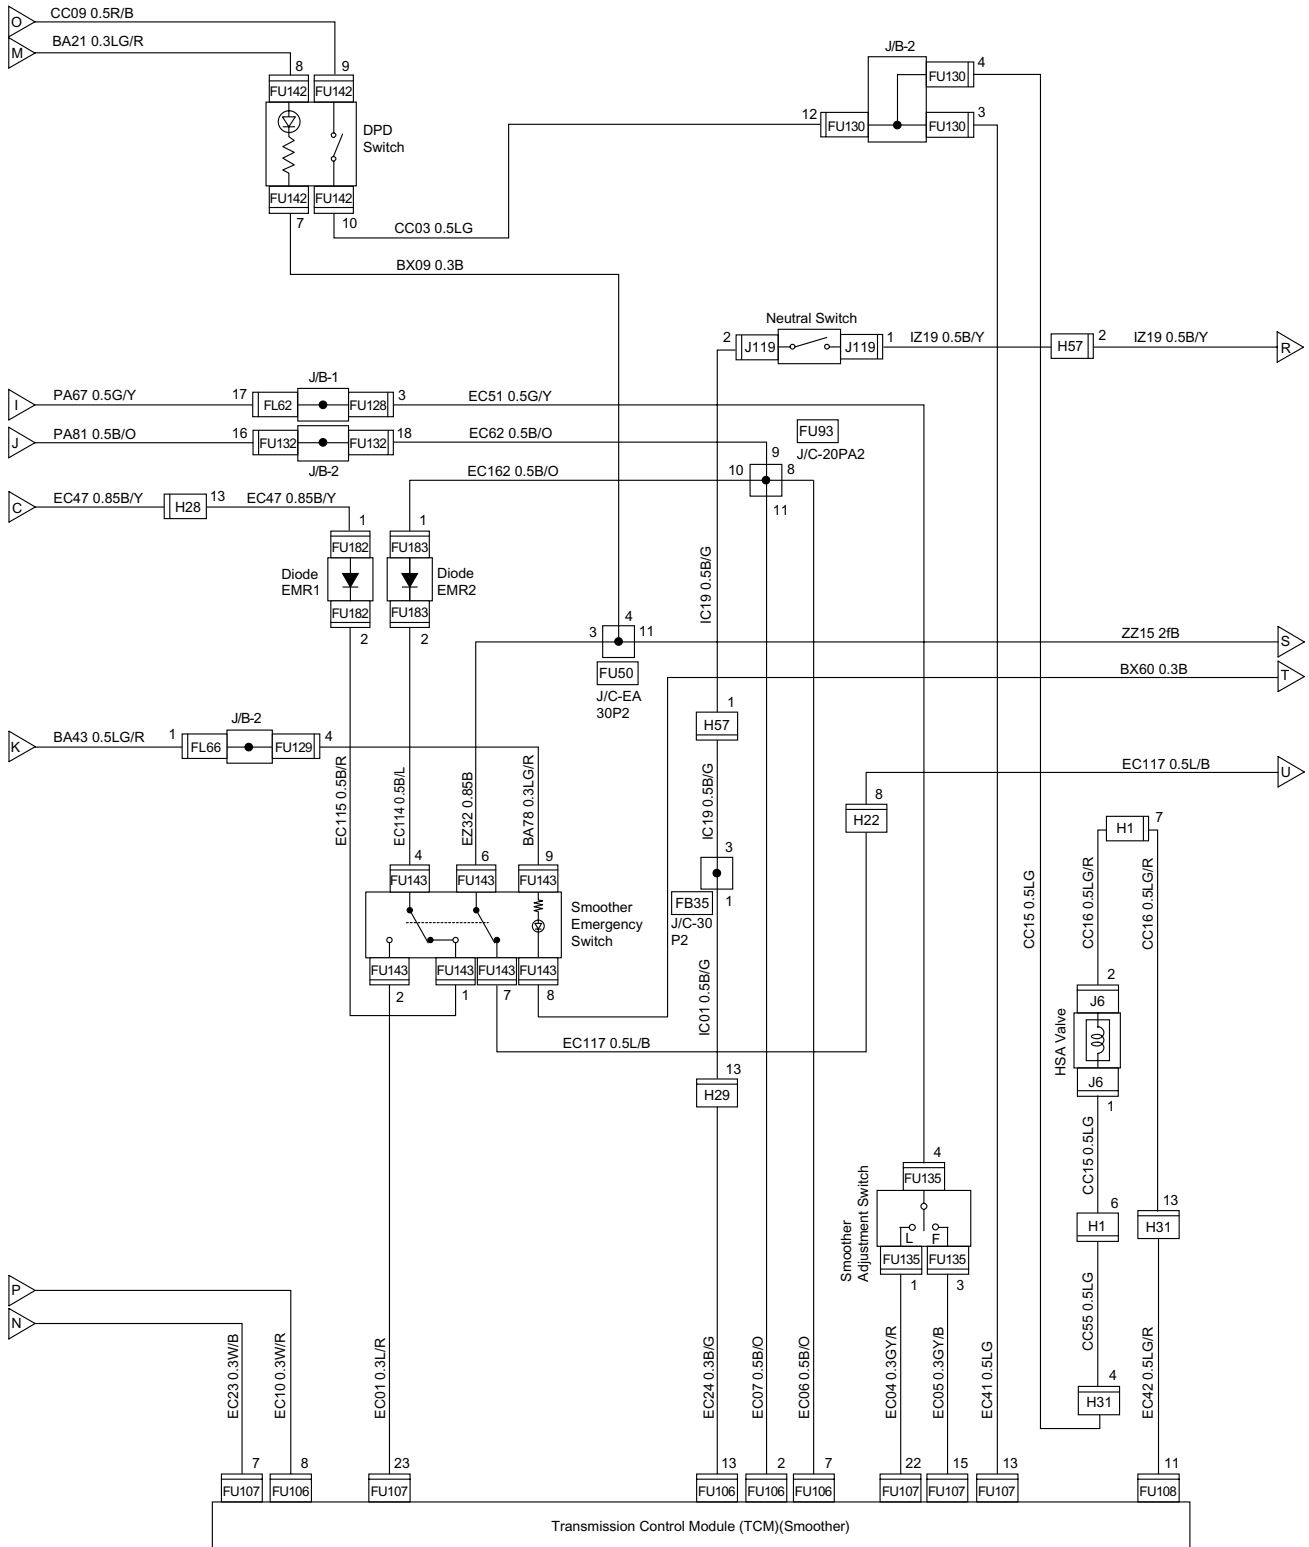

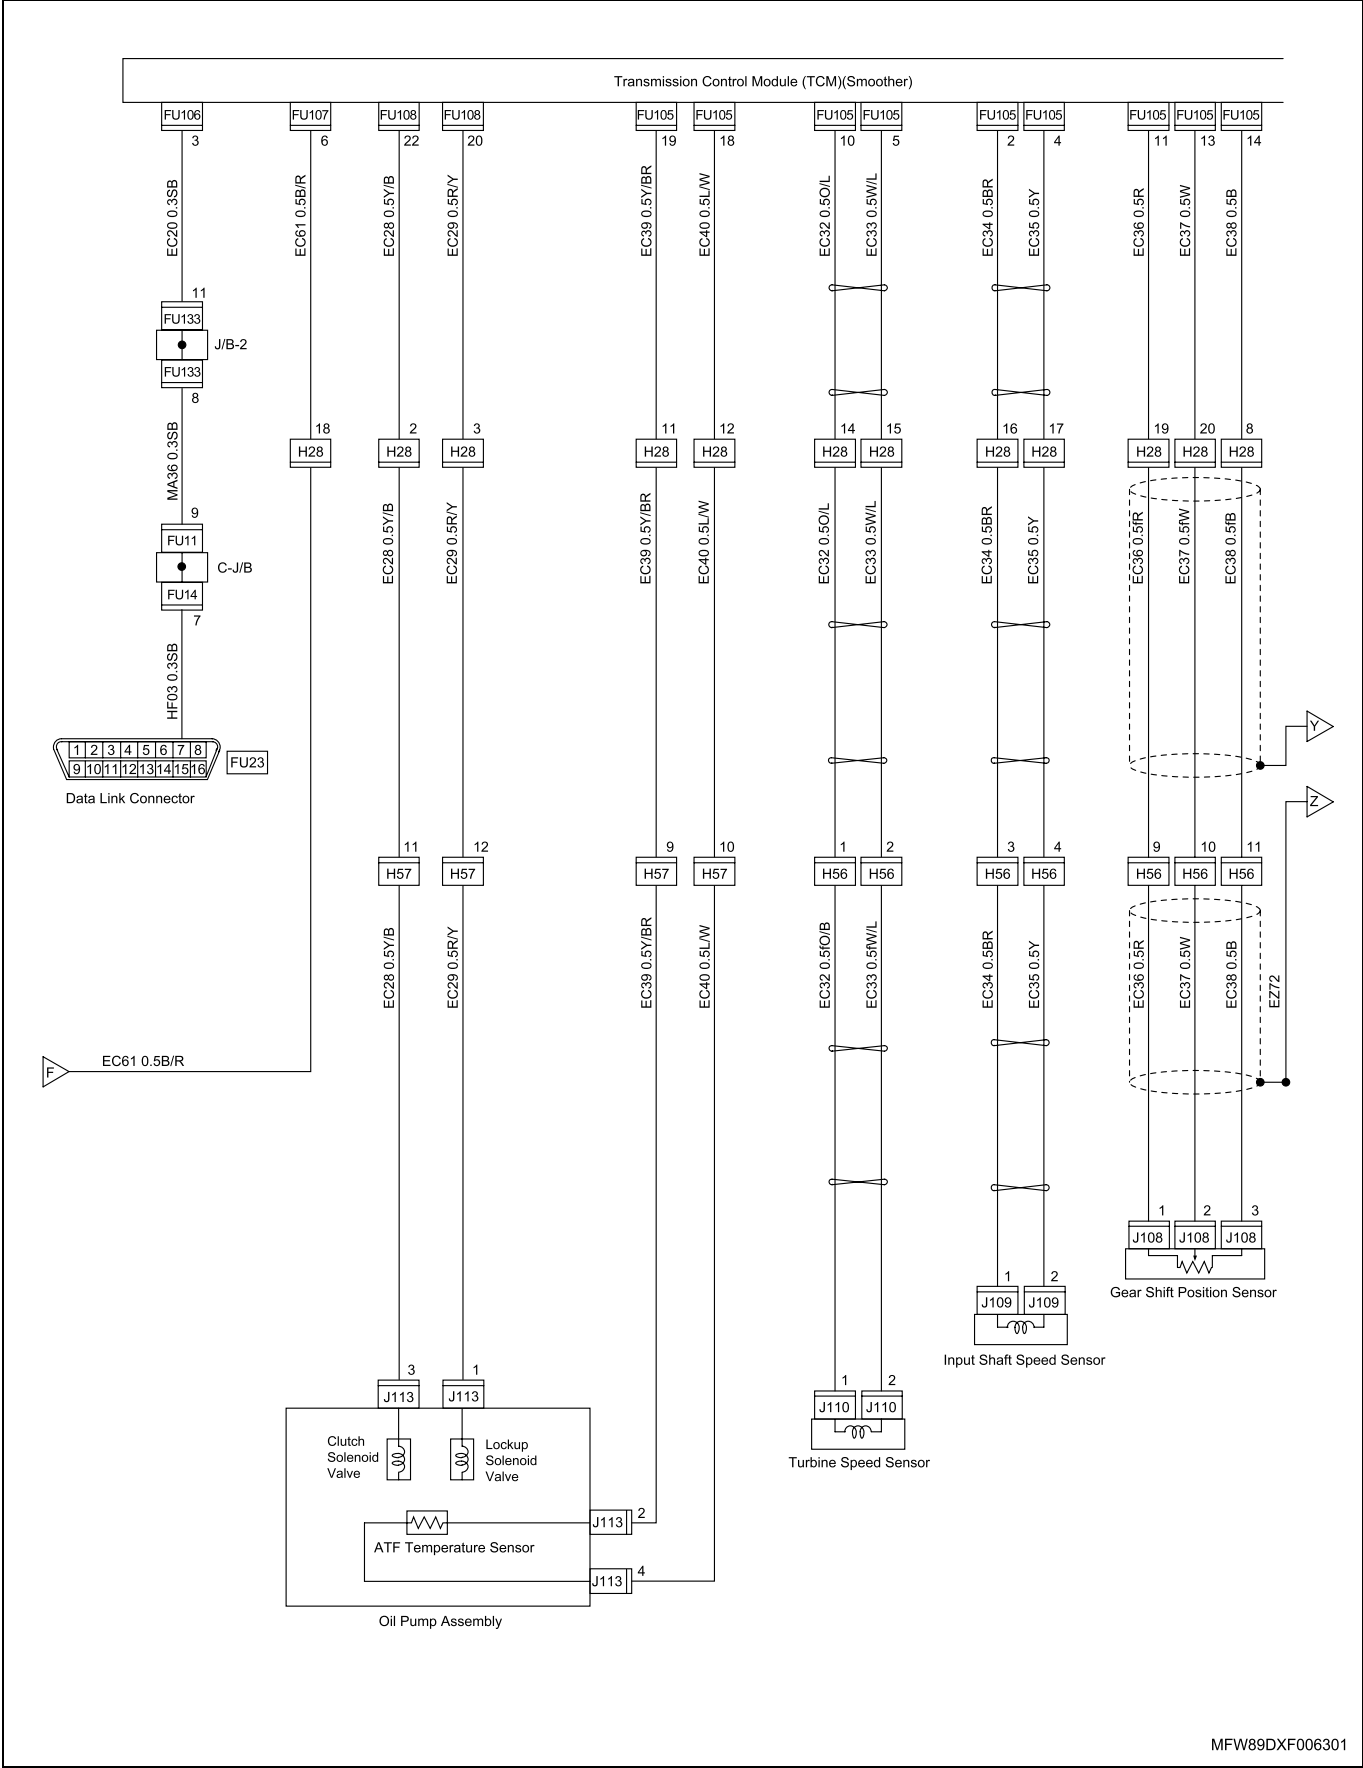


(5/7)

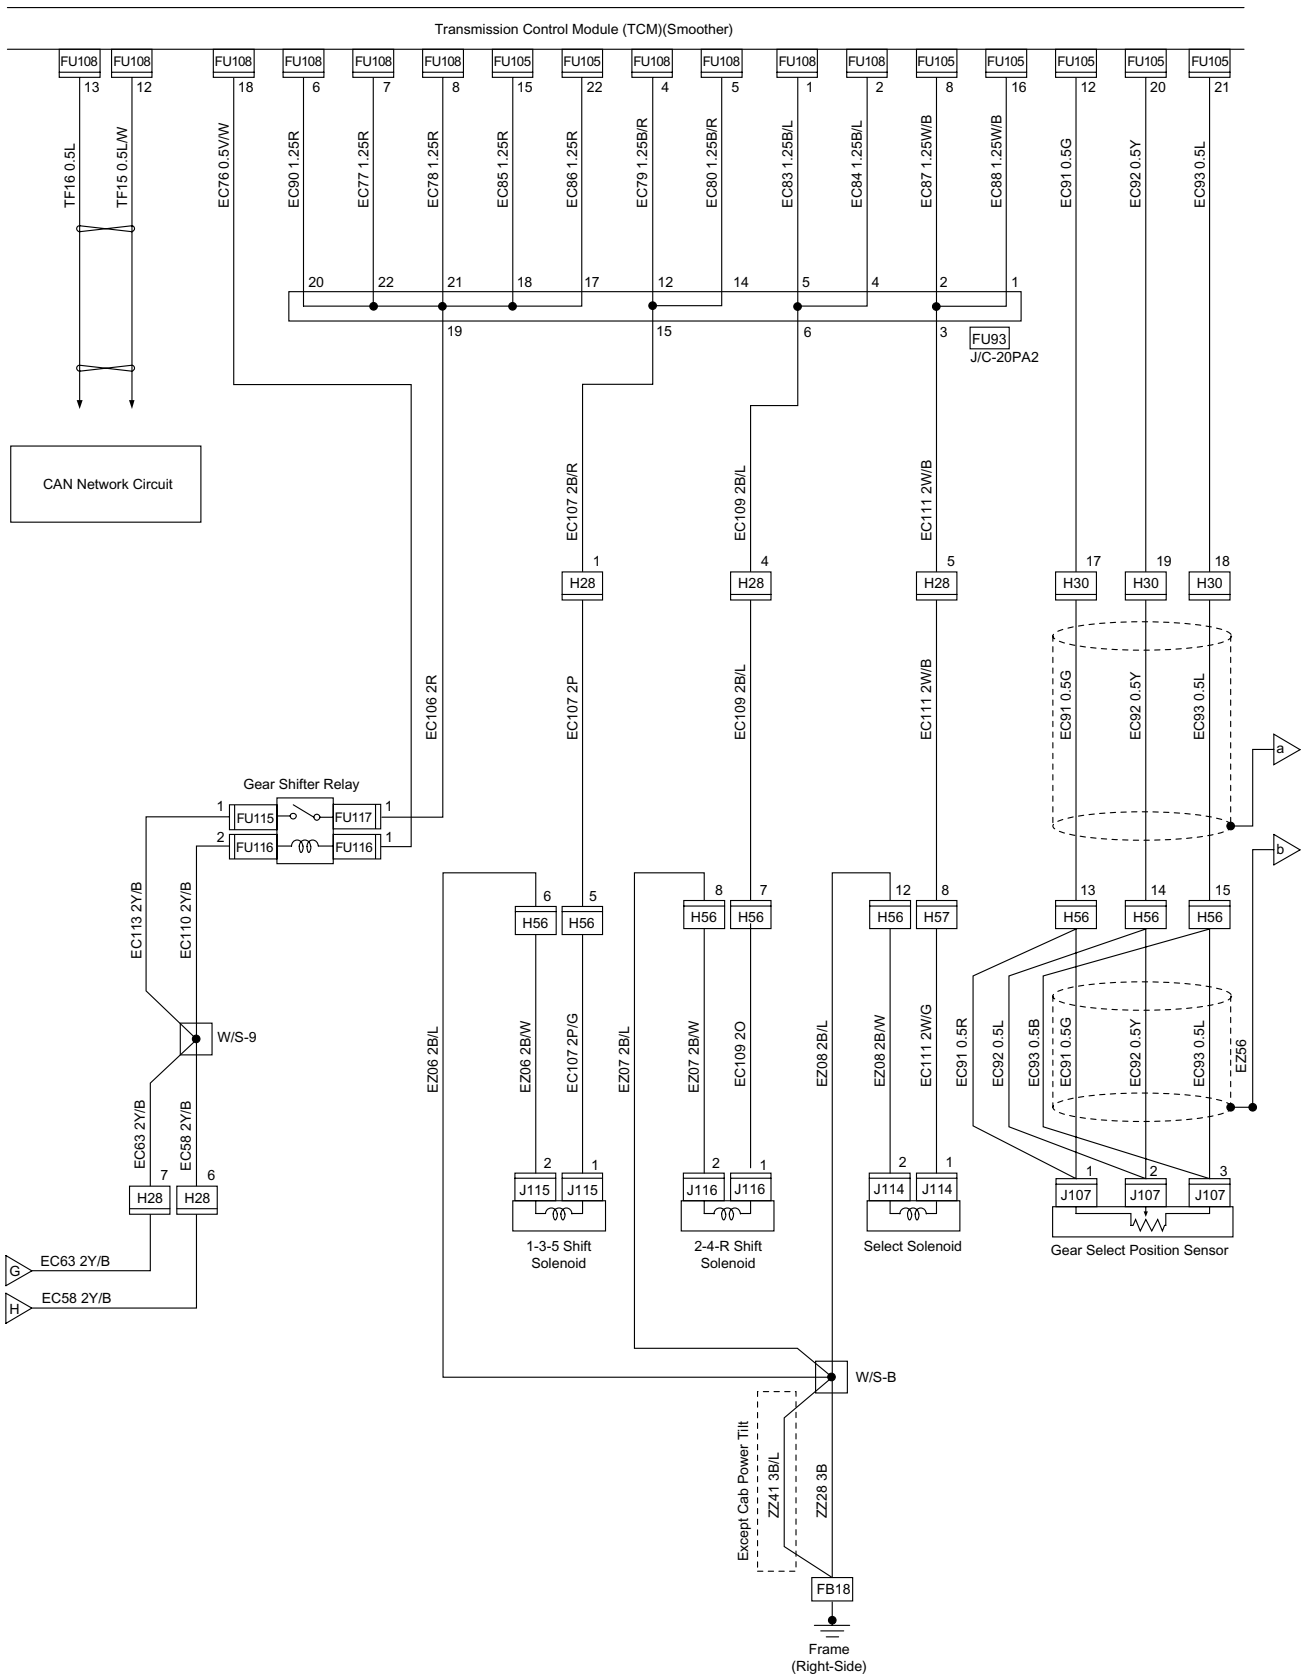



(7/7)

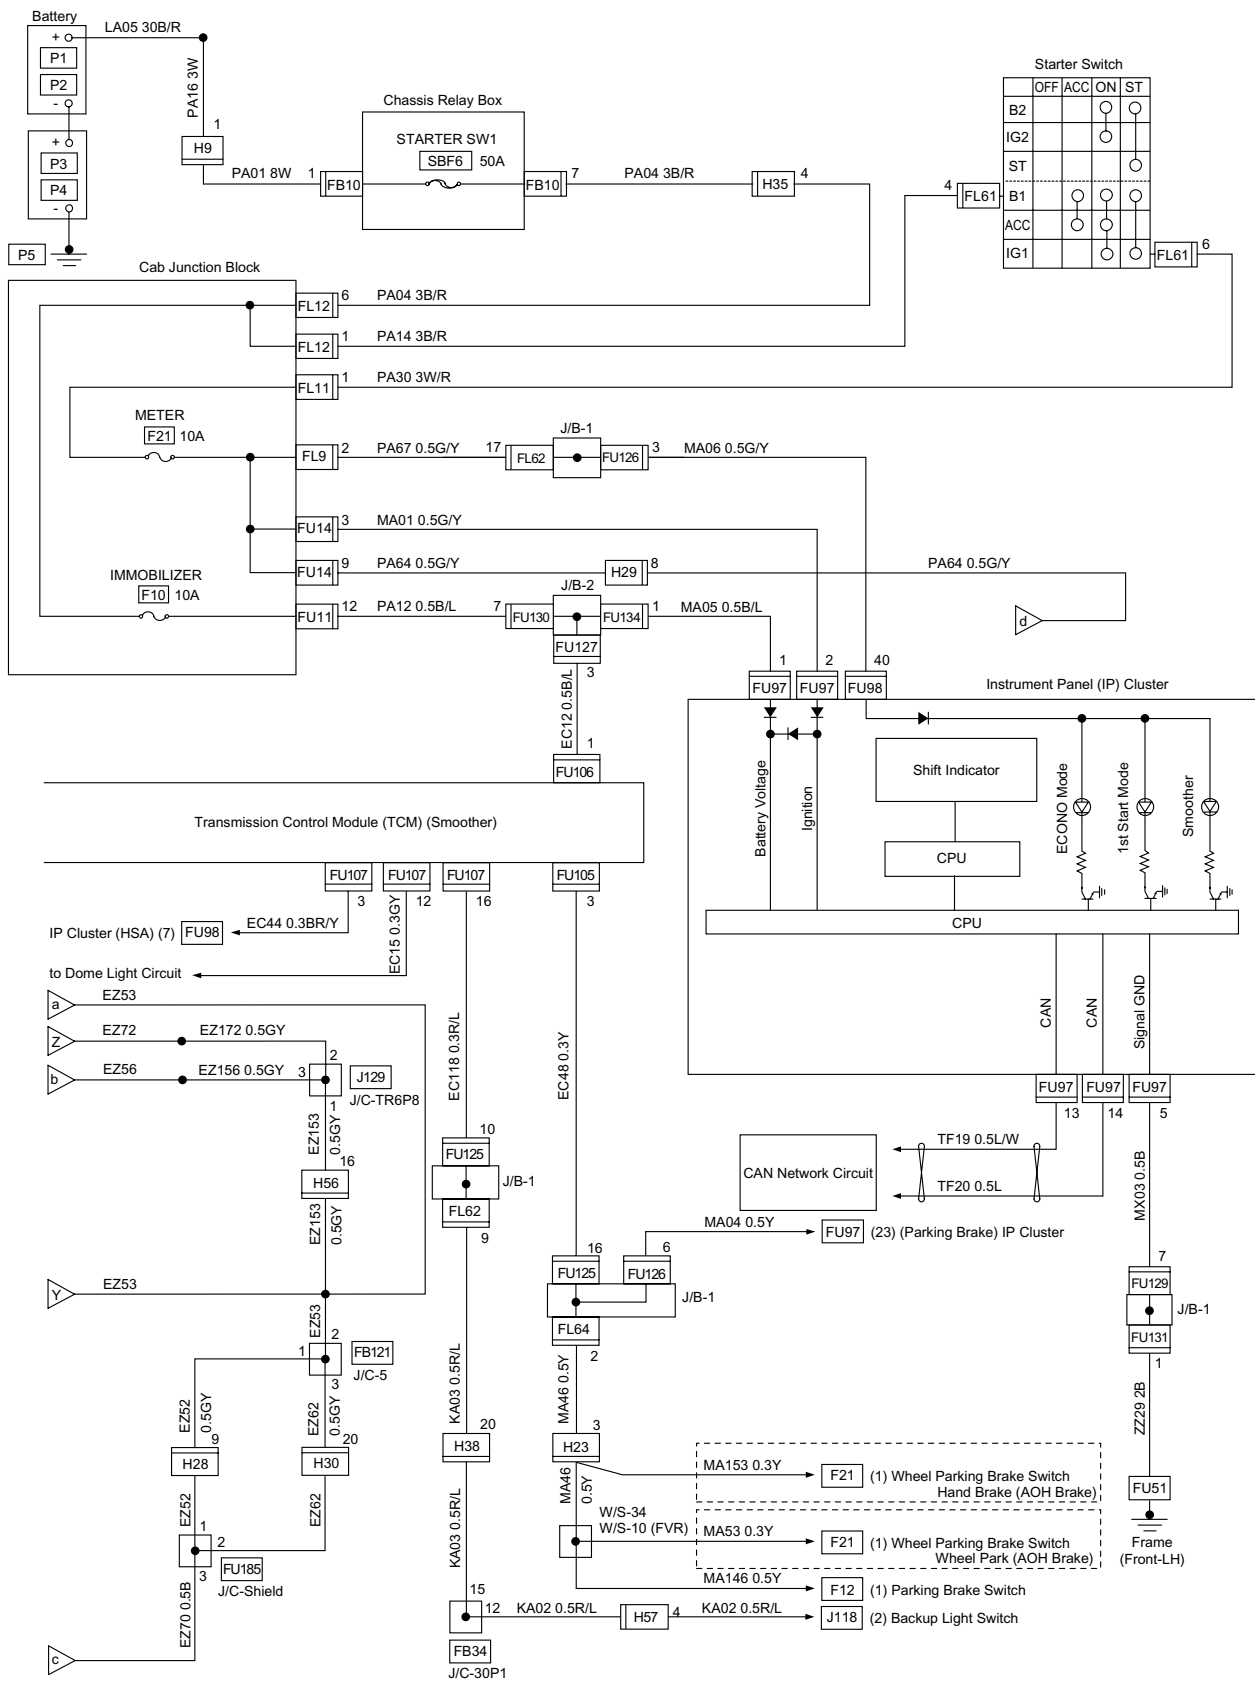


Transmission Control Module (A/T)


Circuit Diagram

Except Indonesia

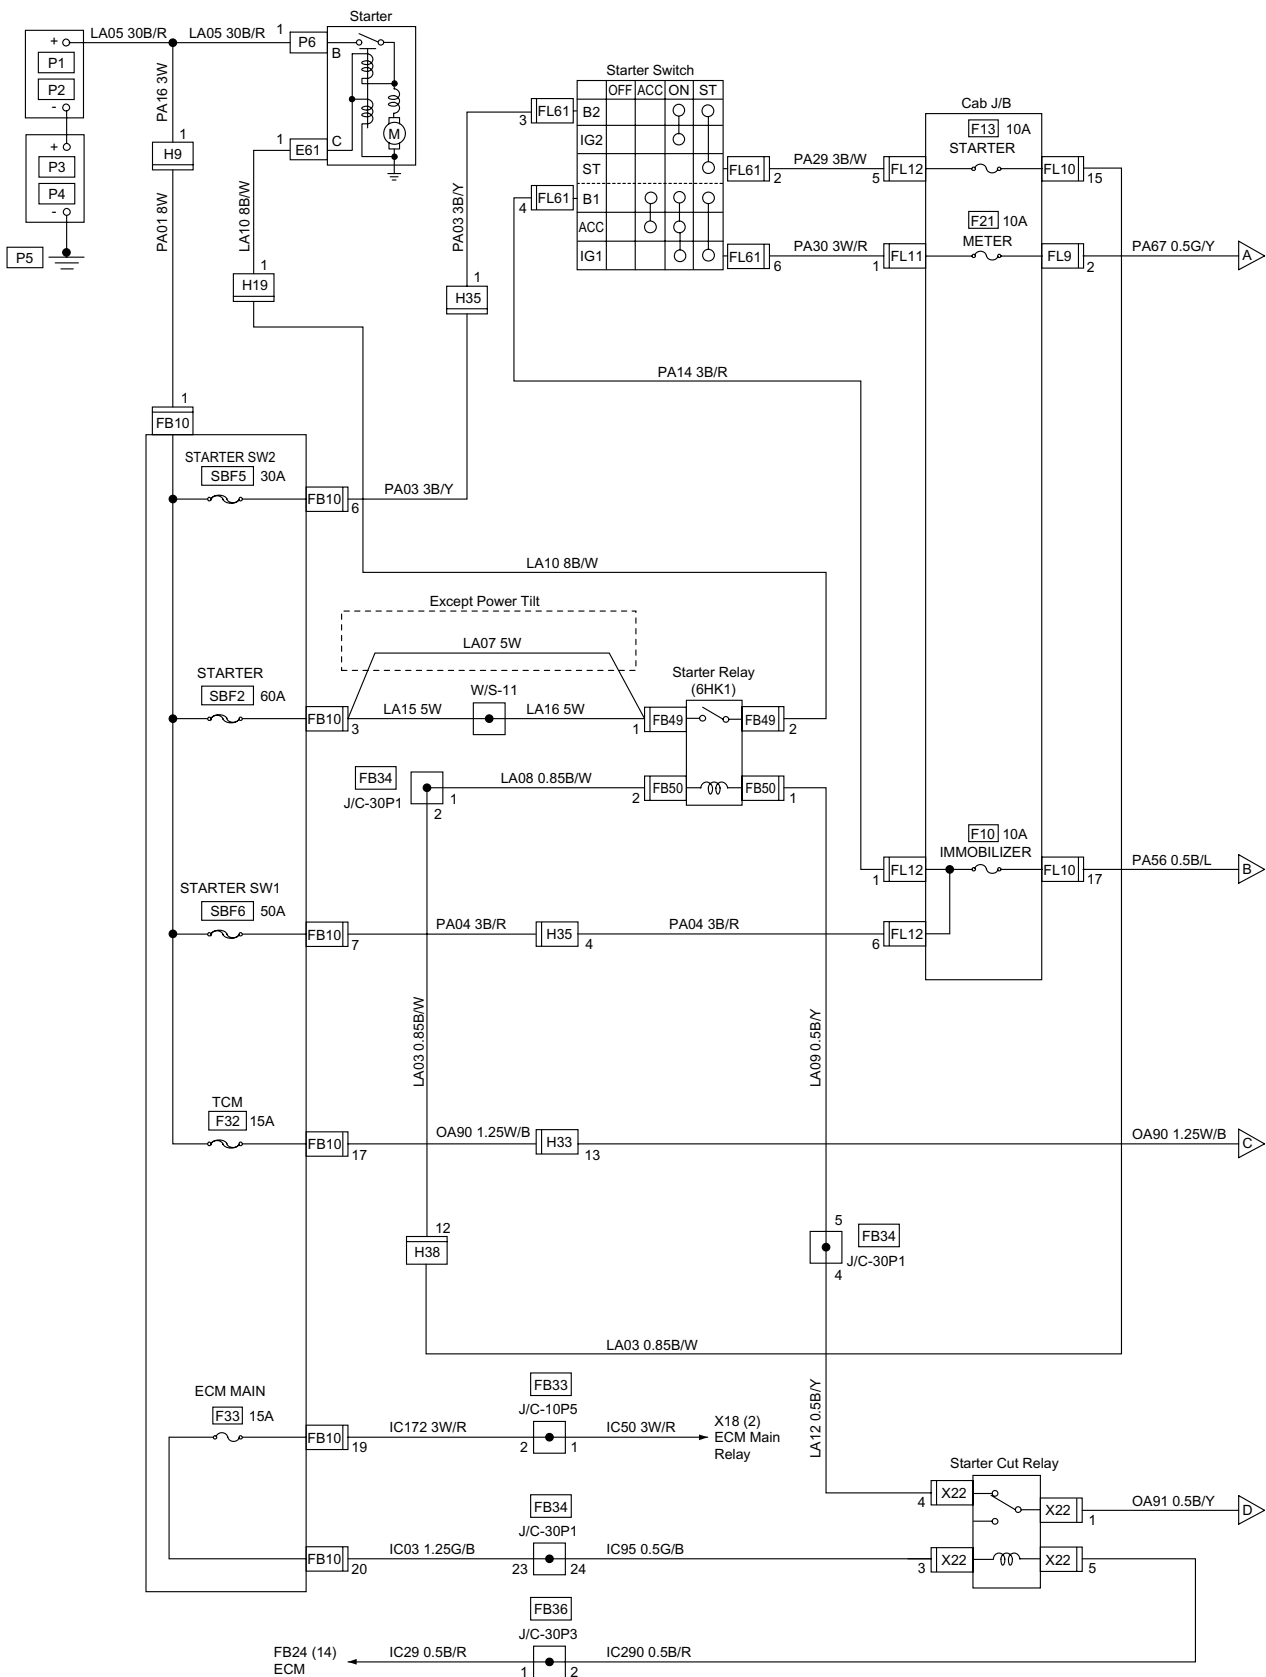(1/7)





(2/7)

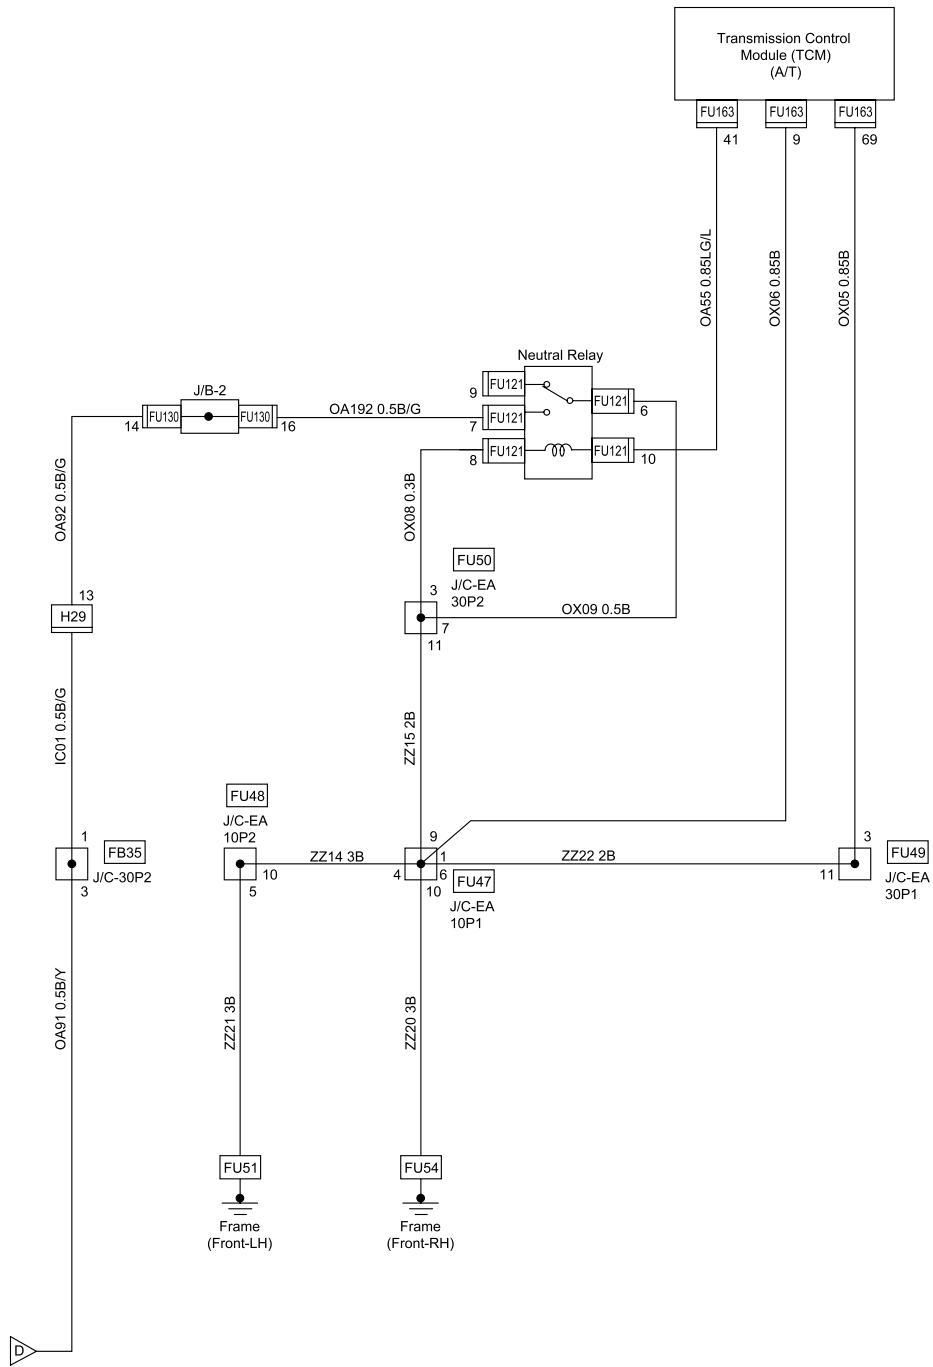




(4/7)

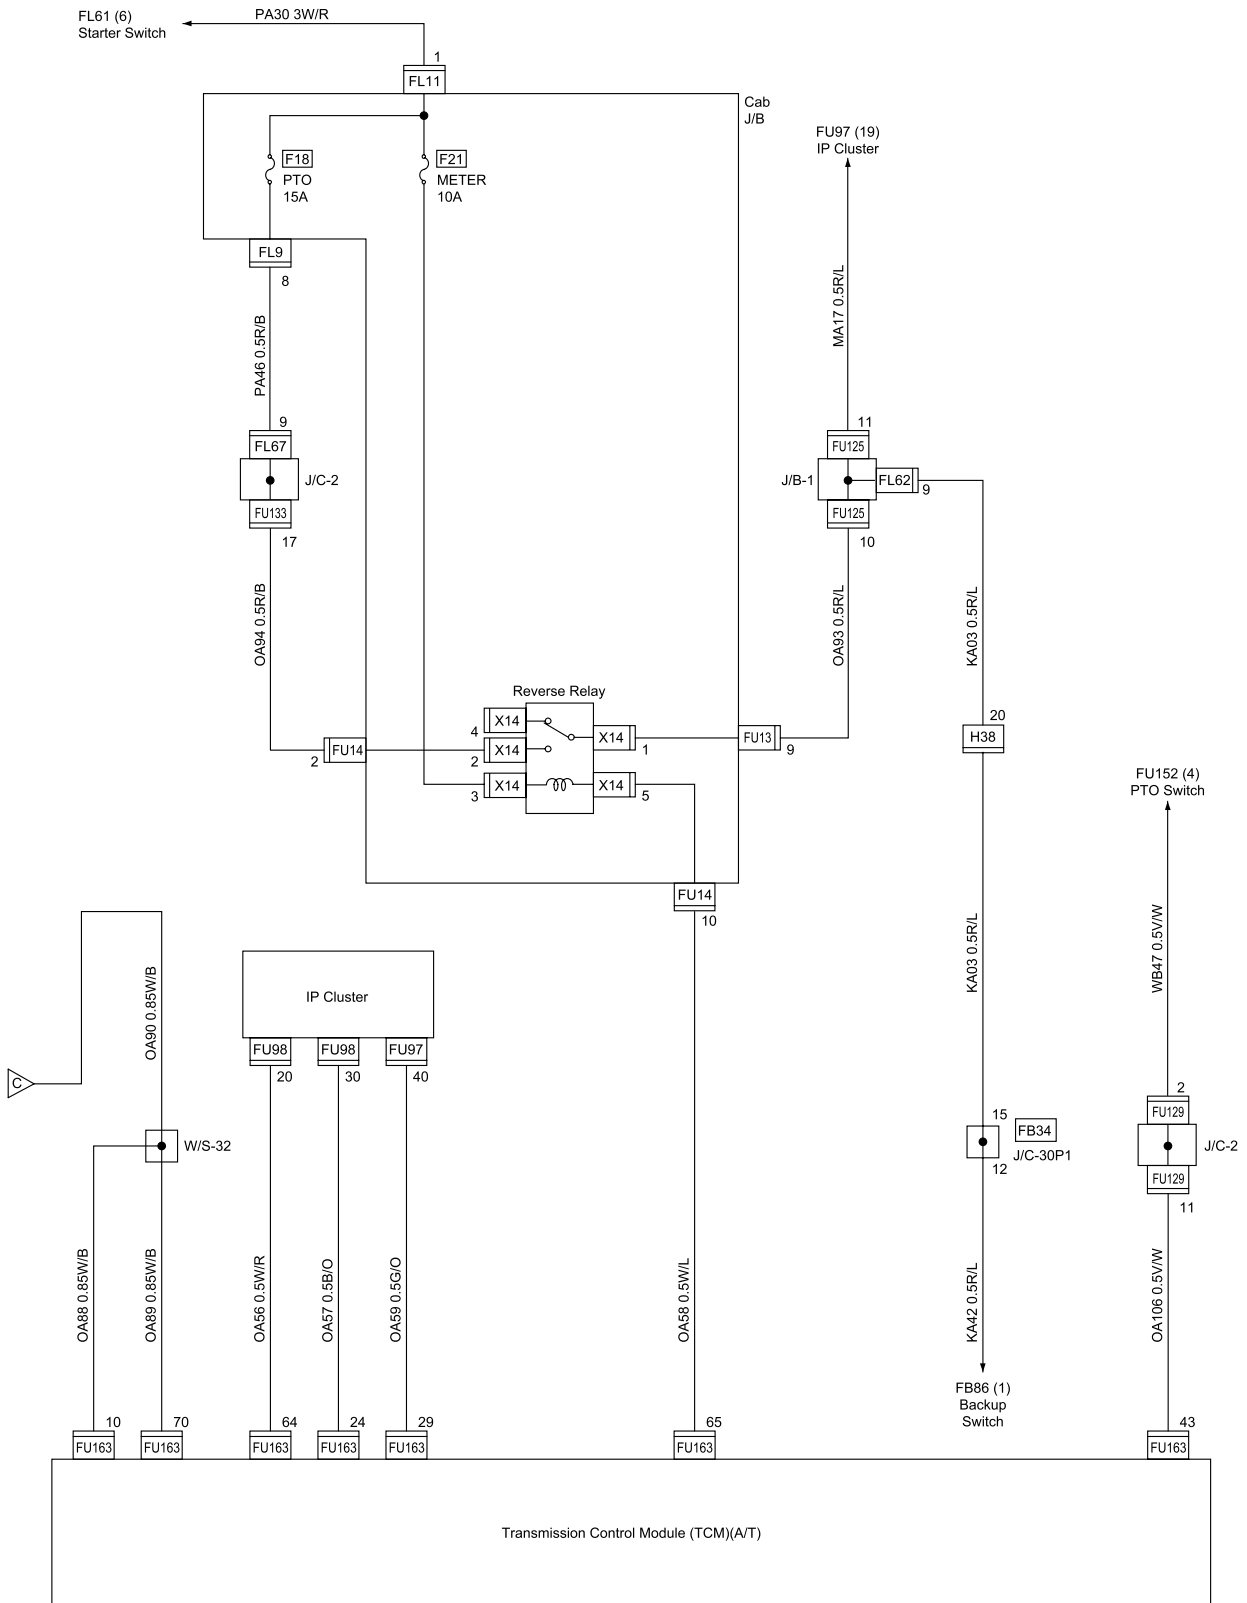


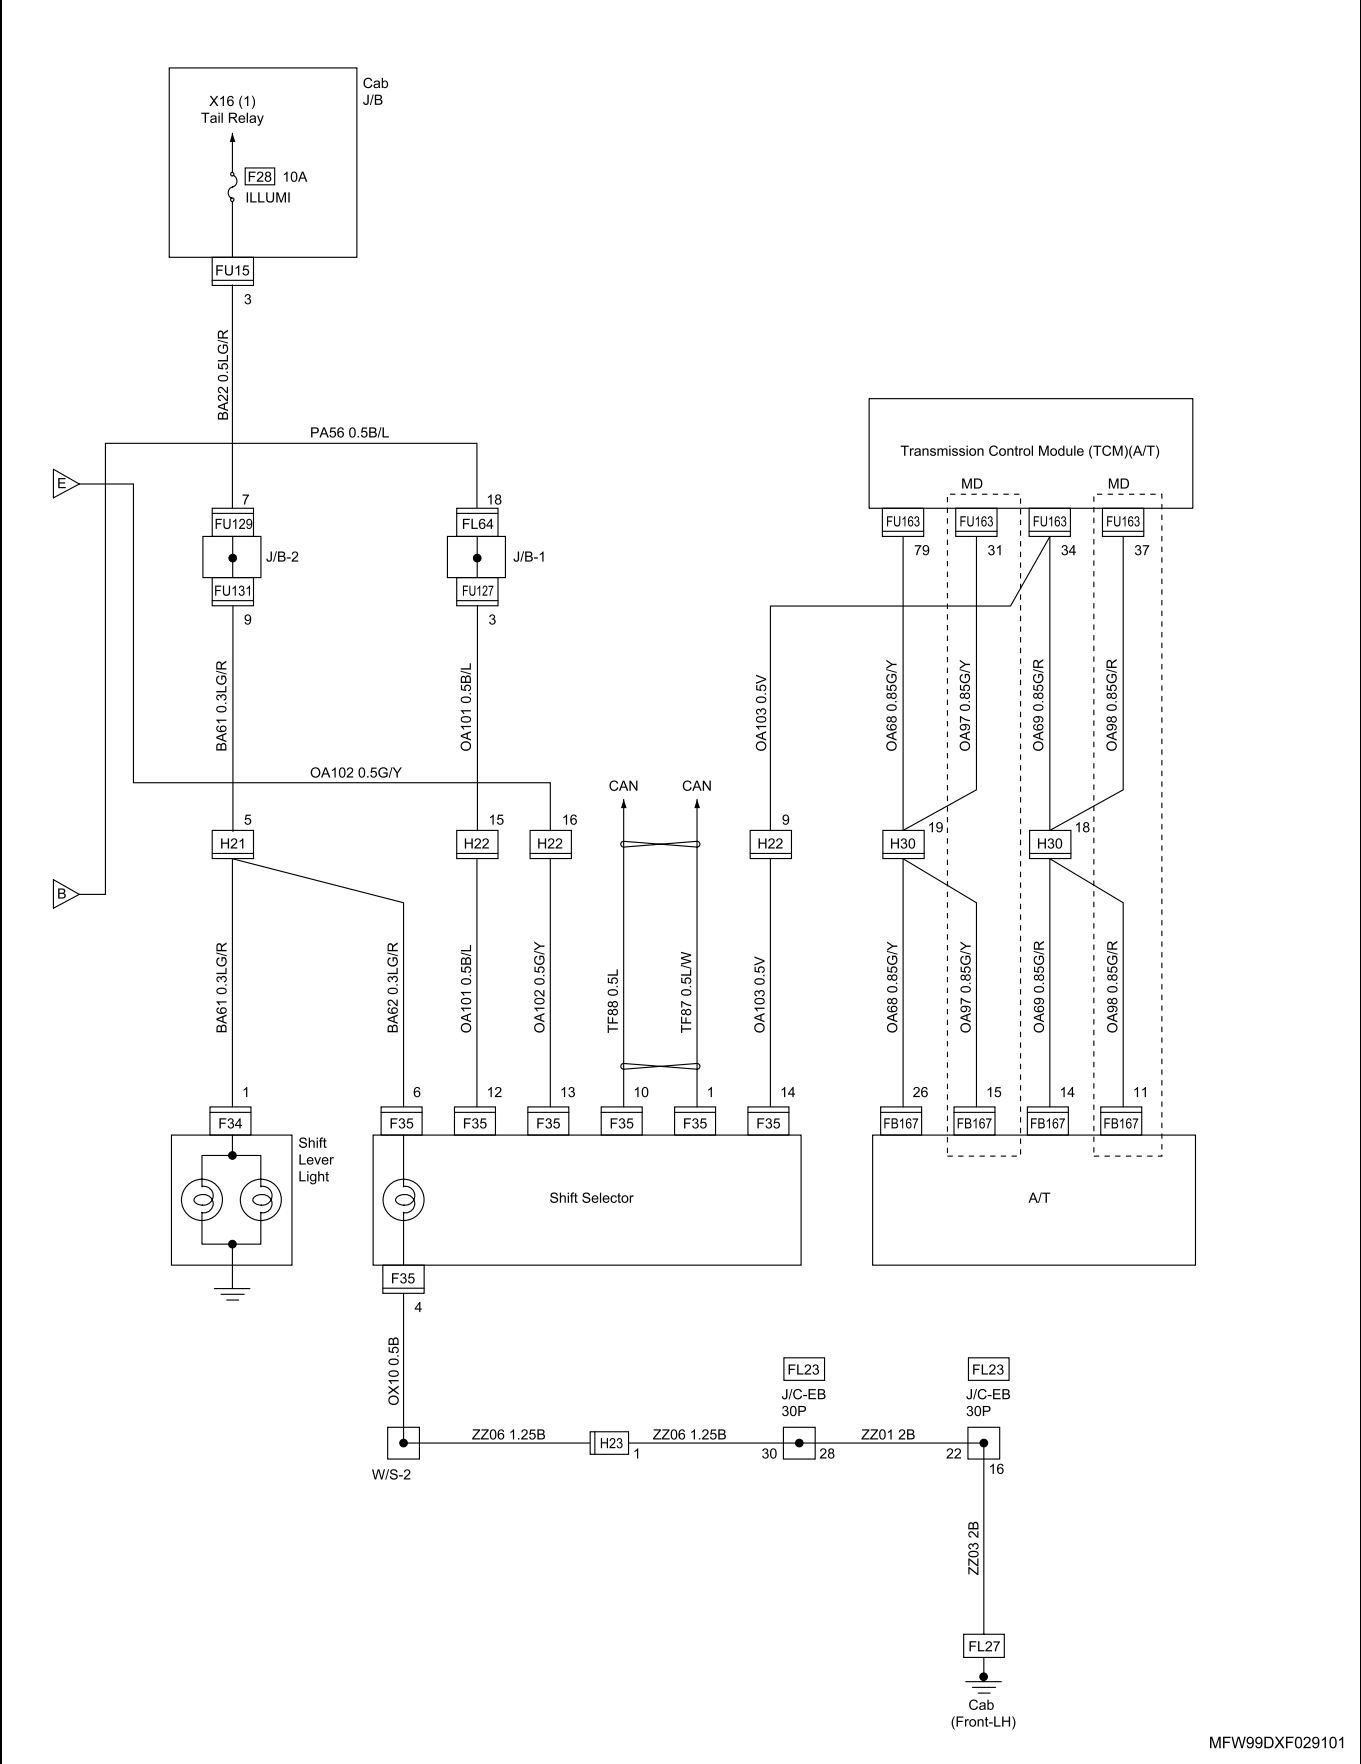

(6/7)

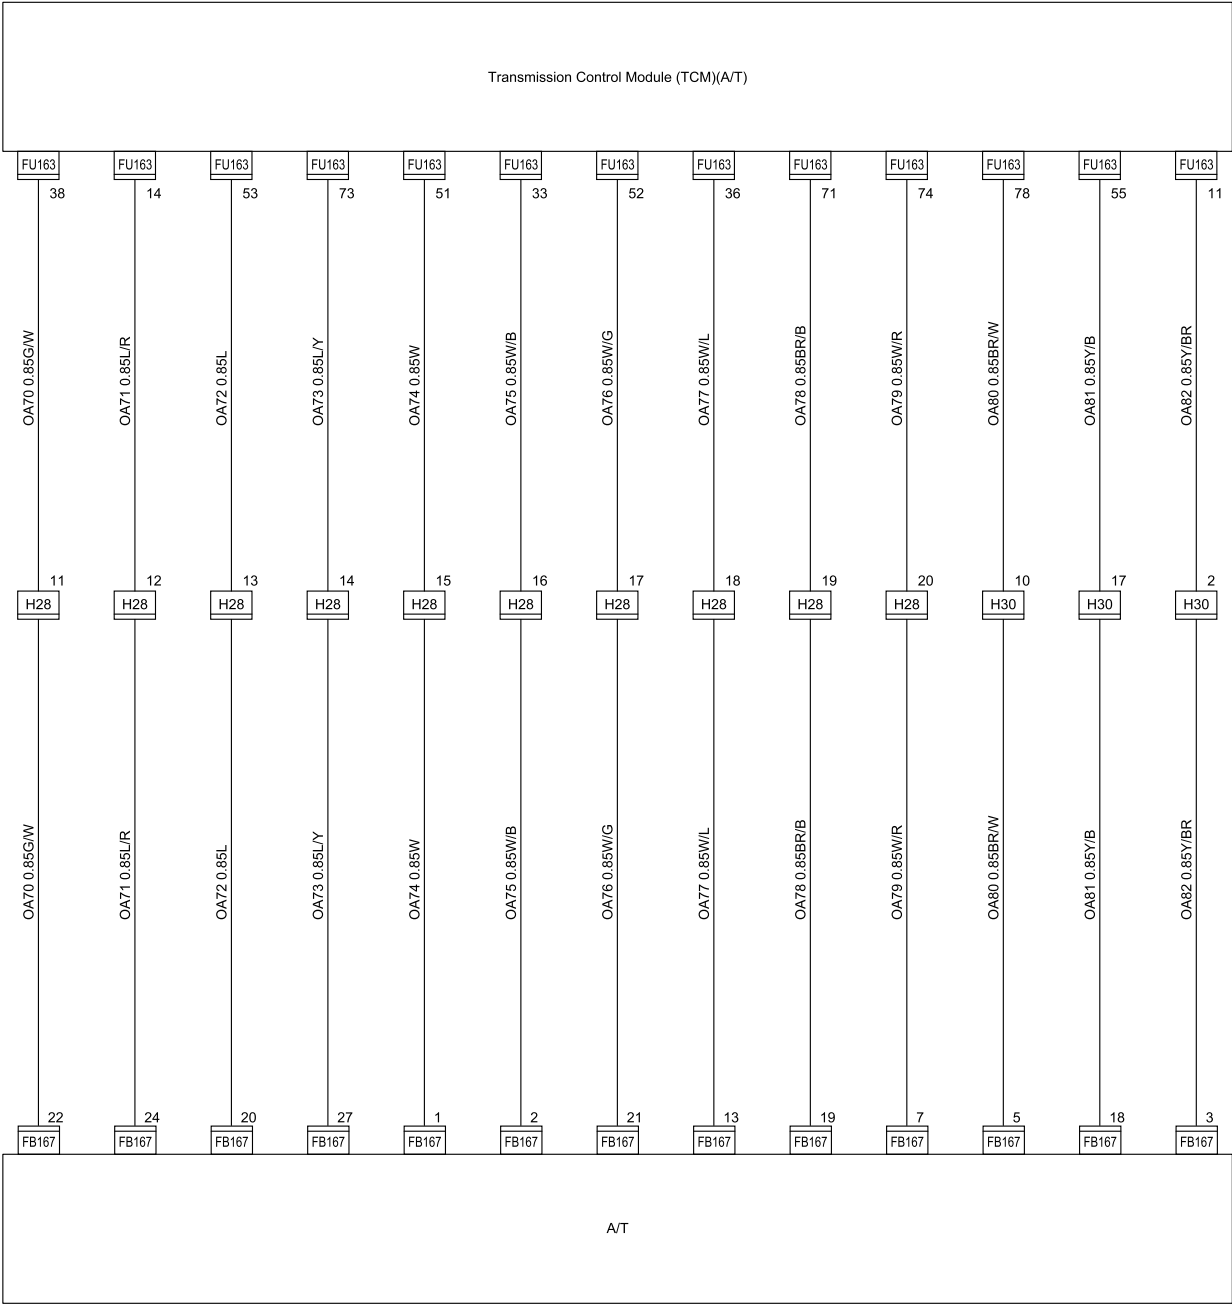


(7/7)

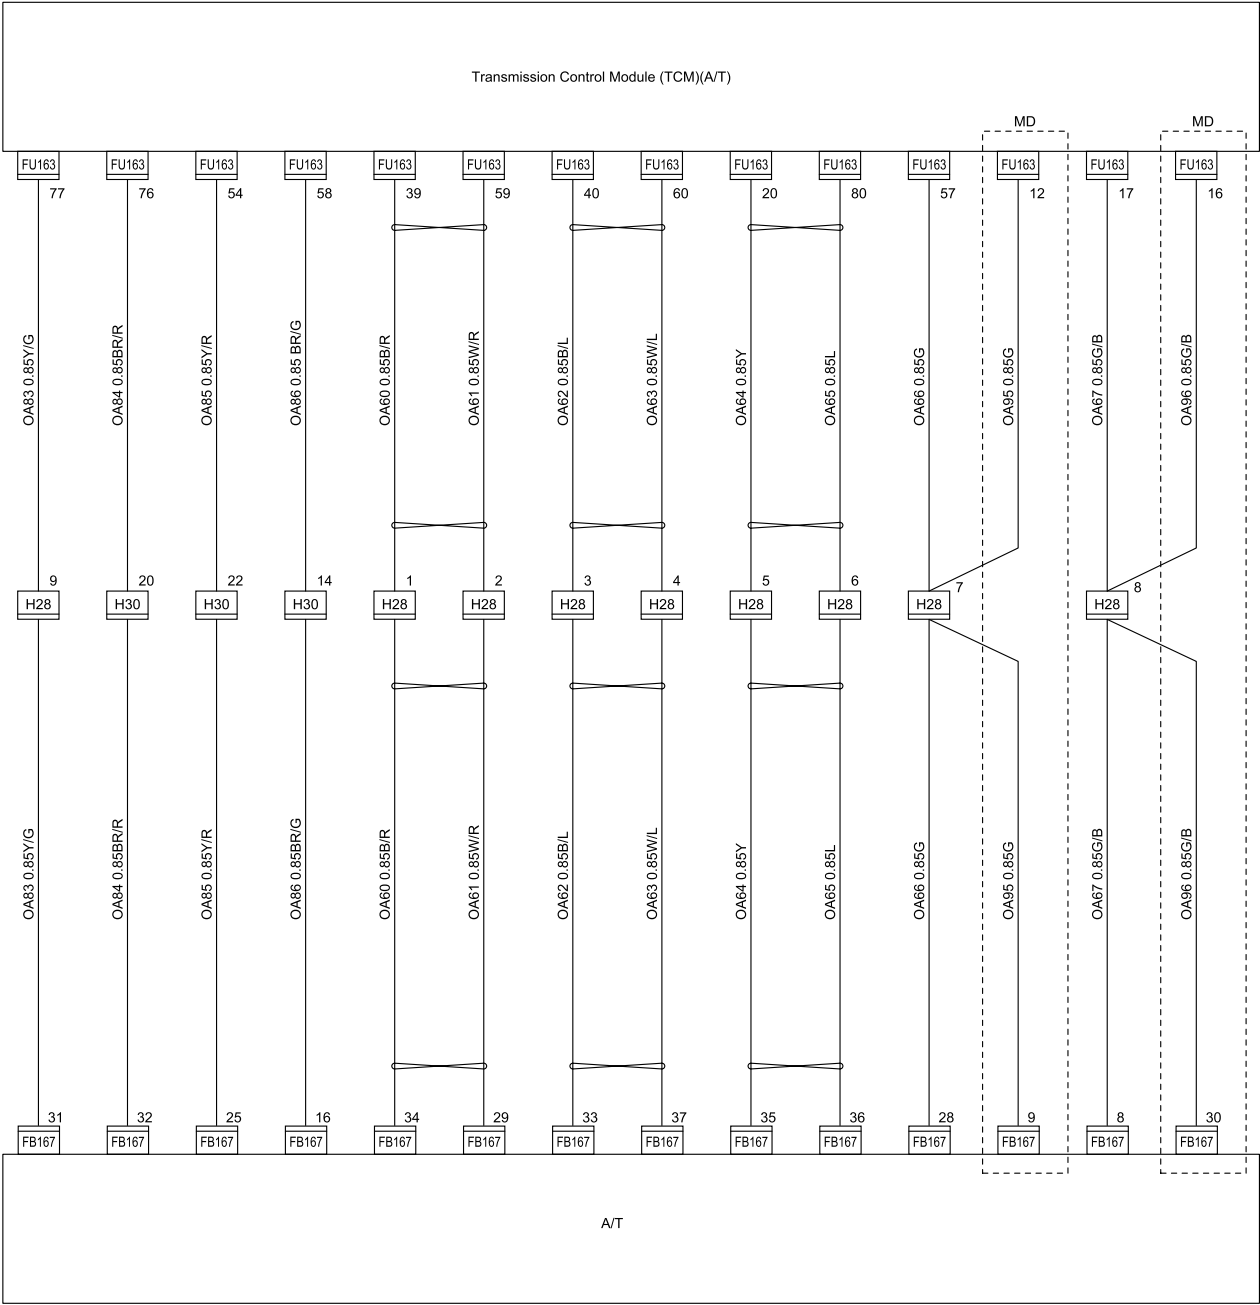


ZF Transmission

Circuit Diagram

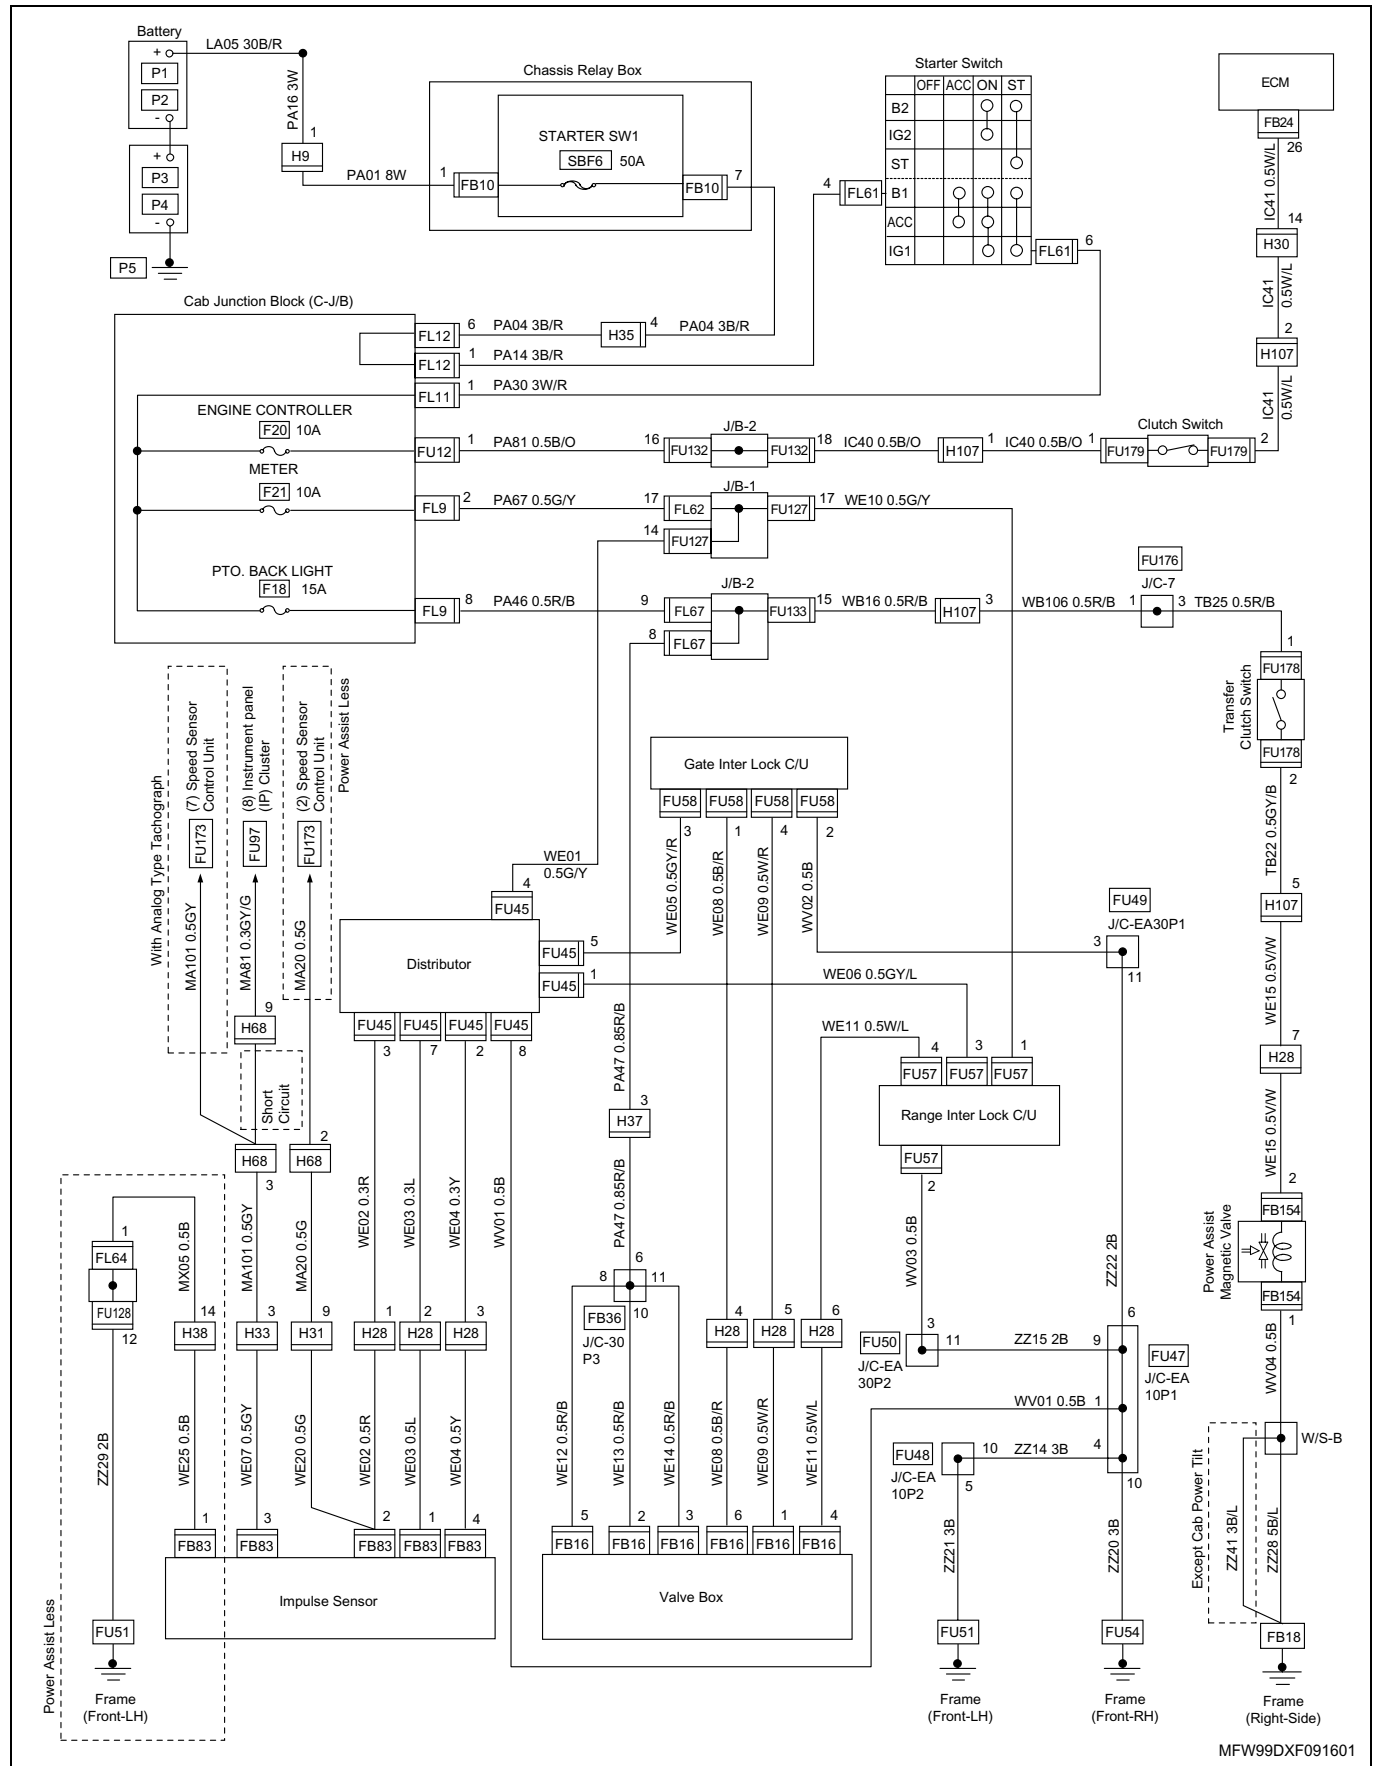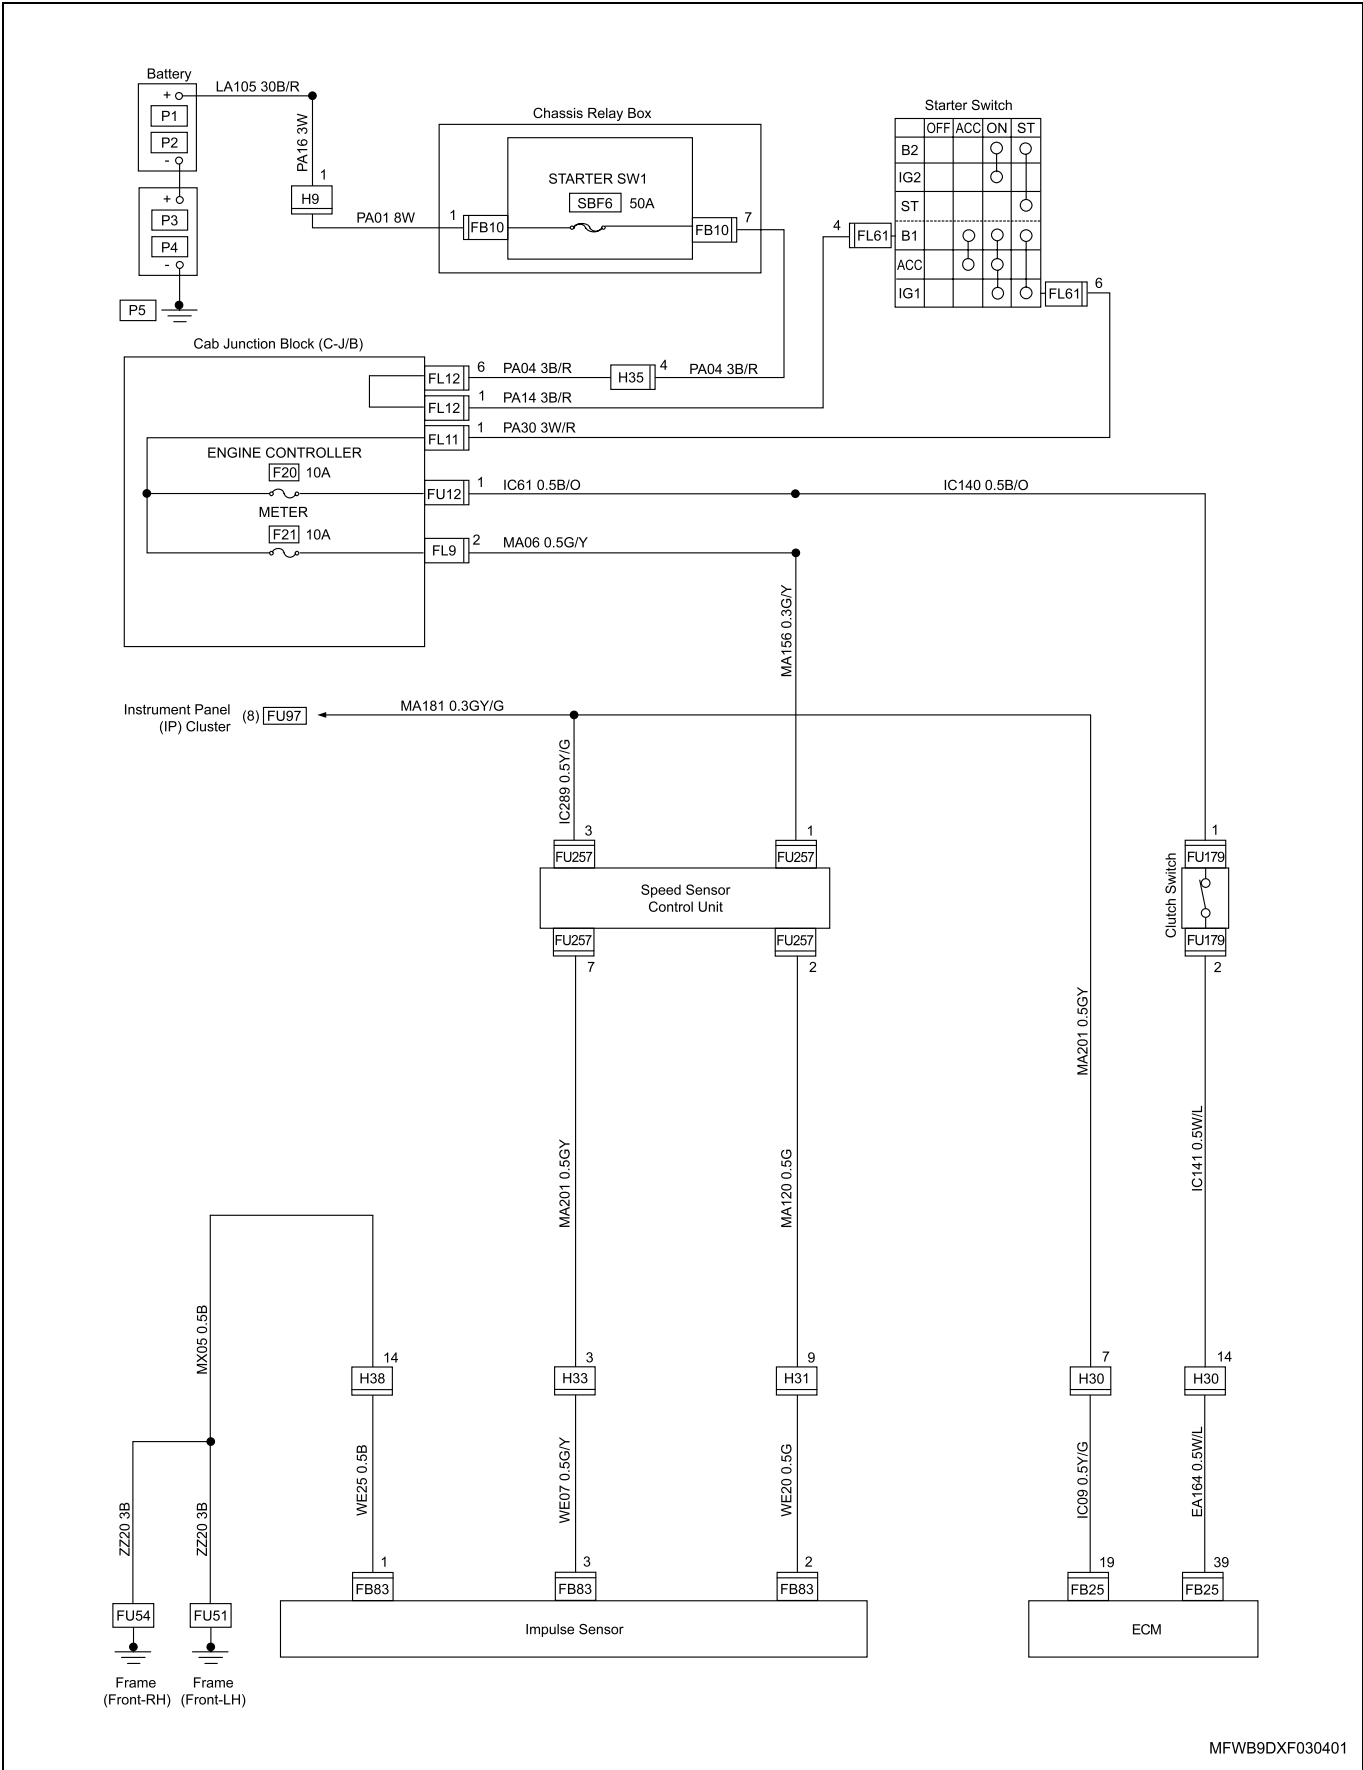
Except Indonesia







Air Suspension Control Unit

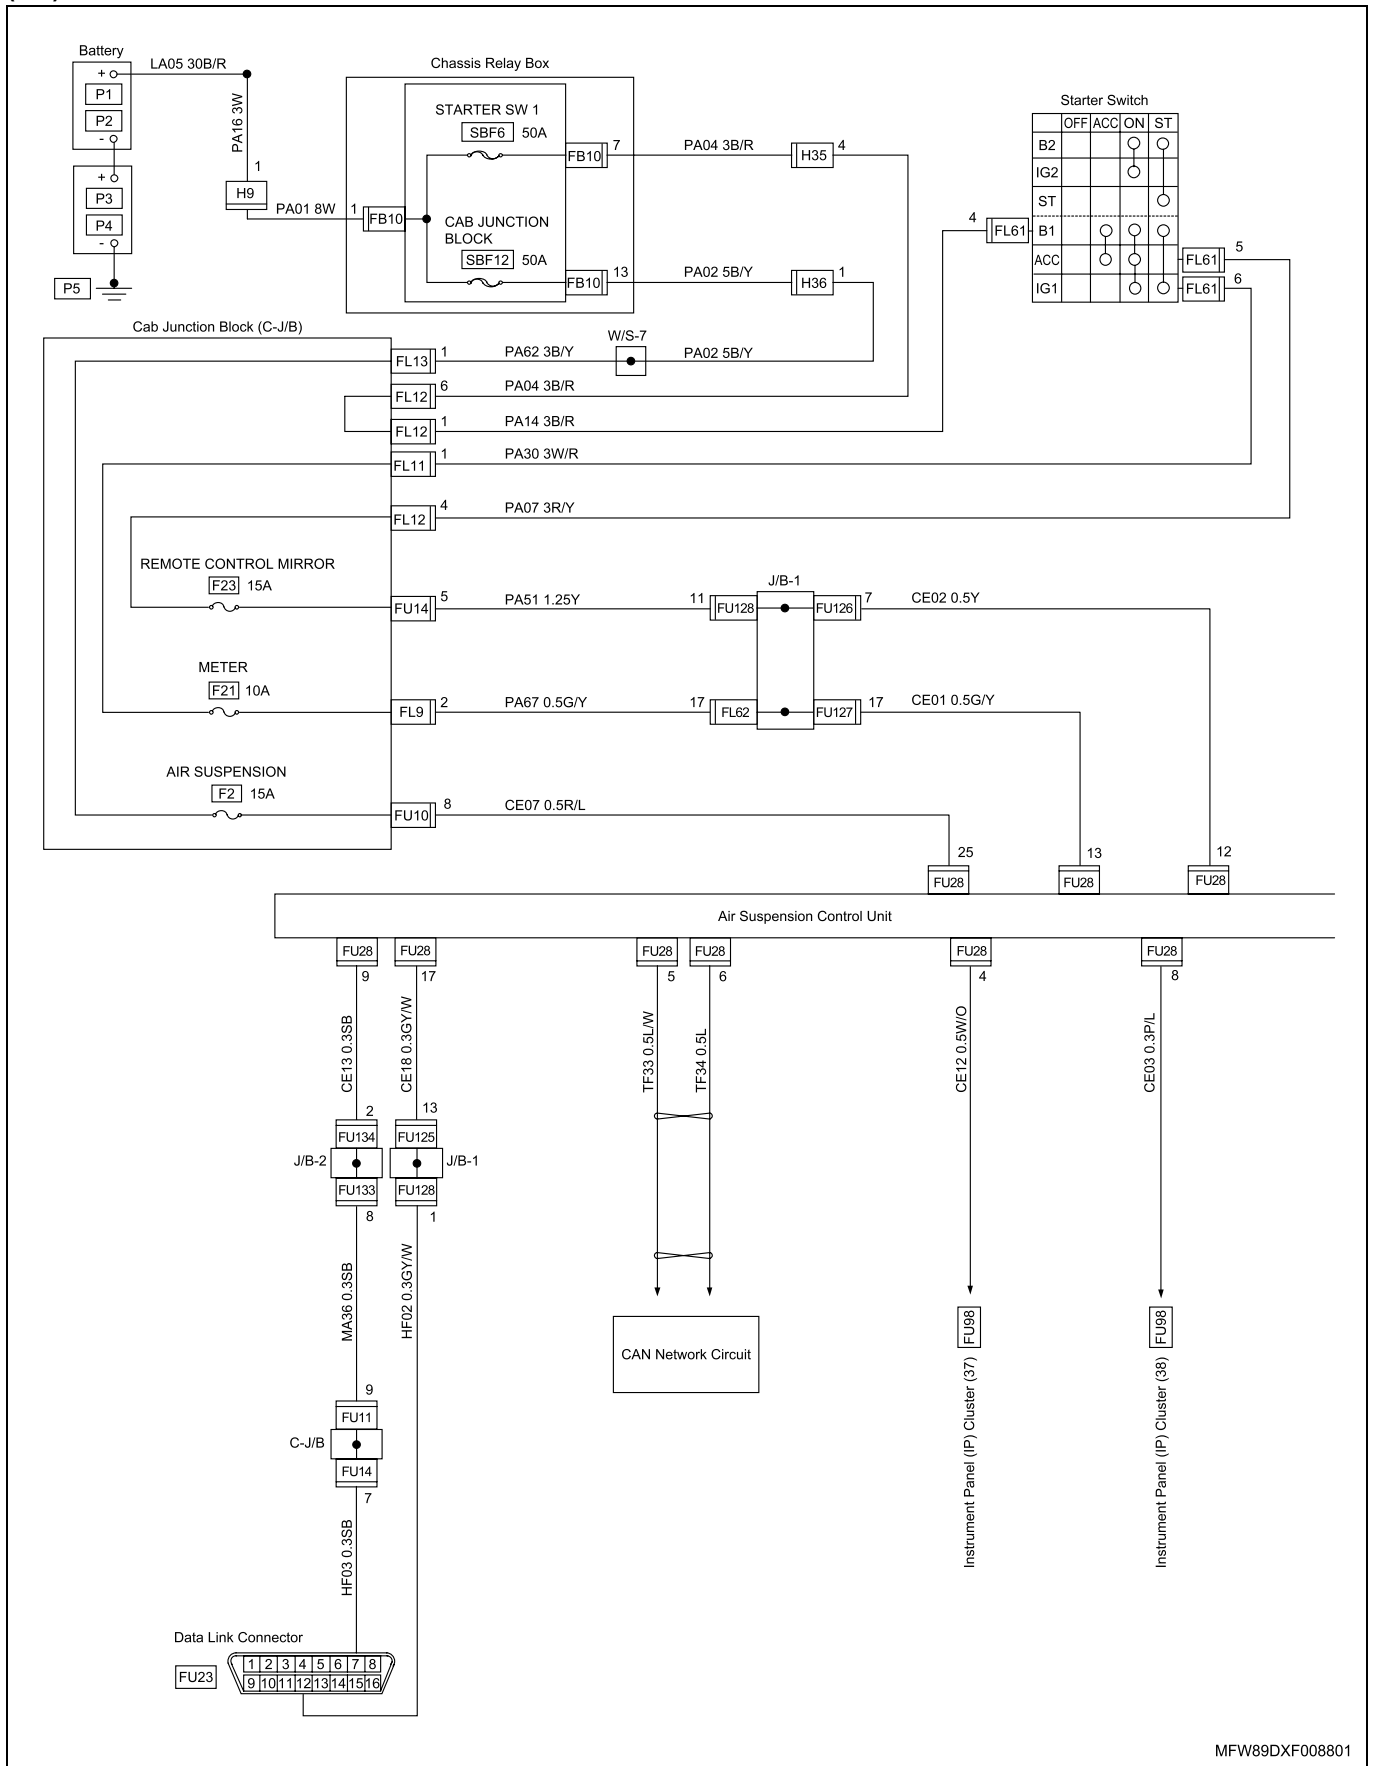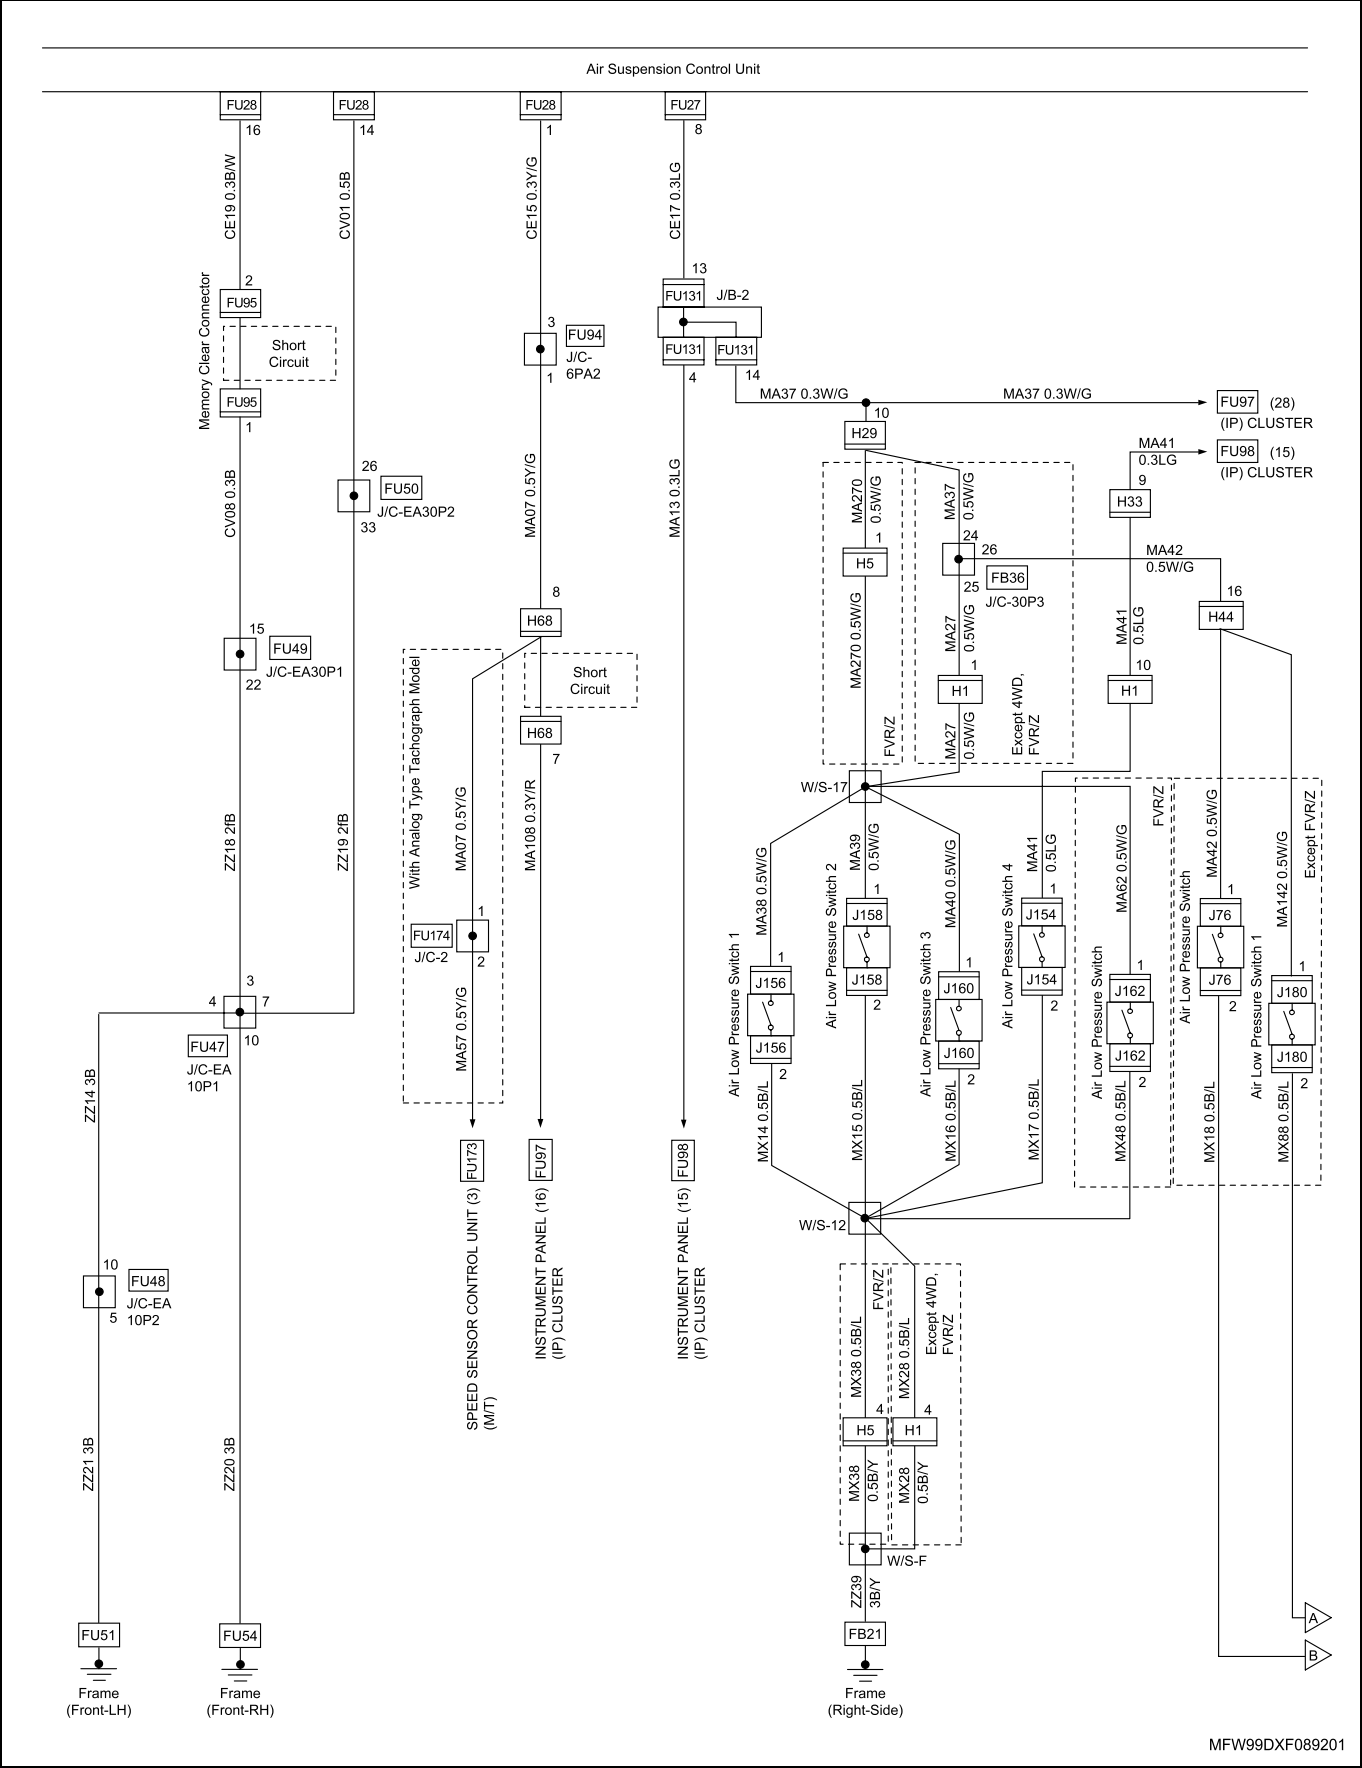Circuit Diagram Except Indonesia (1/3)





(3/3)

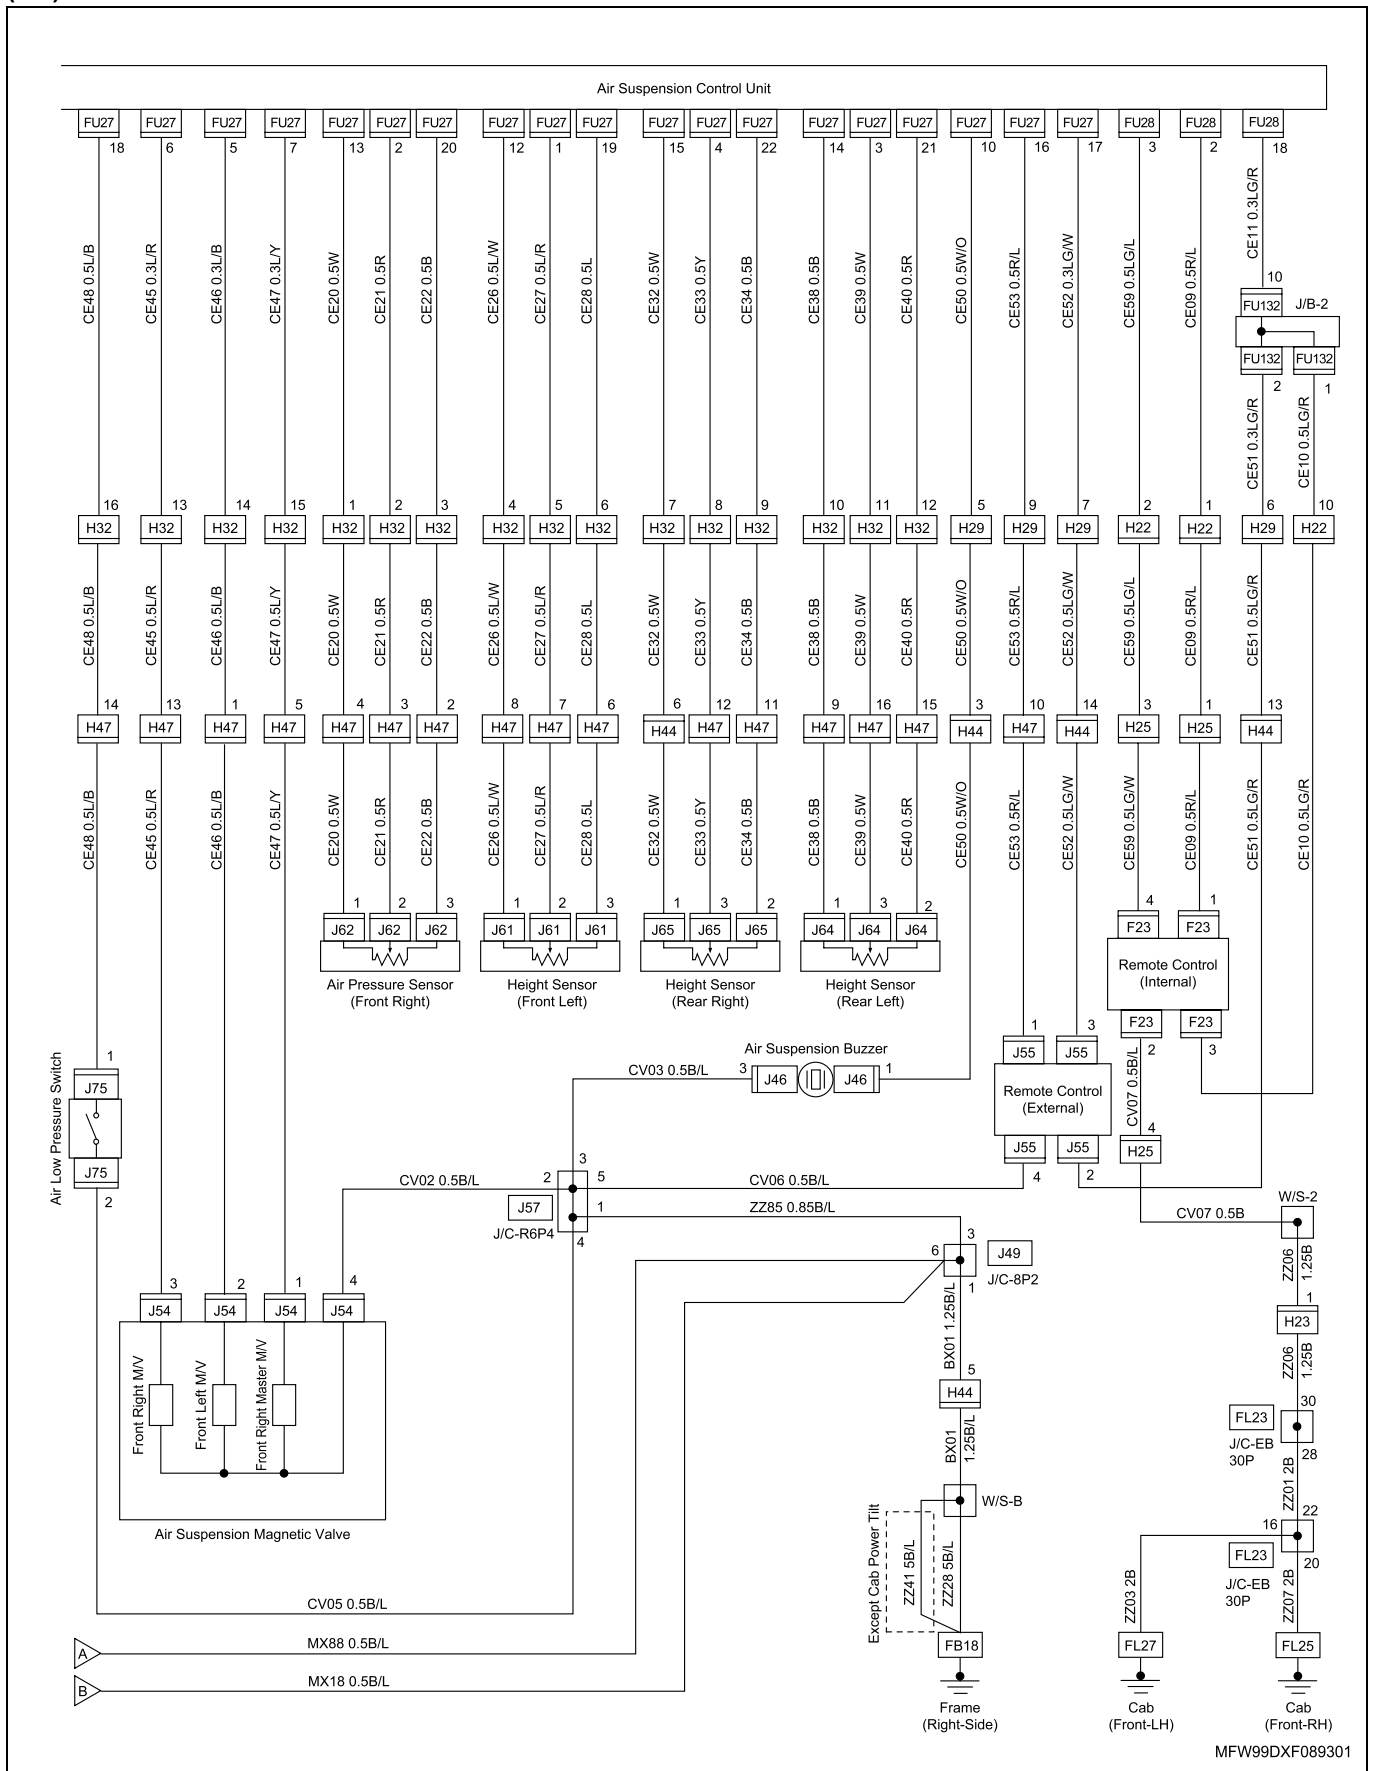


Electronic Hydraulic Control Unit (EHCU)


Circuit Diagram

Except Indonesia

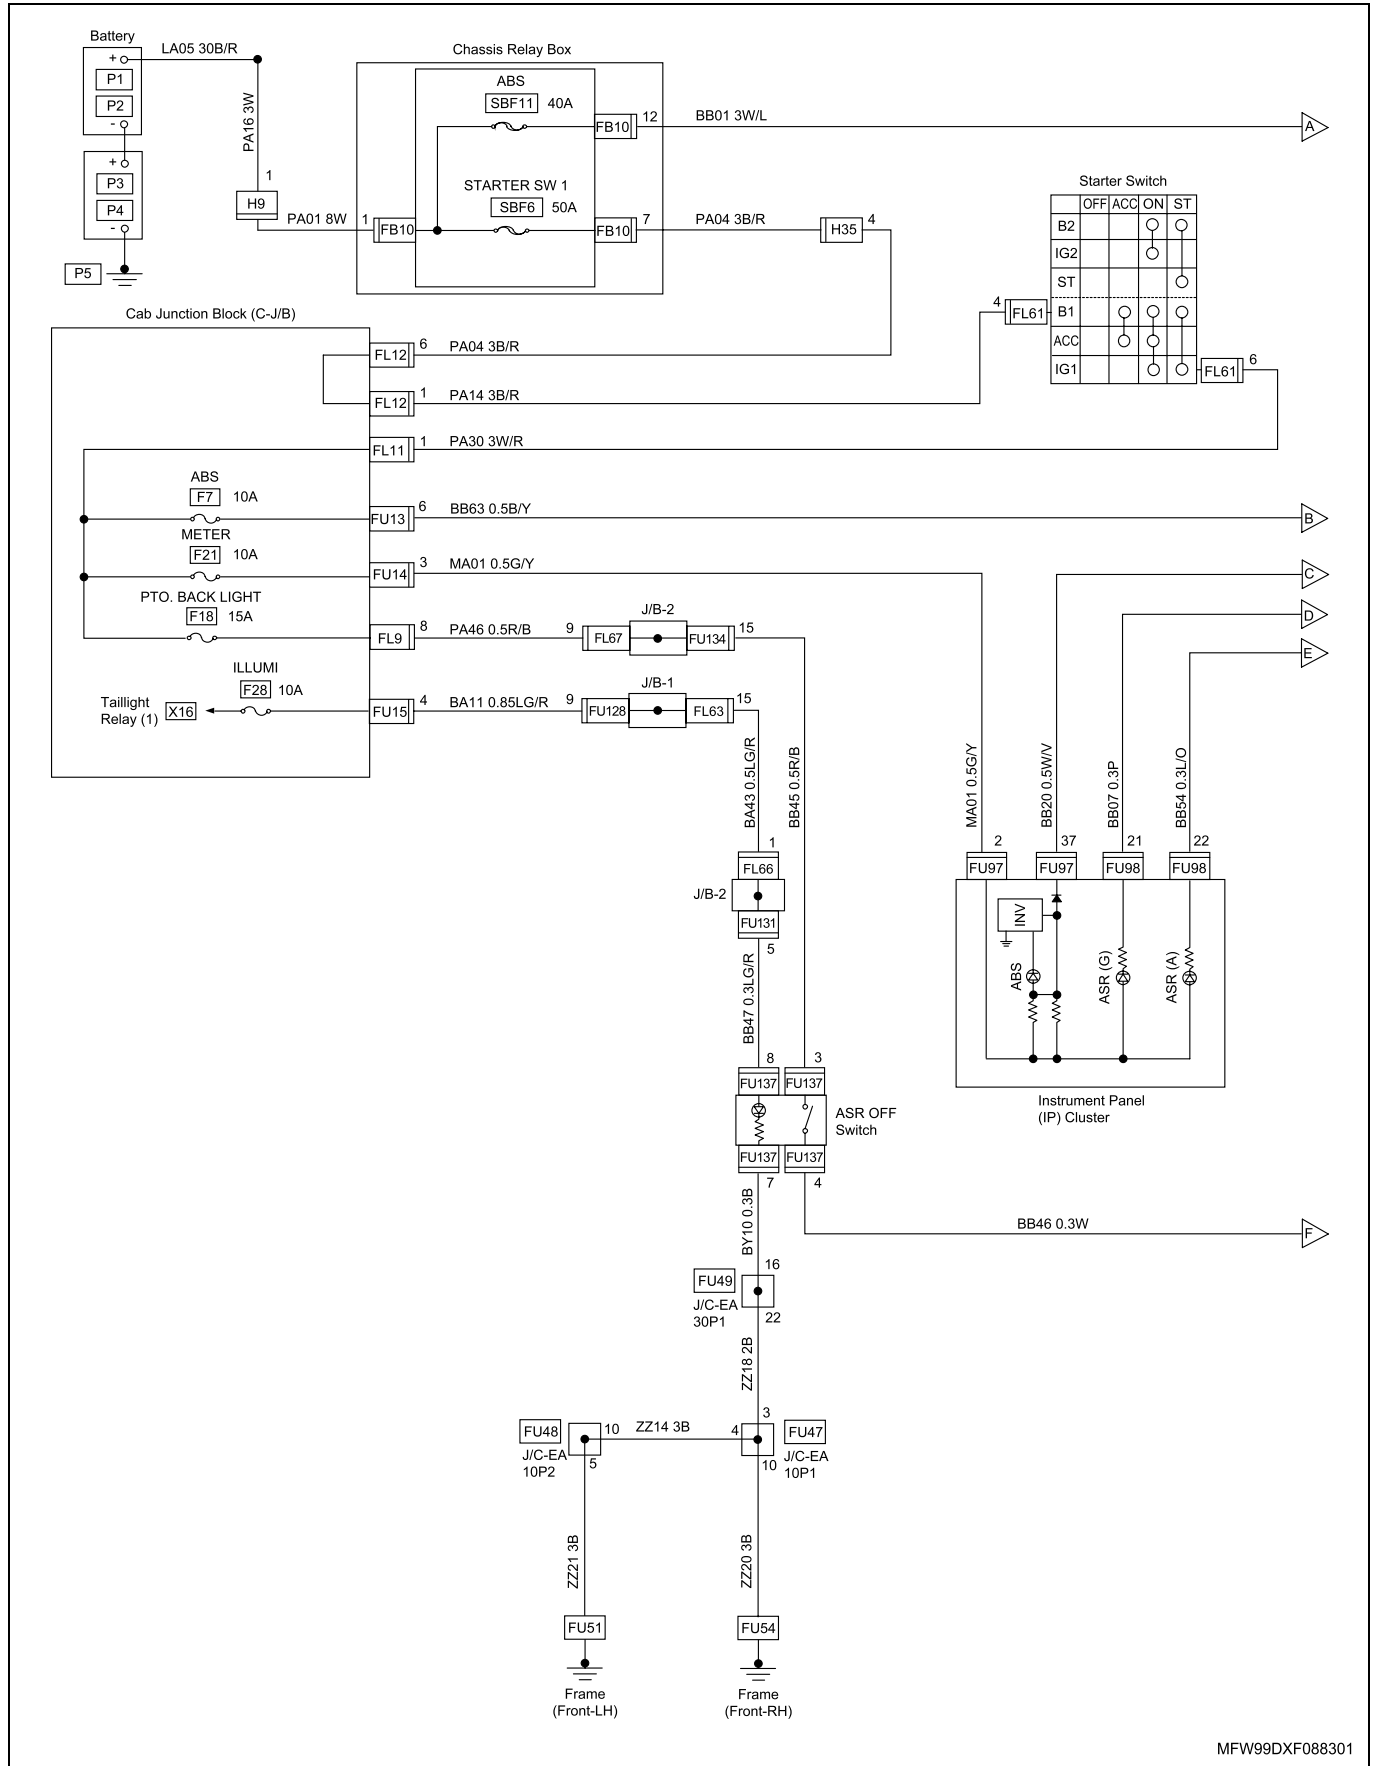(1/2)



(2/2)

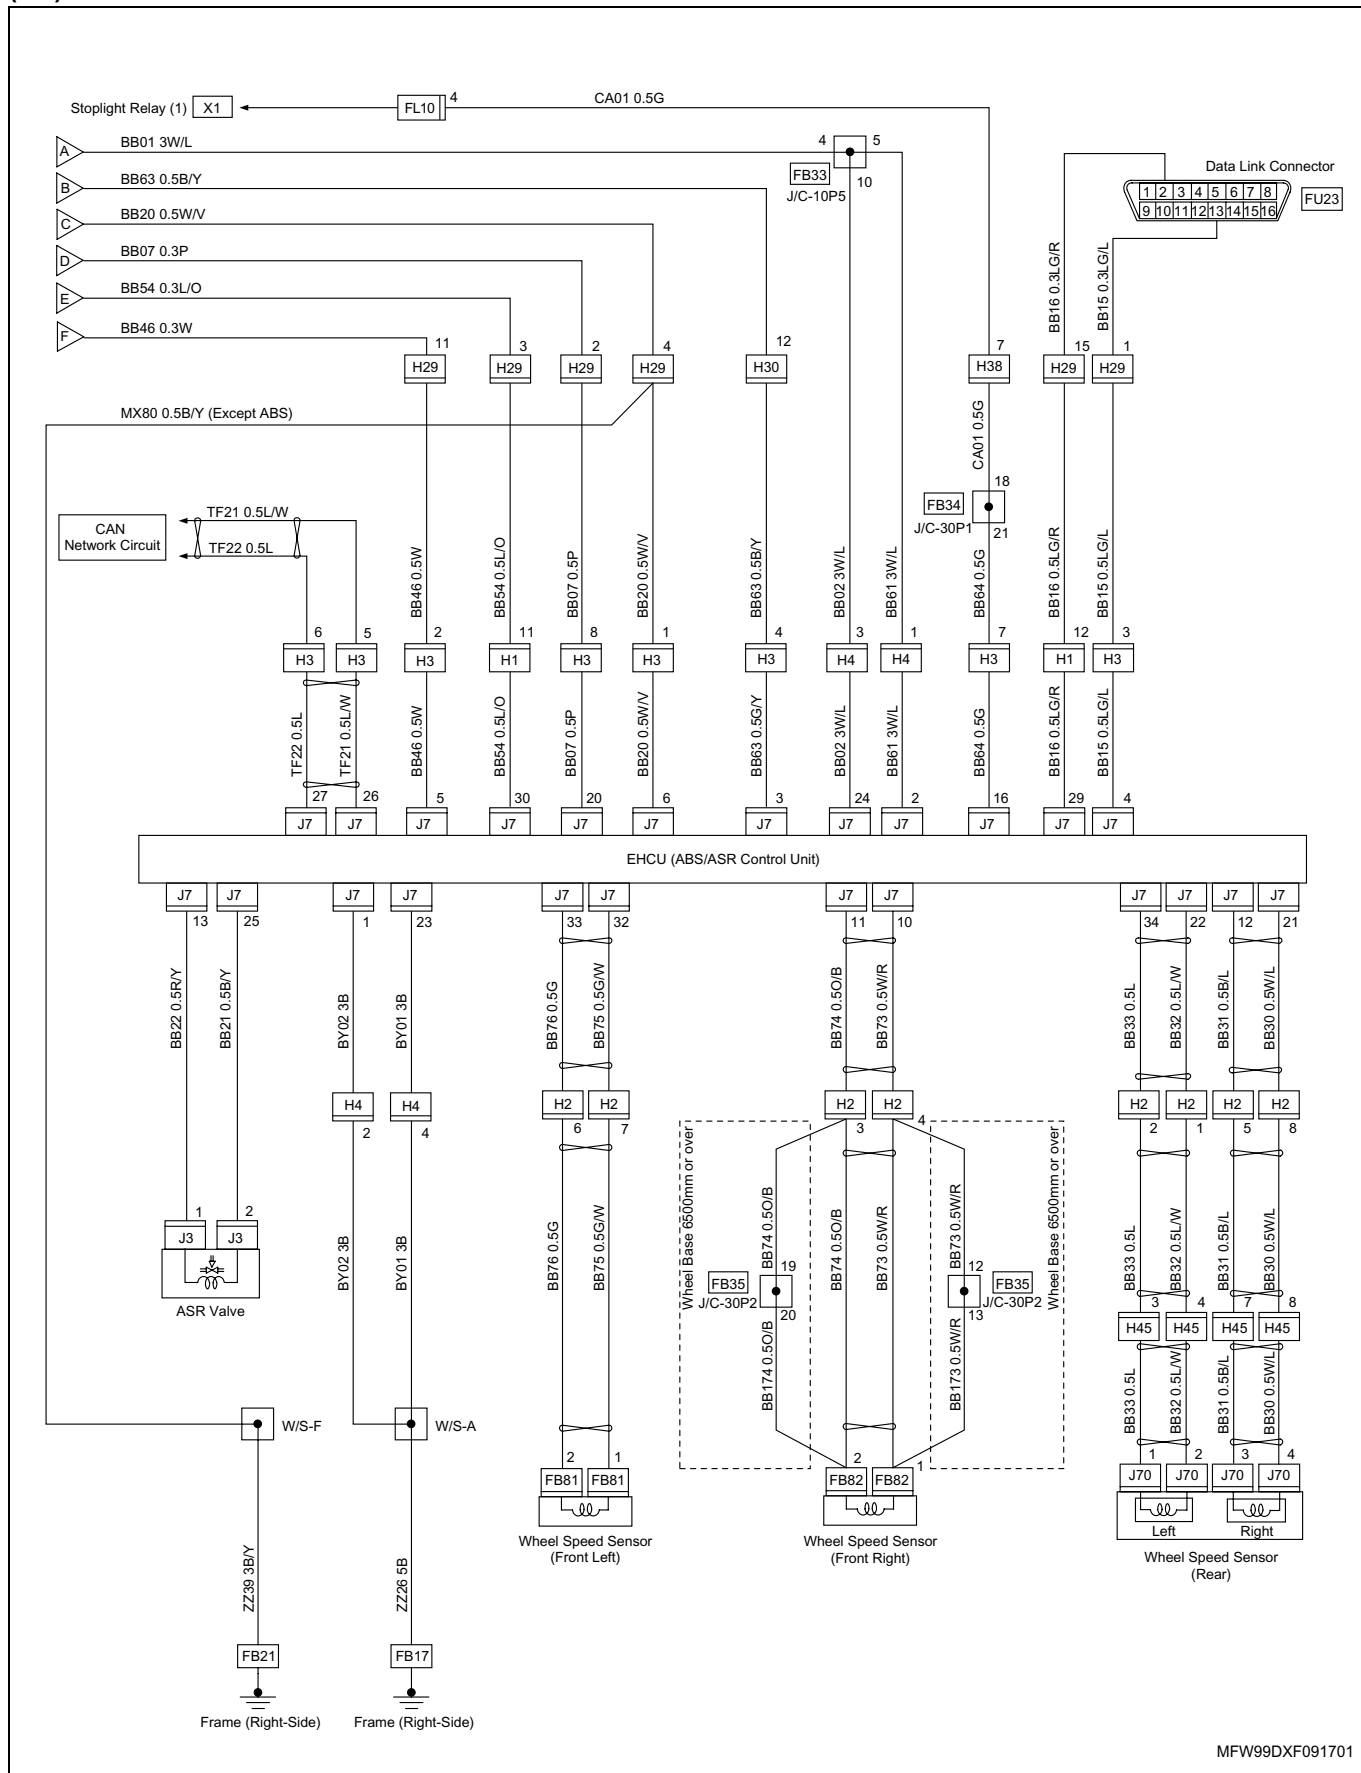


ABS Control Unit


Circuit Diagram


Except Indonesia

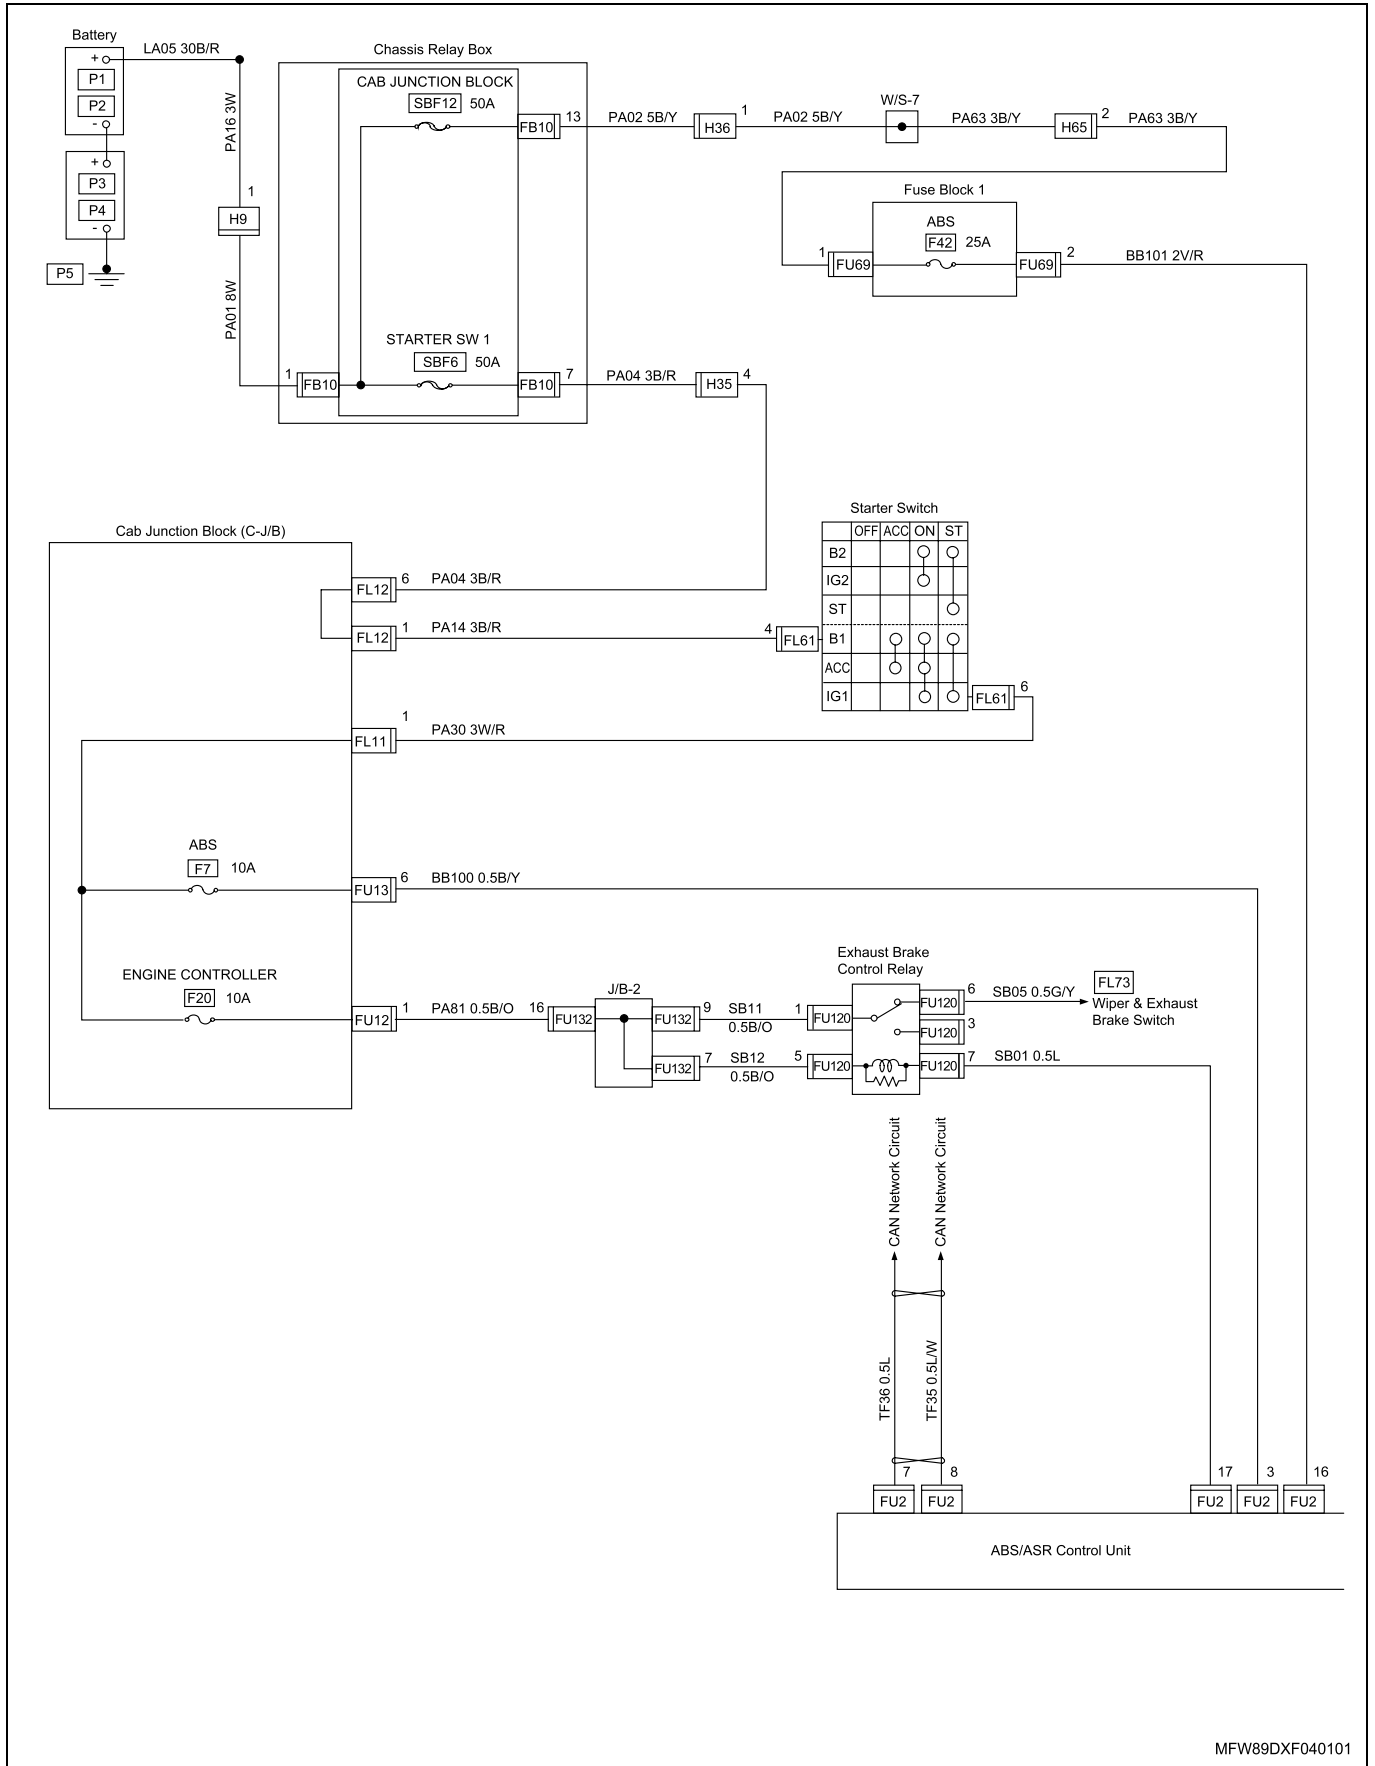(1/3)




(2/3)

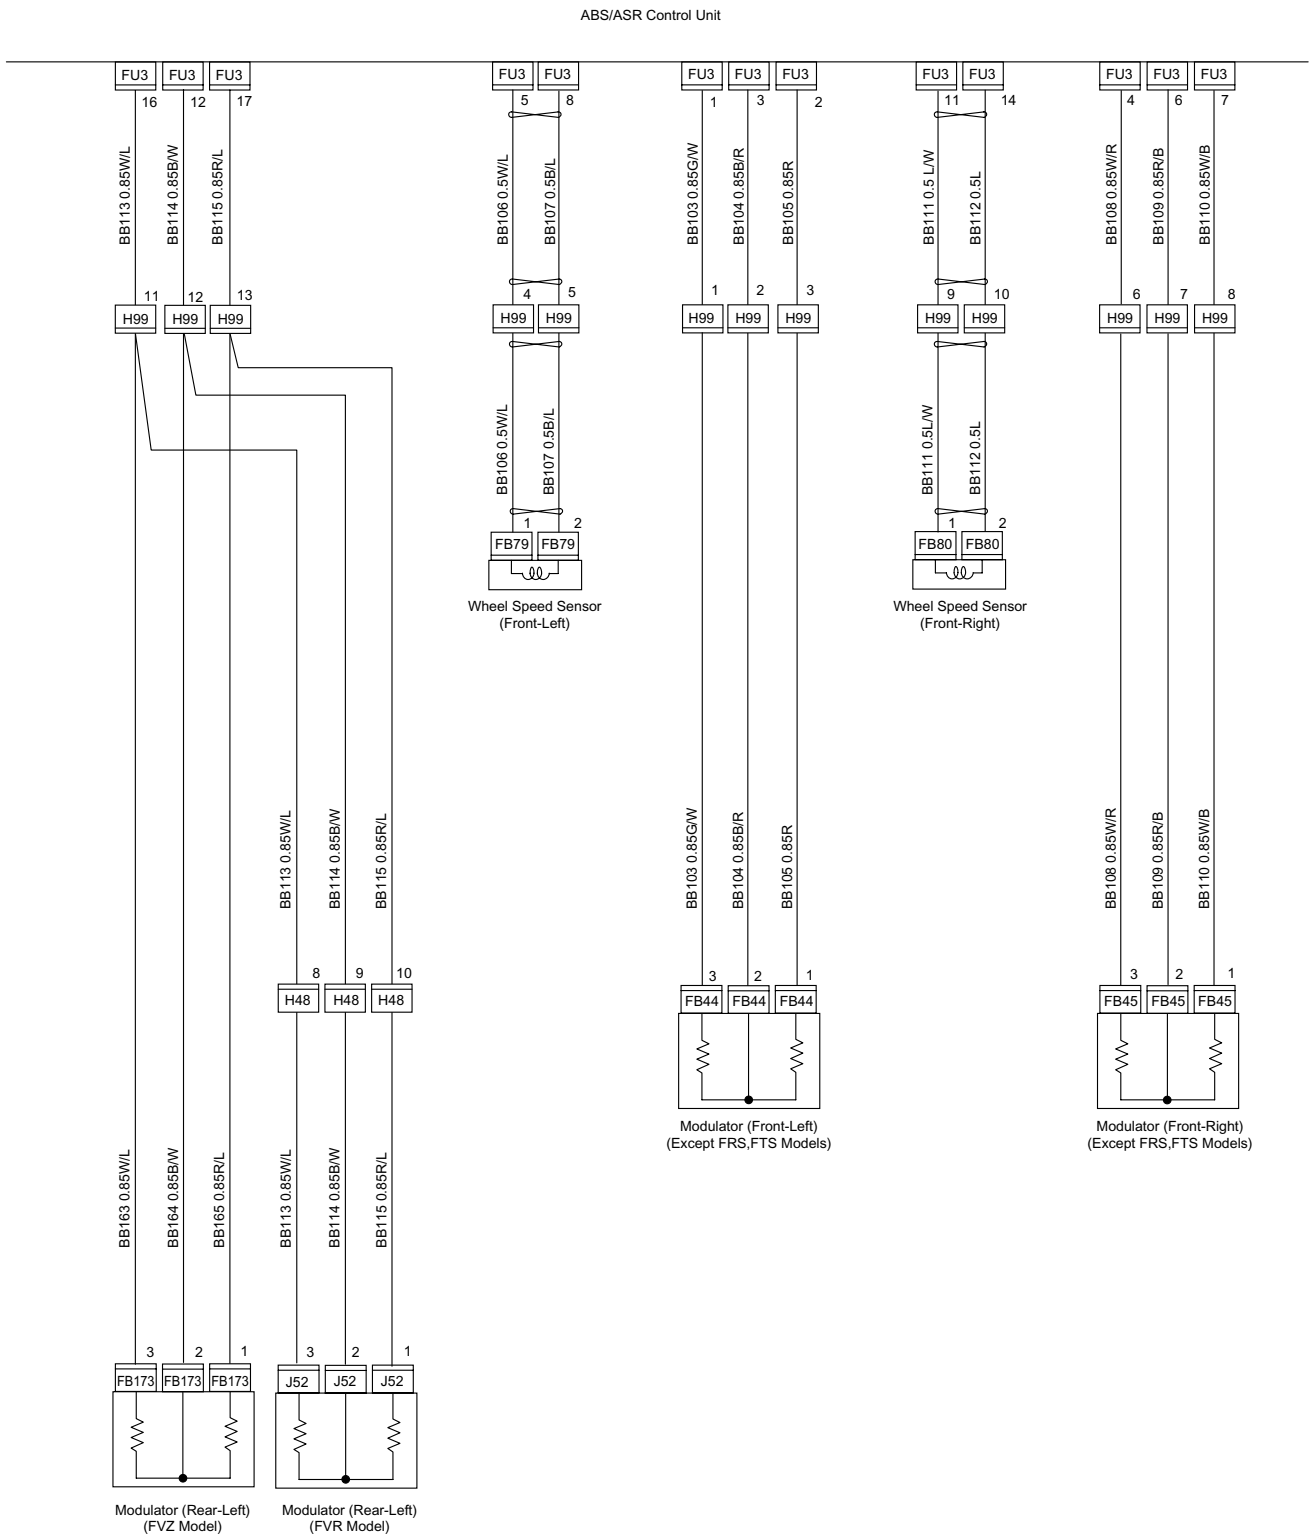

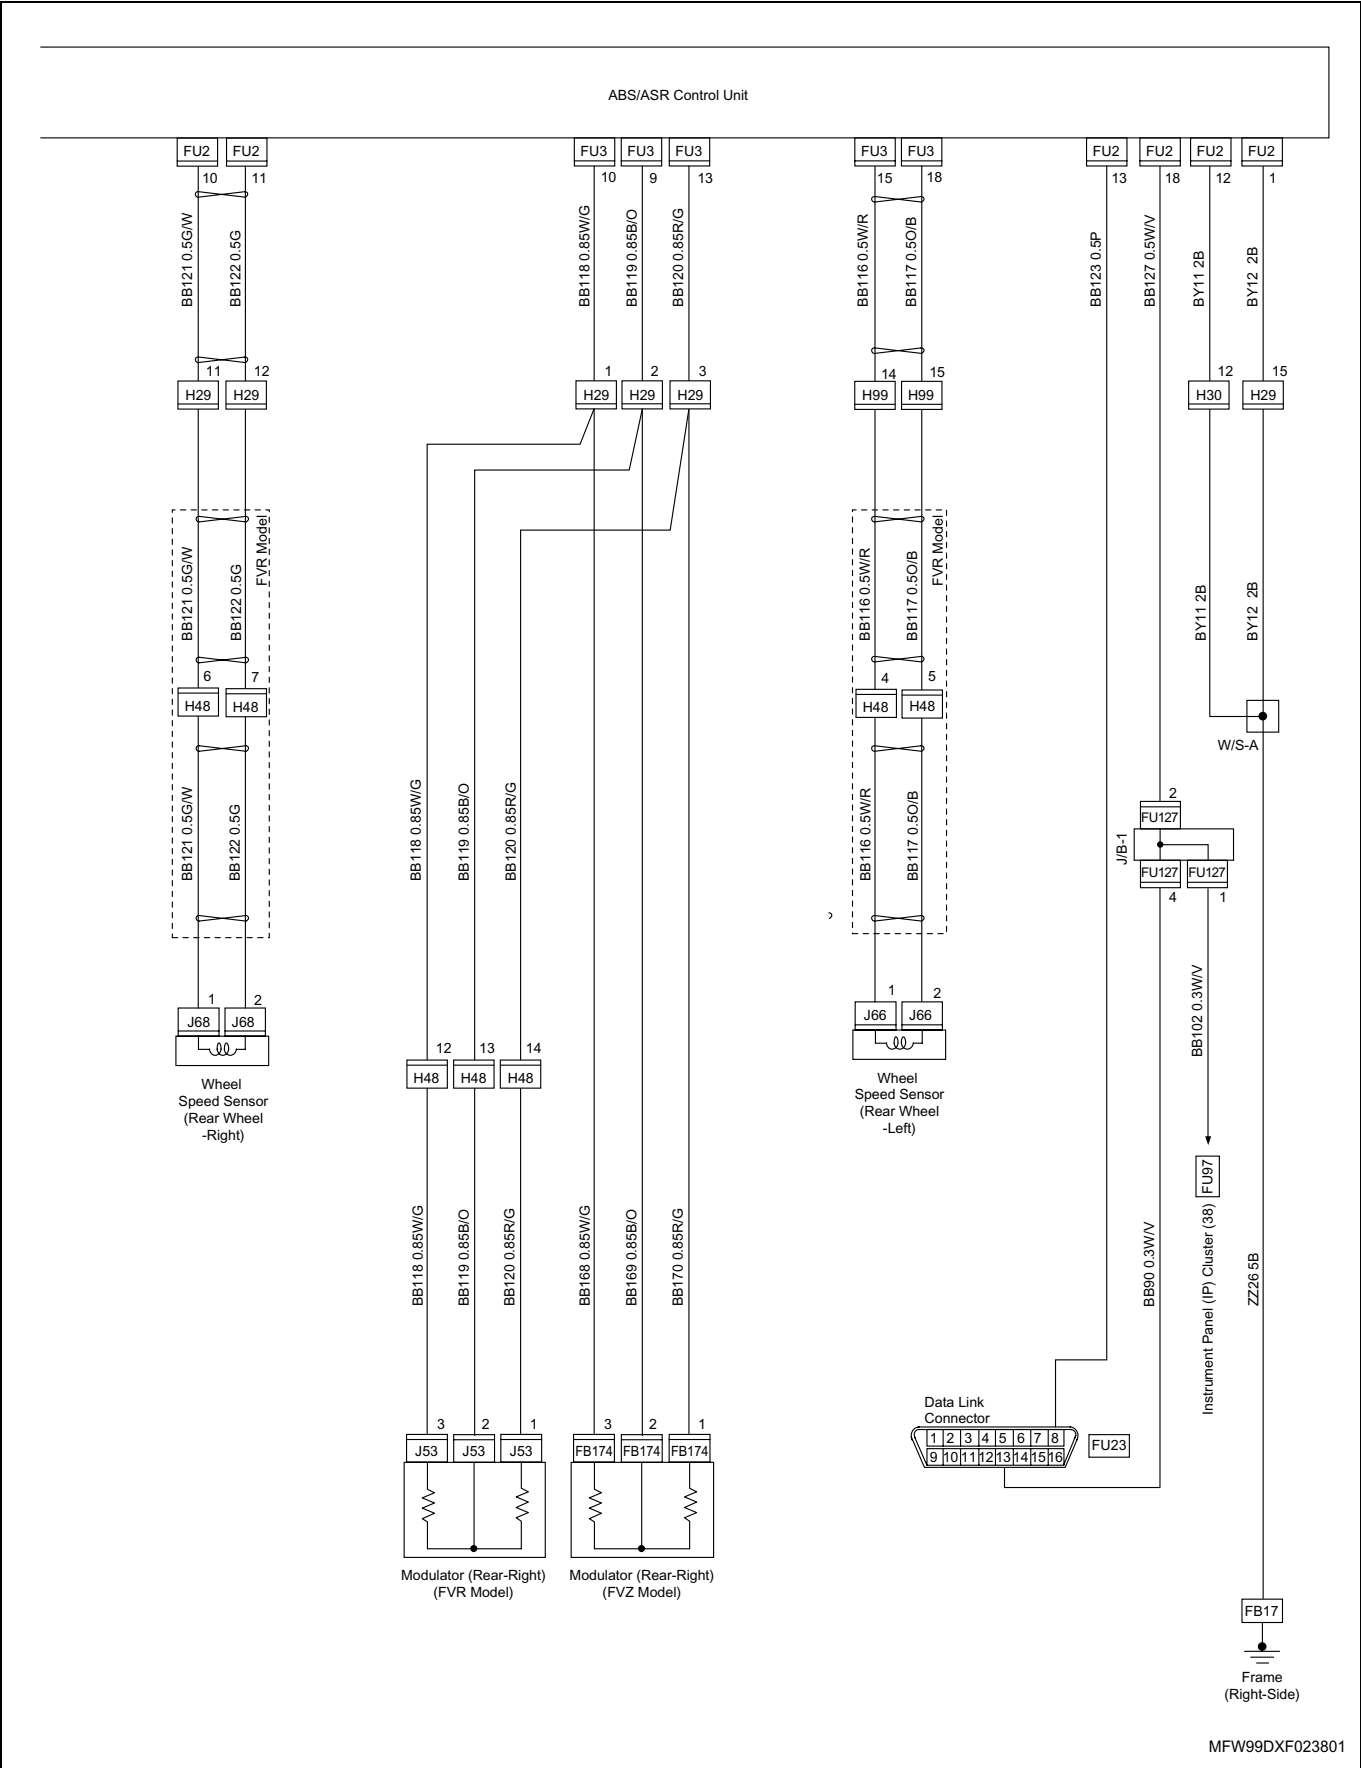


HSA (Hill Start Aid) System

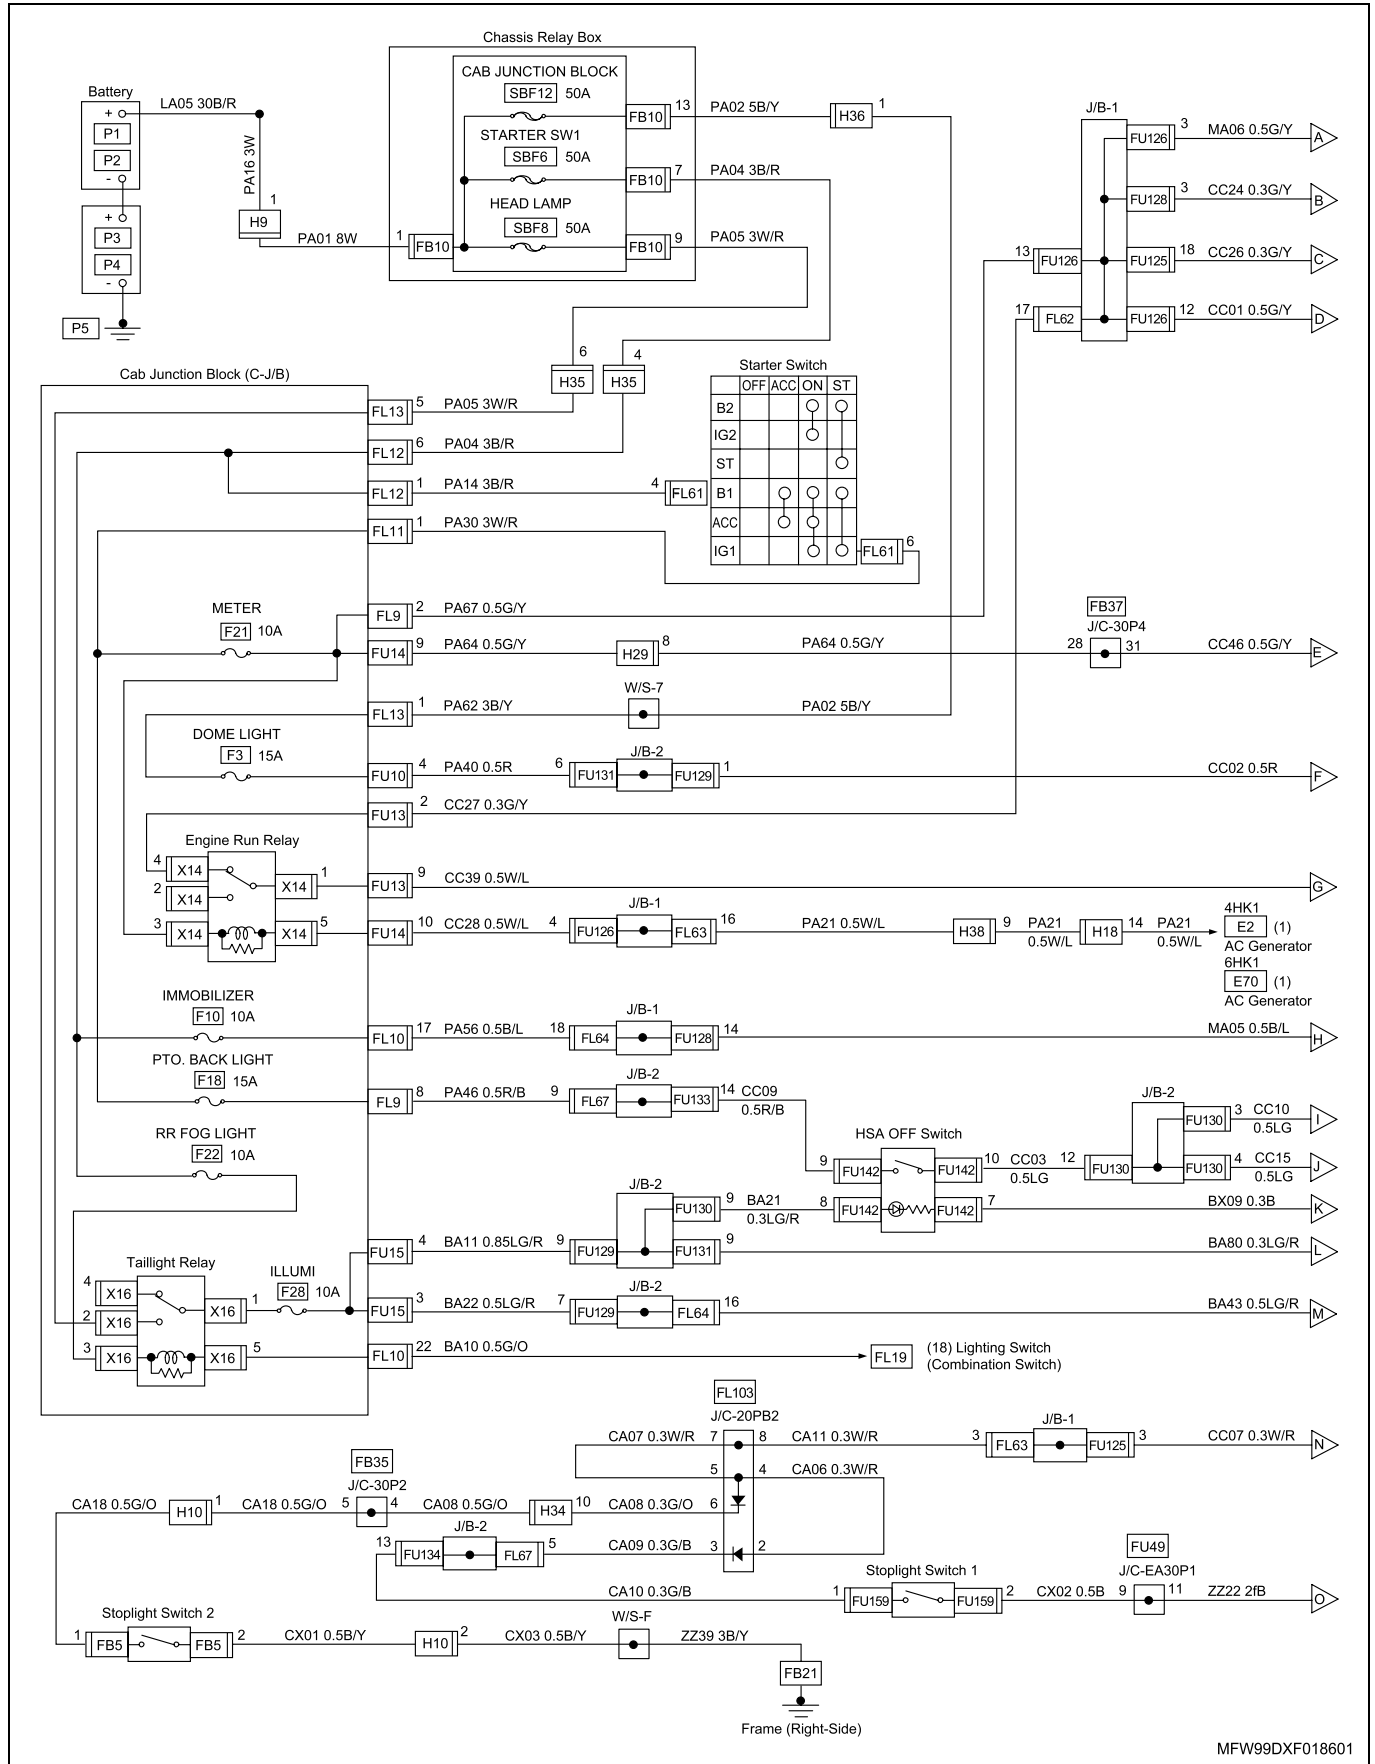Circuit Diagram Except Indonesia (1/3)




9D-164 Wiring System (RHD model)

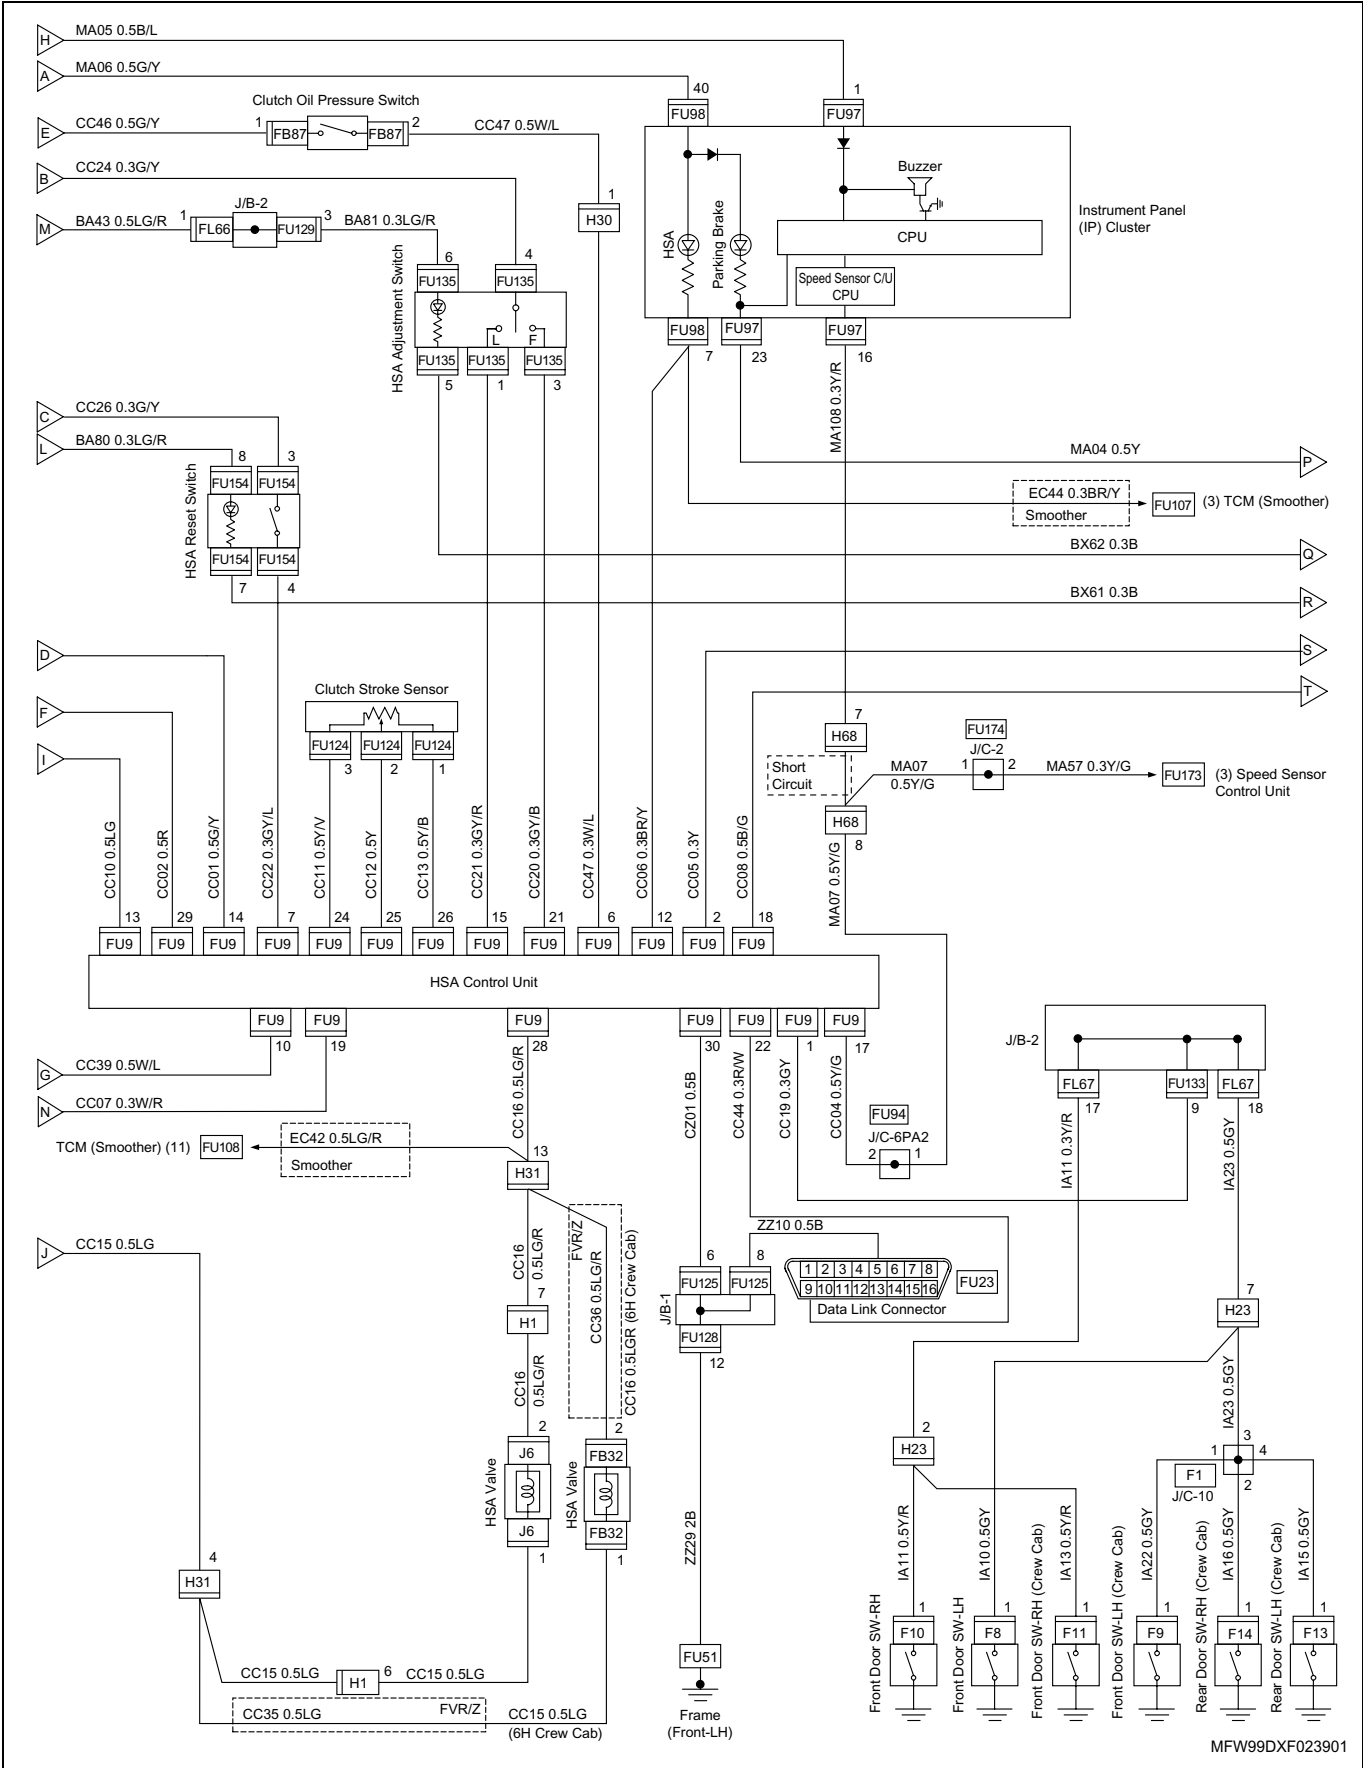(2/3)



MF99DXF023901

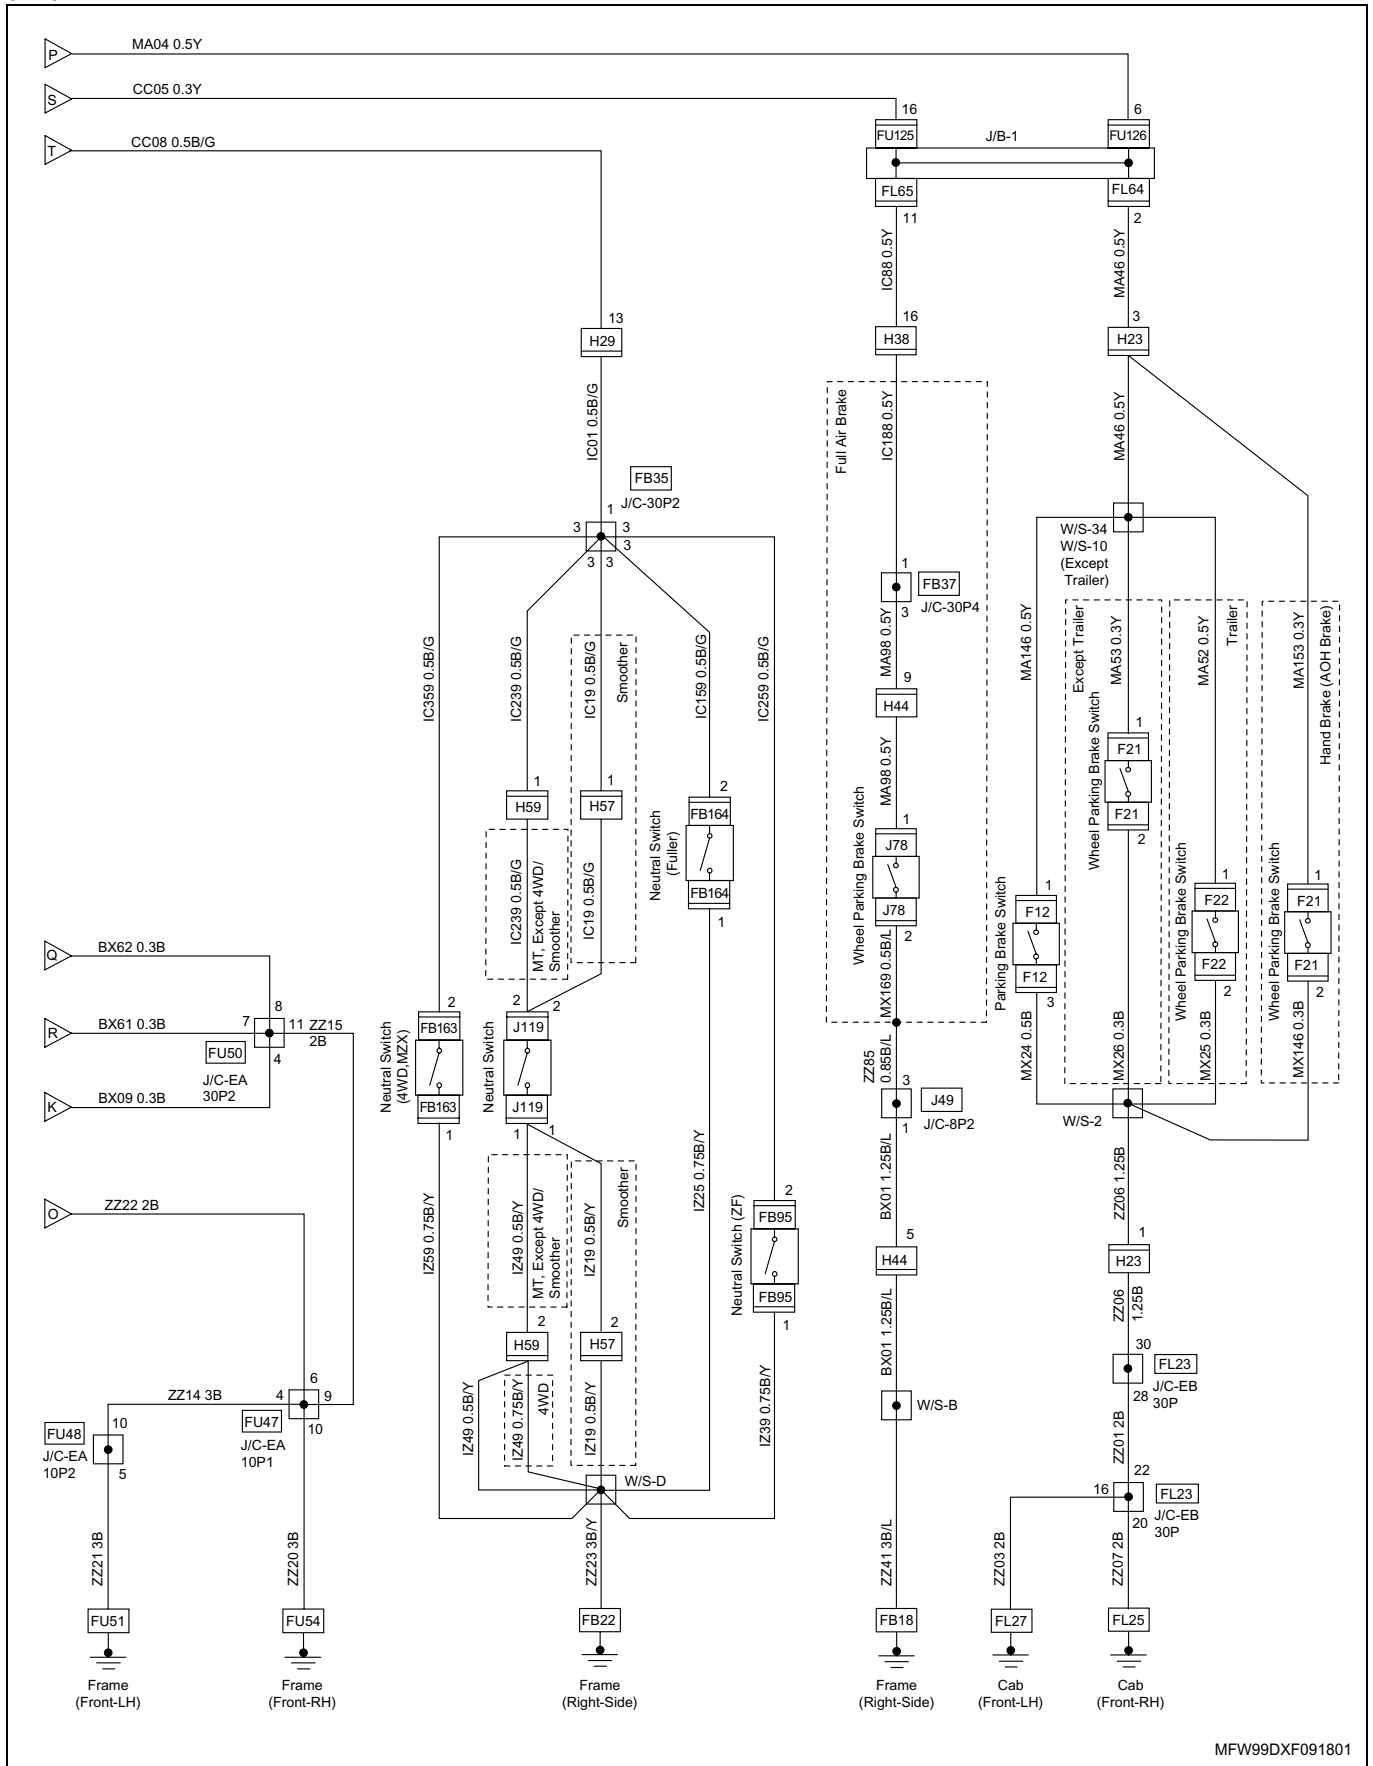
(3/3)



Supplemental Restraint System (SRS) Airbag System

Circuit Diagram

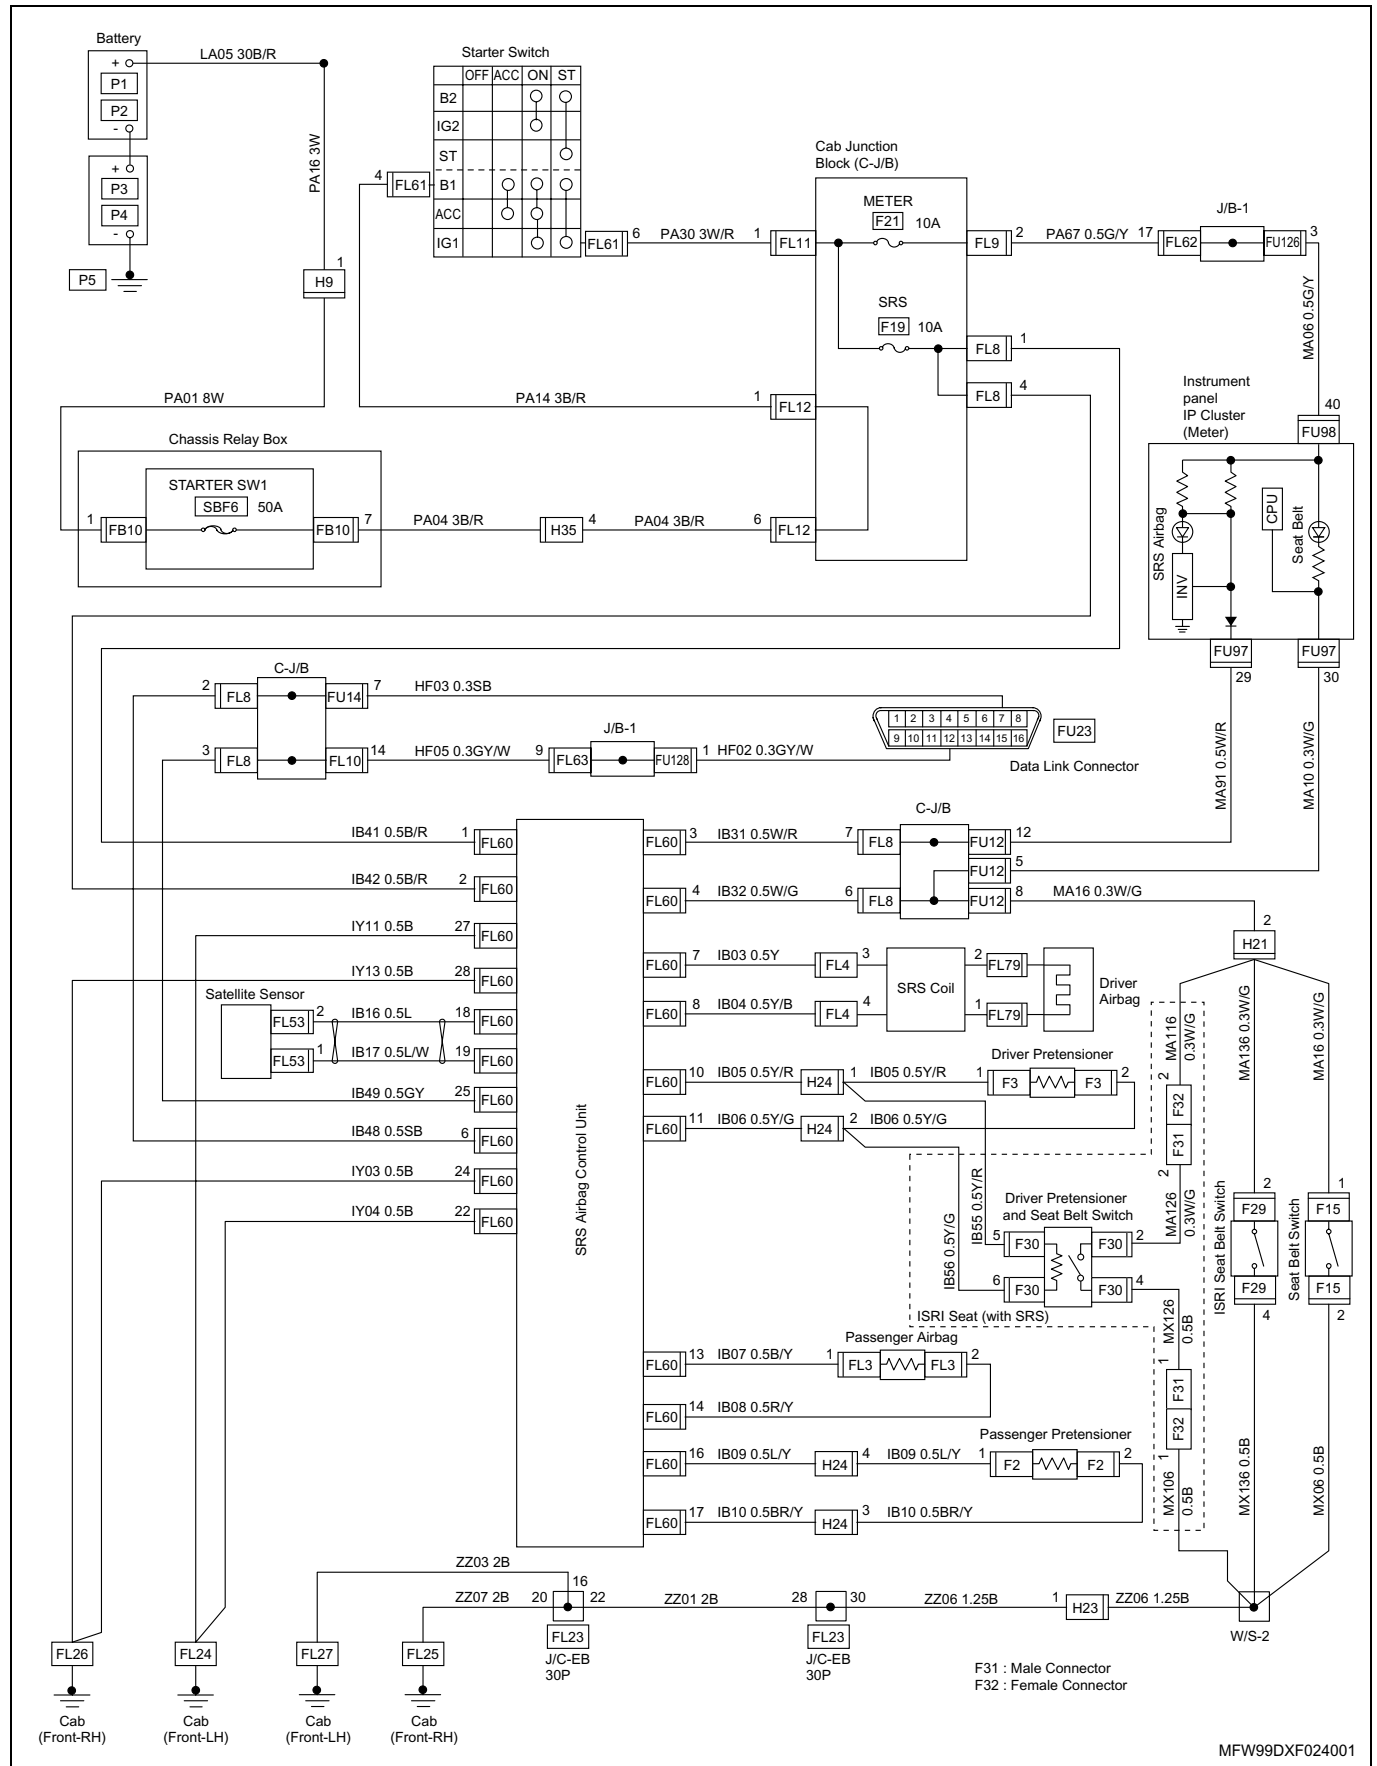
Except Indonesia




Headlight(Halogen)

Circuit Diagram

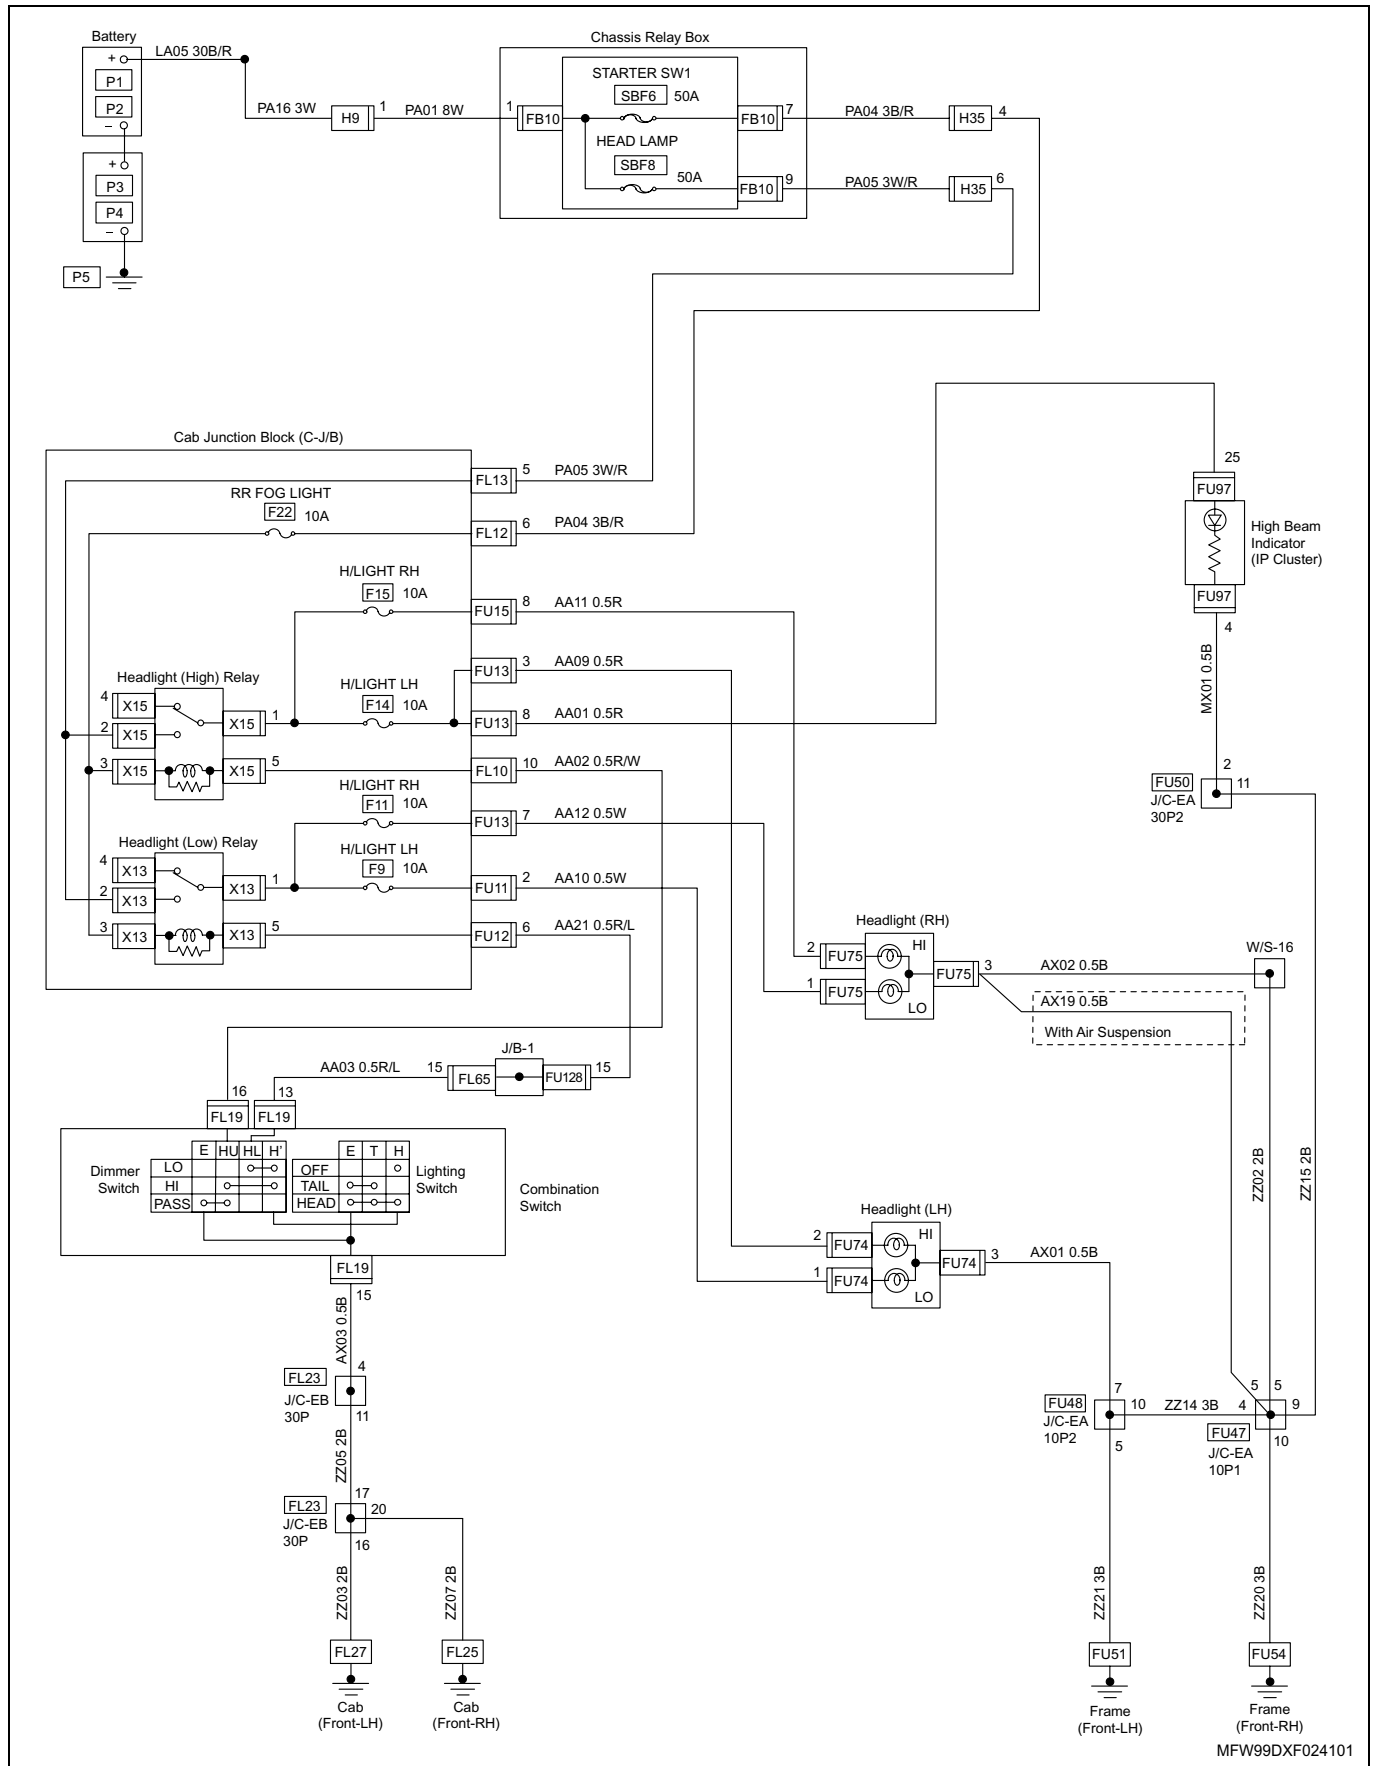
Cab Headlight Vehicle (Except Indonesia)



Cab Headlight Vehicle (Indonesia)

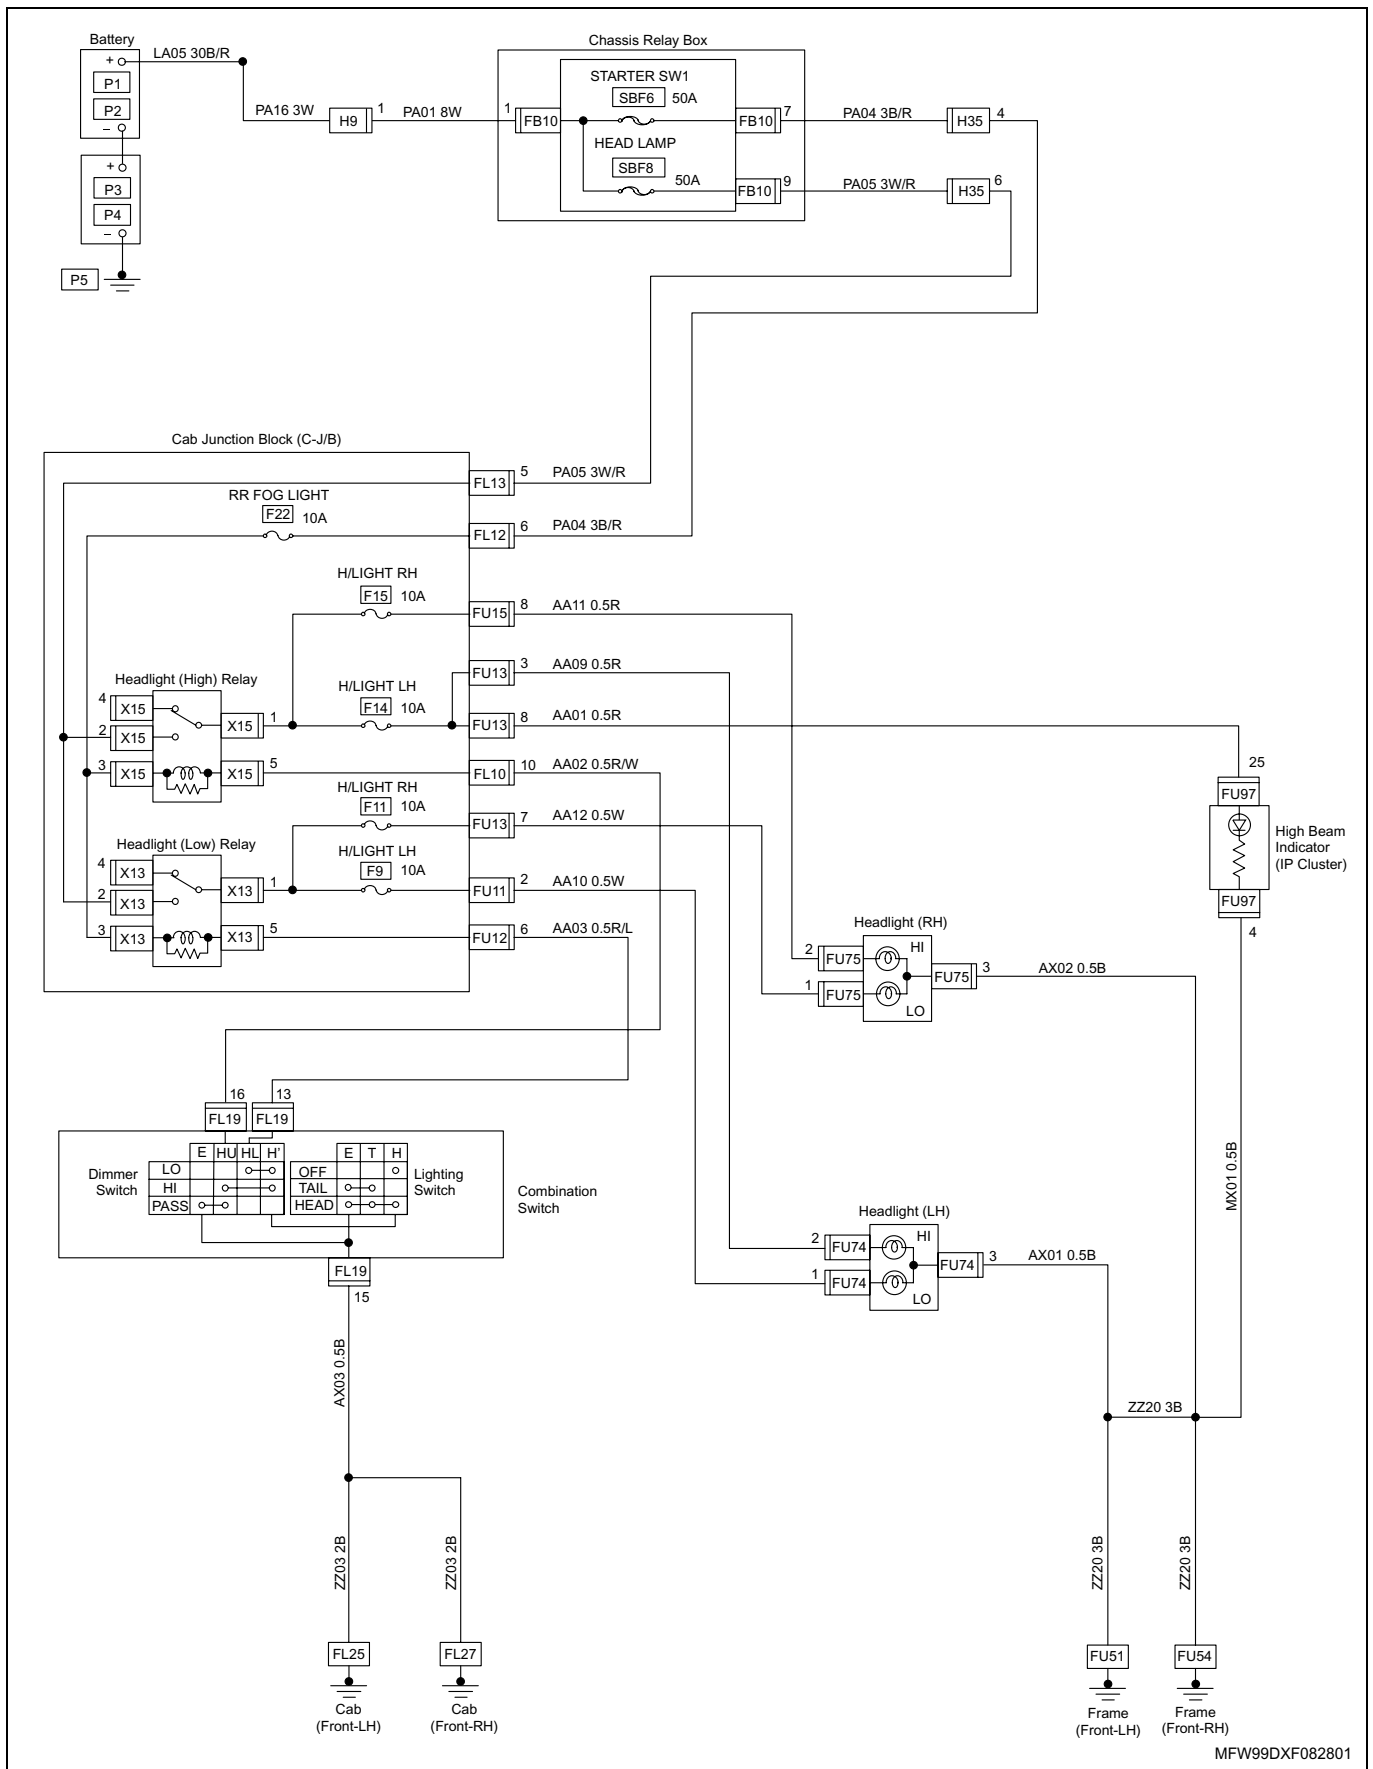

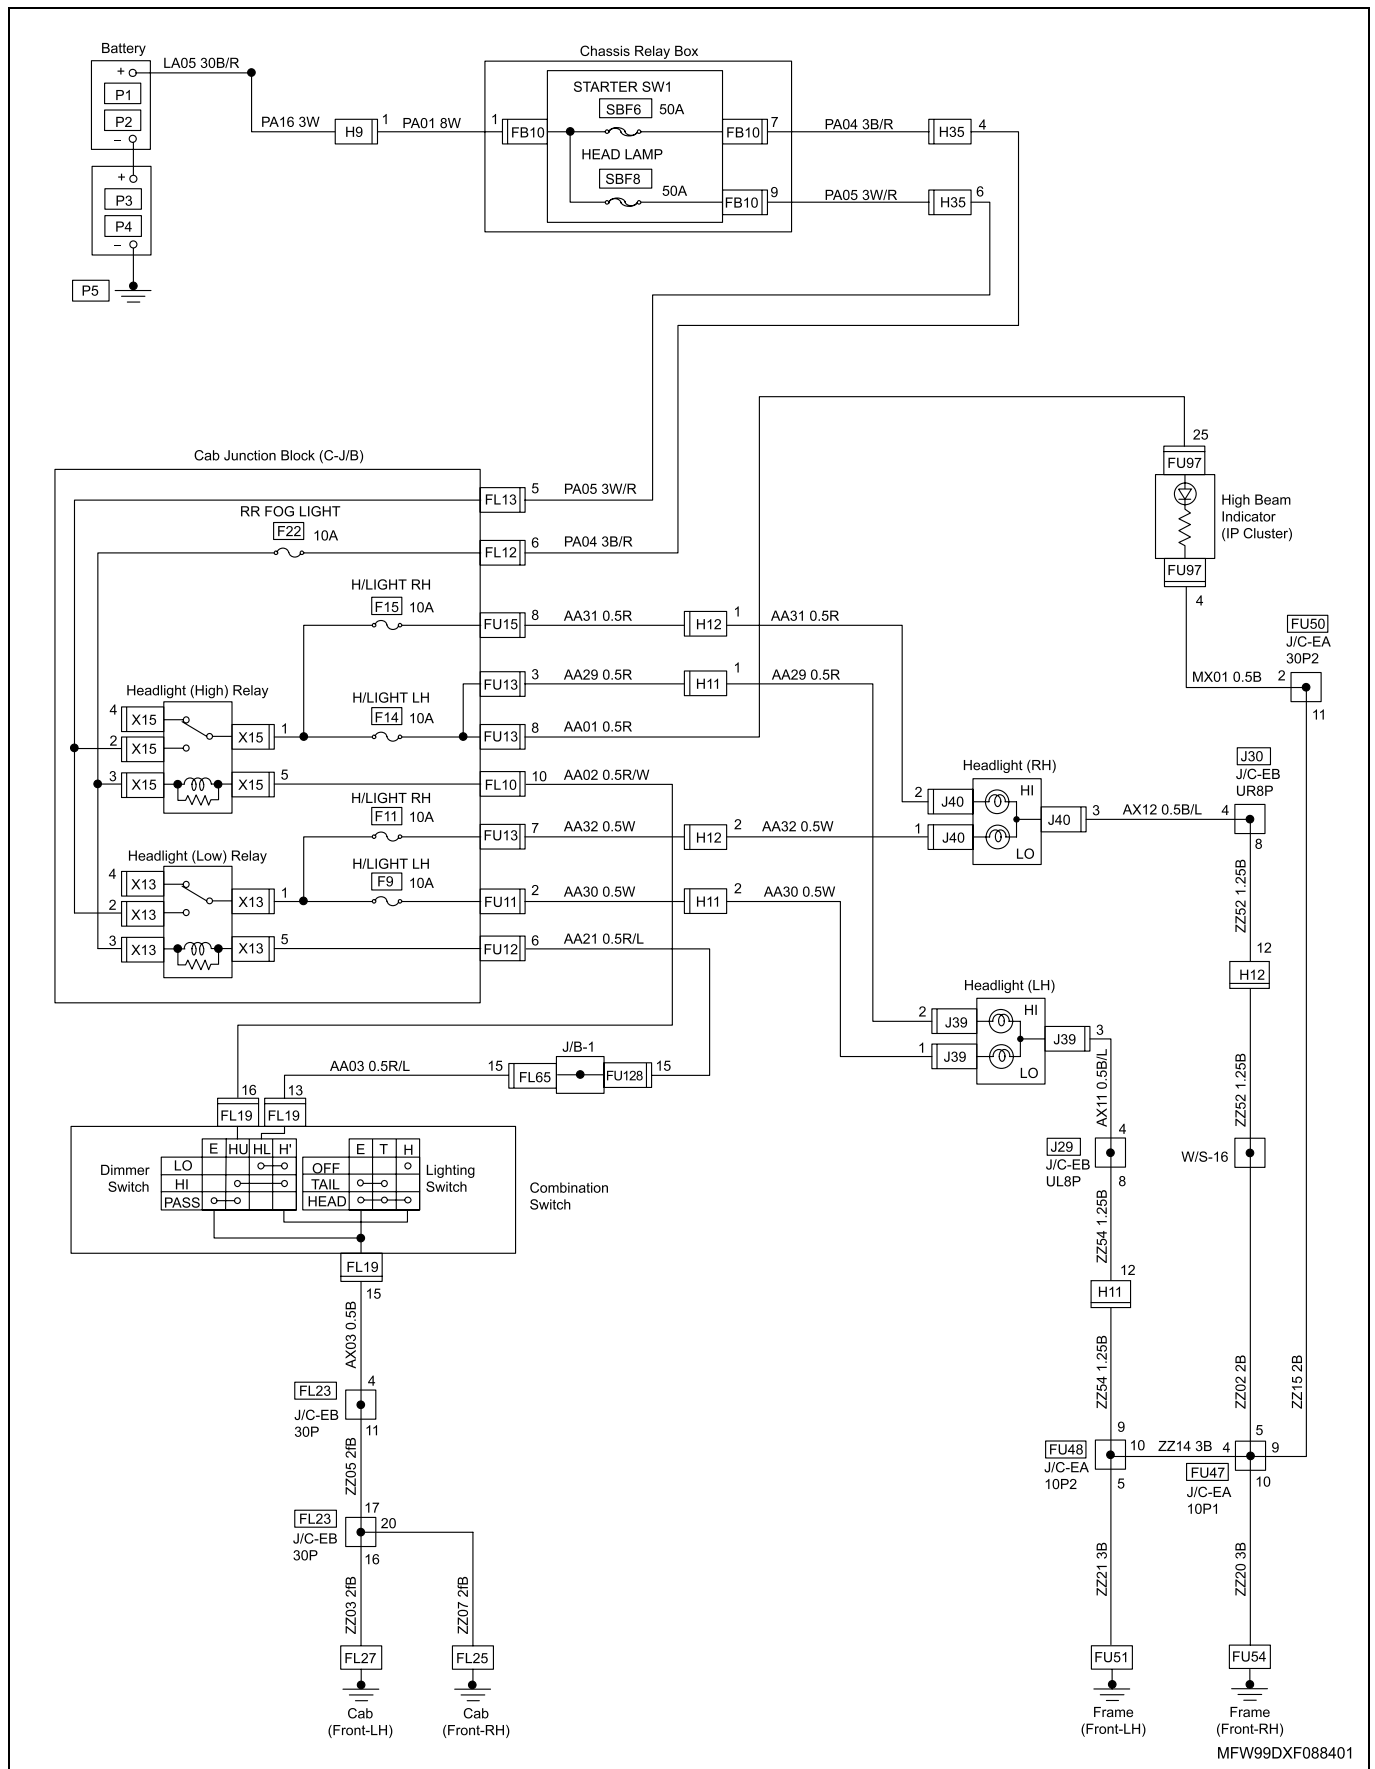Bumper Headlight Vehicle (Except Indonesia)




MFW99DXF088401

Headlight (HID)

Circuit Diagram

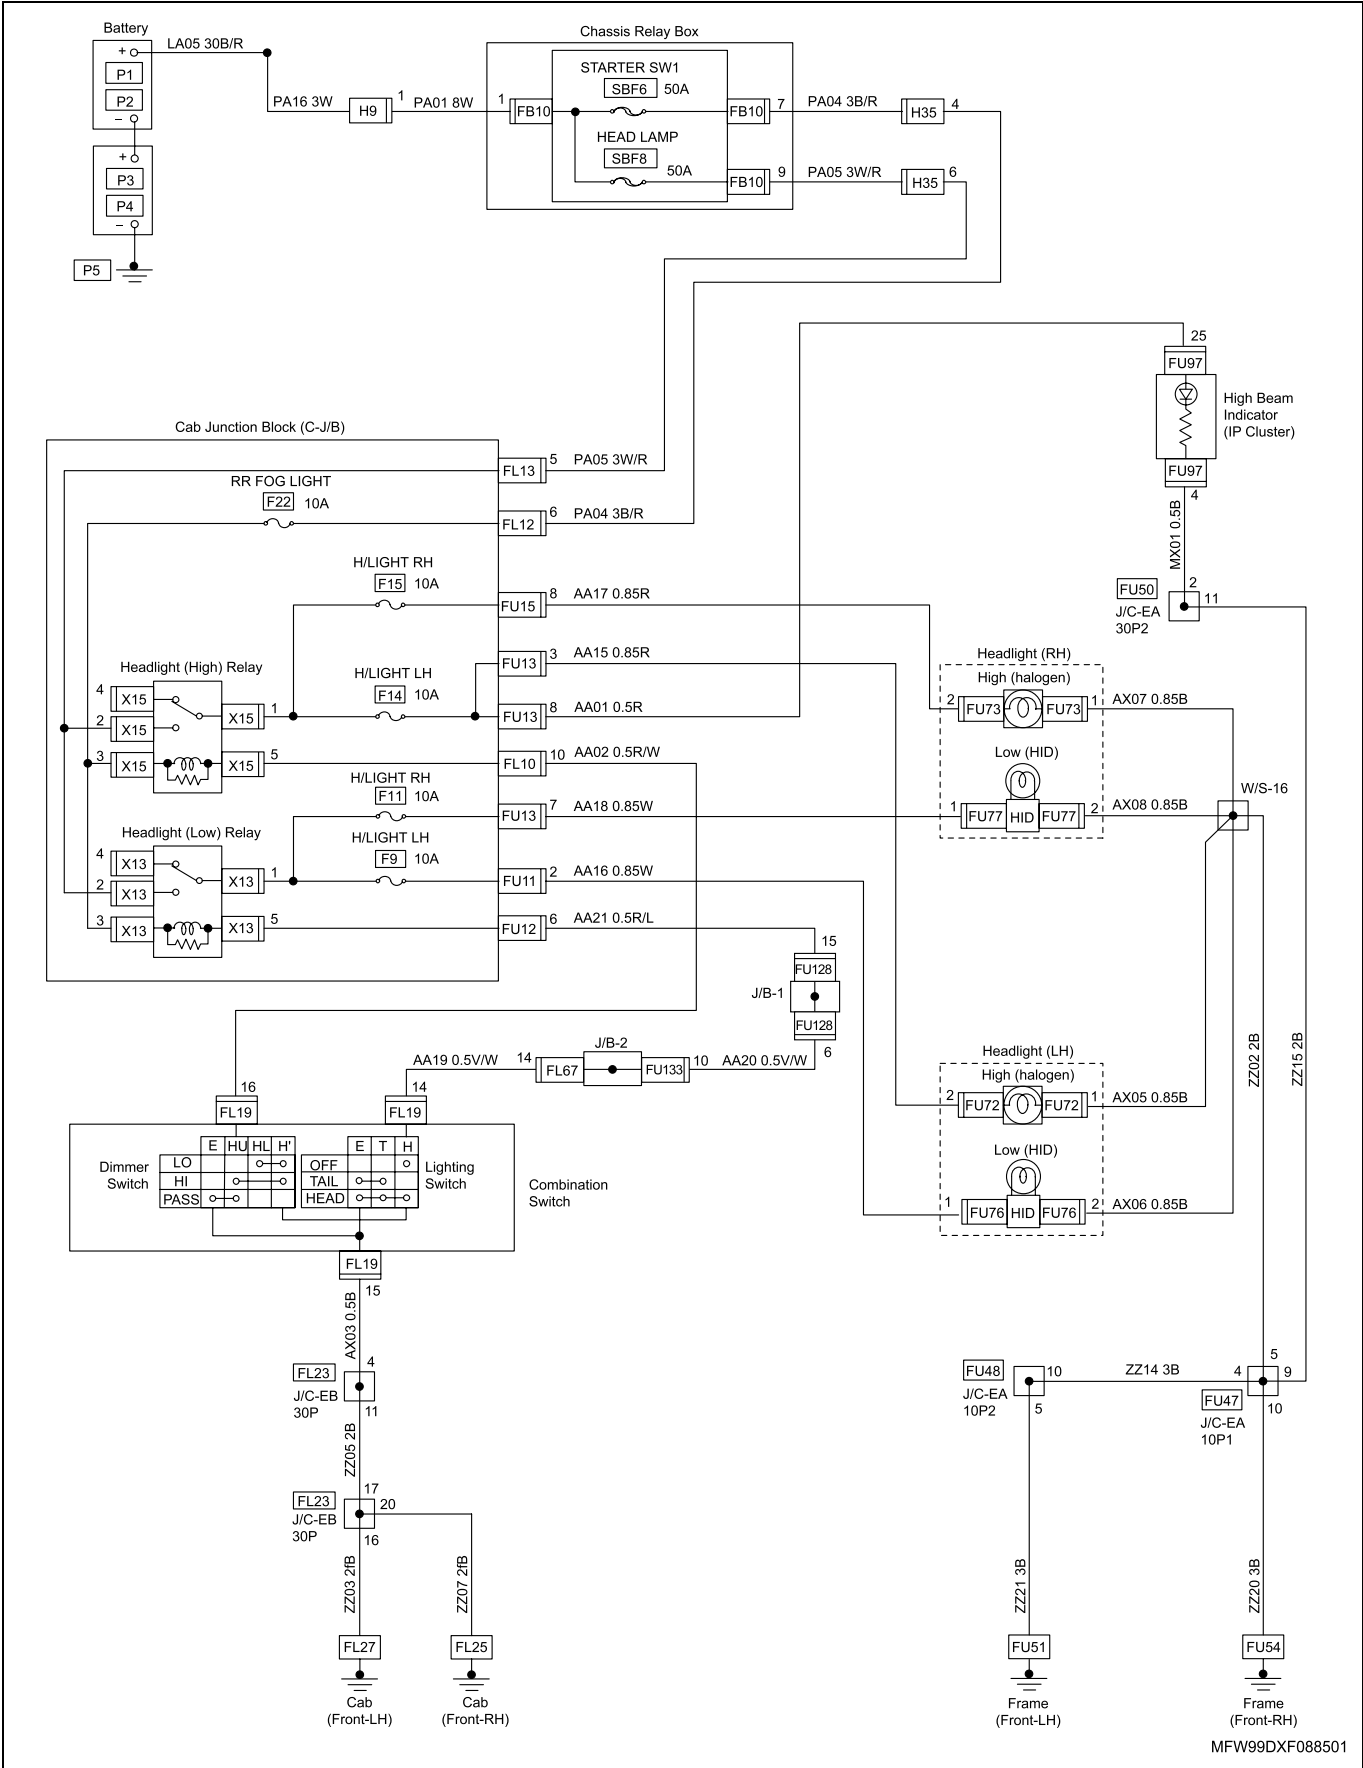
Cab Headlight Vehicle (Except Indonesia)



Headlight Manual Leveling


Circuit Diagram

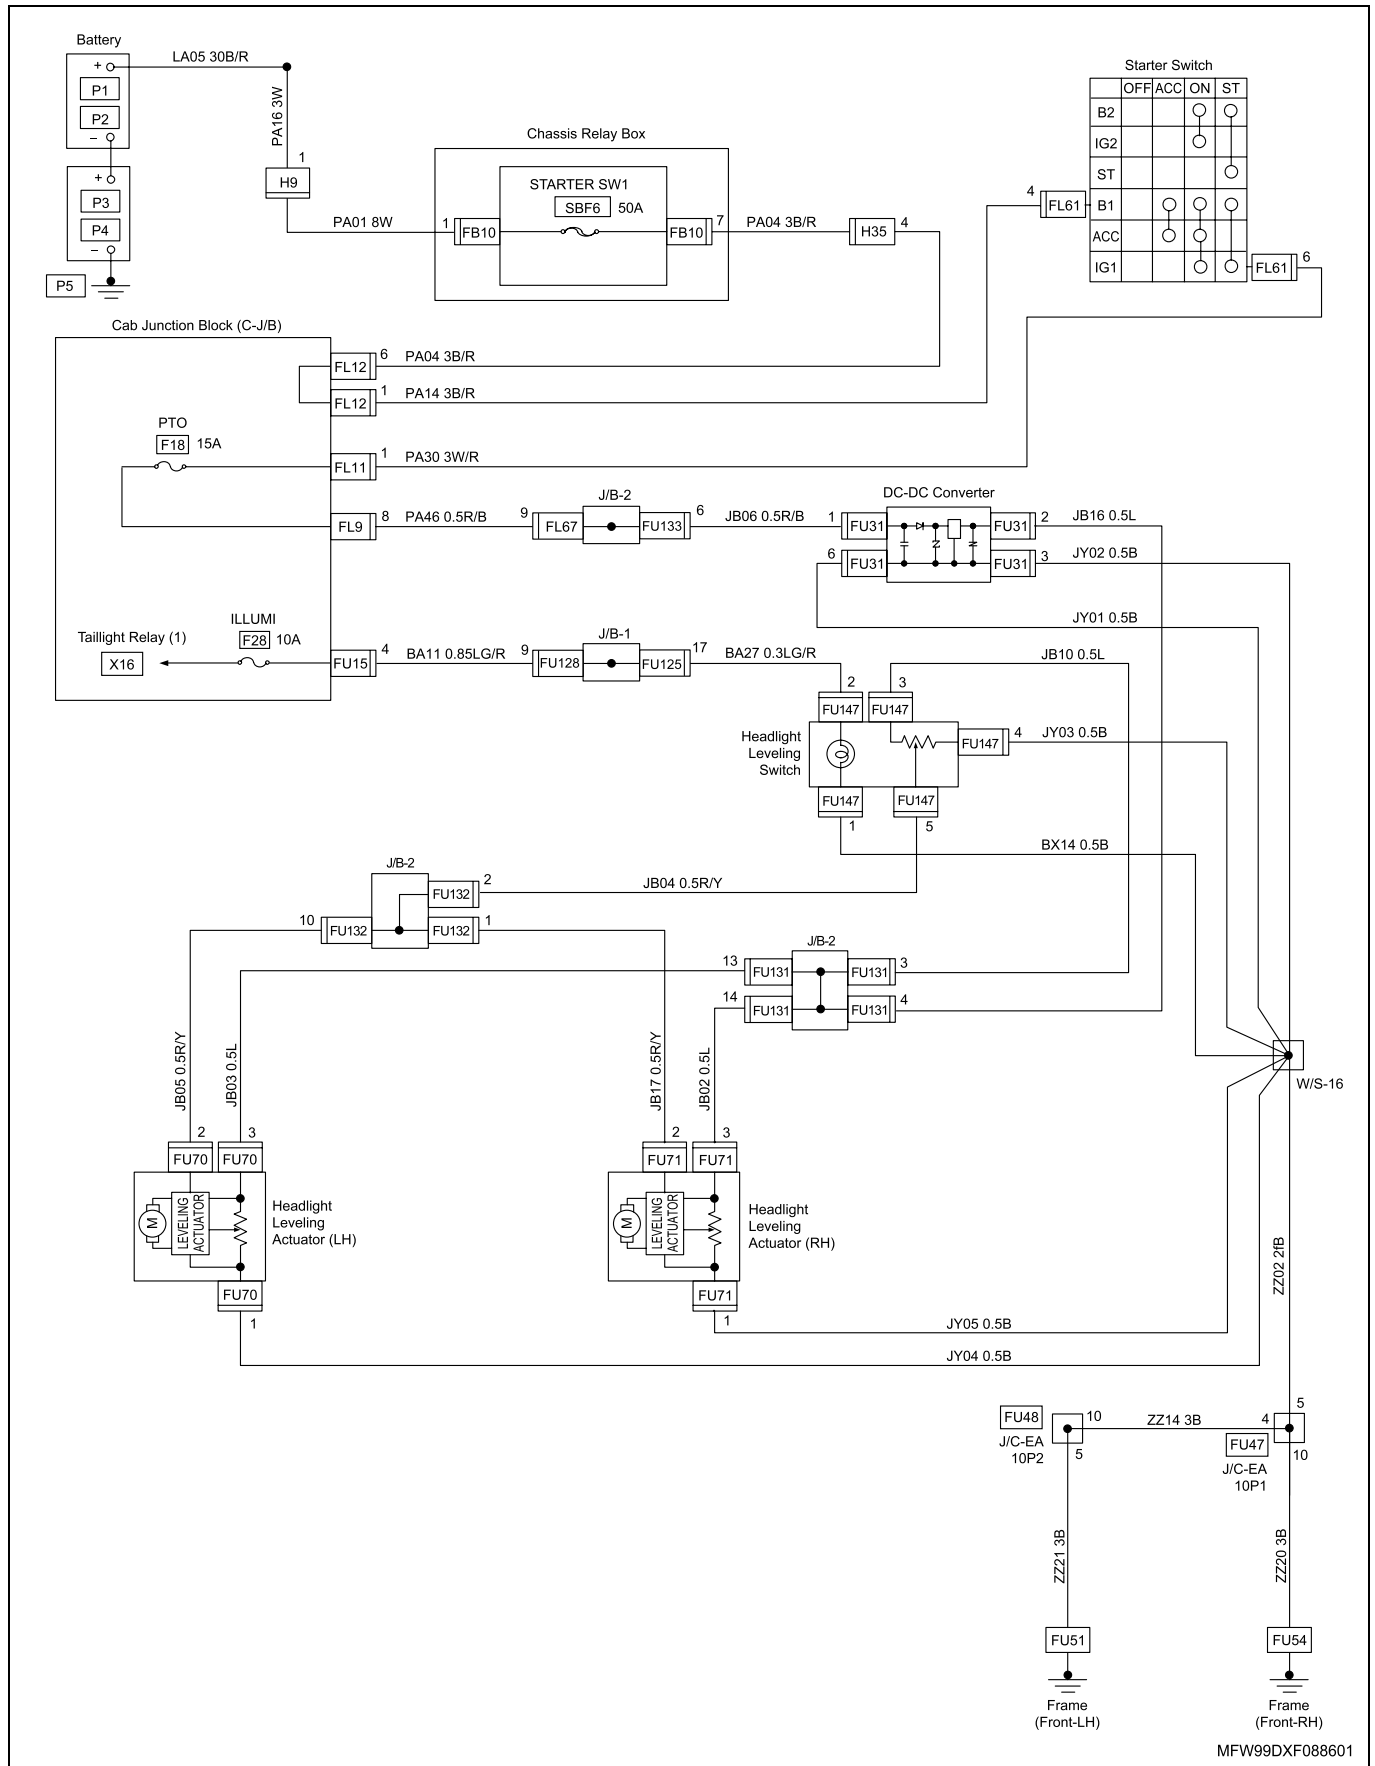Cab Headlight Vehicle (Except Indonesia)




9D-172 Wiring System (RHD model)

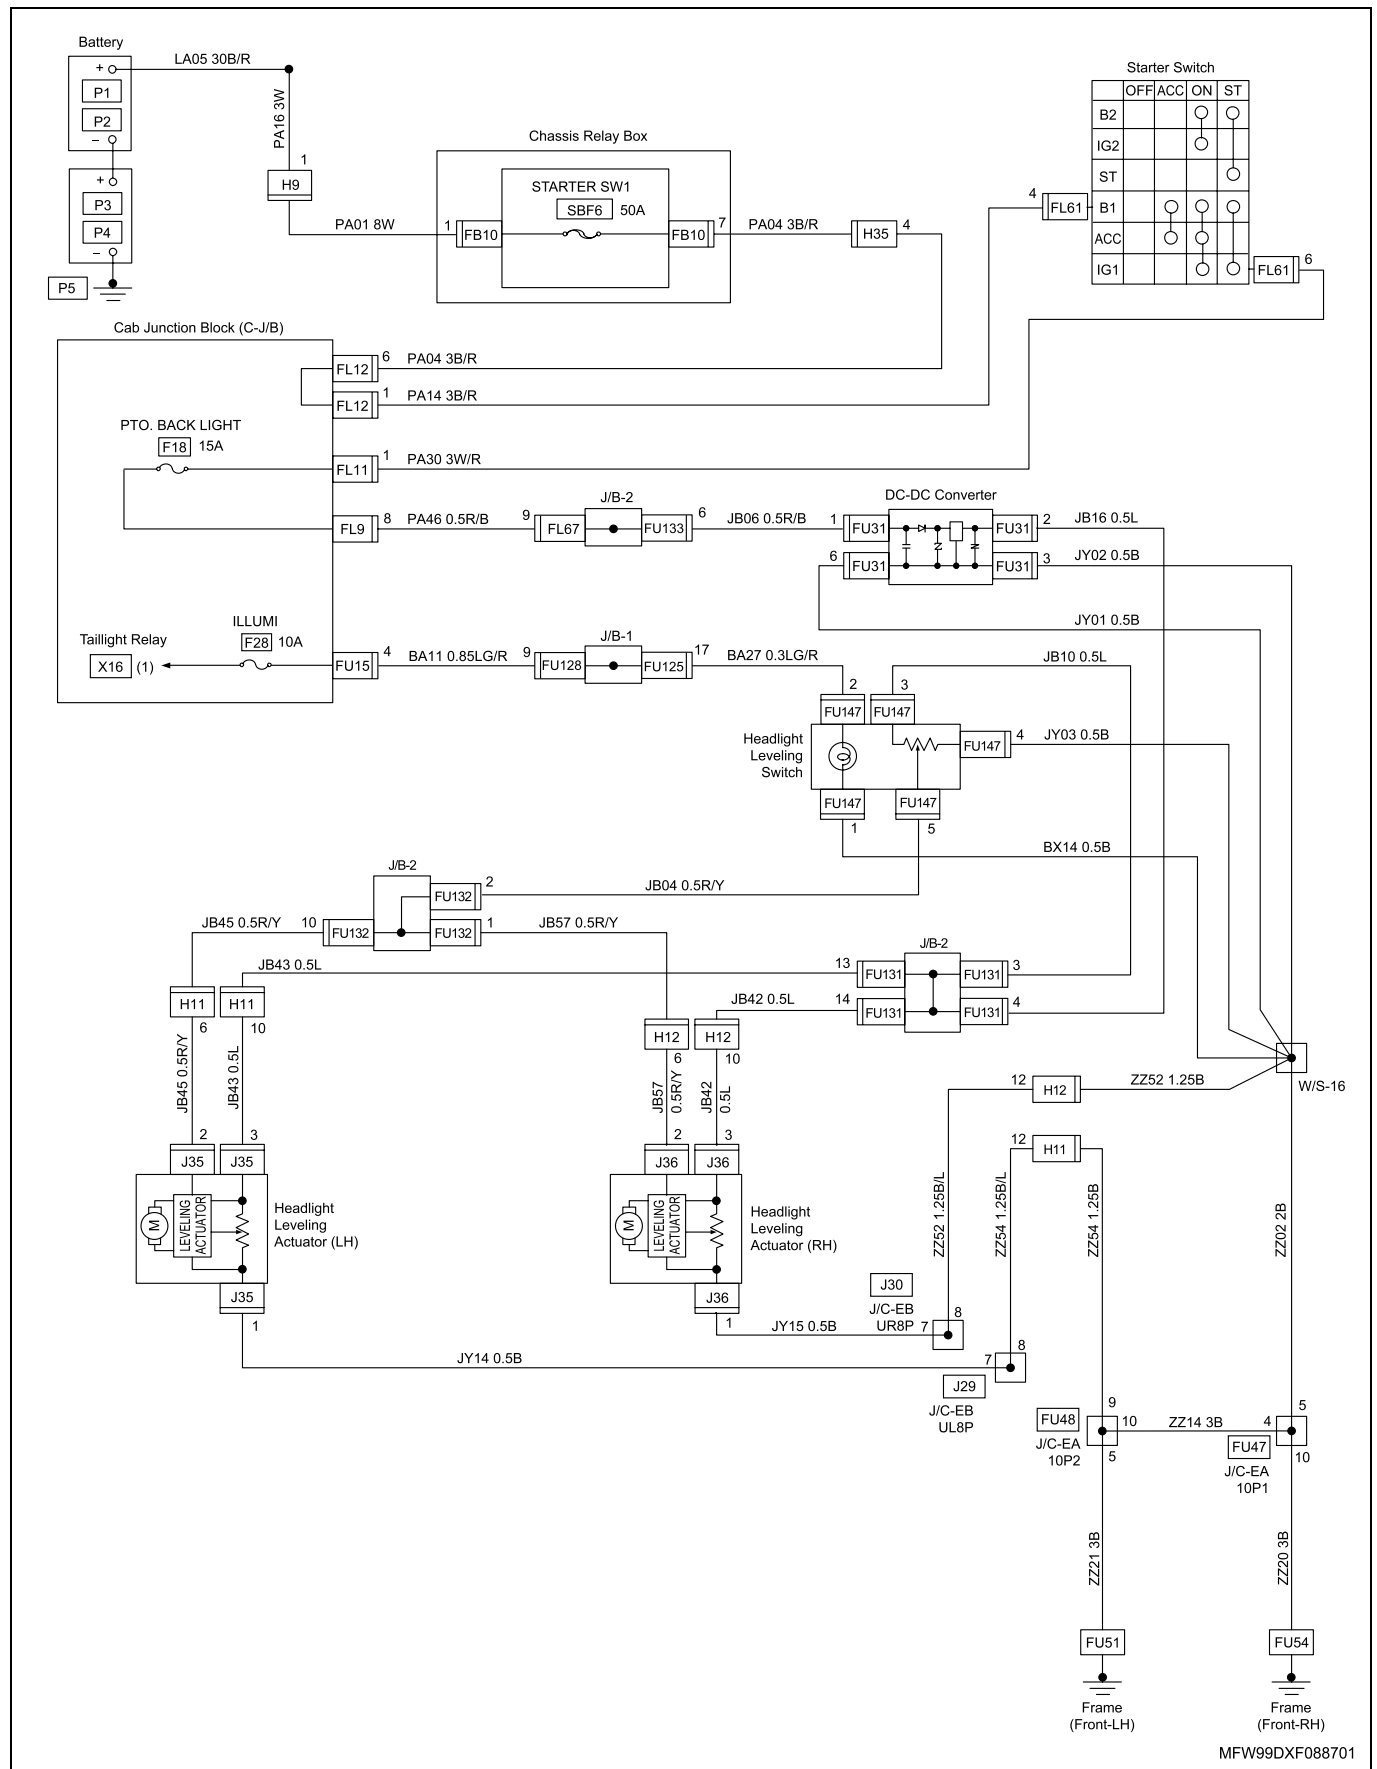Bumper Headlight Vehicle (Except Indonesia)



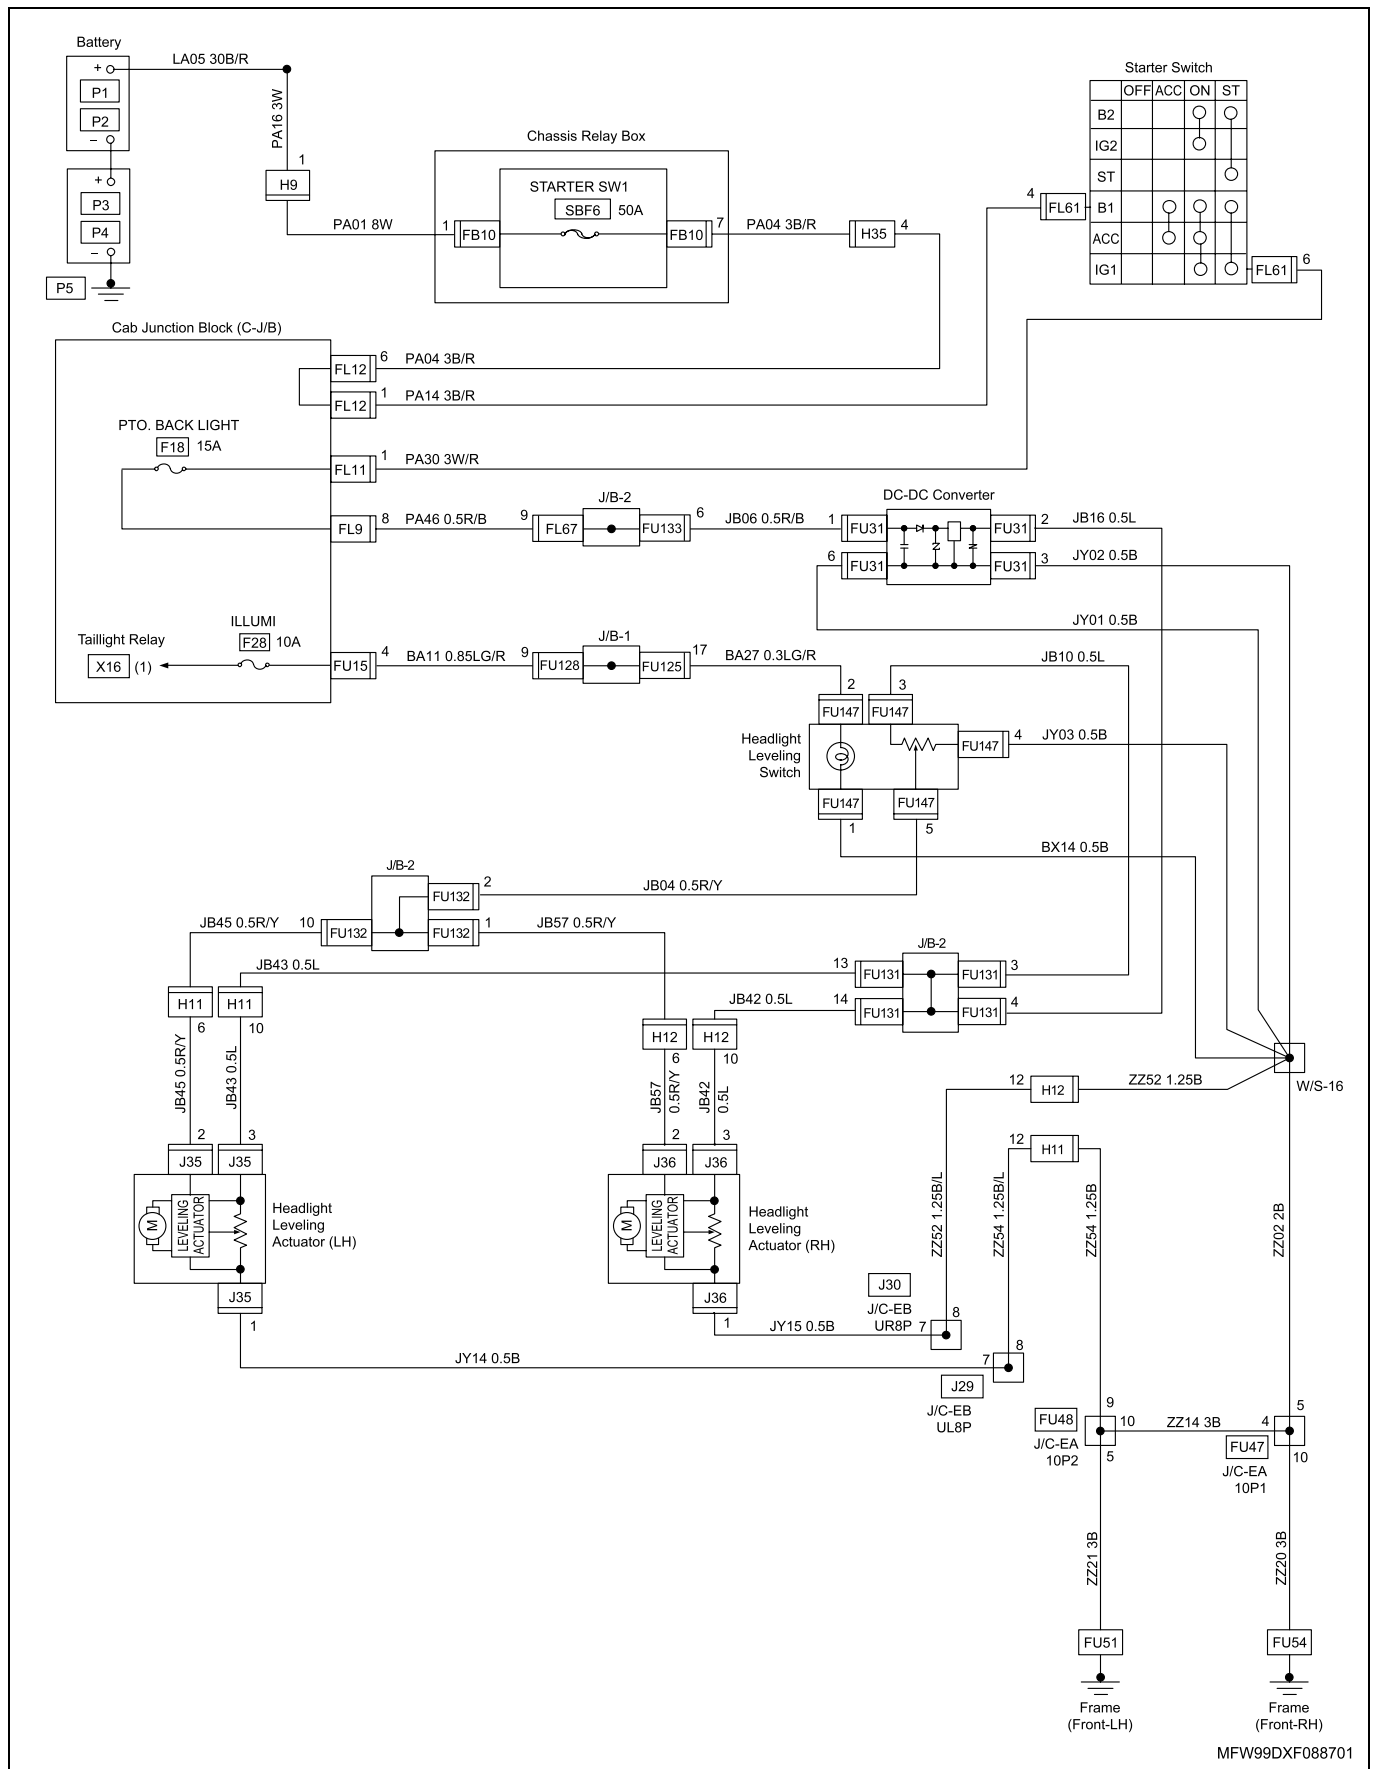
Bumper Headlight Vehicle (Except Indonesia 4WD)




Fog Light/Clearance Light

Circuit Diagram

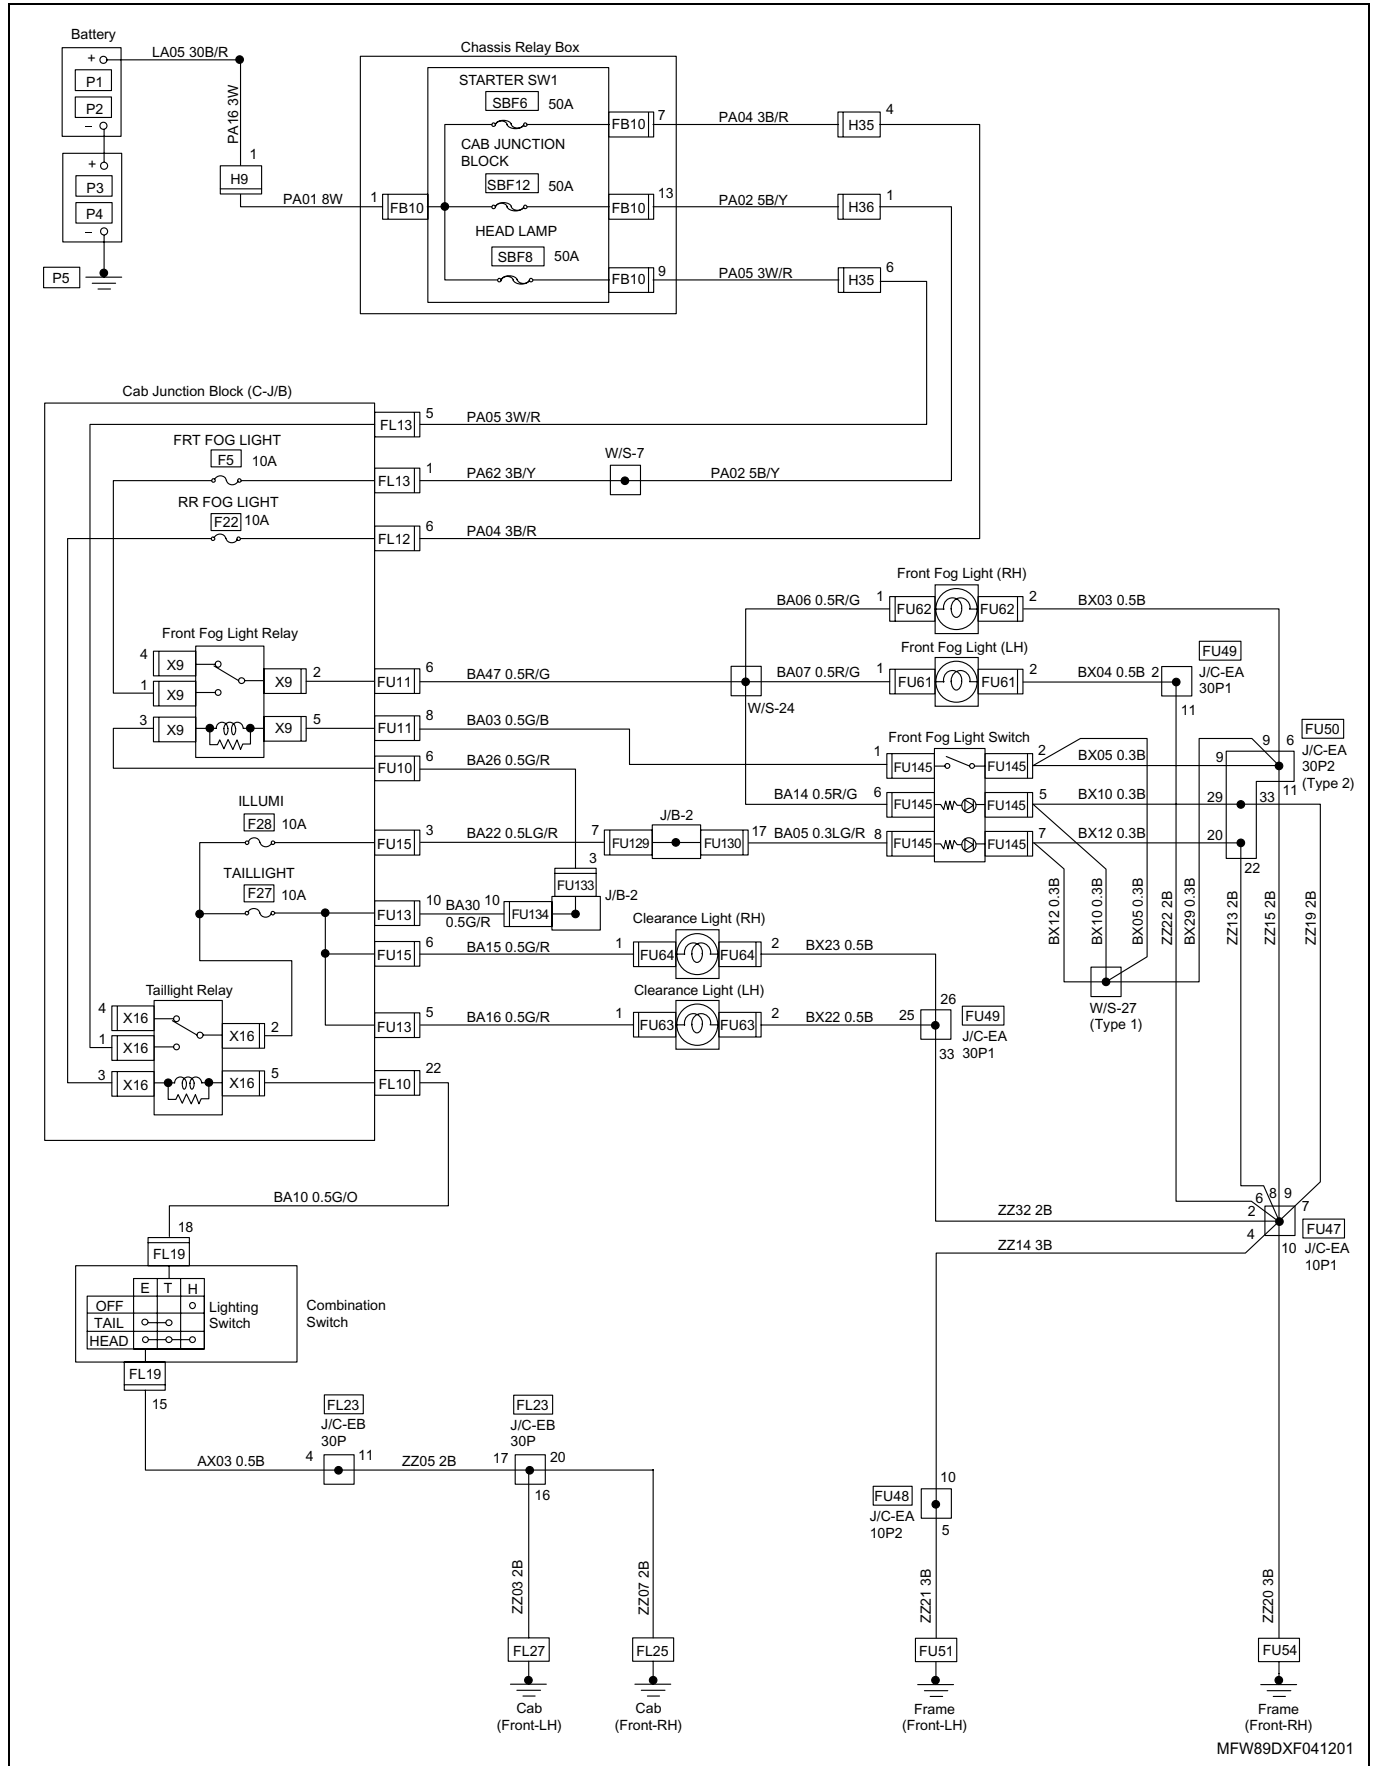Cab Headlight Vehicle (Except Indonesia)




Cab Headlight Vehicle (Indonesia)

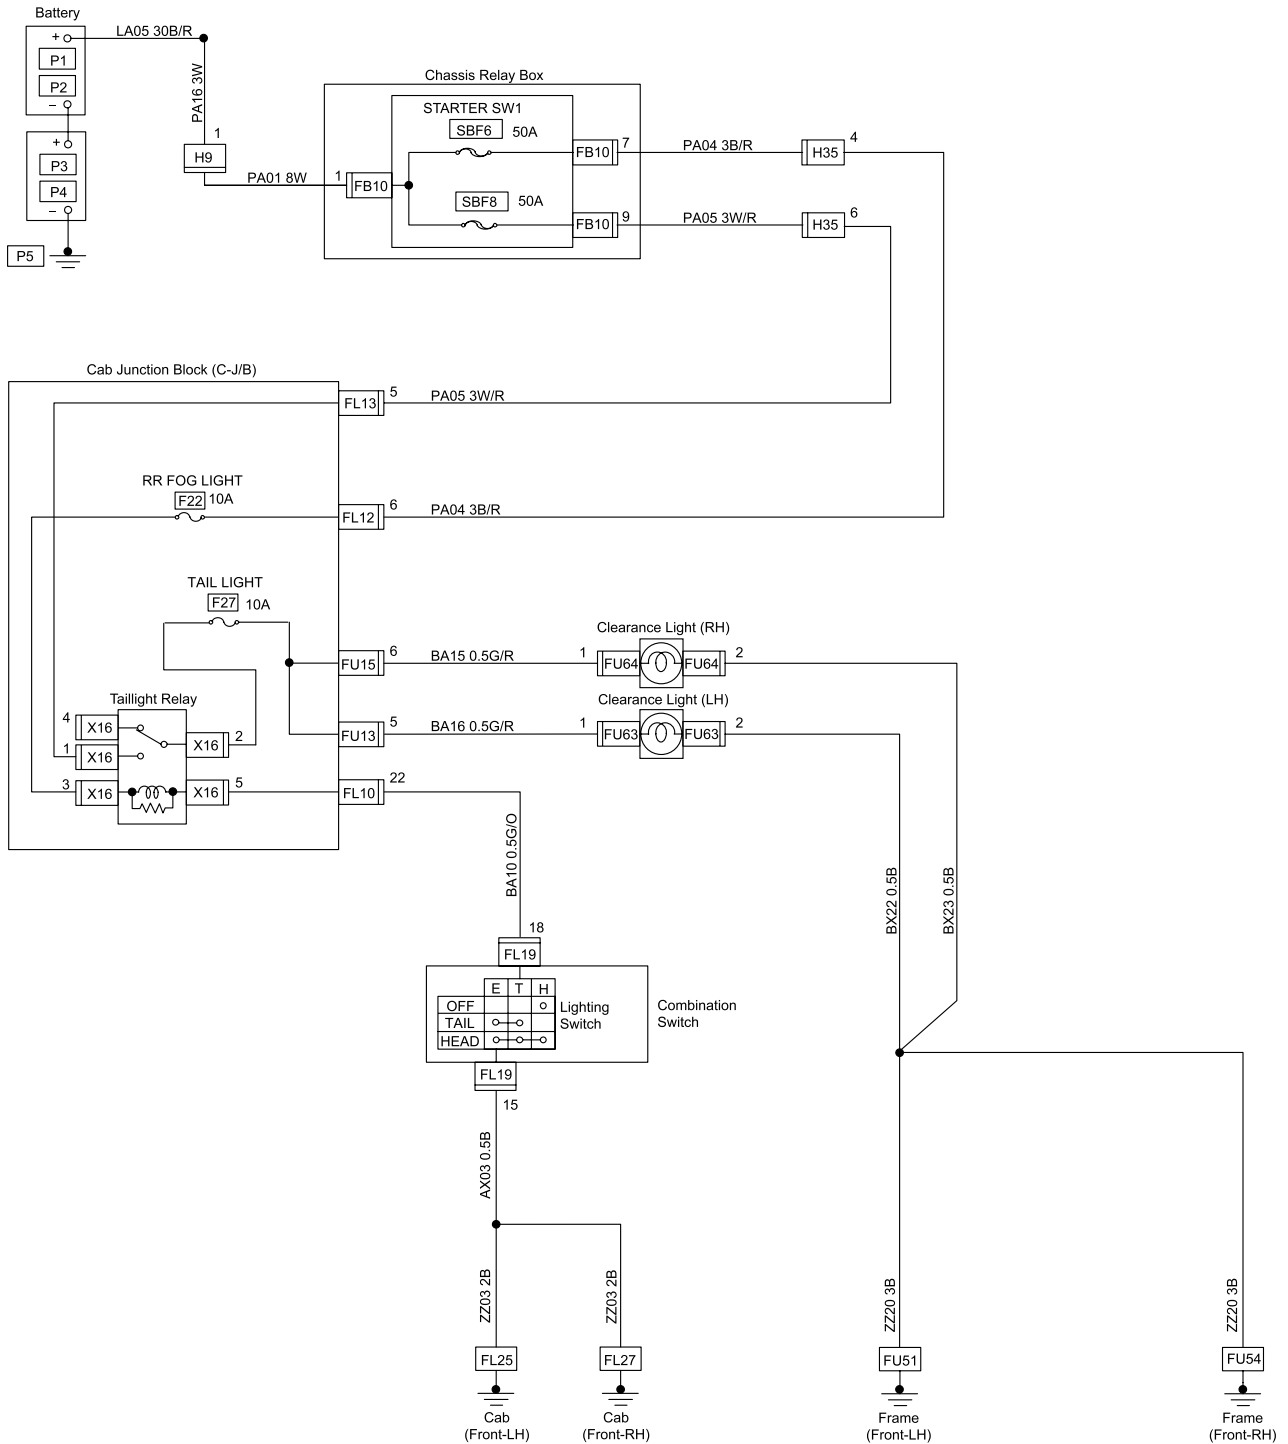


9D-176 Wiring System (RHD model)

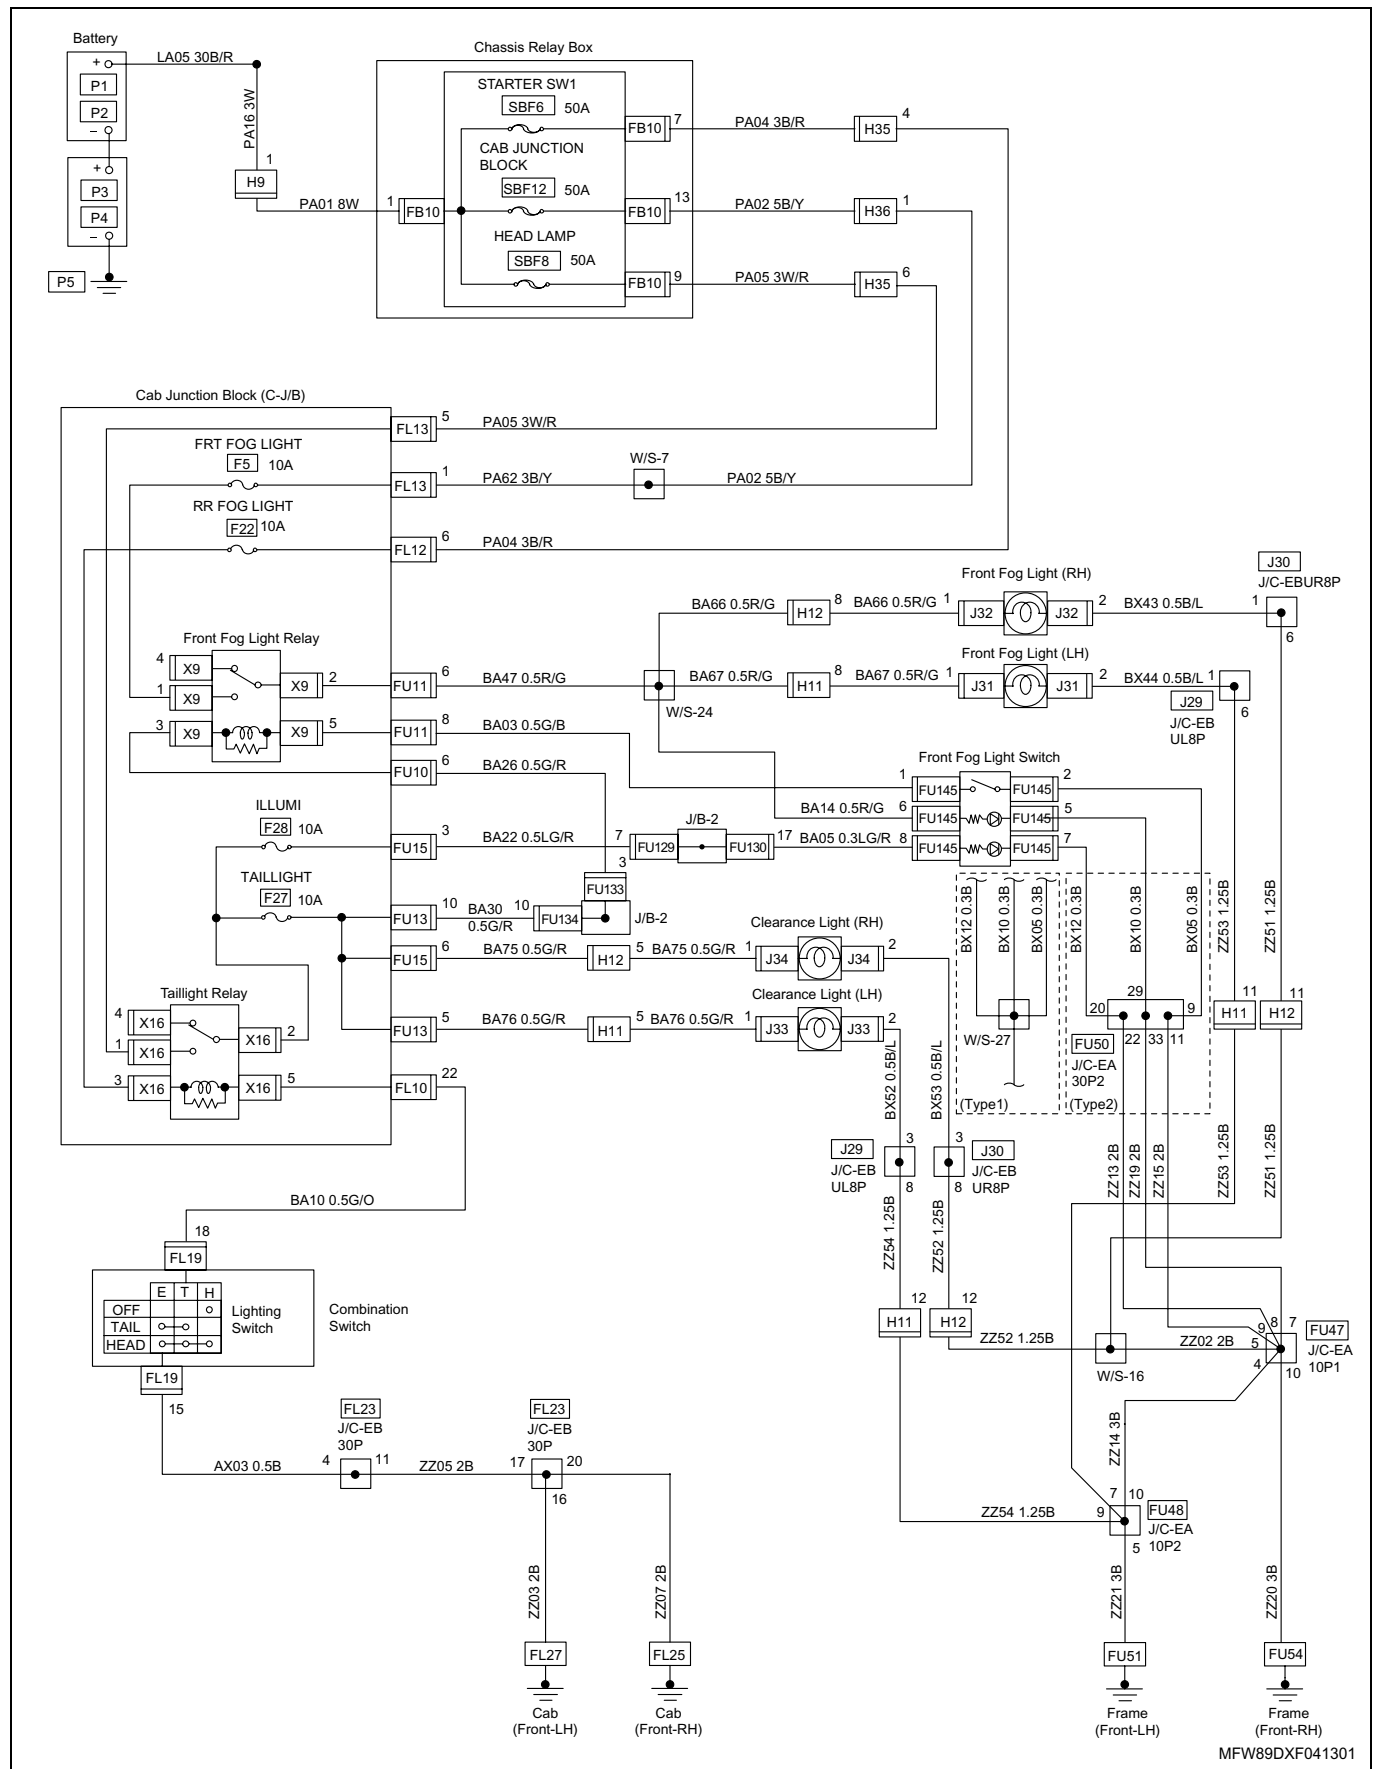Bumper Headlight Vehicle (Except Indonesia)




Taillight/Stoplight/Cornering Light

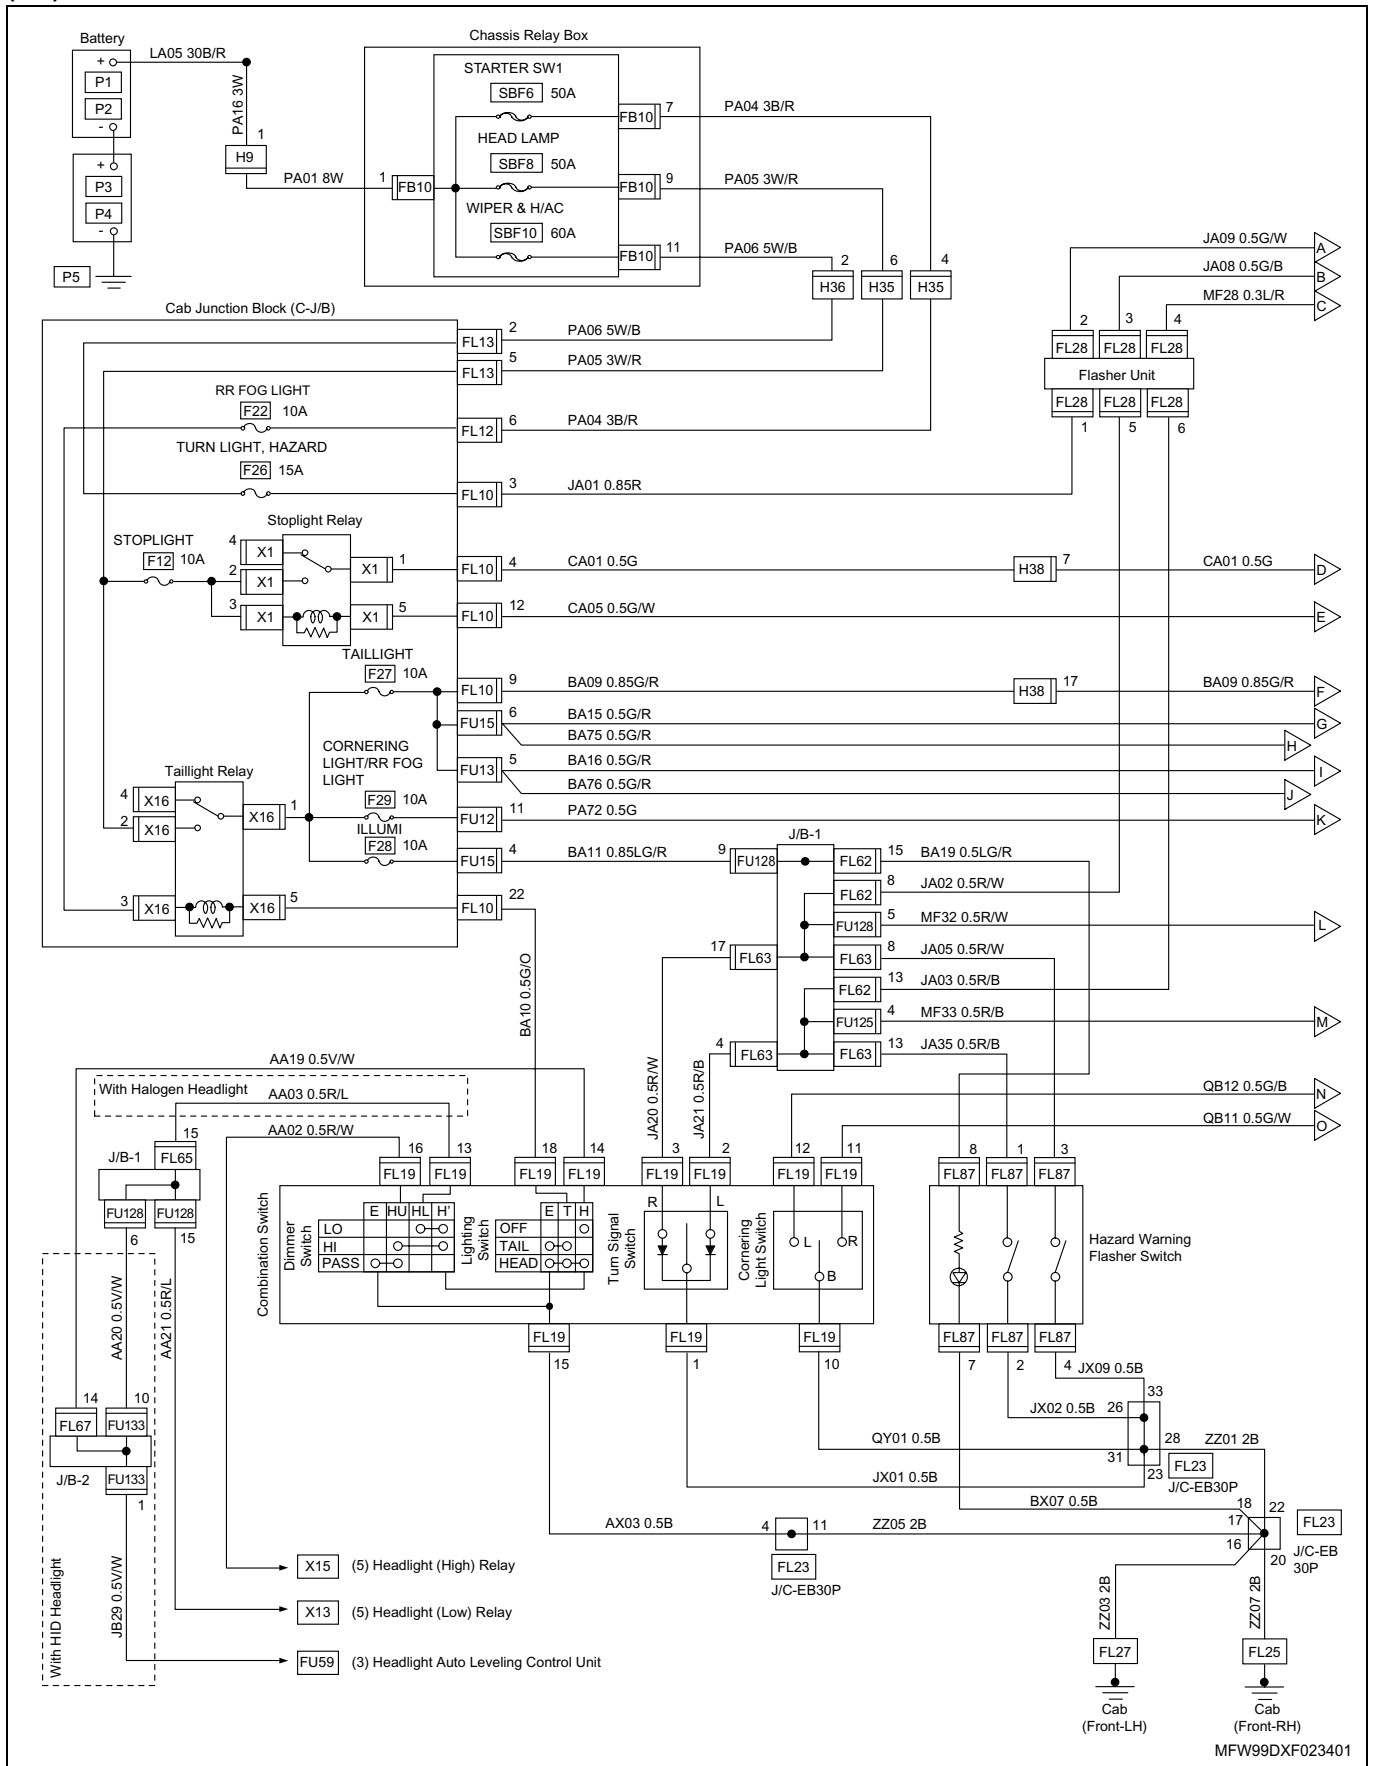Circuit Diagram Except Indonesia (1/4)




9D-178 Wiring System (RHD model)

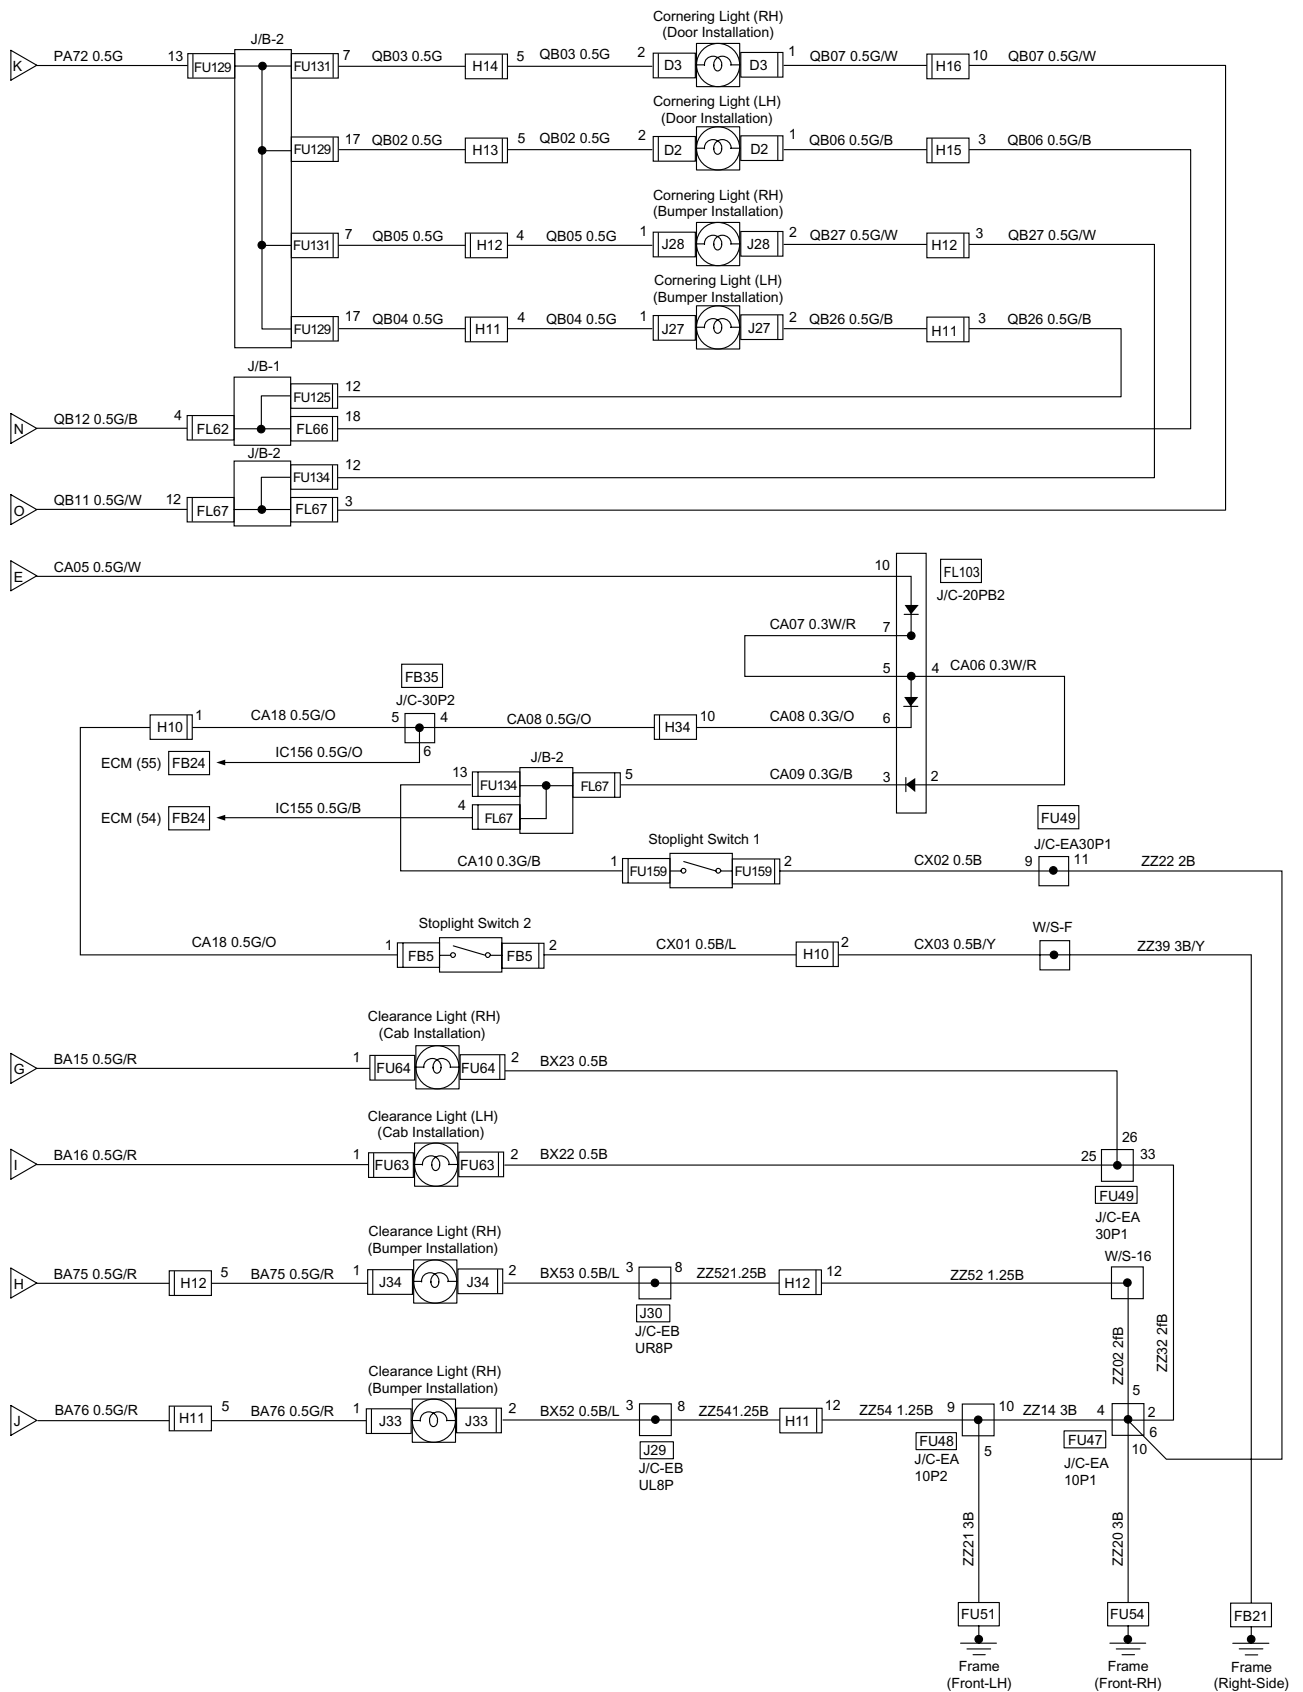(2/4)



MF89DXF039501

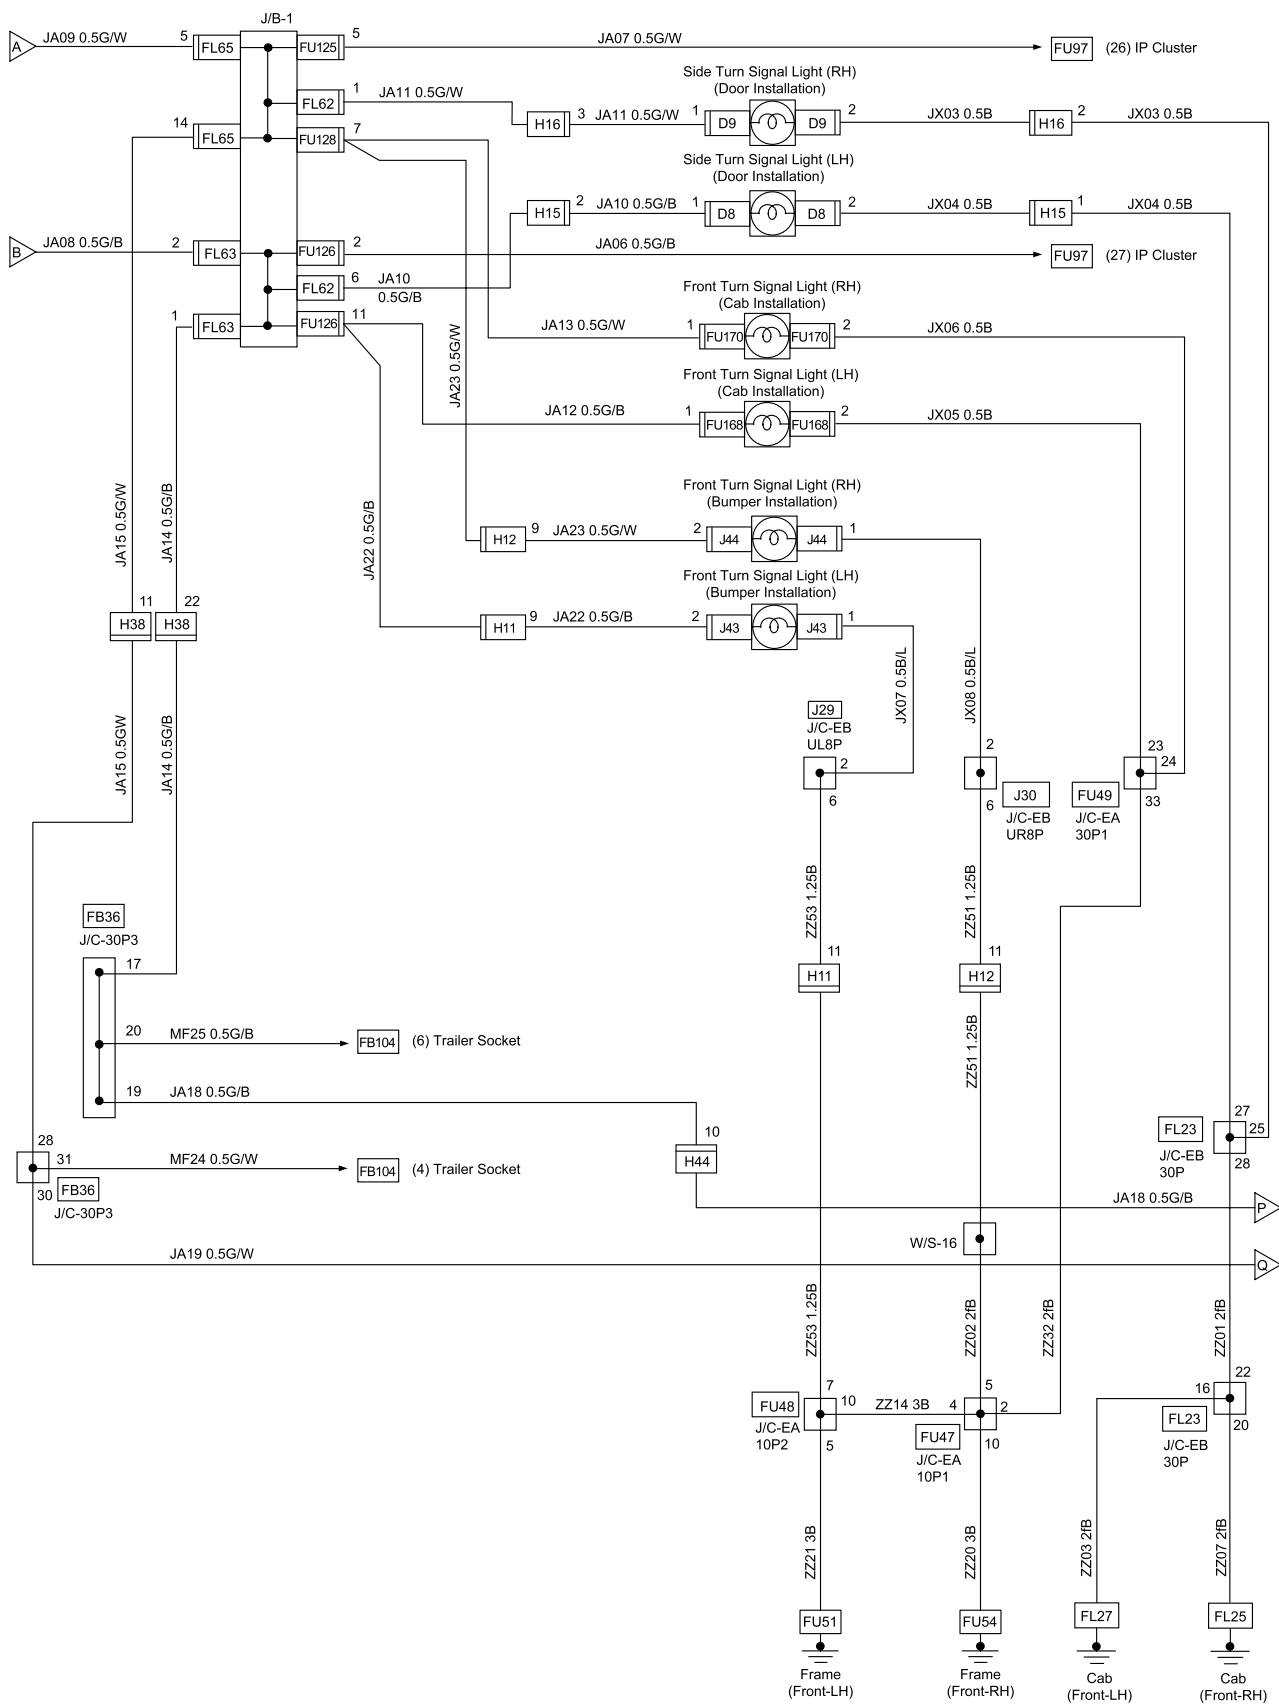
(3/4)



MFW99DXF028501

9D-180 Wiring System (RHD model)

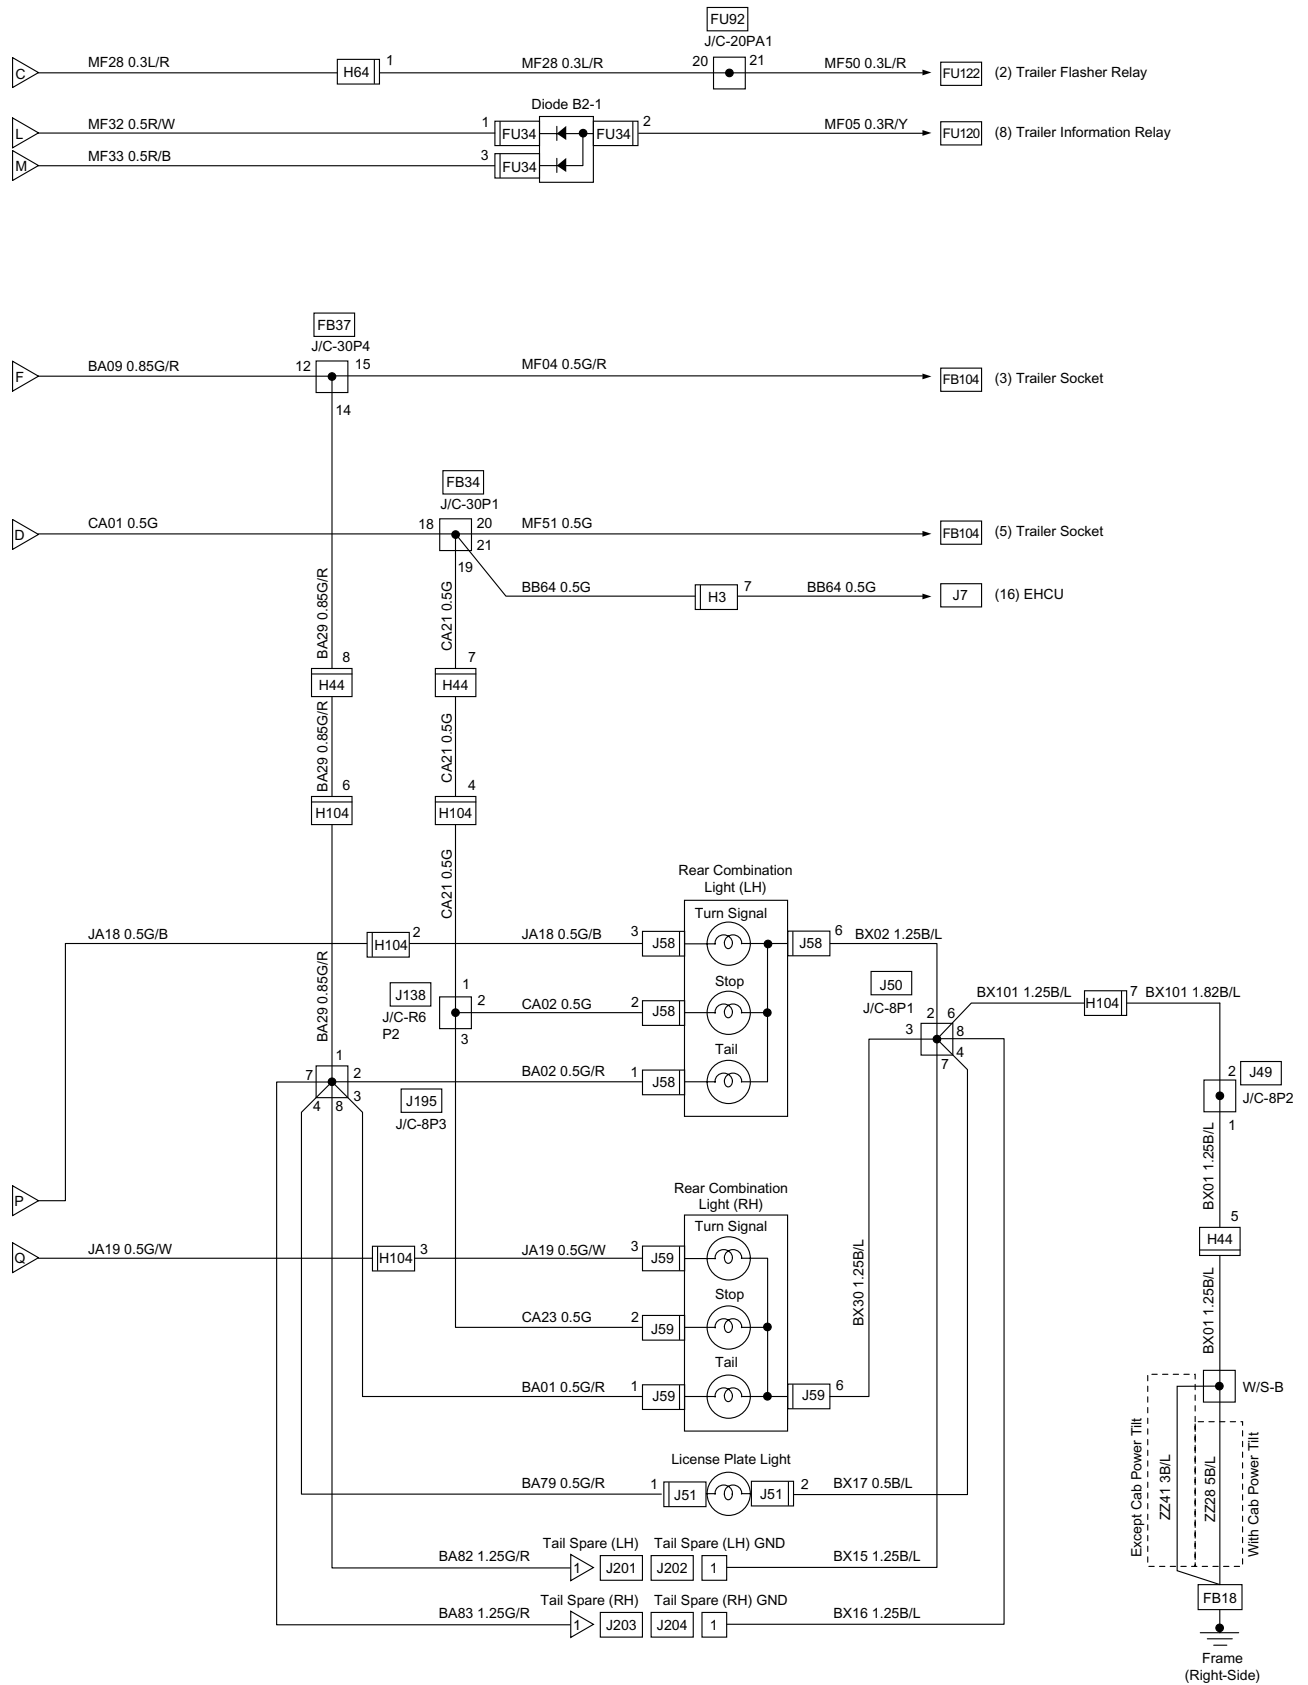
(4/4)




MF99DXF091901


Indonesia

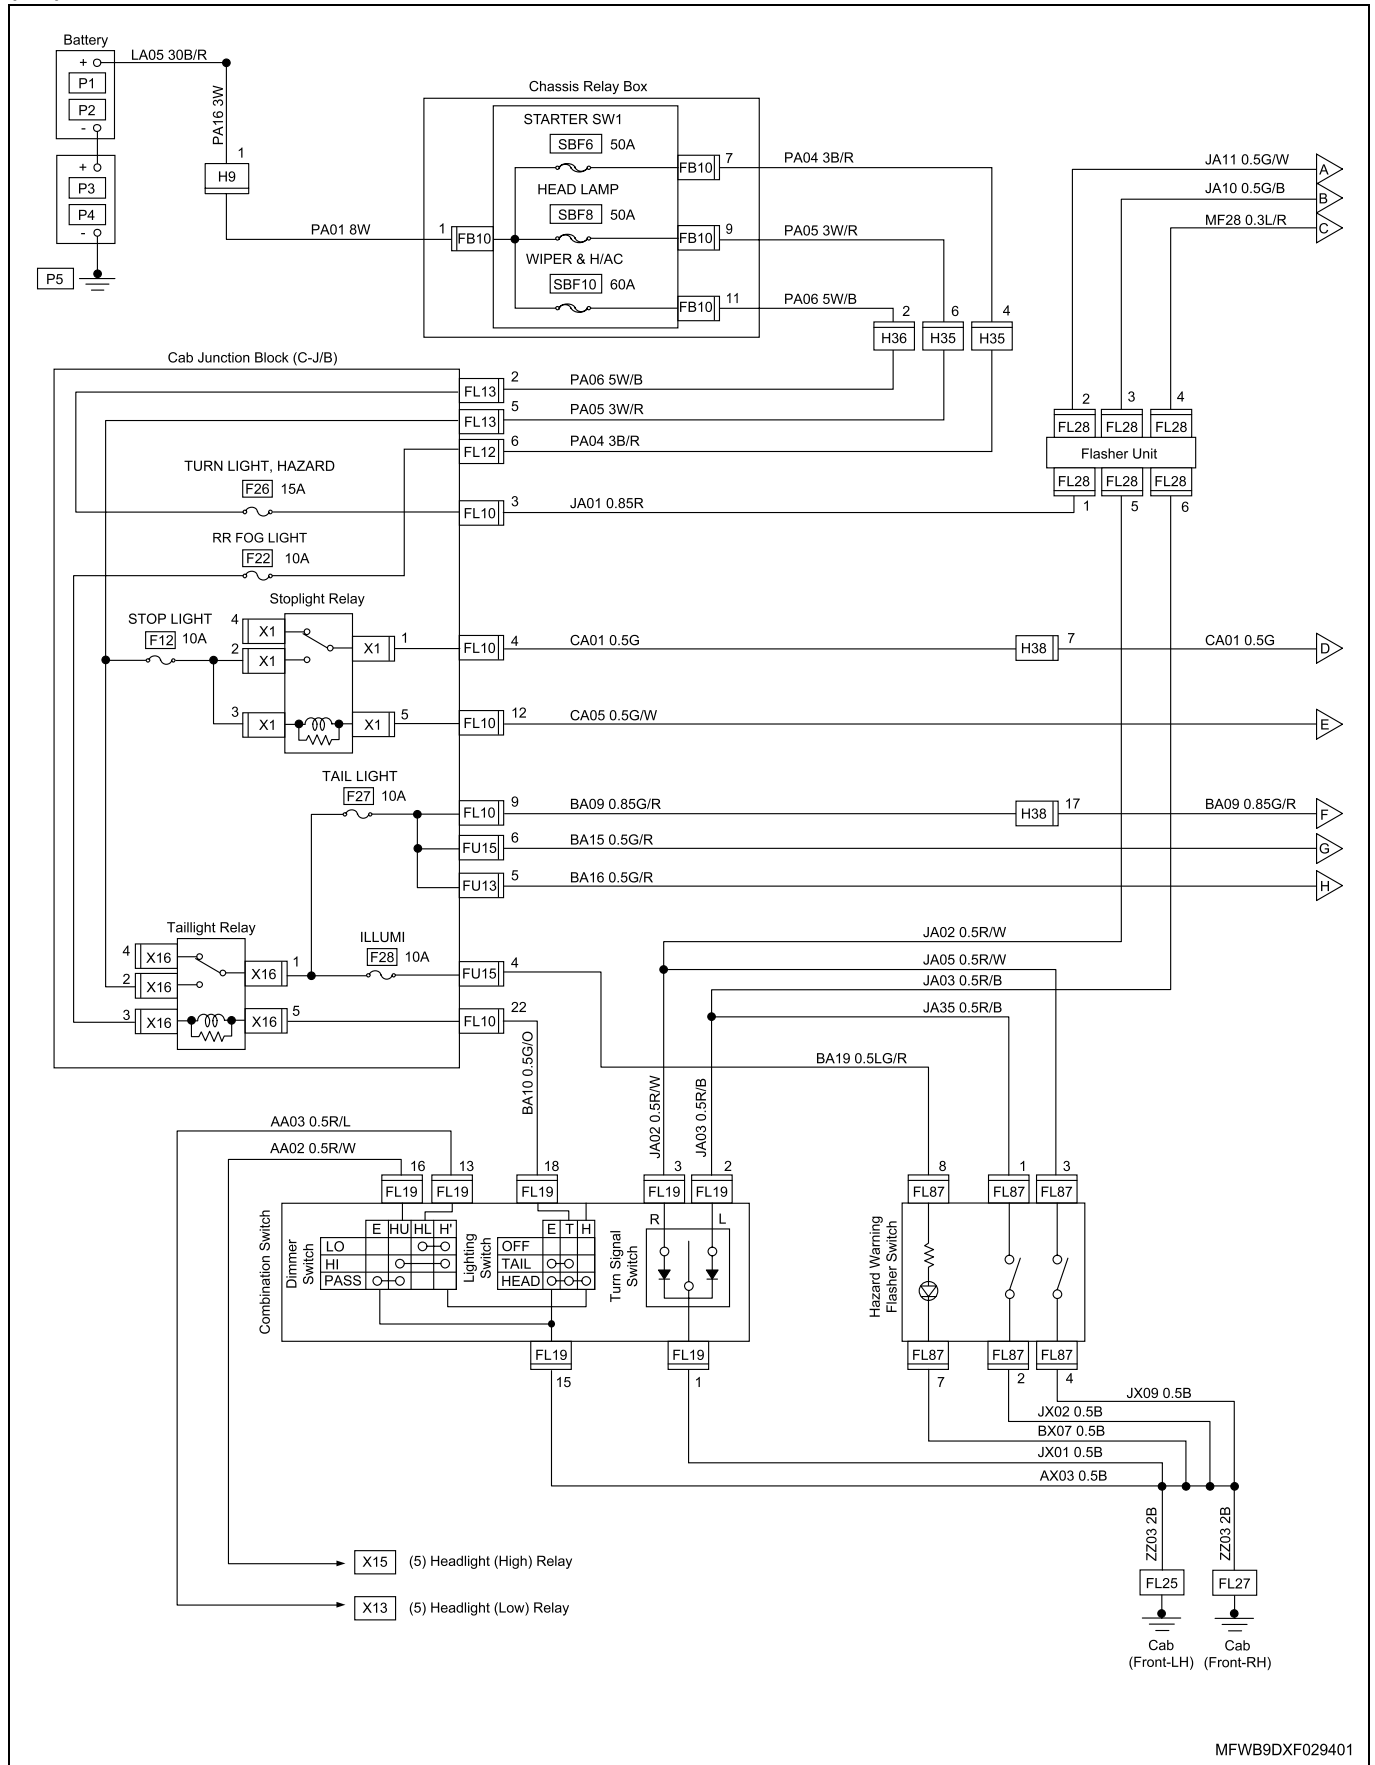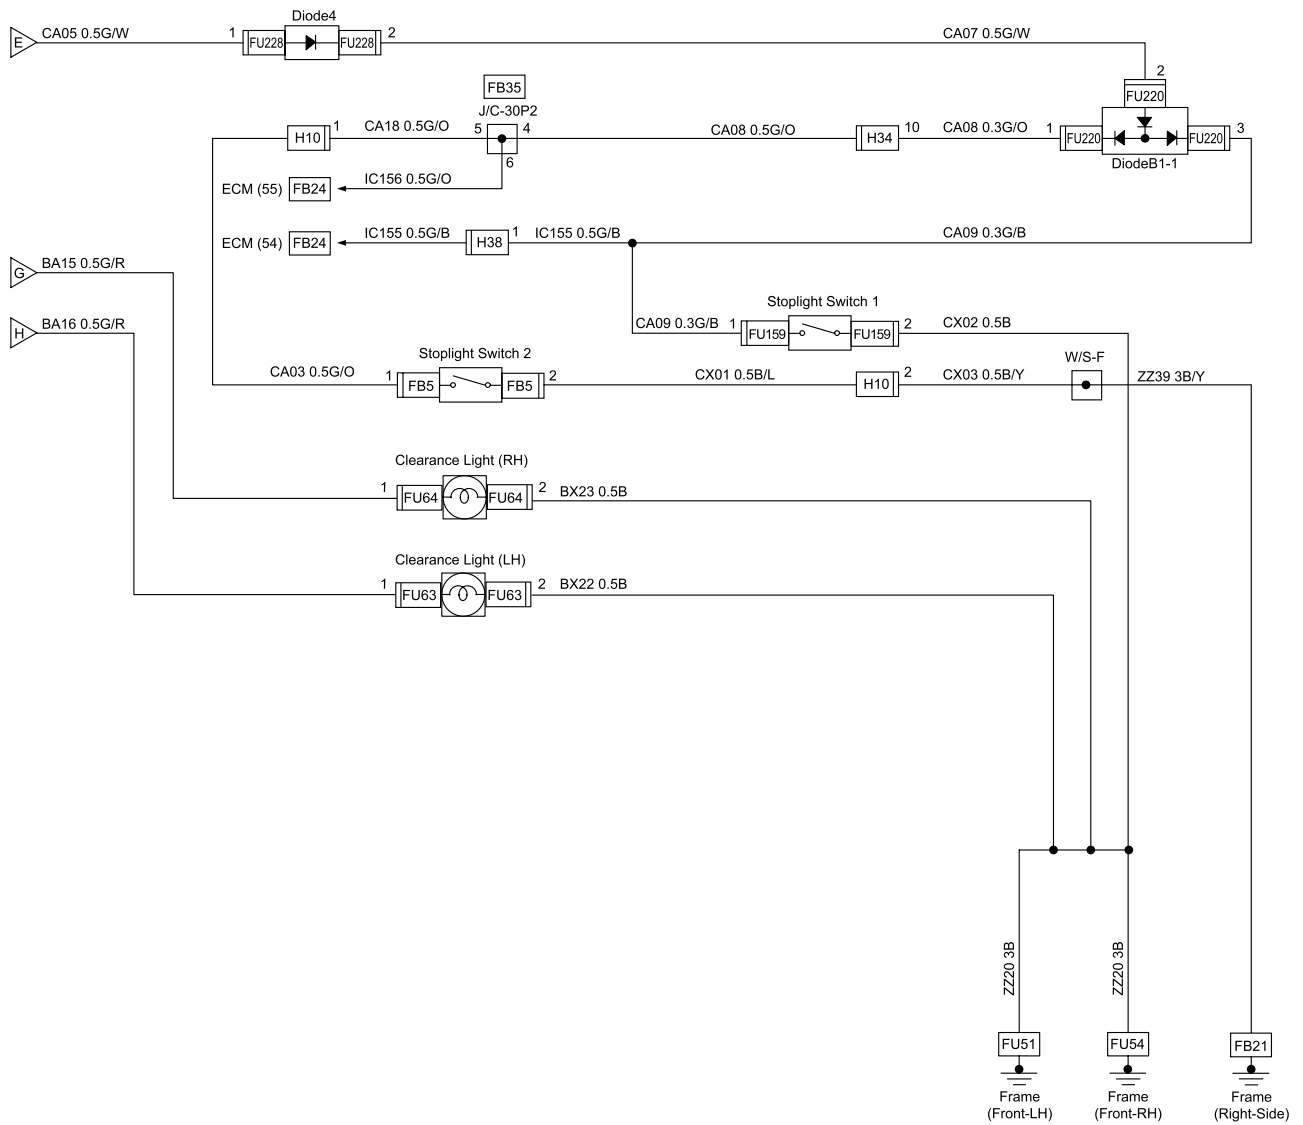(1/4)





(3/4)

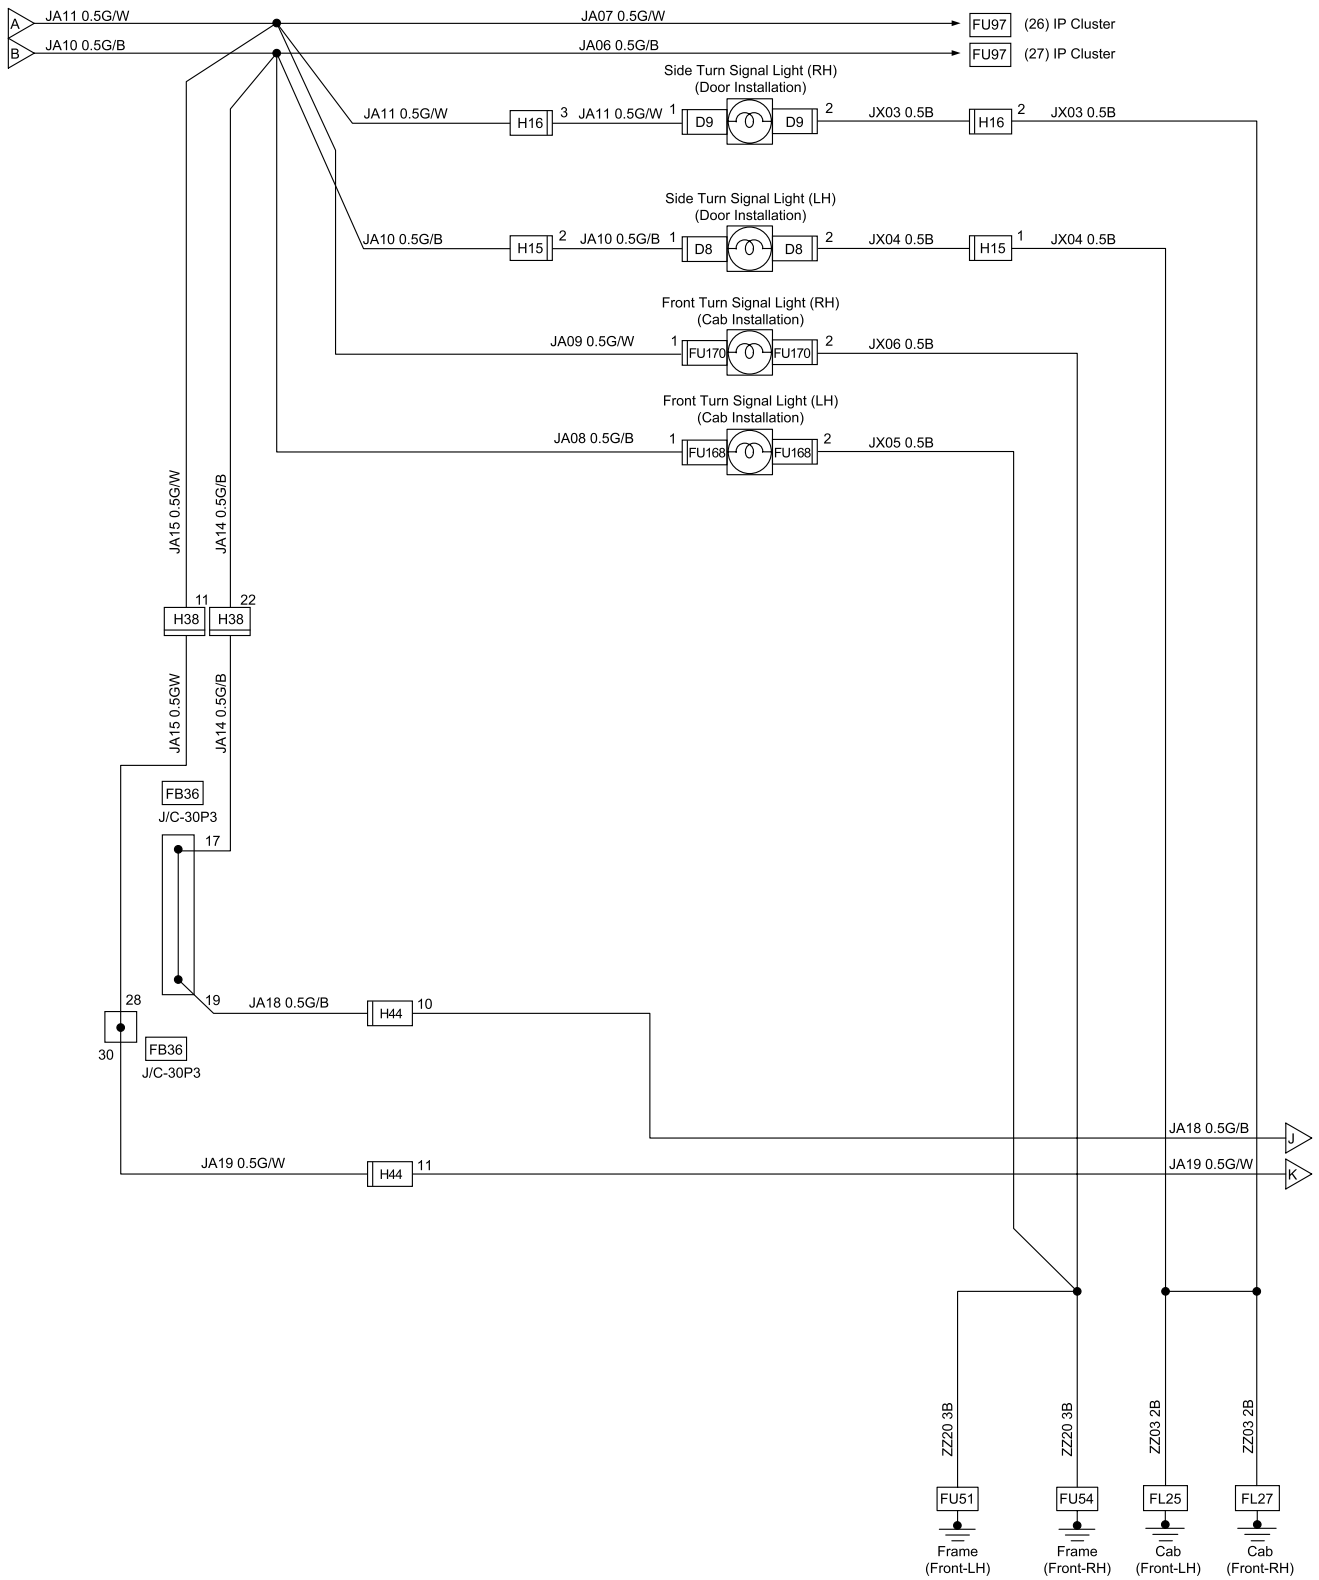

MFWB9DXF029601

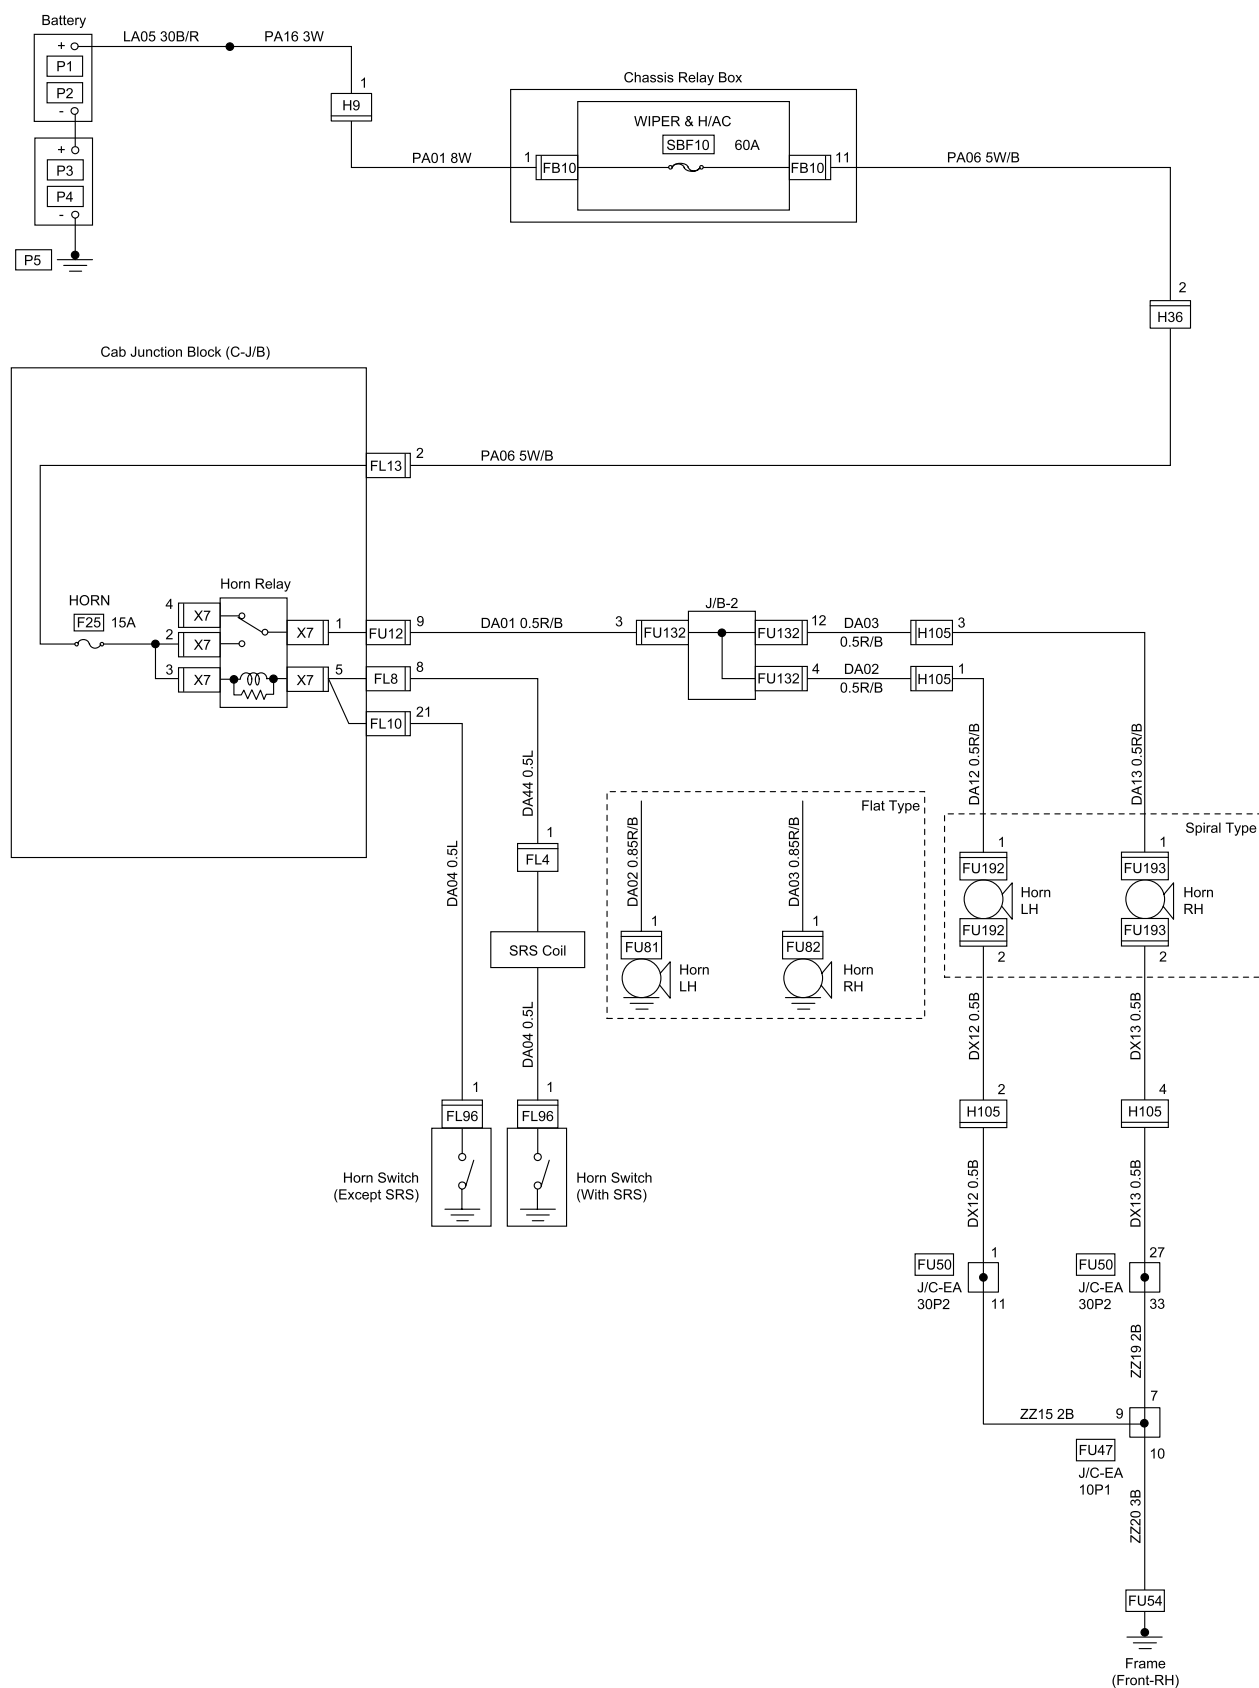
(4/4)



Horn


Circuit Diagram

Except Indonesia



9D-186 Wiring System (RHD model)

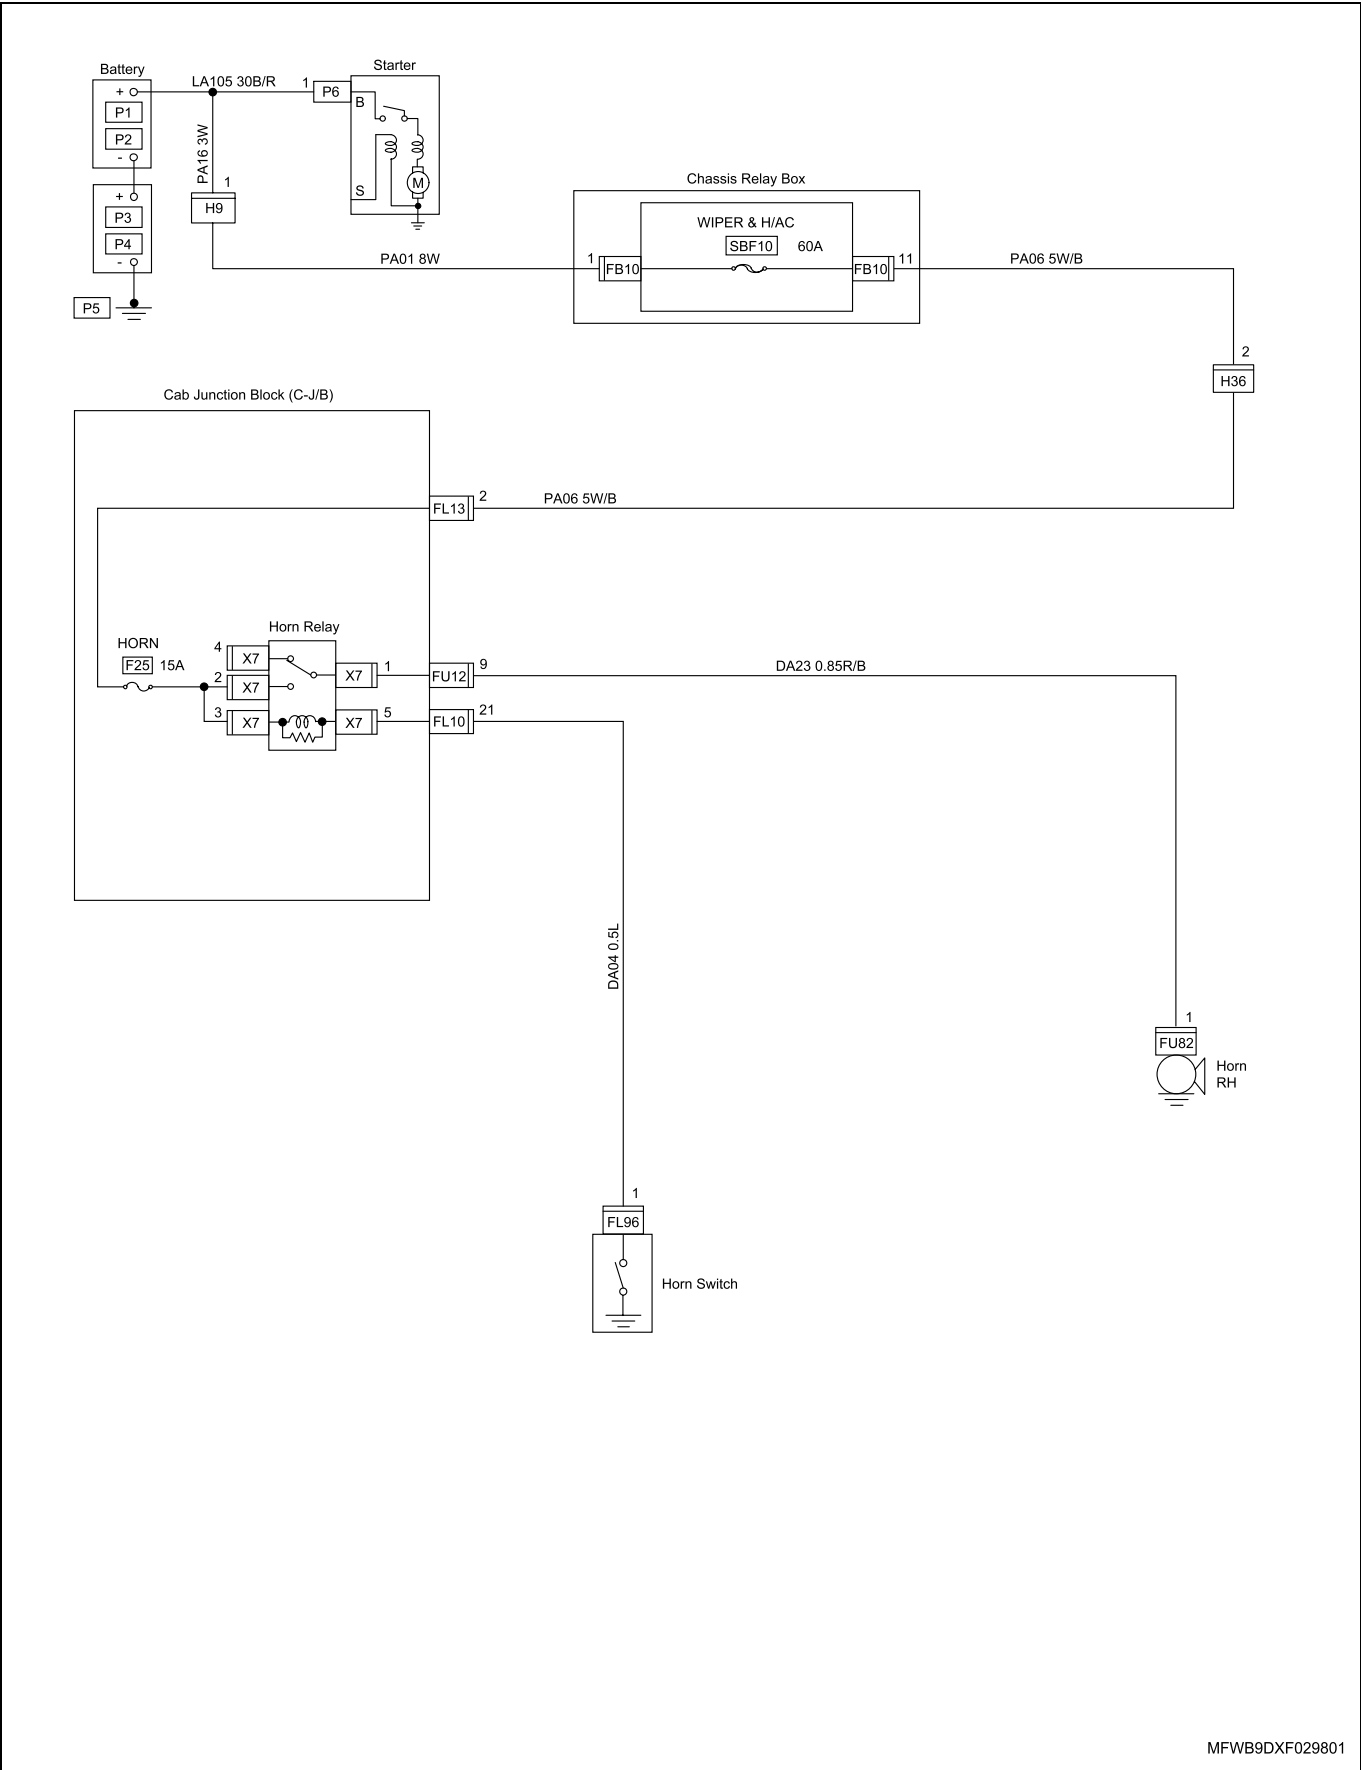
Indonesia



Backup Light/Back Buzzer

Circuit Diagram

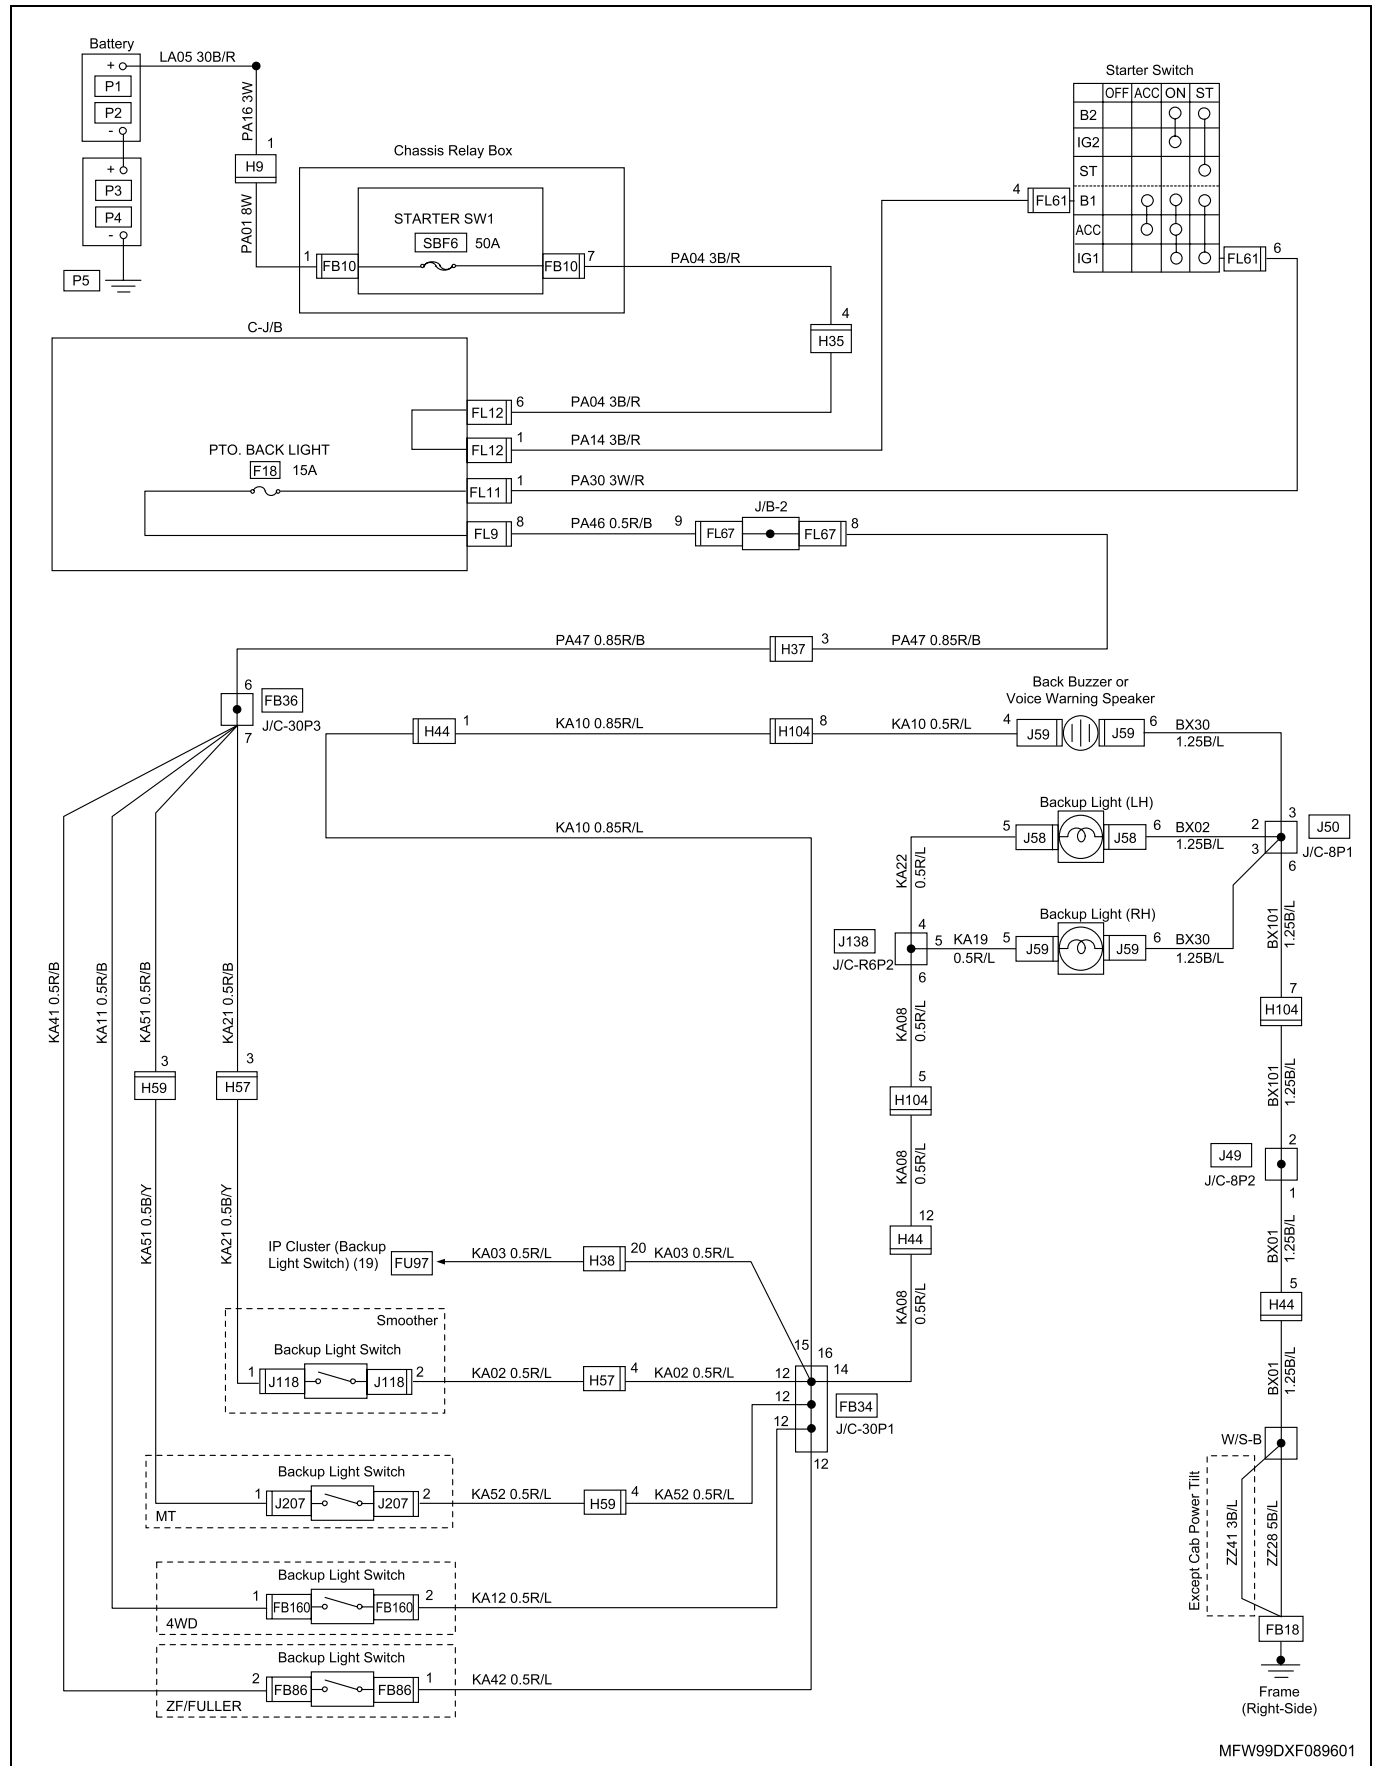Except Indonesia




Indonesia



Body Control Module (BCM)


Circuit Diagram

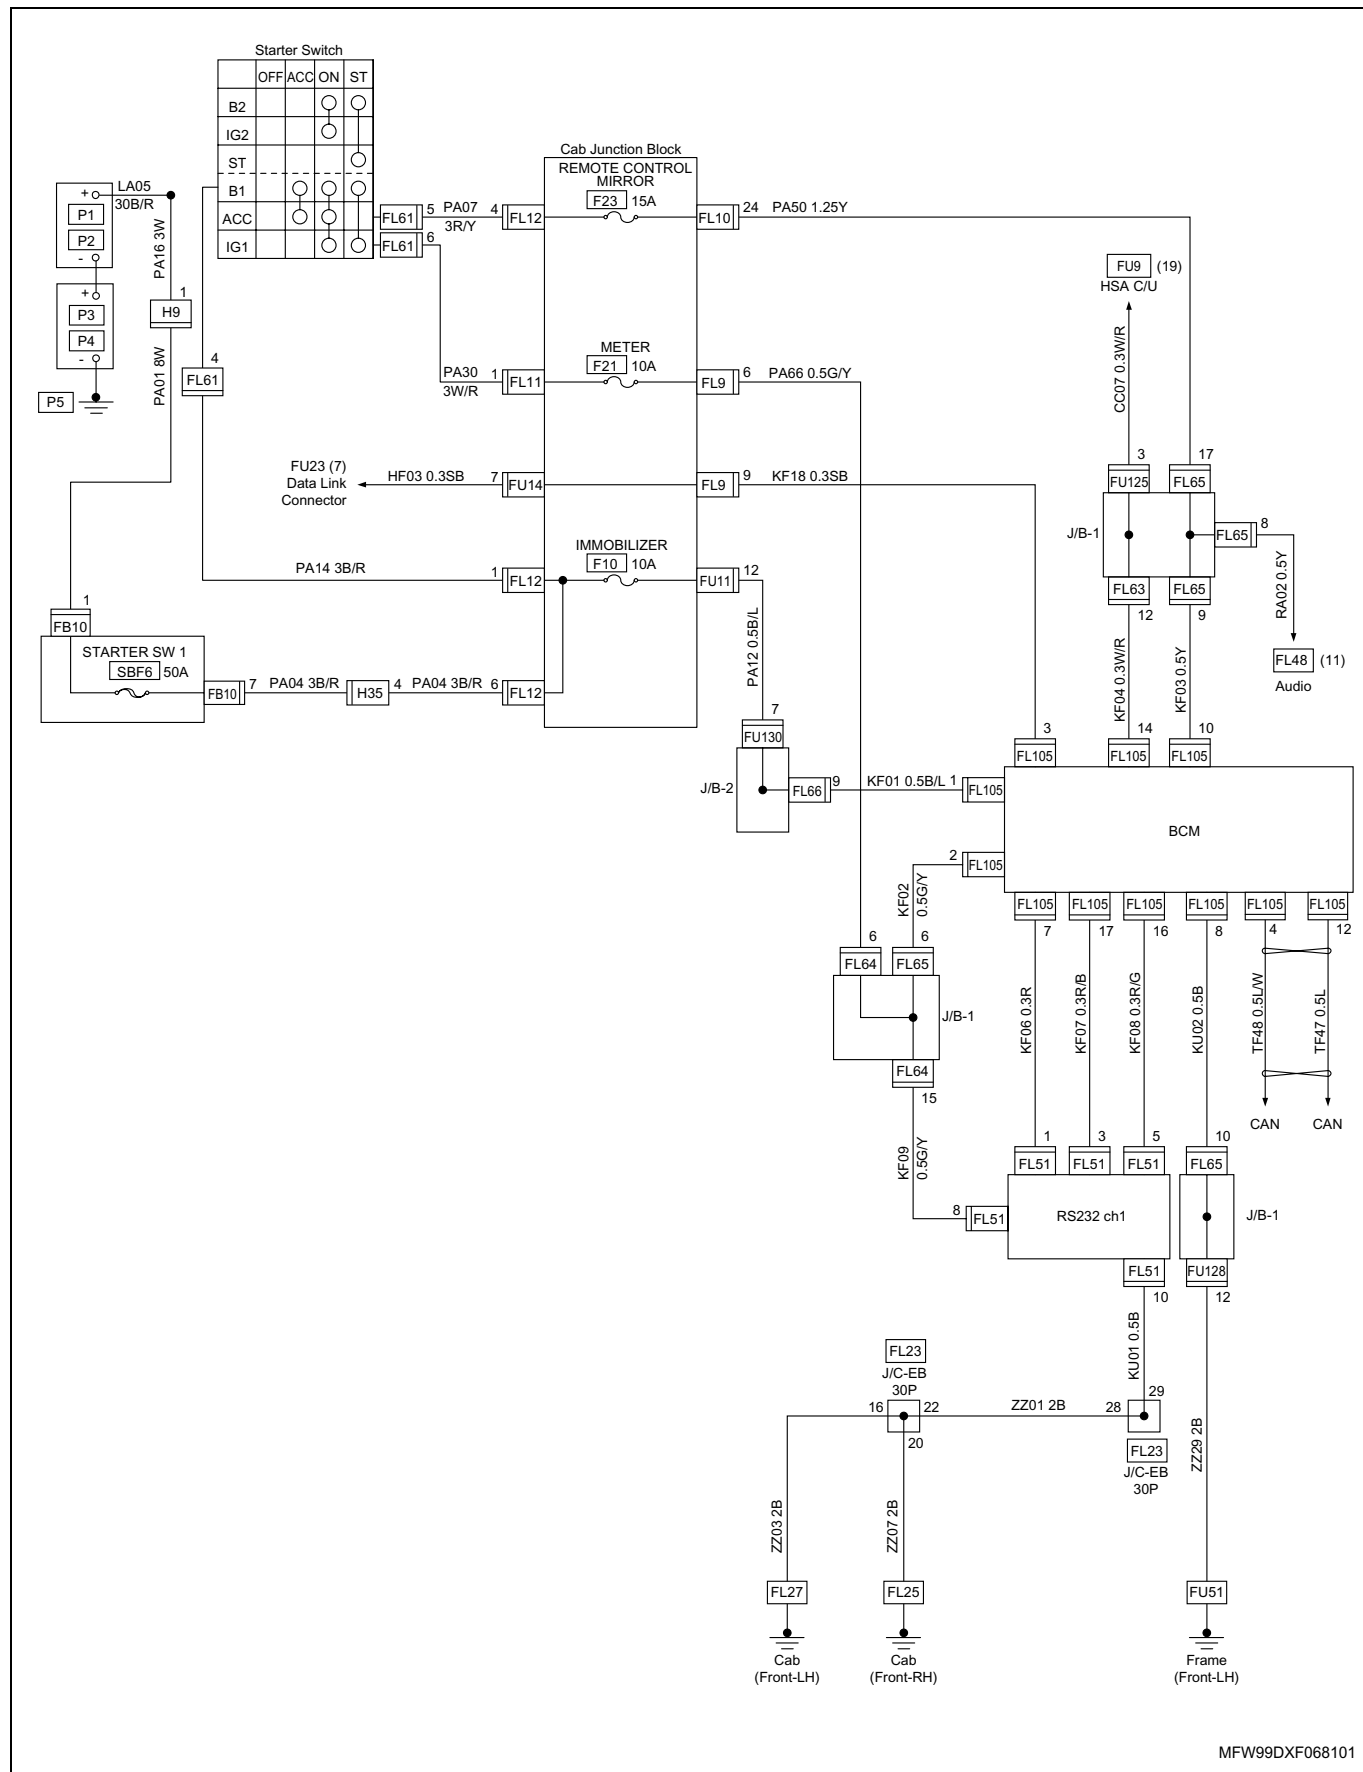Except Indonesia




Data Recording Module (DRM)

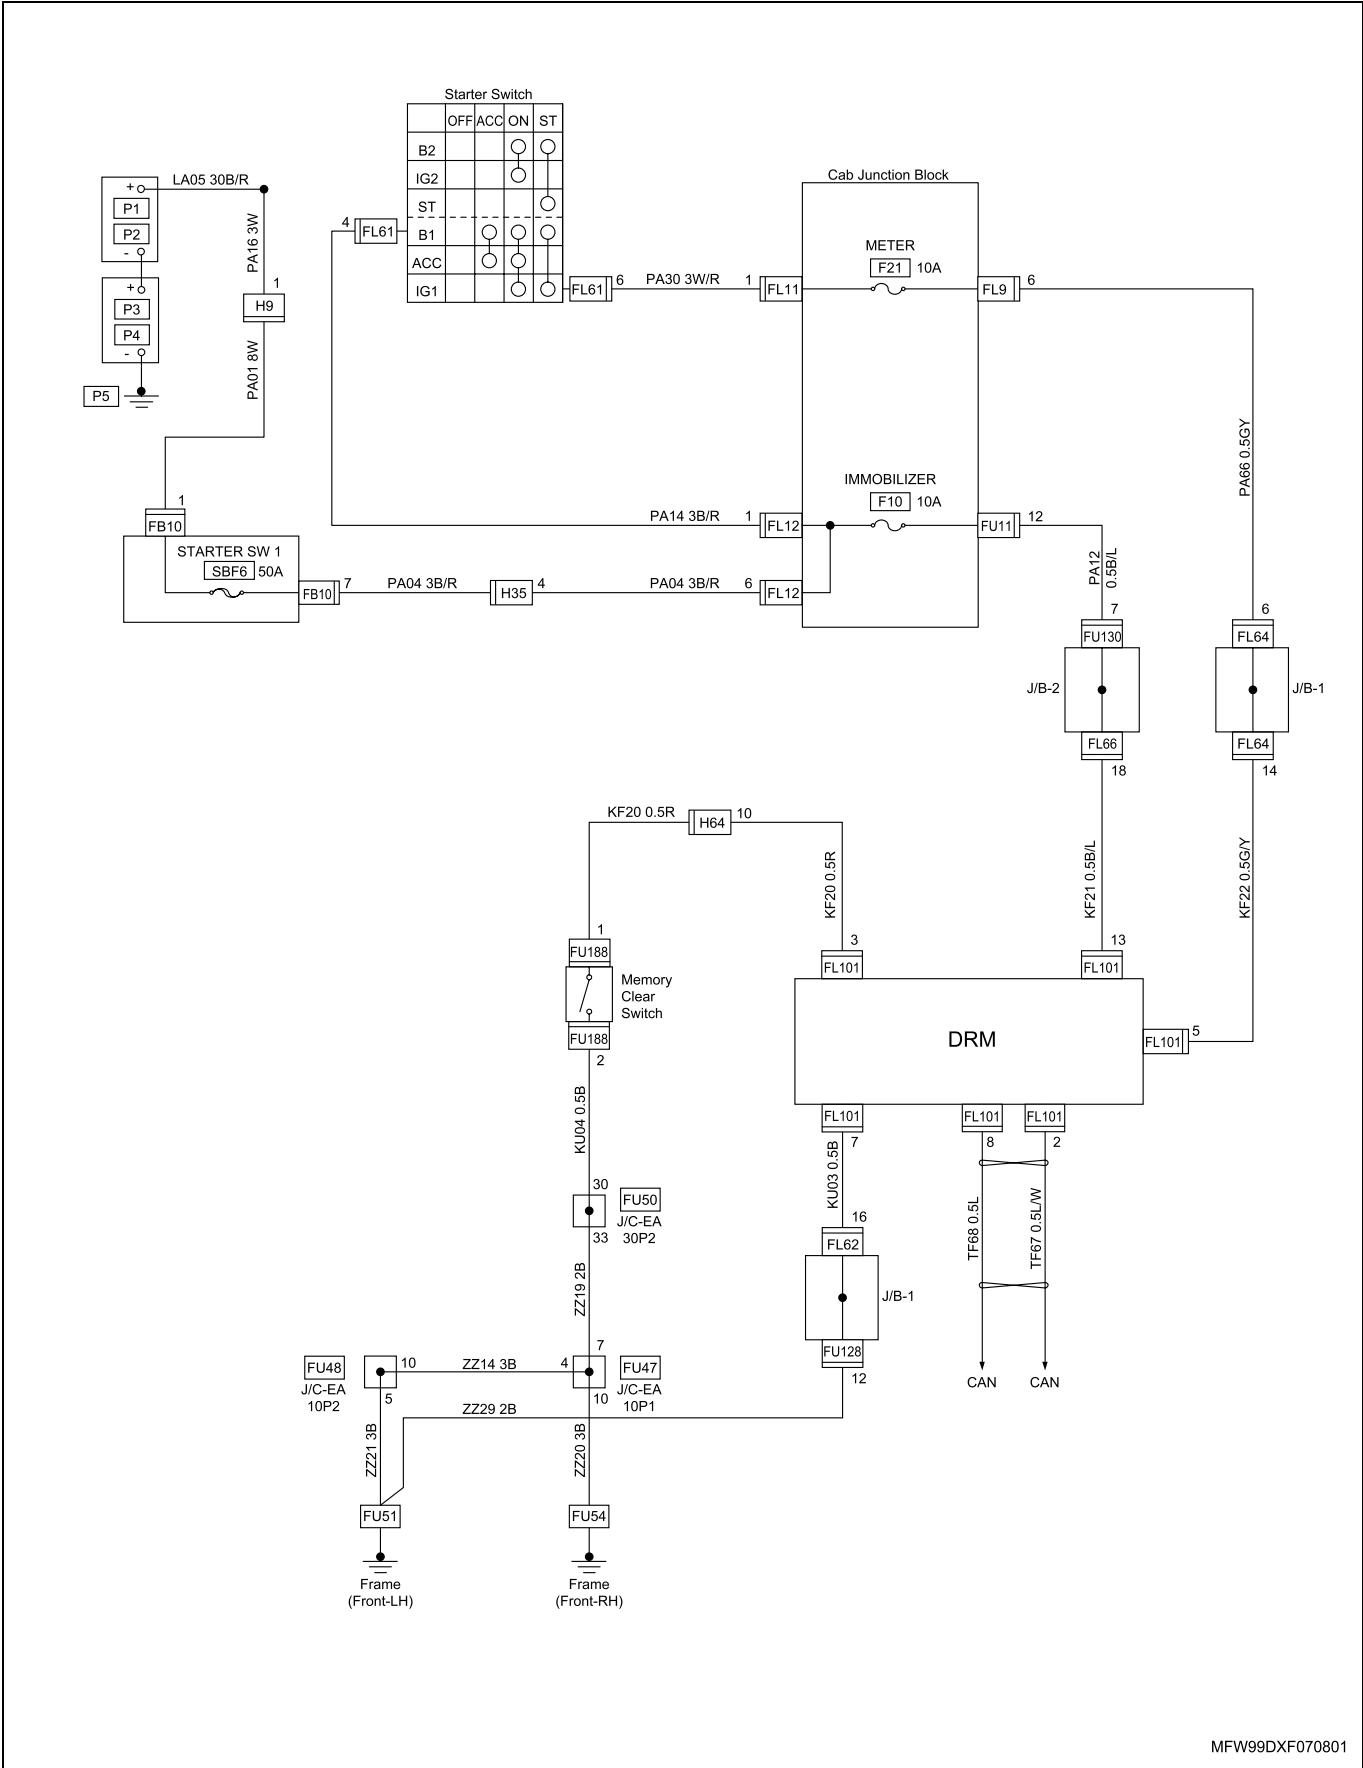Circuit Diagram
Except Indonesia



Indonesia

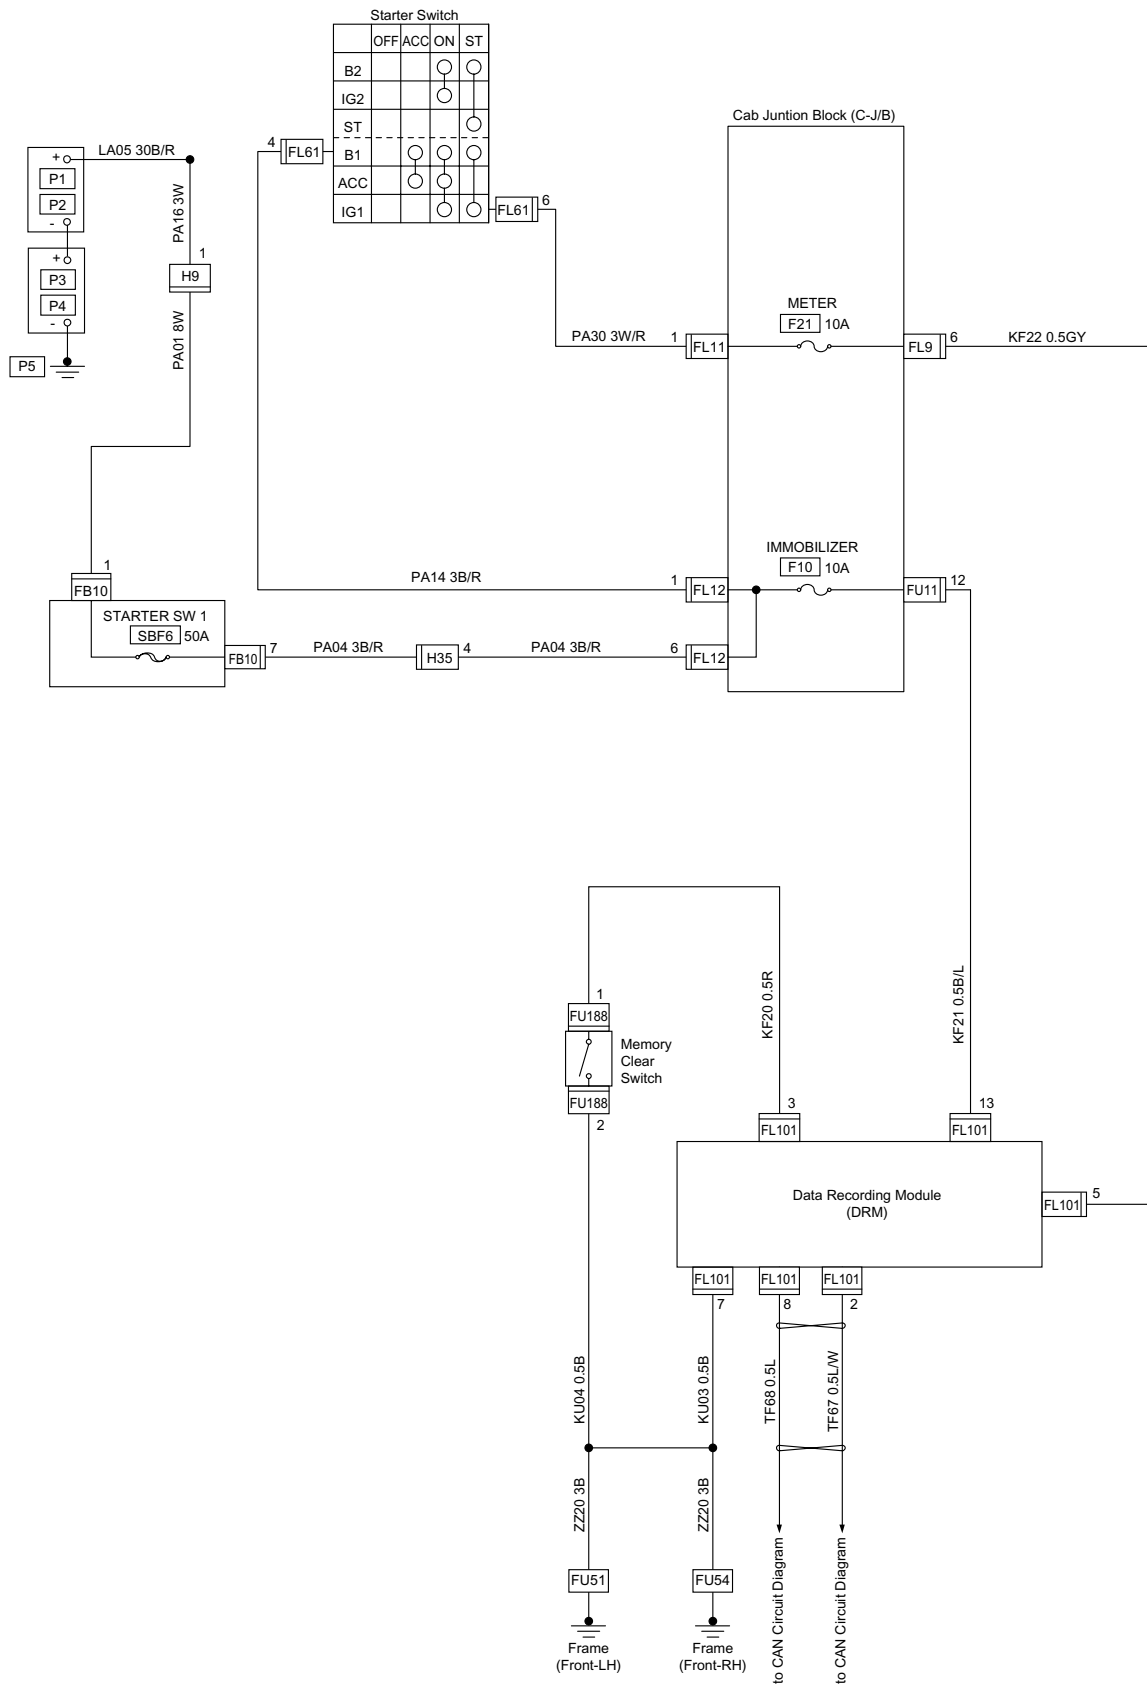


Windshield Wiper and Washer


Circuit Diagram


Except Indonesia

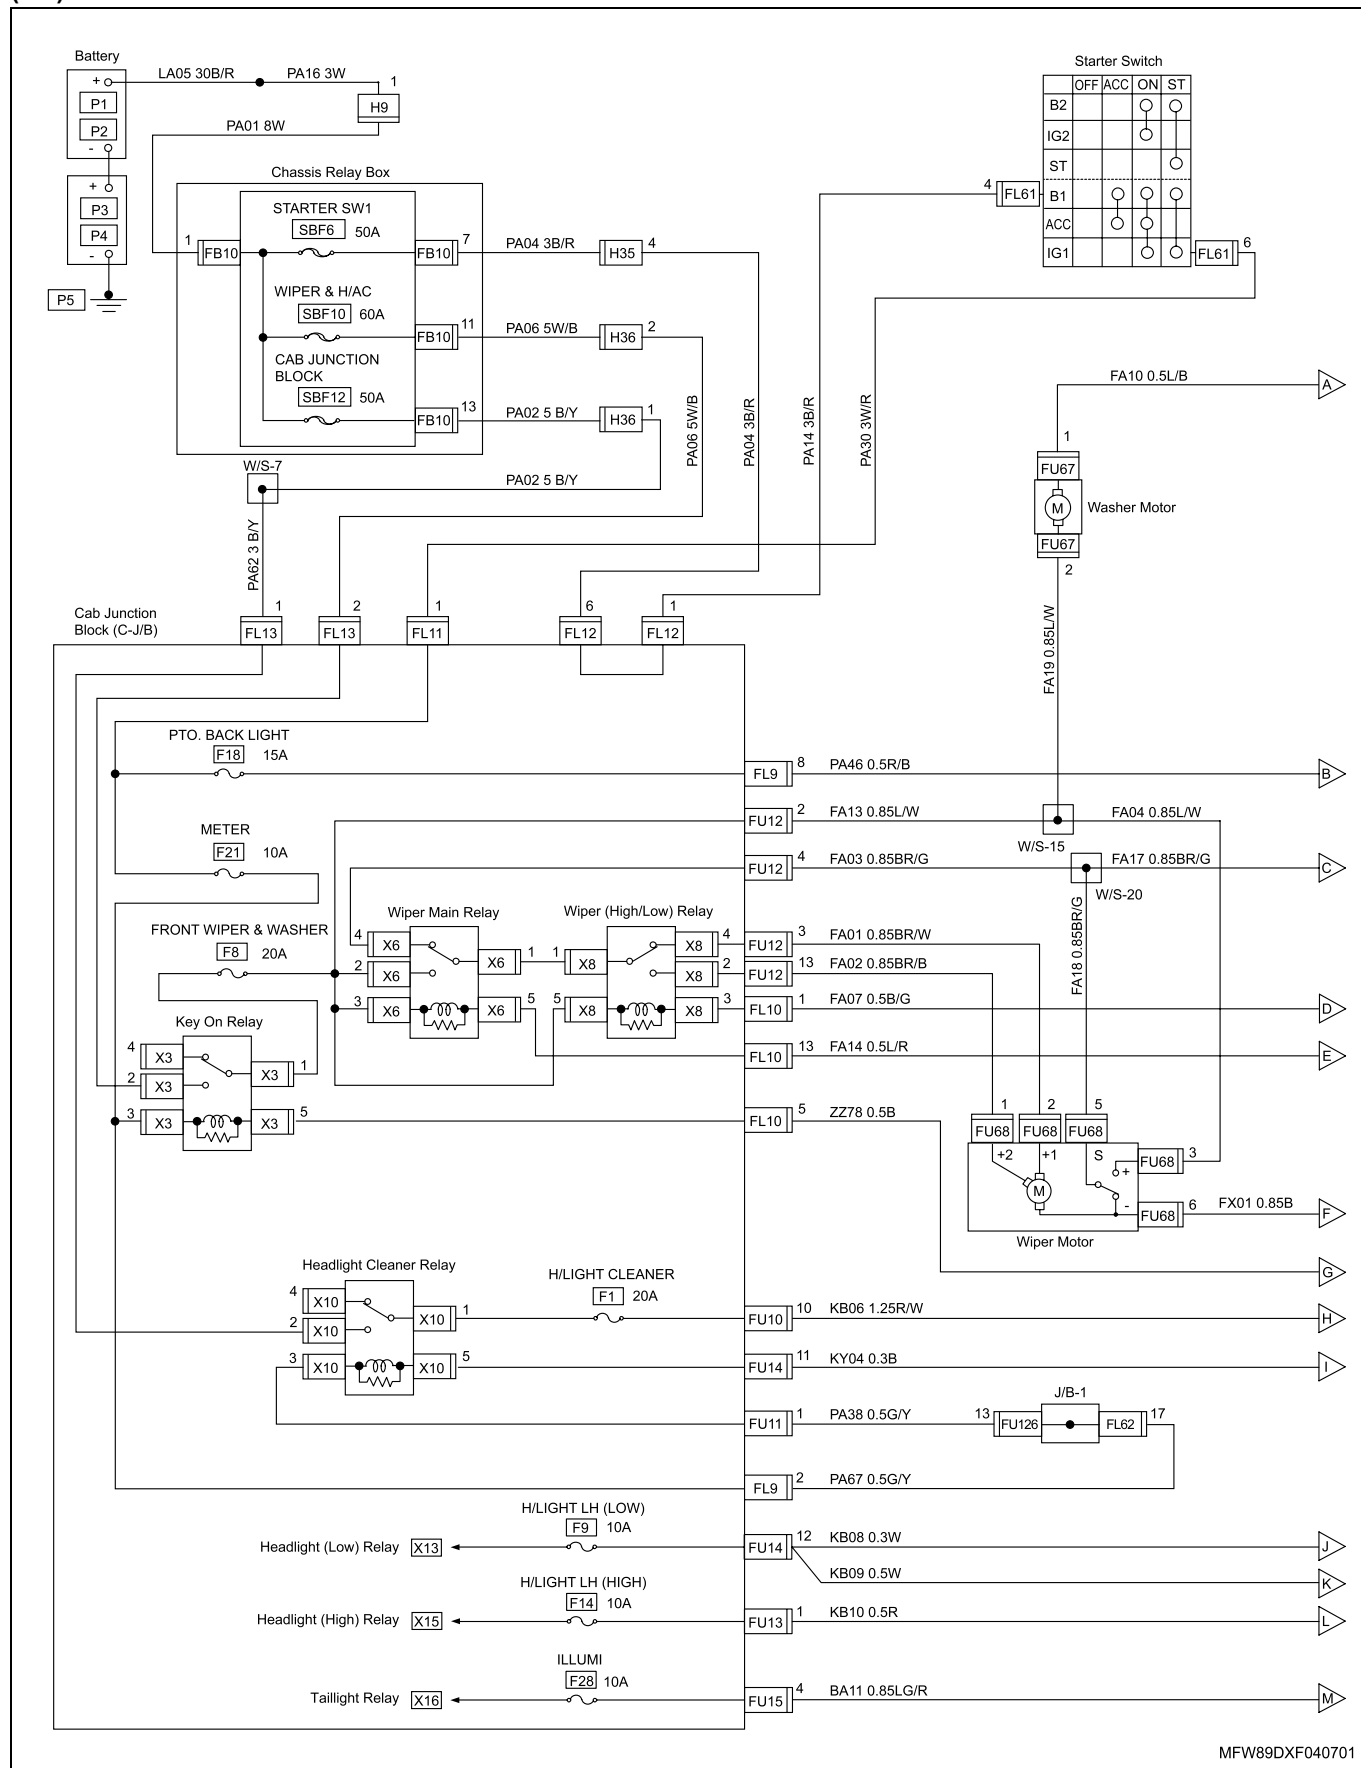(1/2)




(2/2)

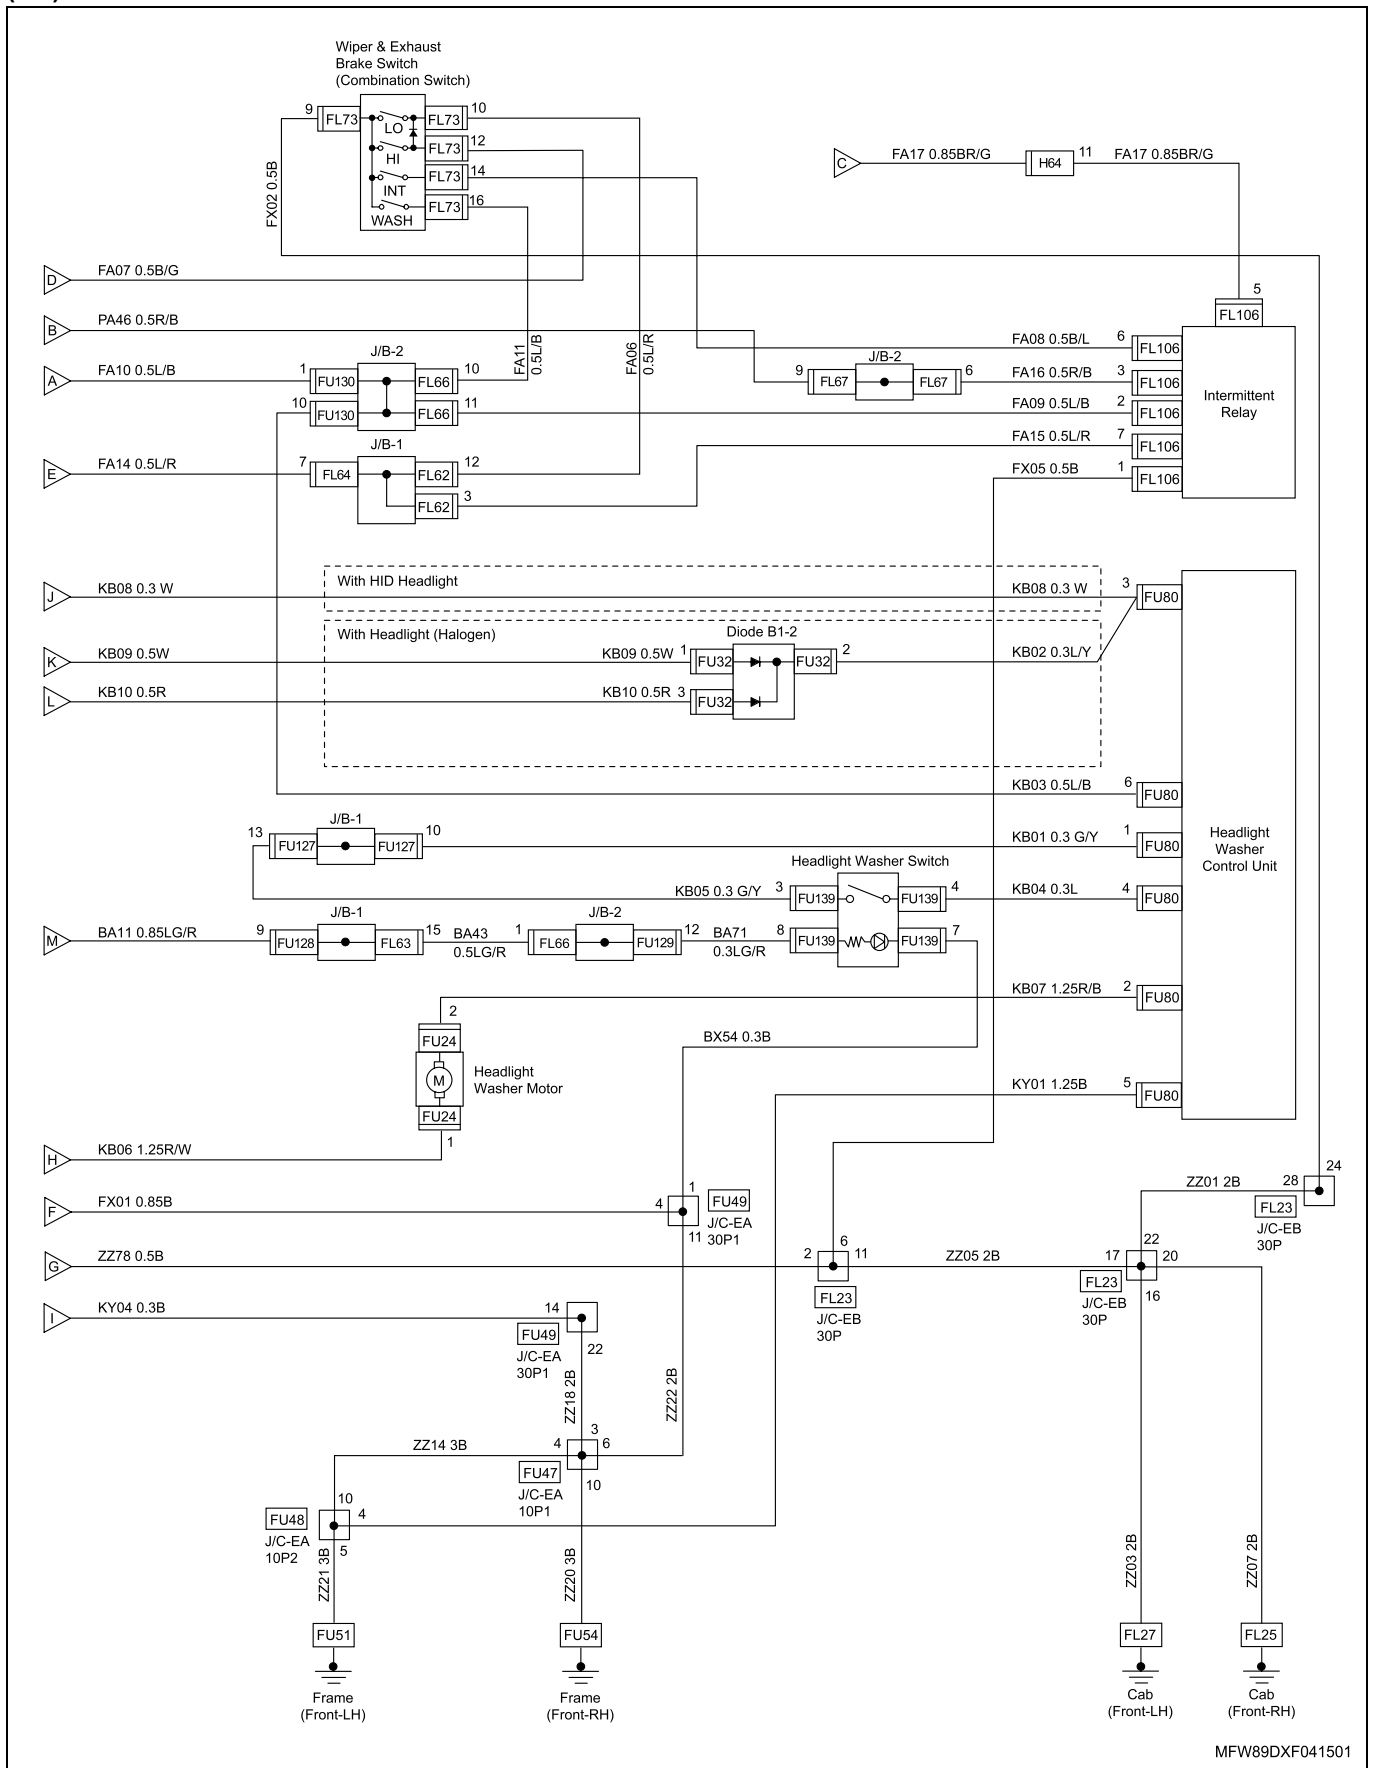

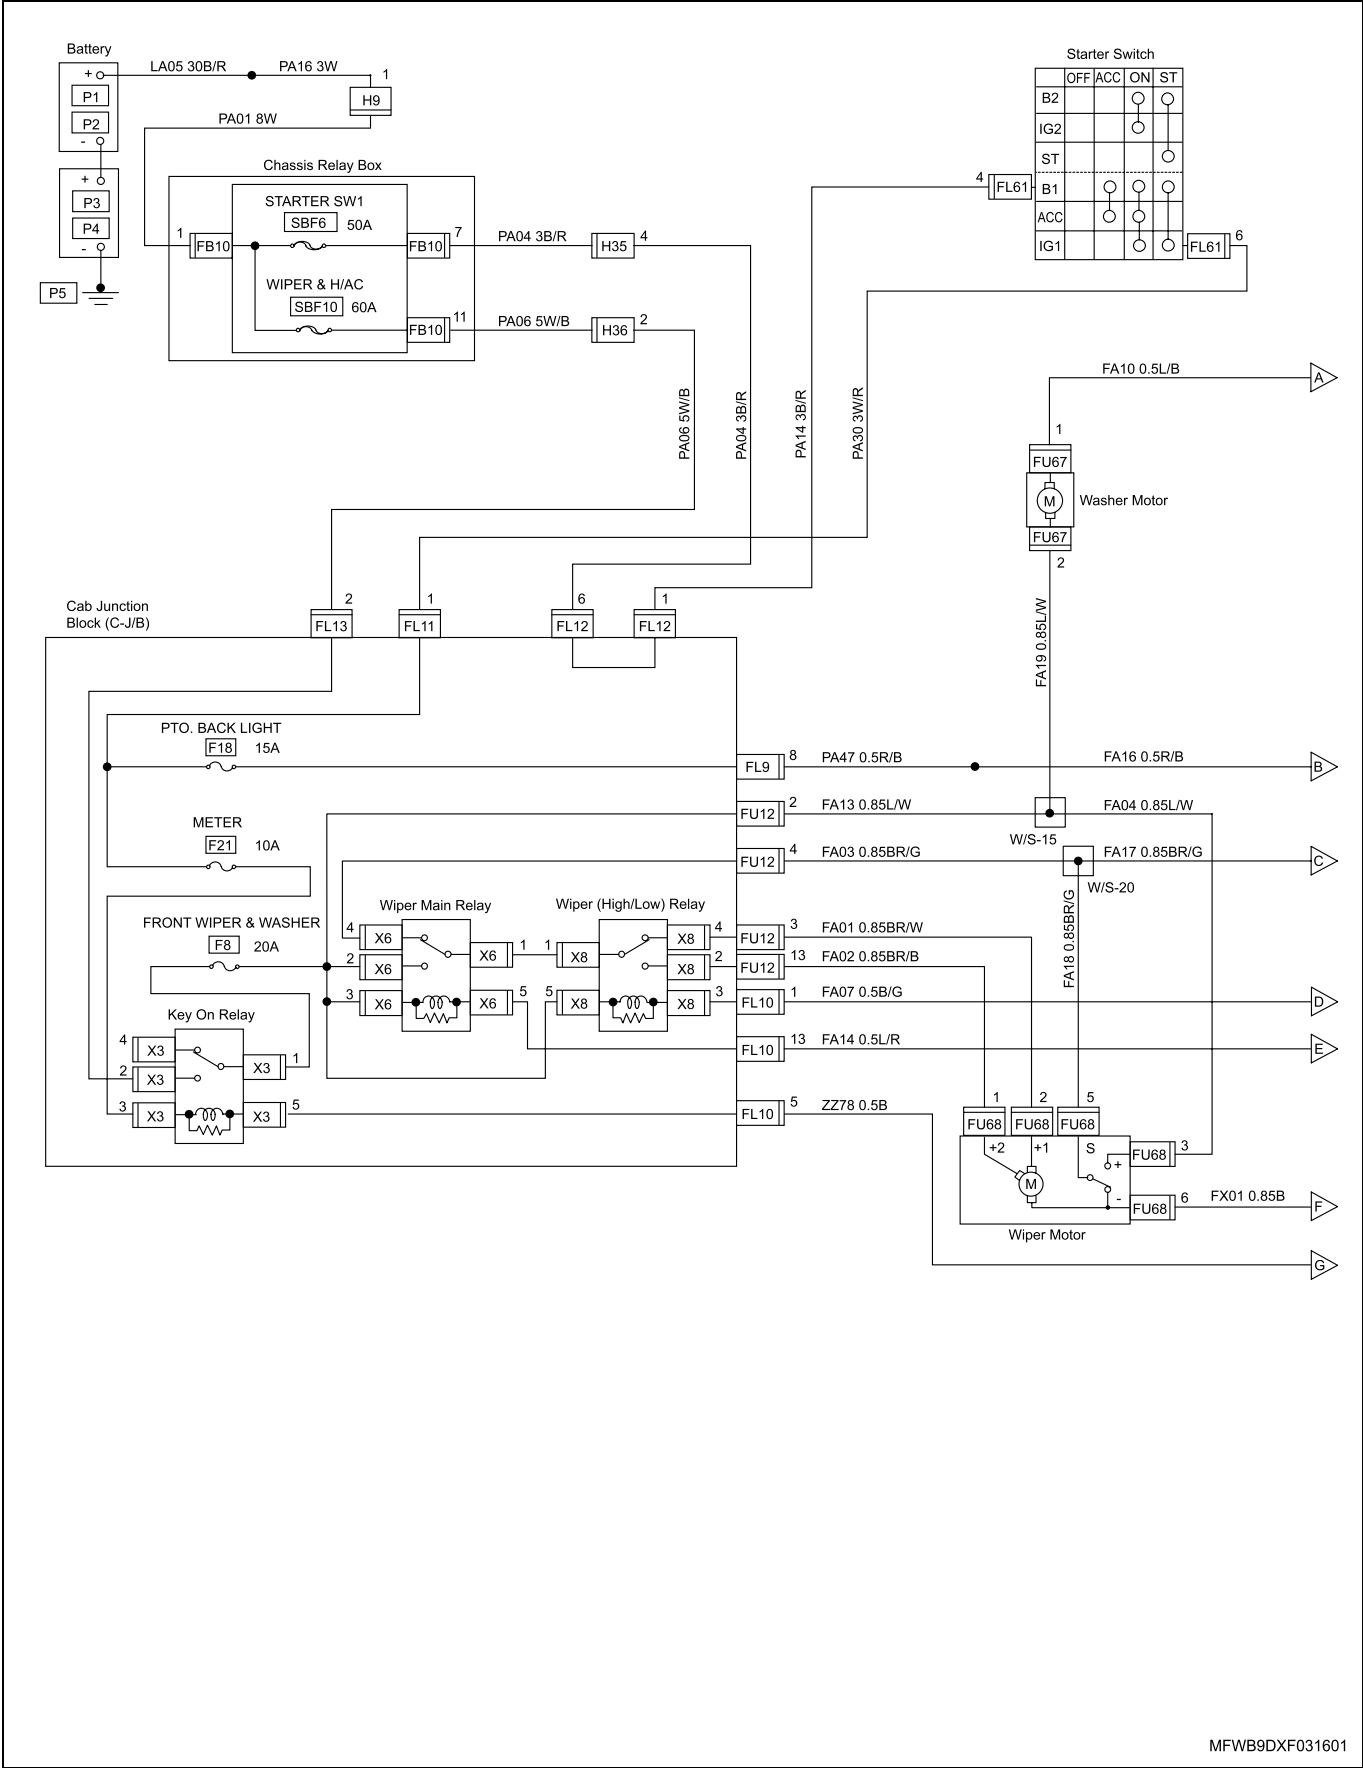


(2/2)

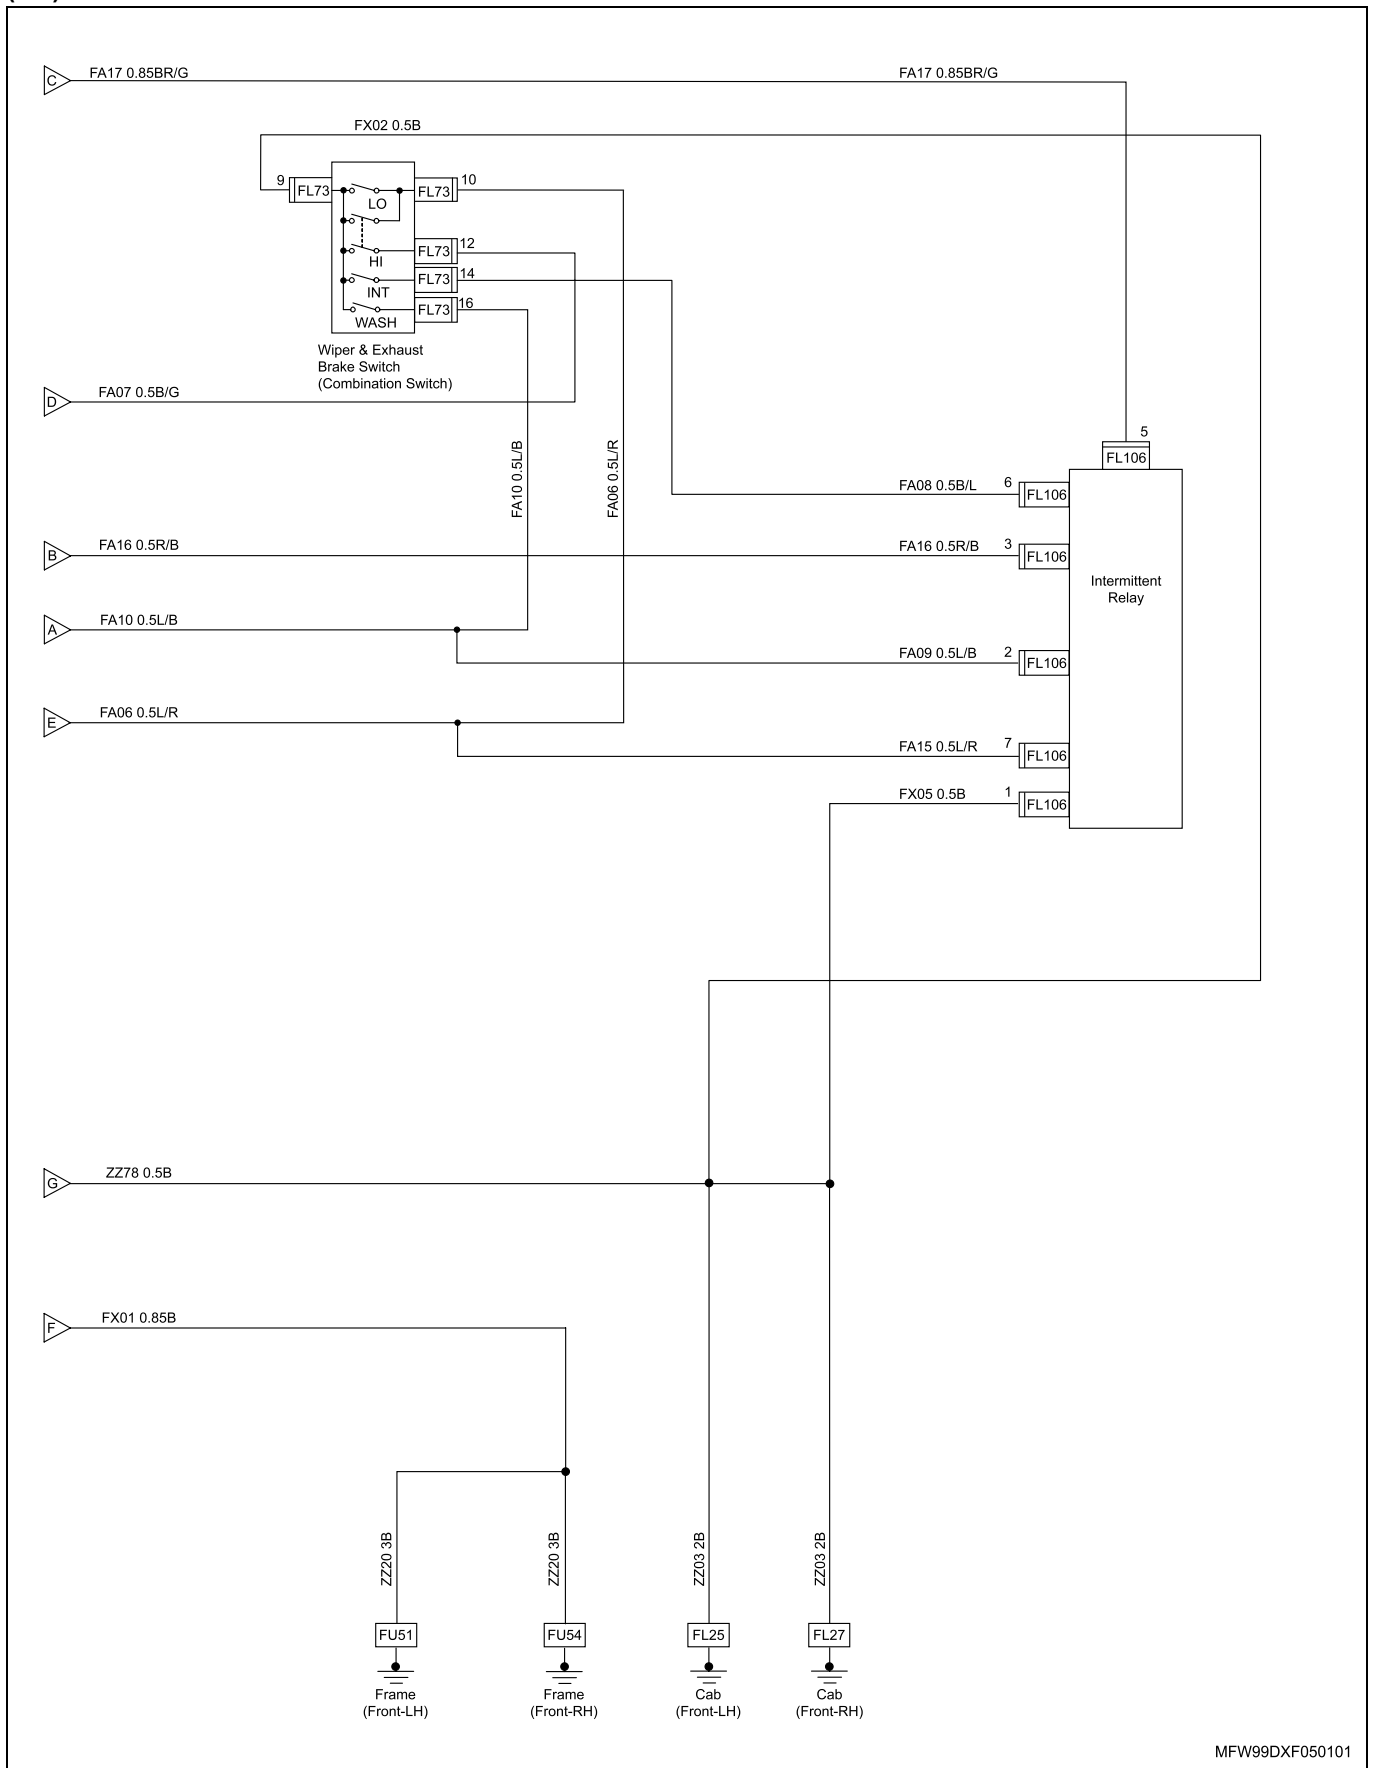

Power Door Lock/Keyless Entry


Circuit Diagram

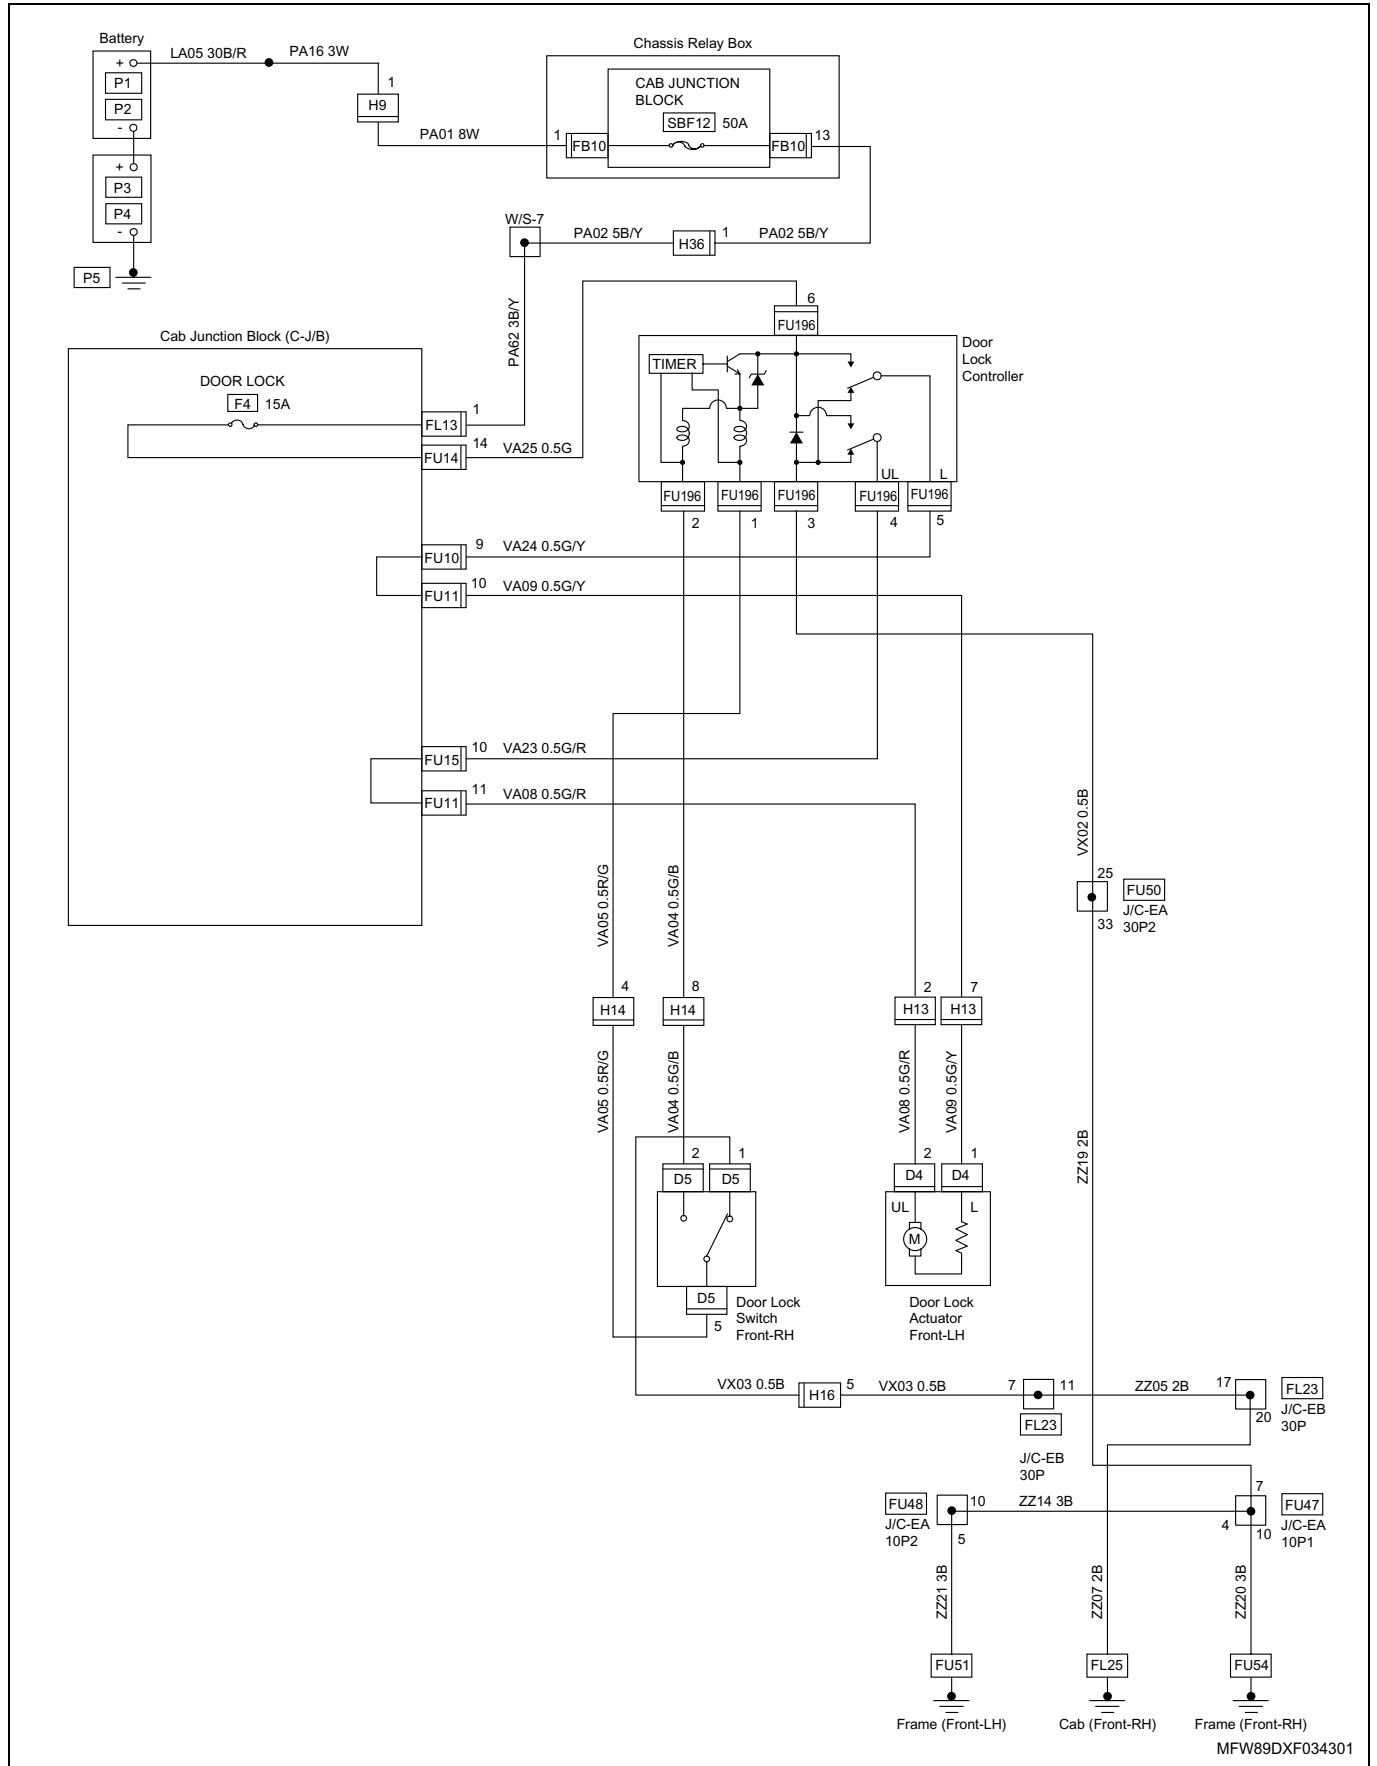Except Keyless Entry System (Except Indonesia)




Keyless Entry System Equipment (Except Indonesia)

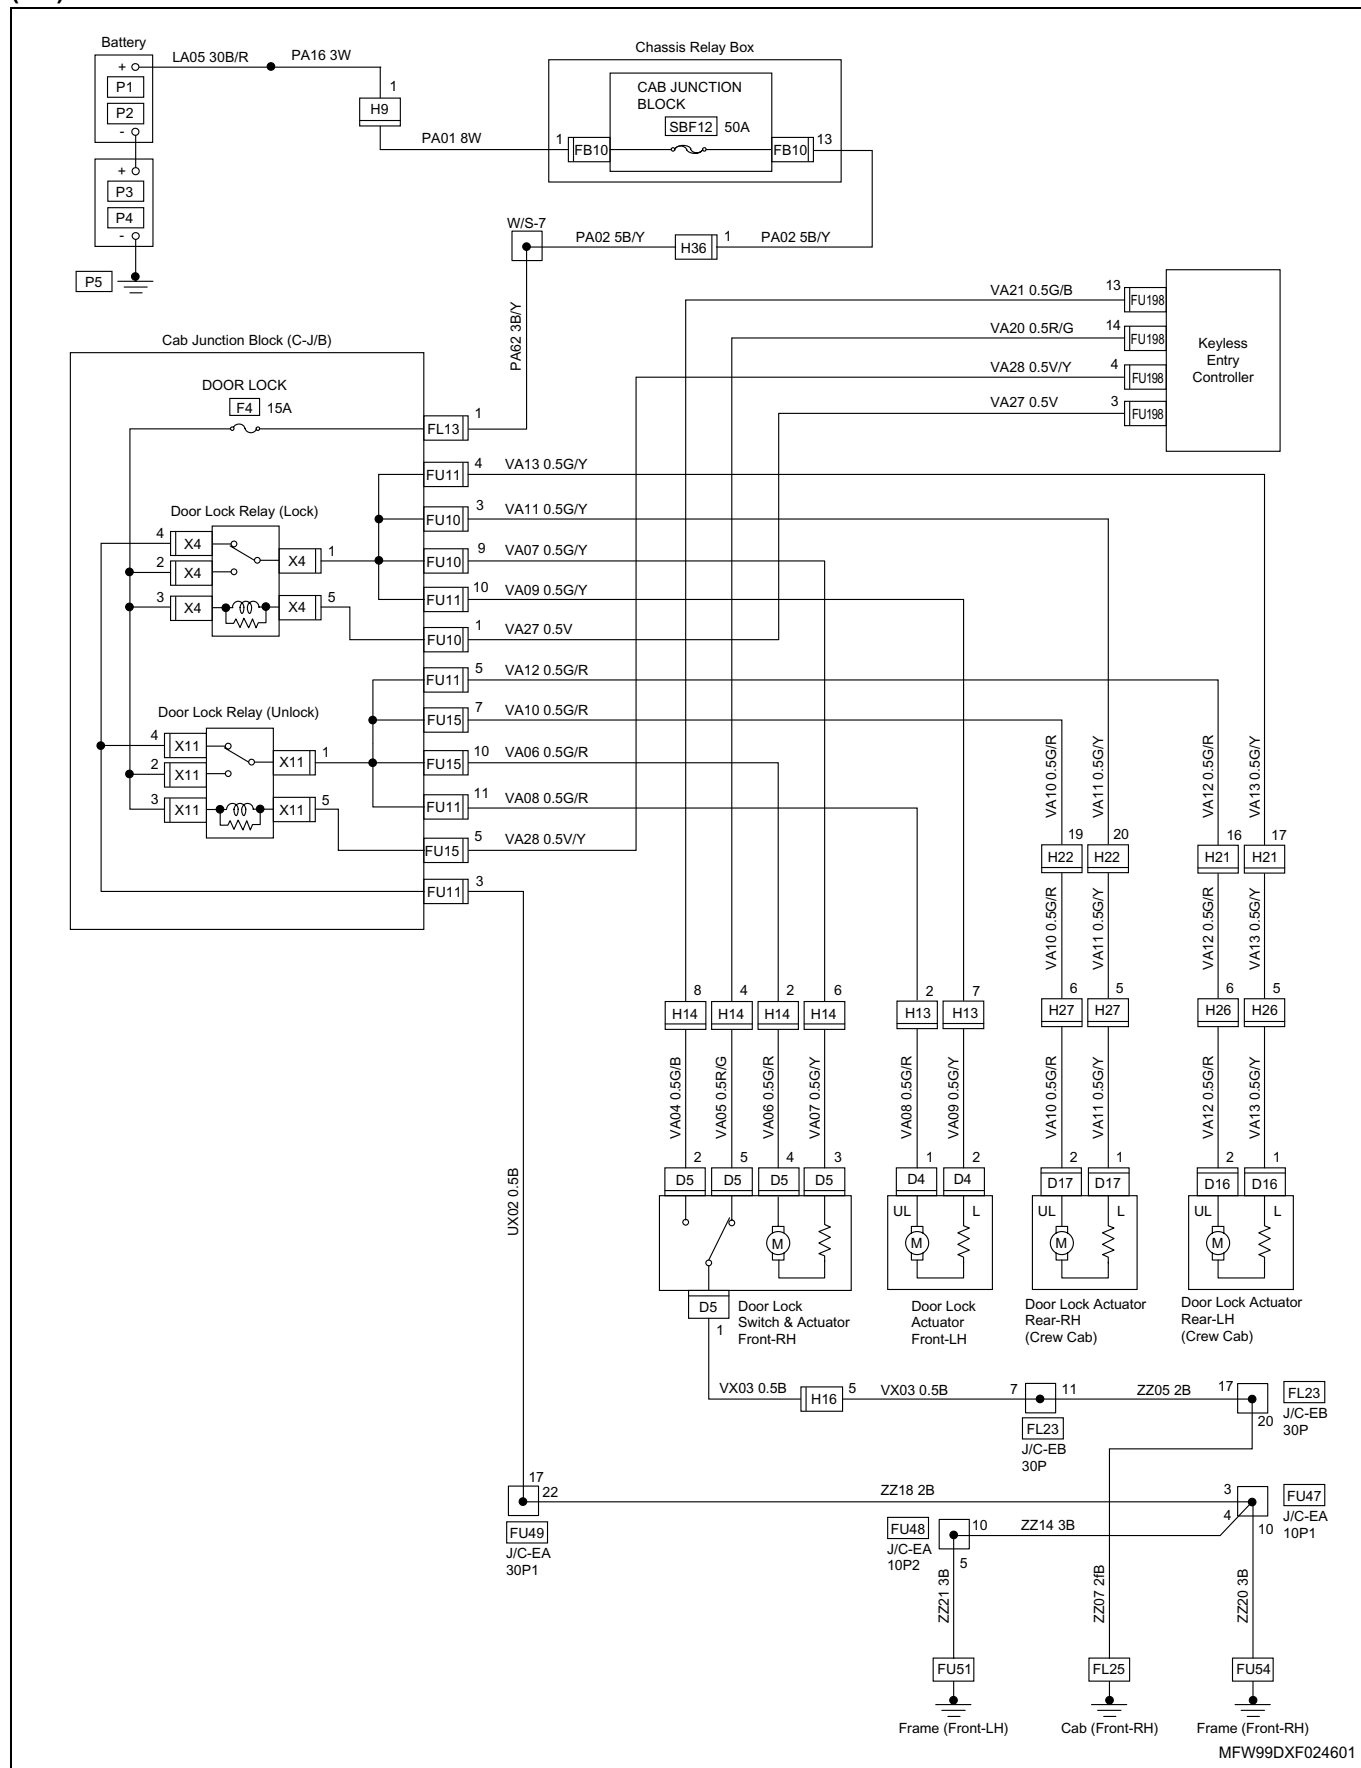(1/2)




(2/2)

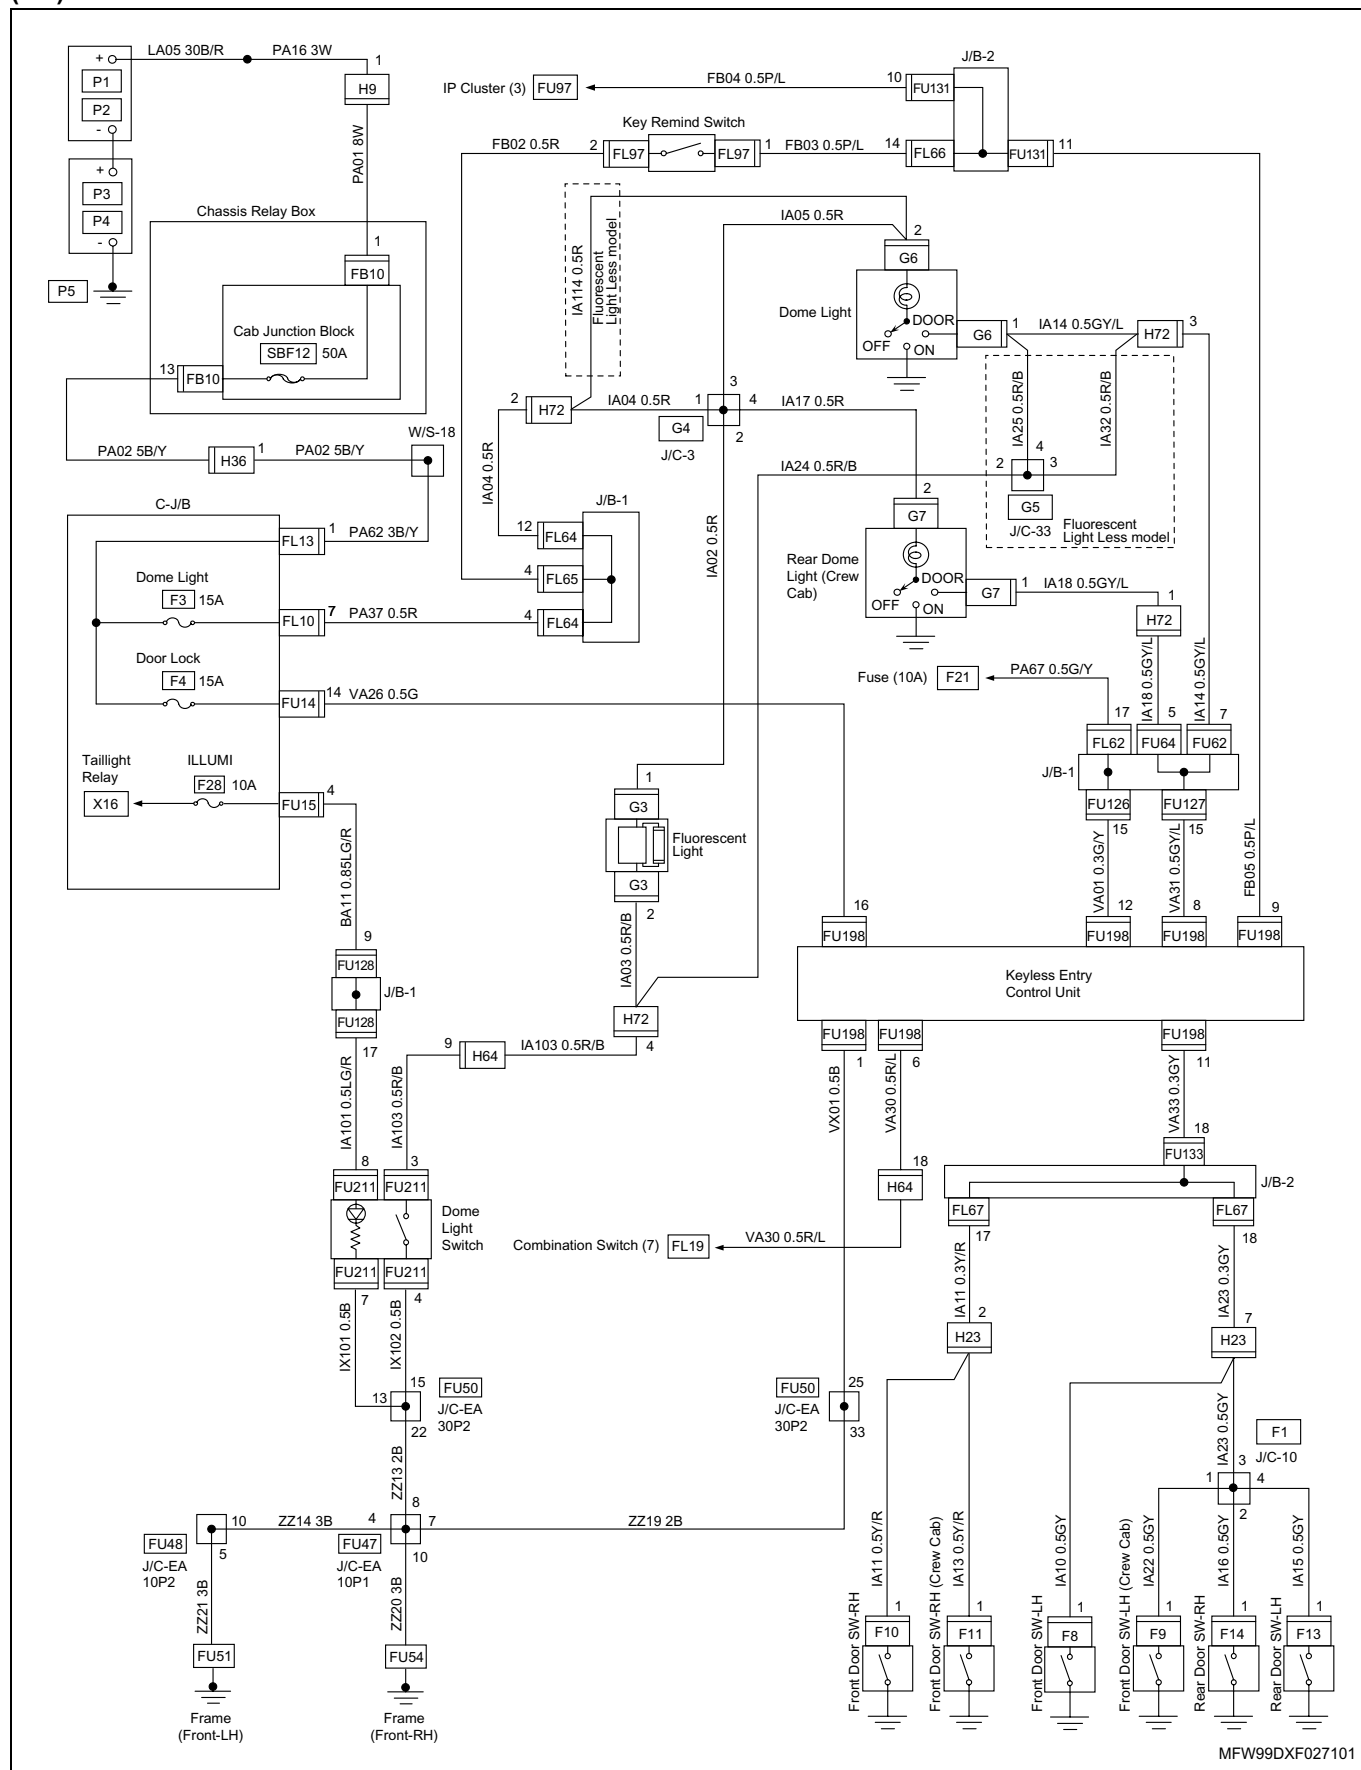


Power Window

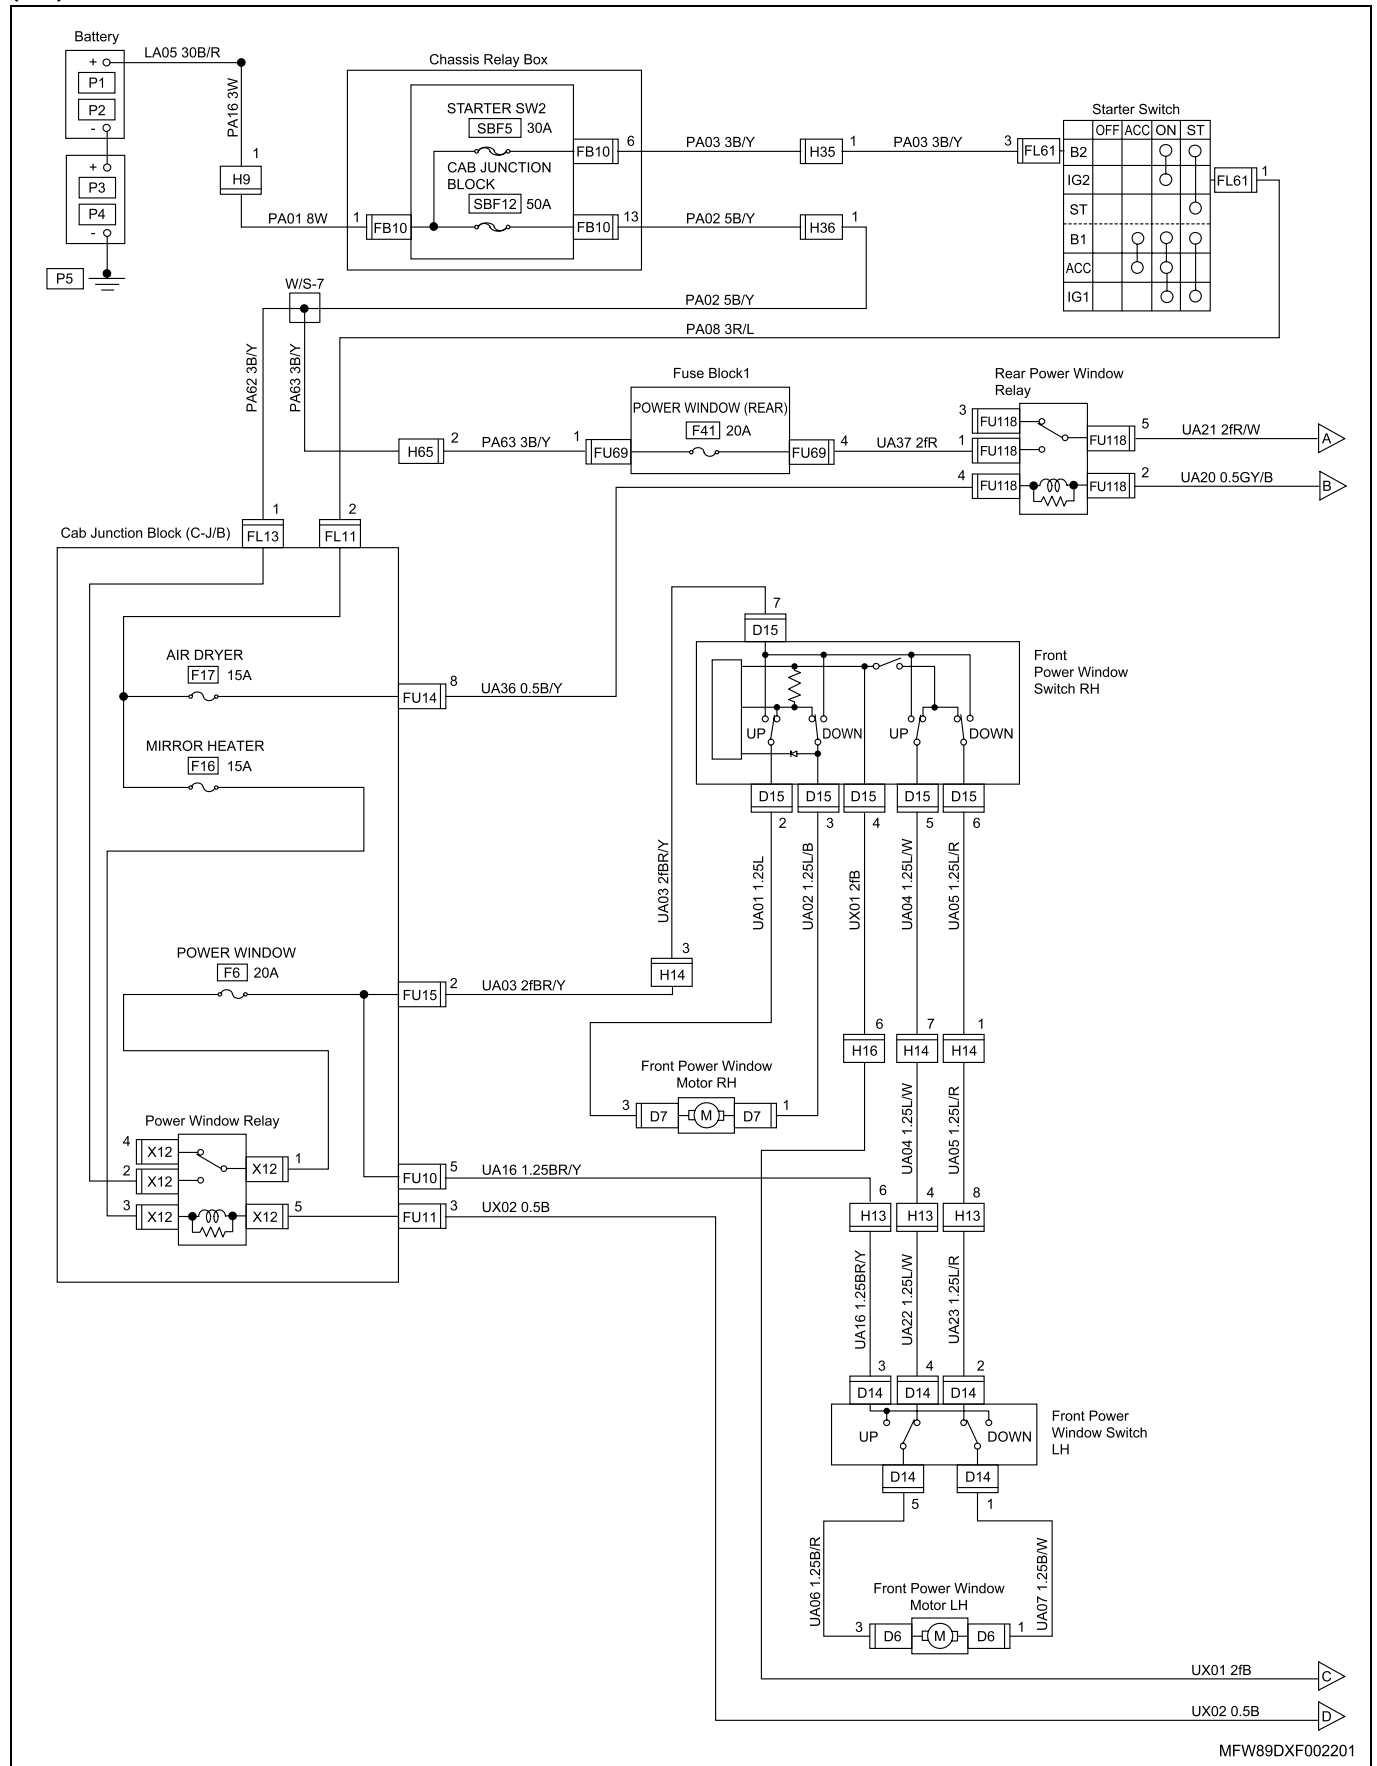Circuit Diagram Except Indonesia (1/2)



9D-200 Wiring System (RHD model)

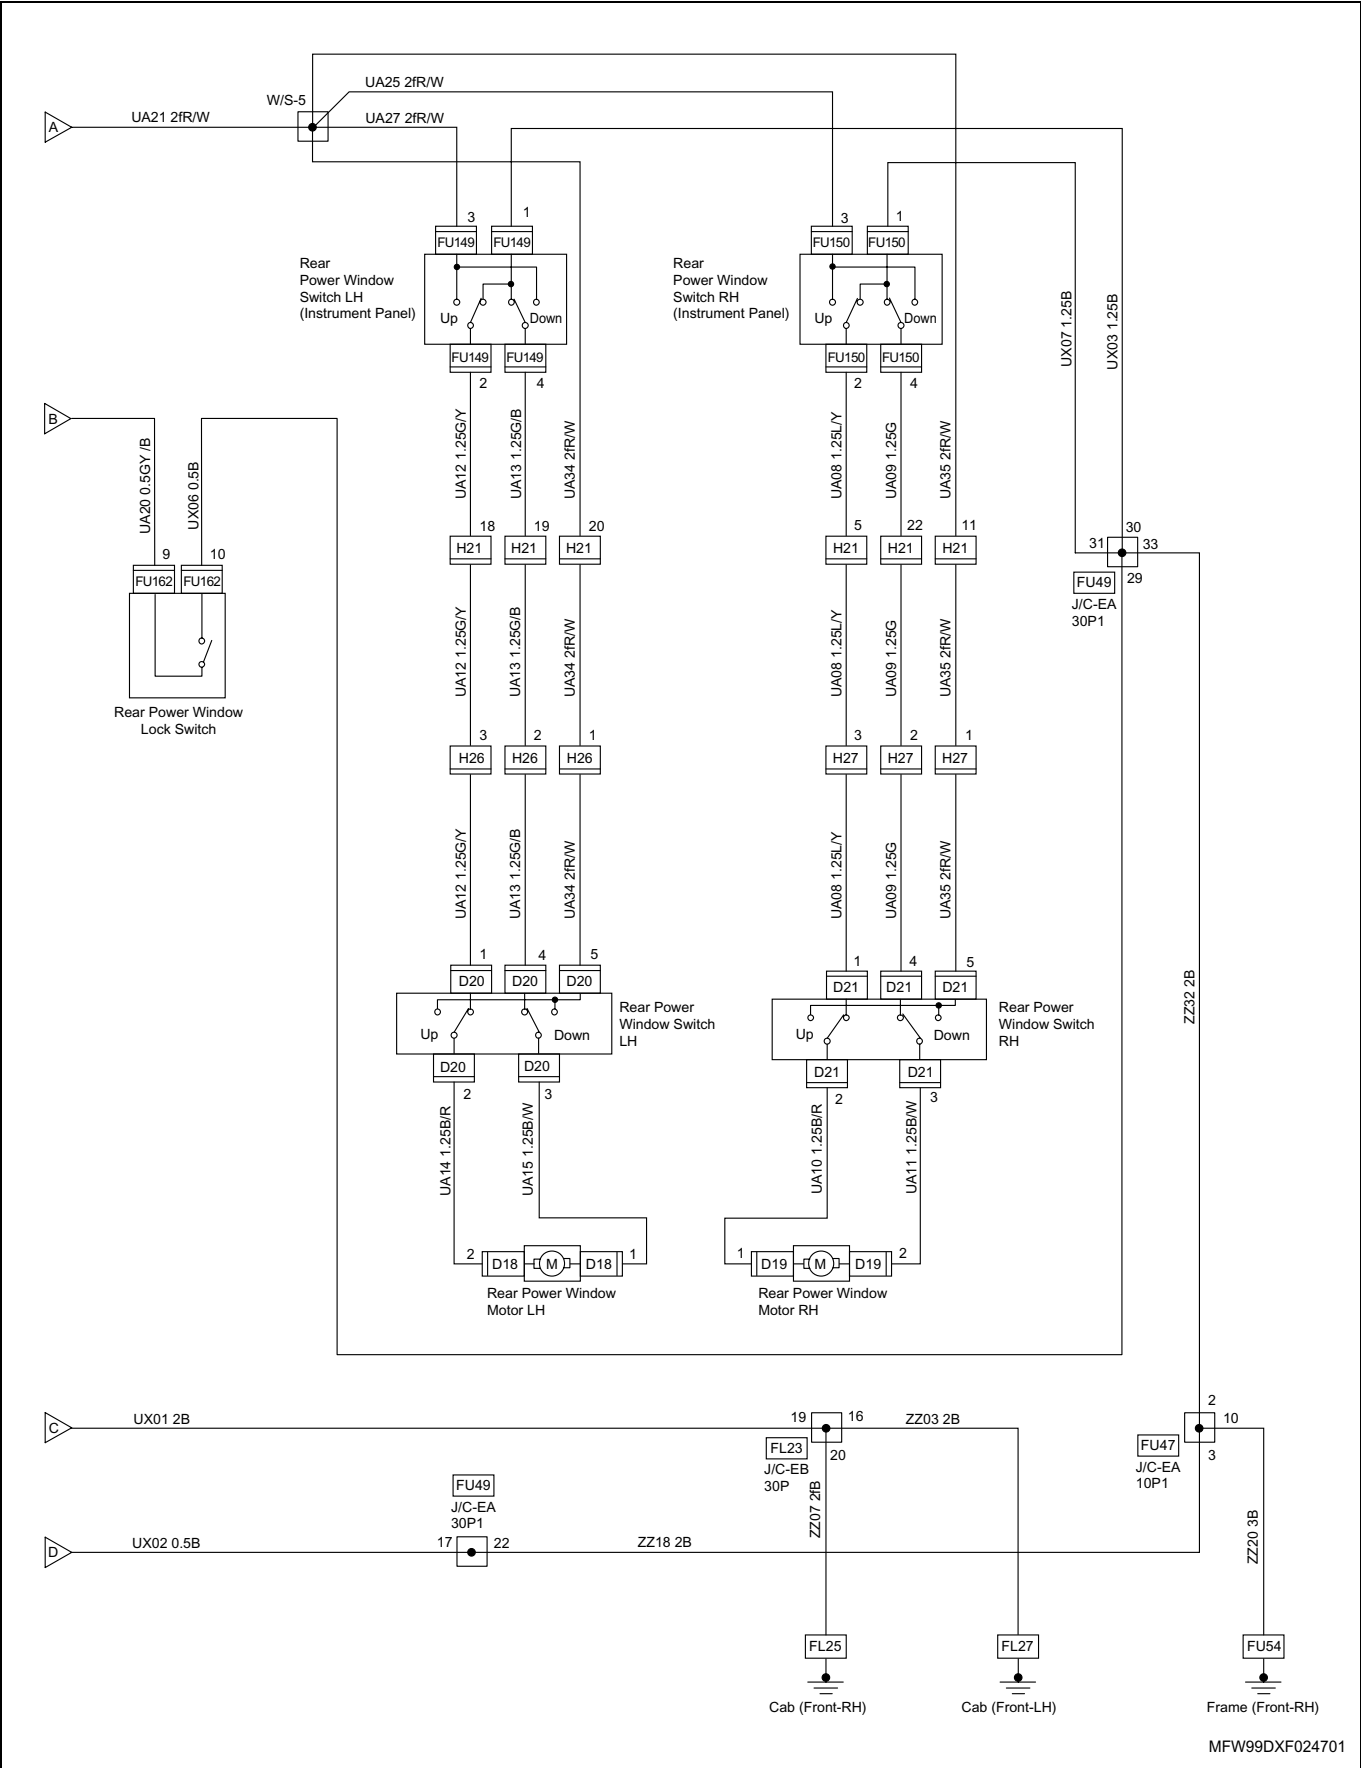(2/2)




Remote Mirror/Mirror Heater


Circuit Diagram

Except Indonesia

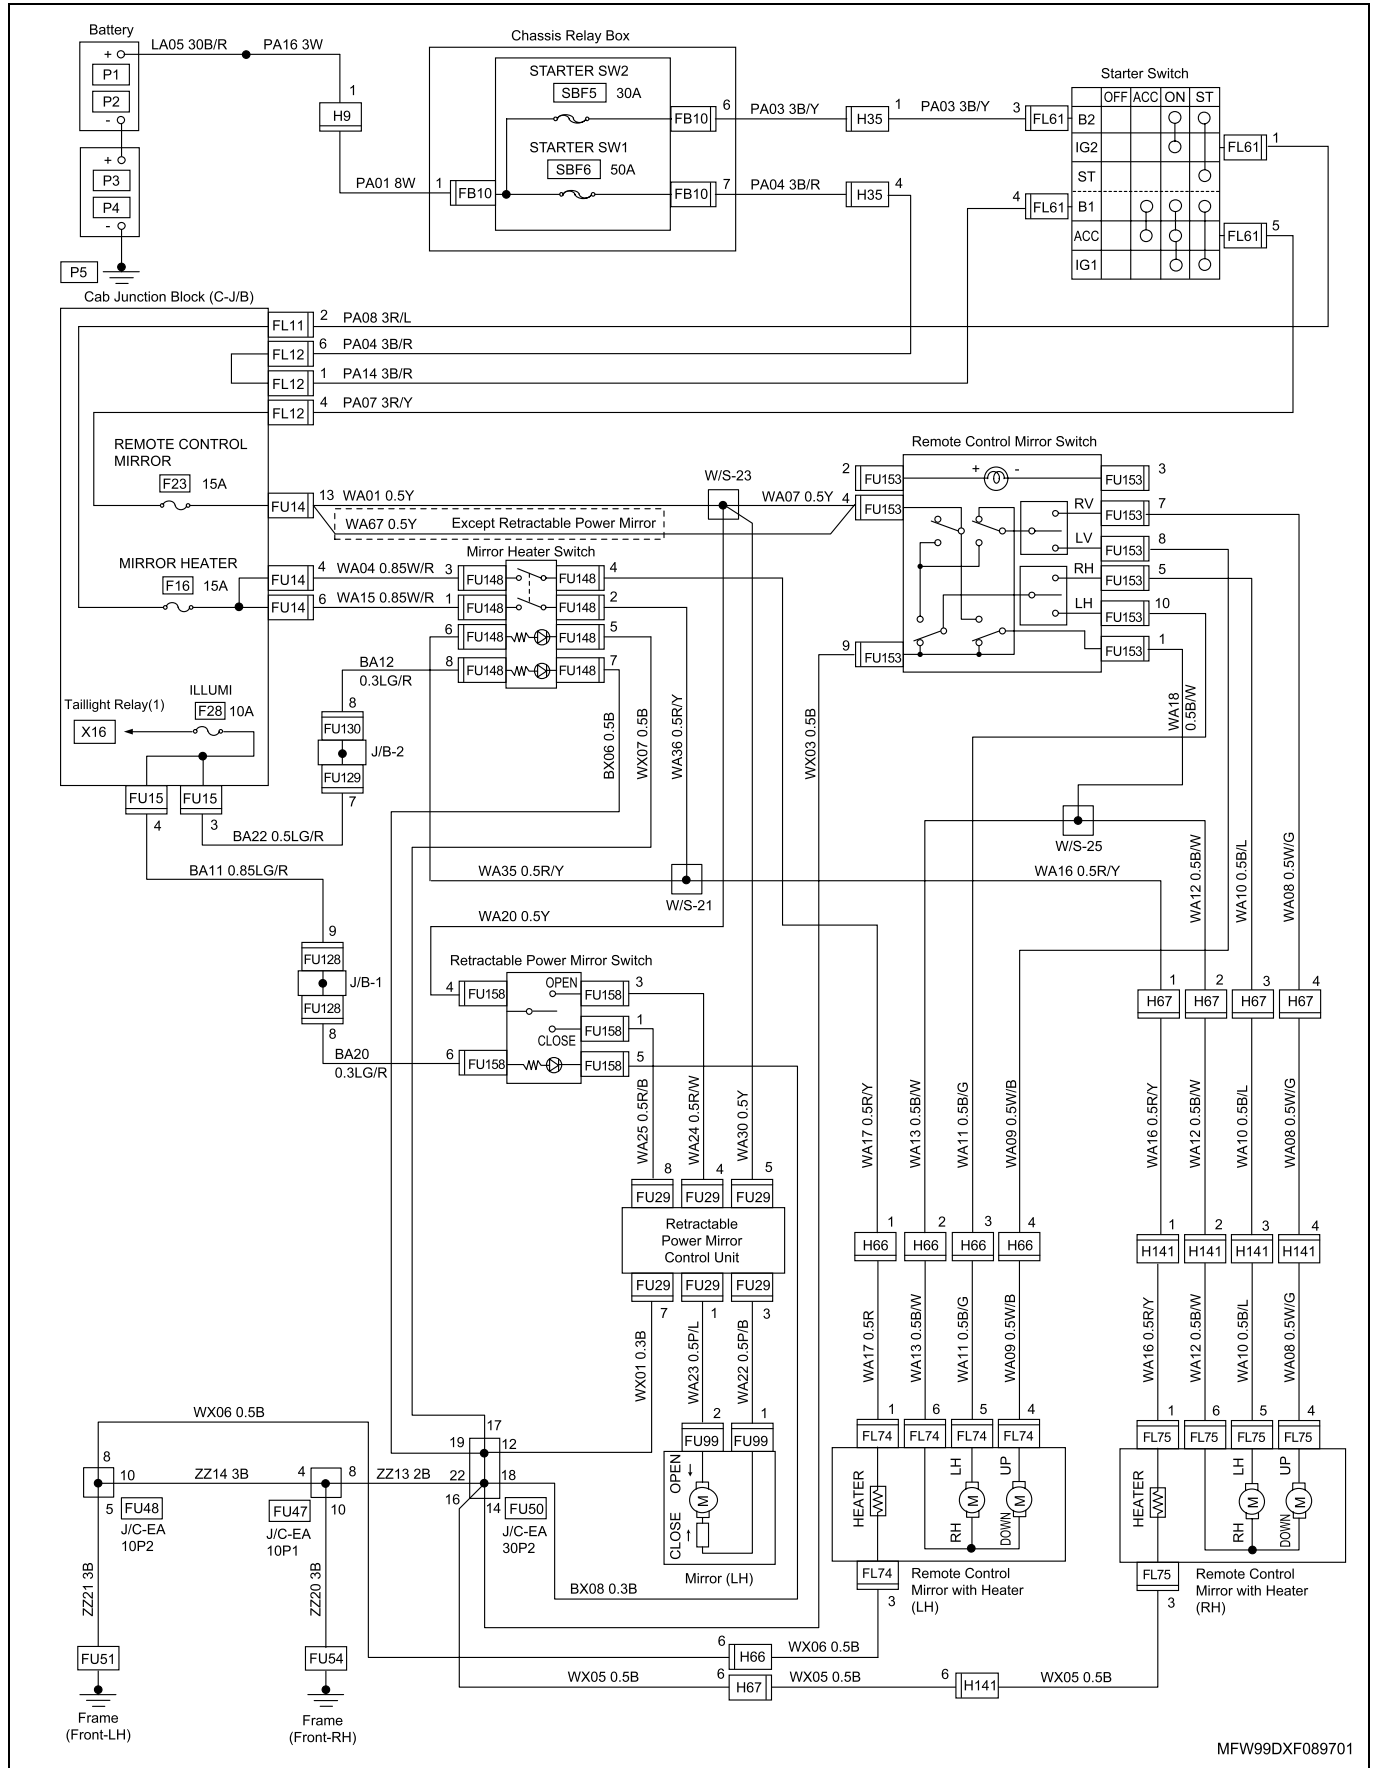Pillar Mirror Type




Door Mirror Type (Except Australia)

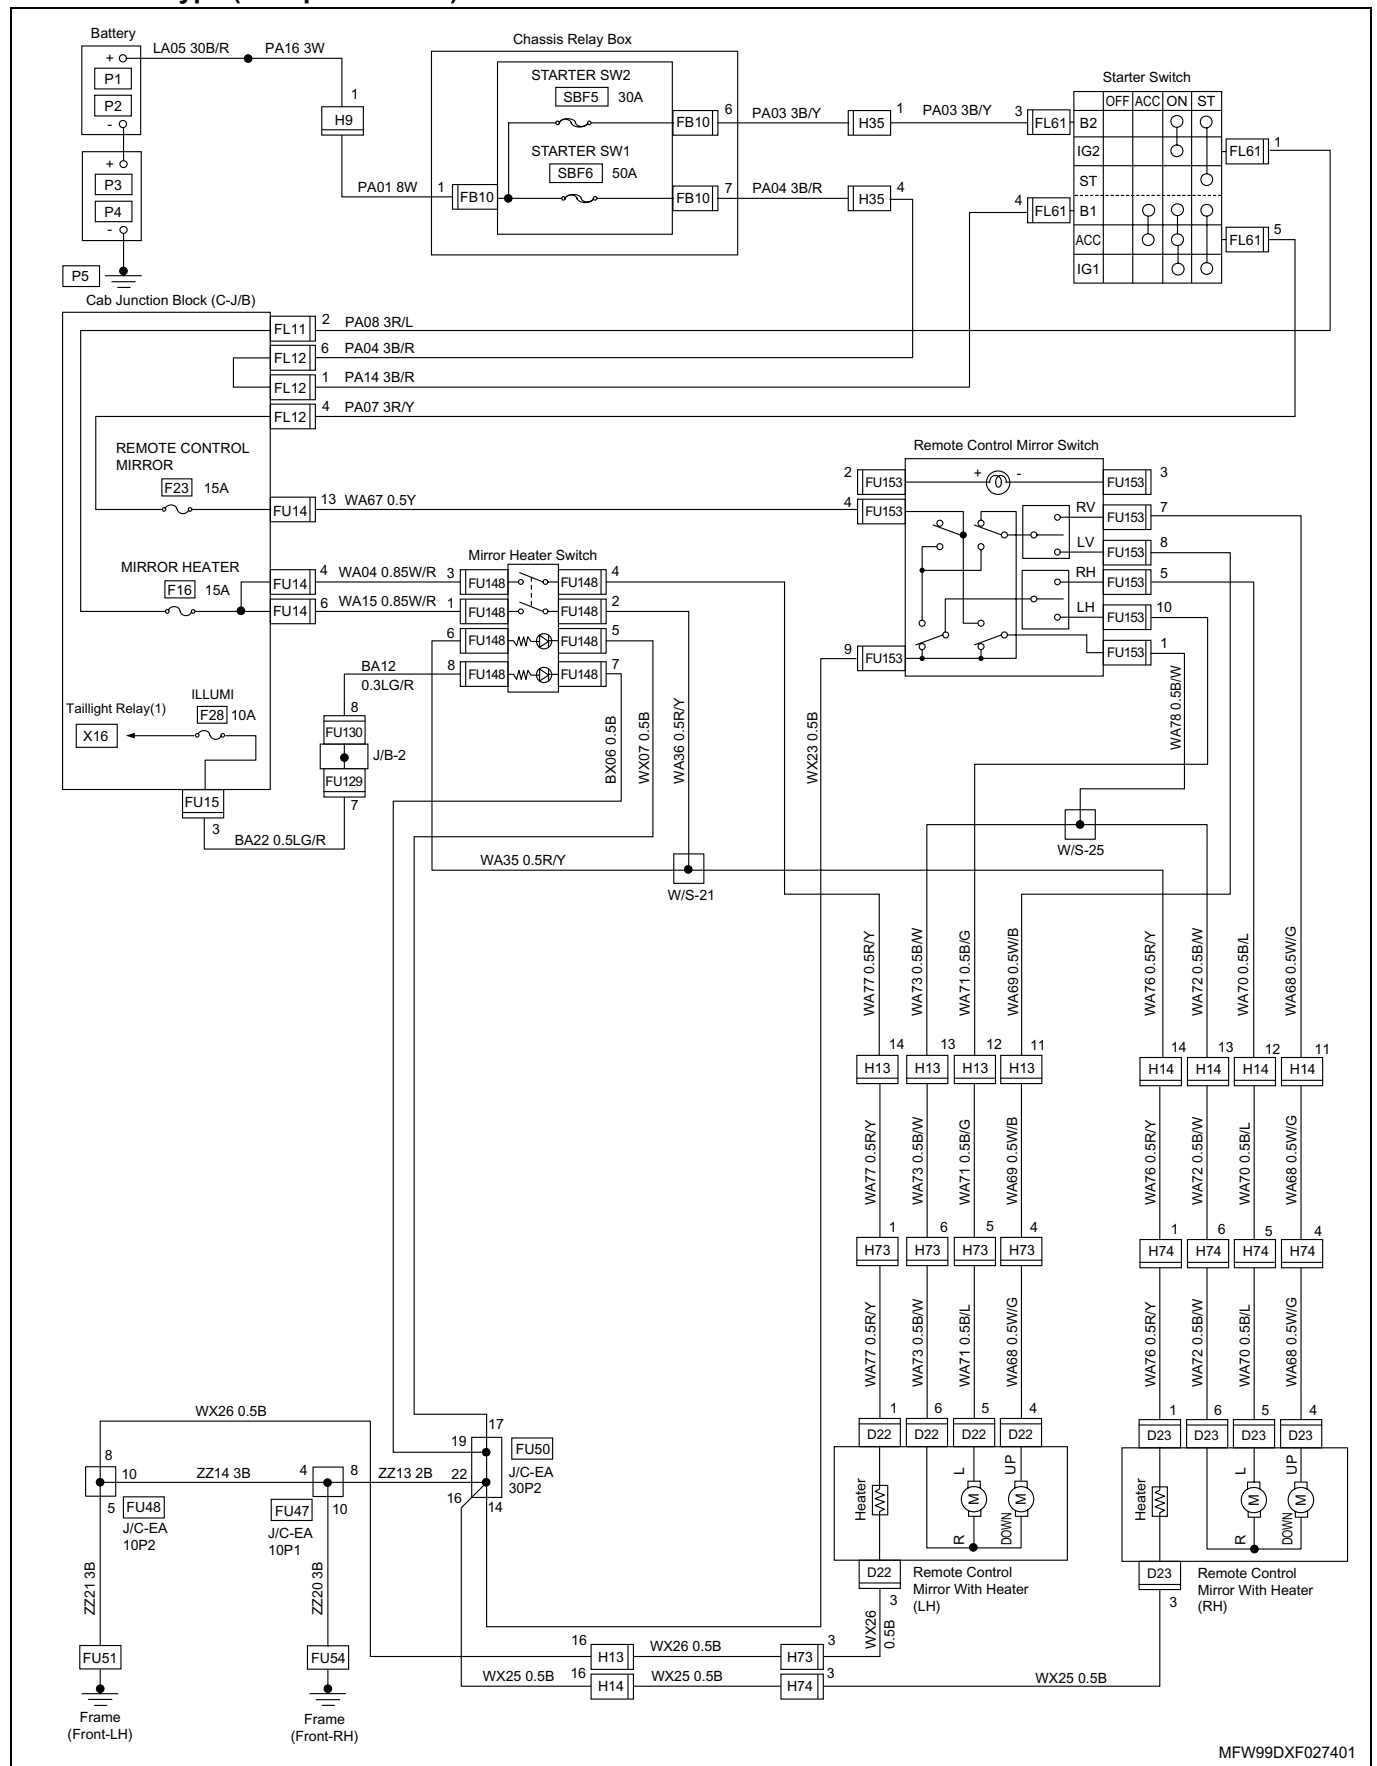

Except Indonesia

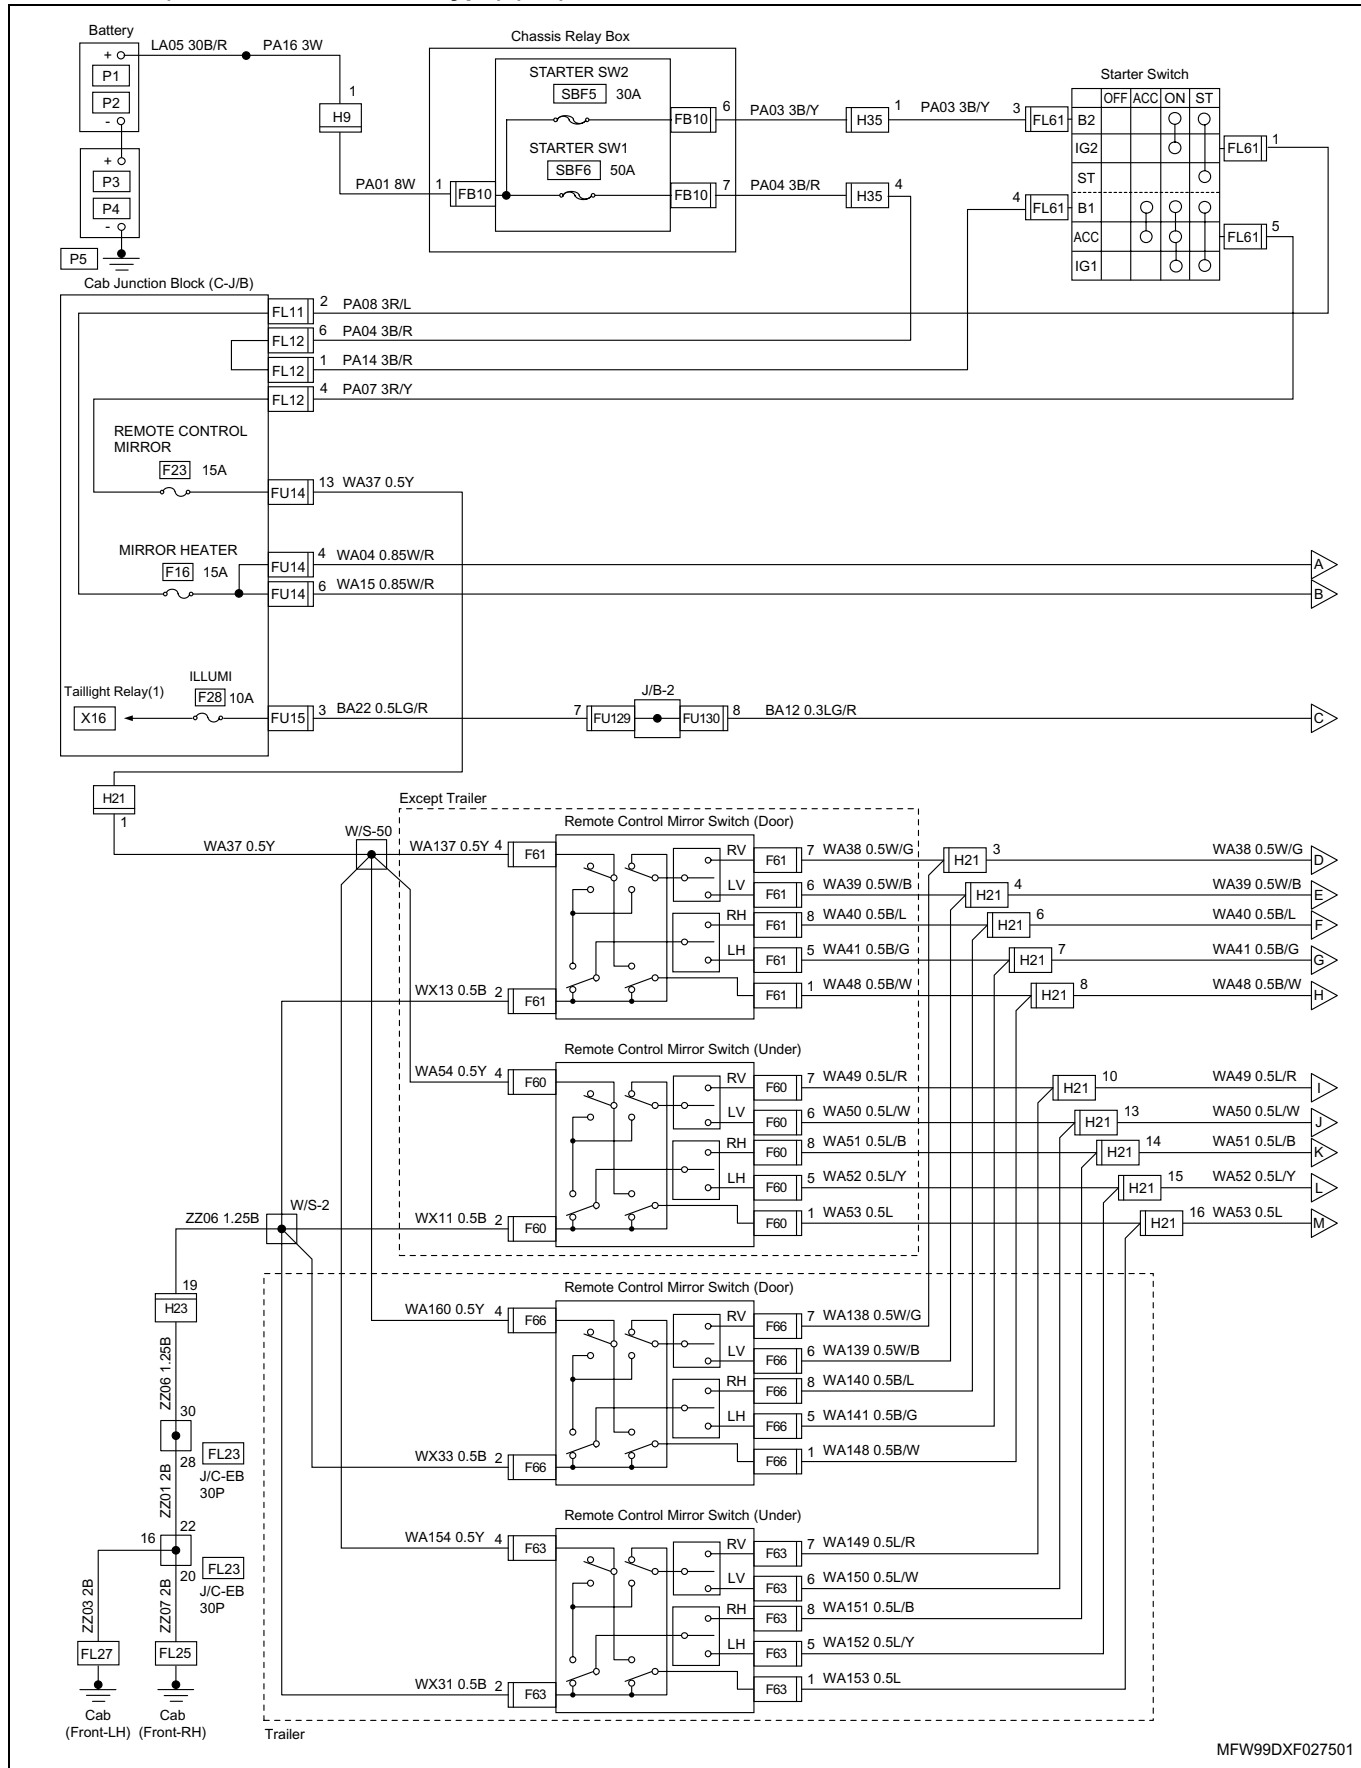Door Mirror (Australia Two Mirror Type) (1/2)







Dome Light/Fluorescent Light

Circuit Diagram

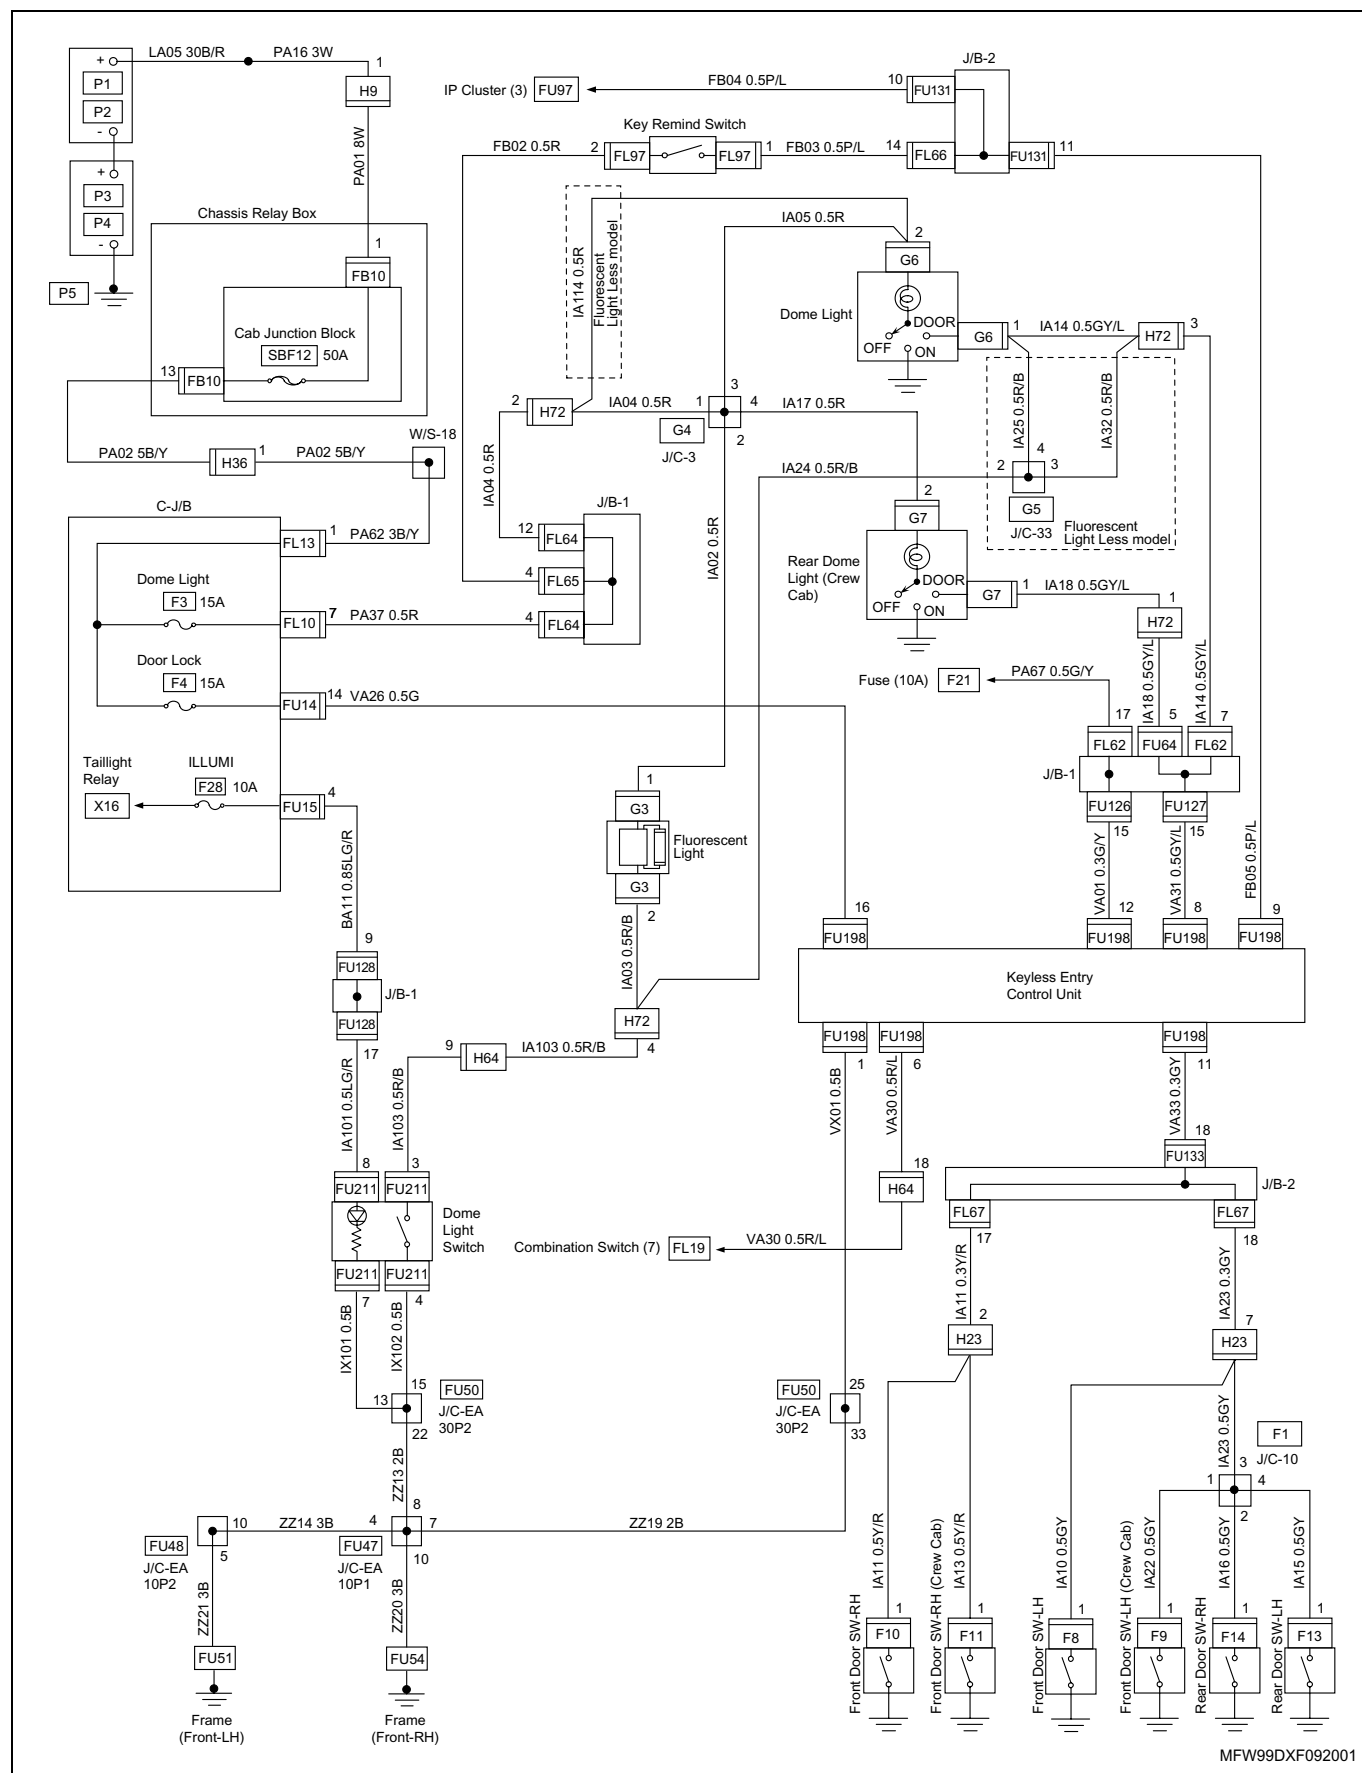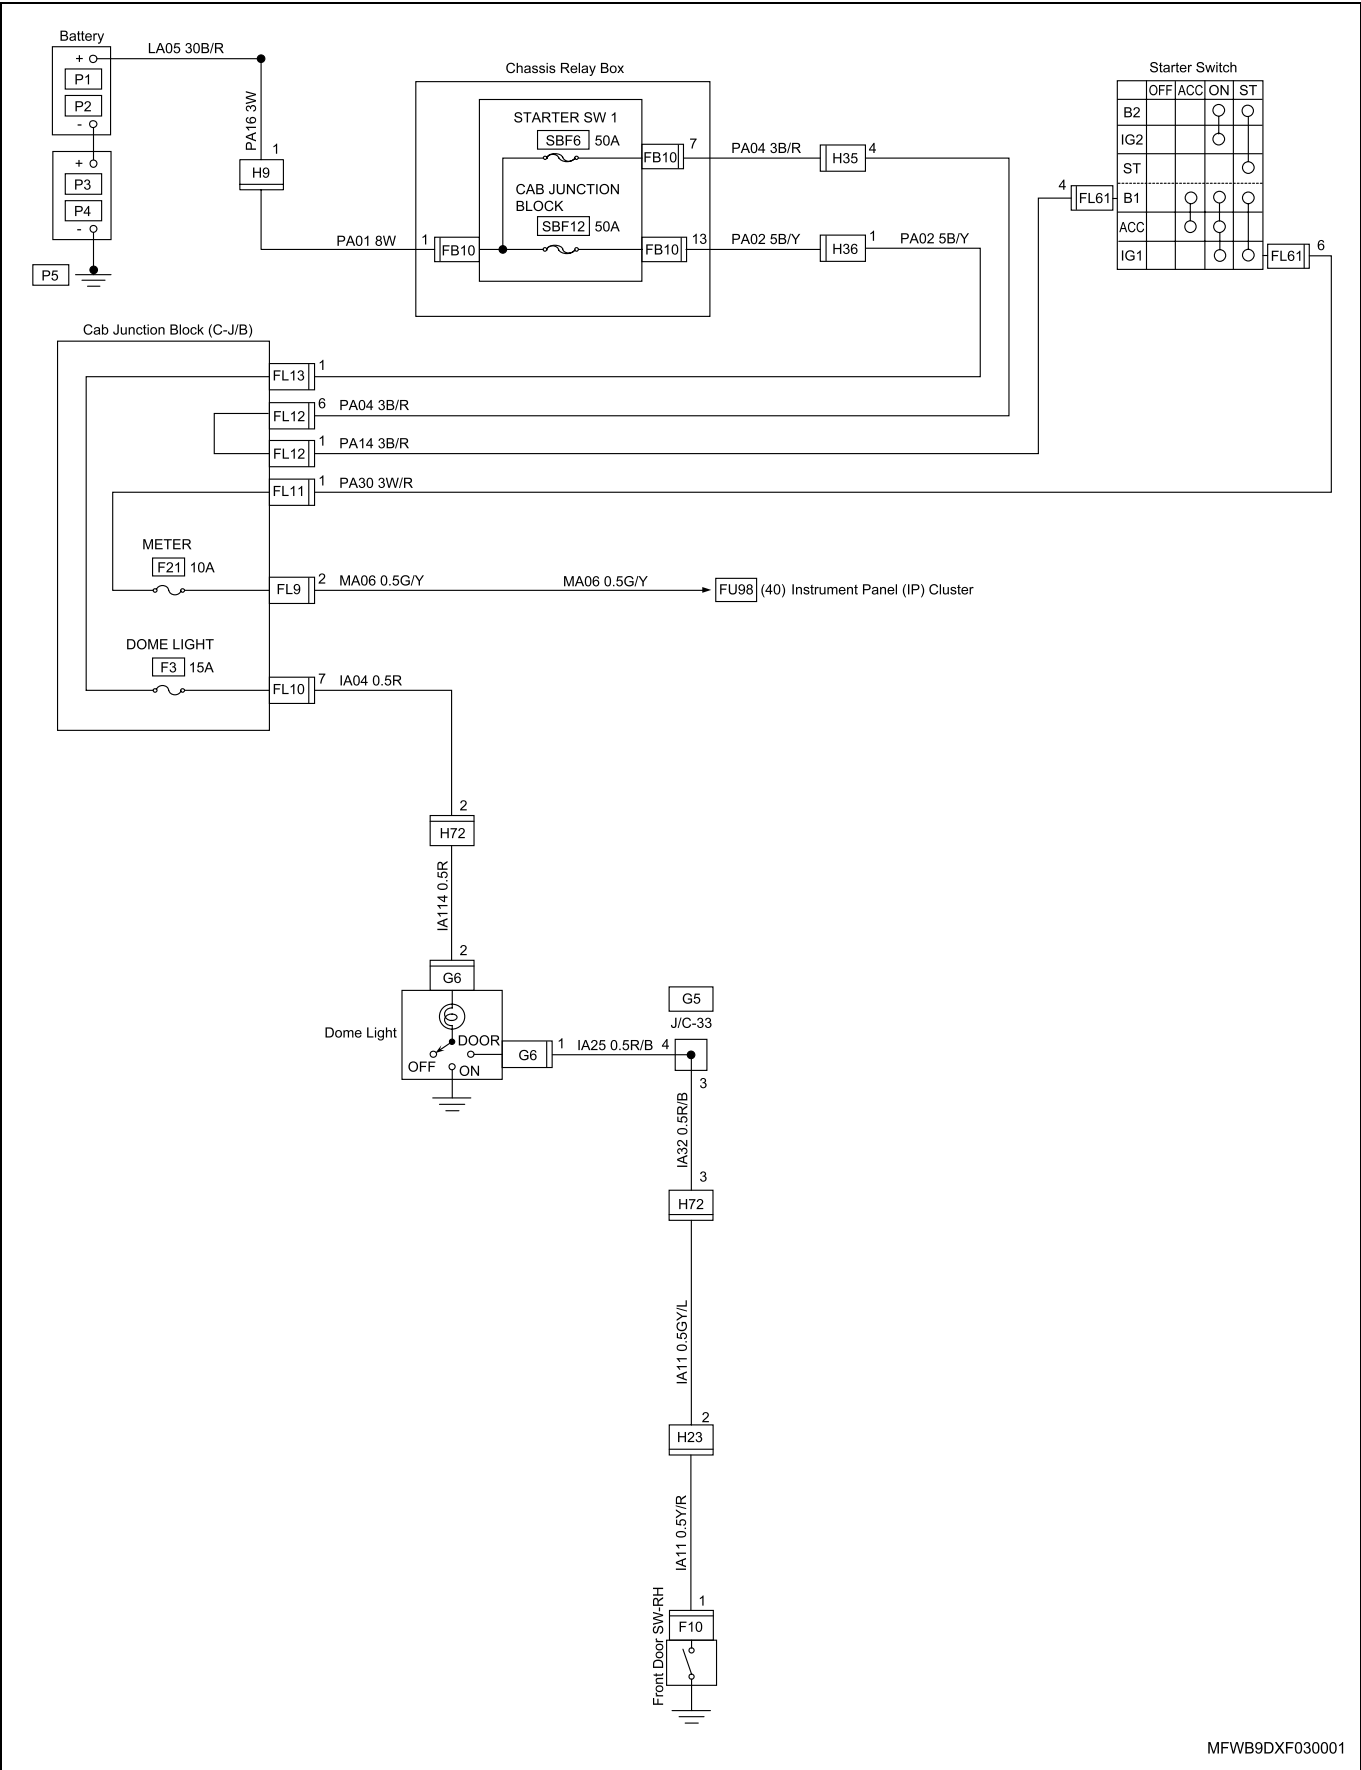Except Indonesia







Roof-Mounted Clearance Light

Circuit Diagram

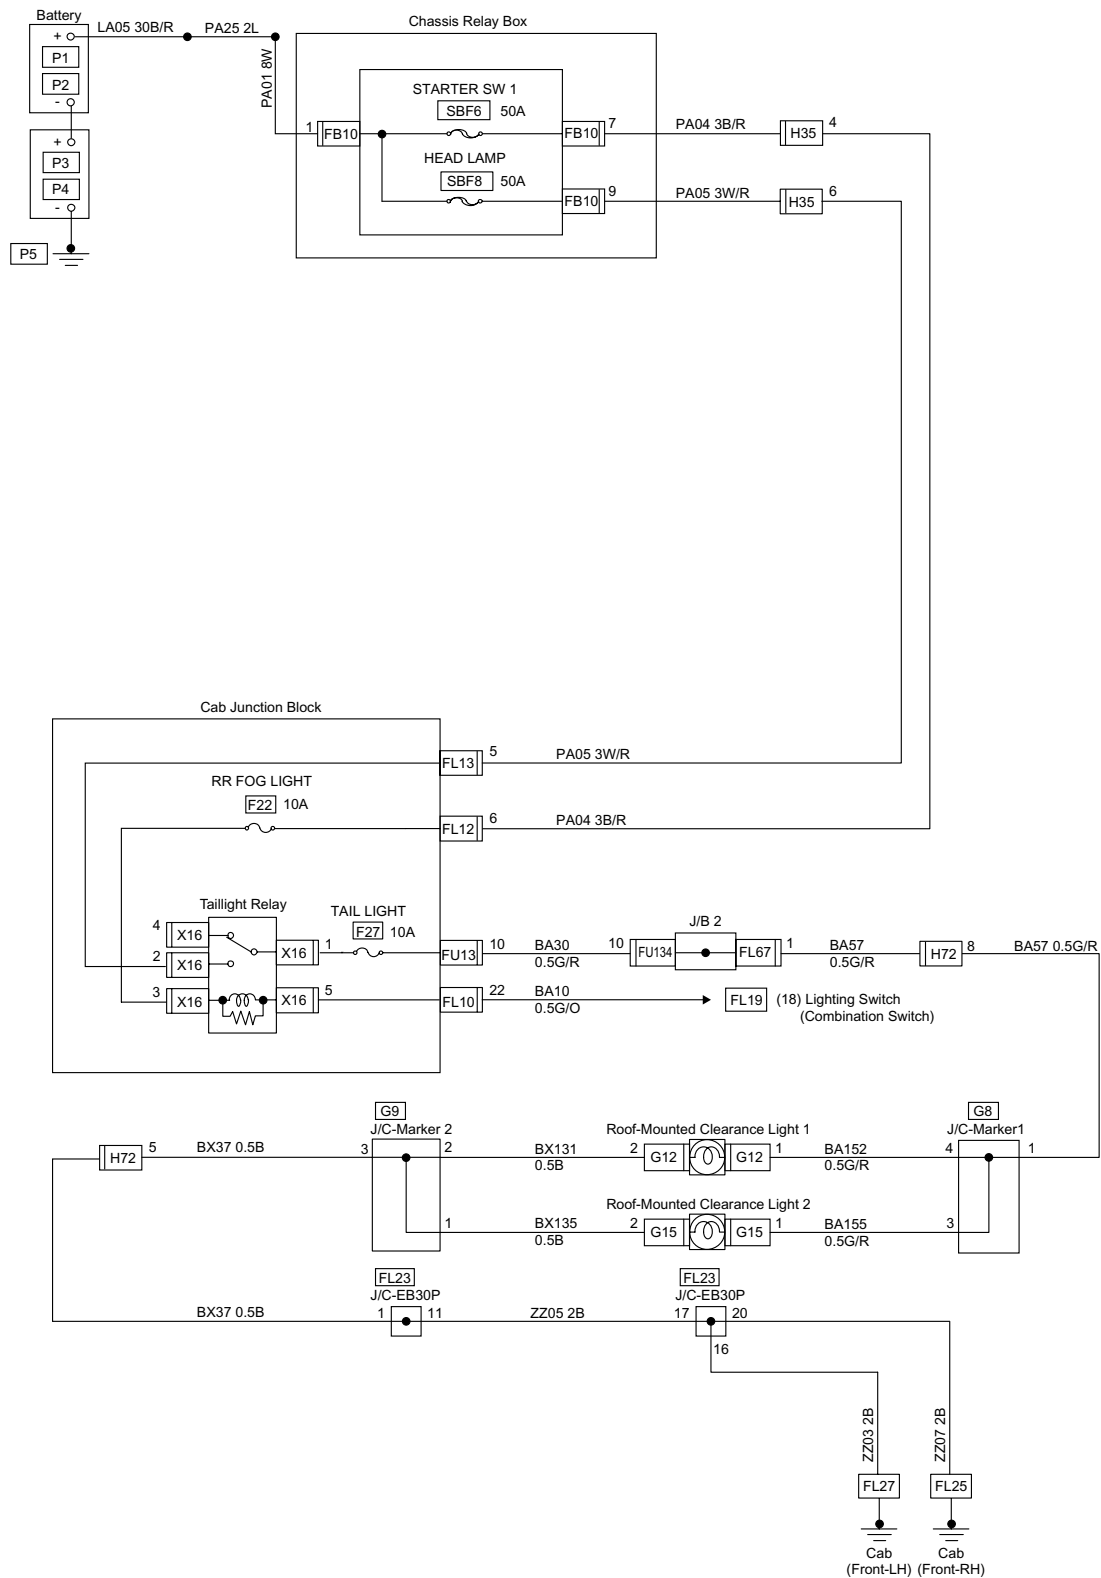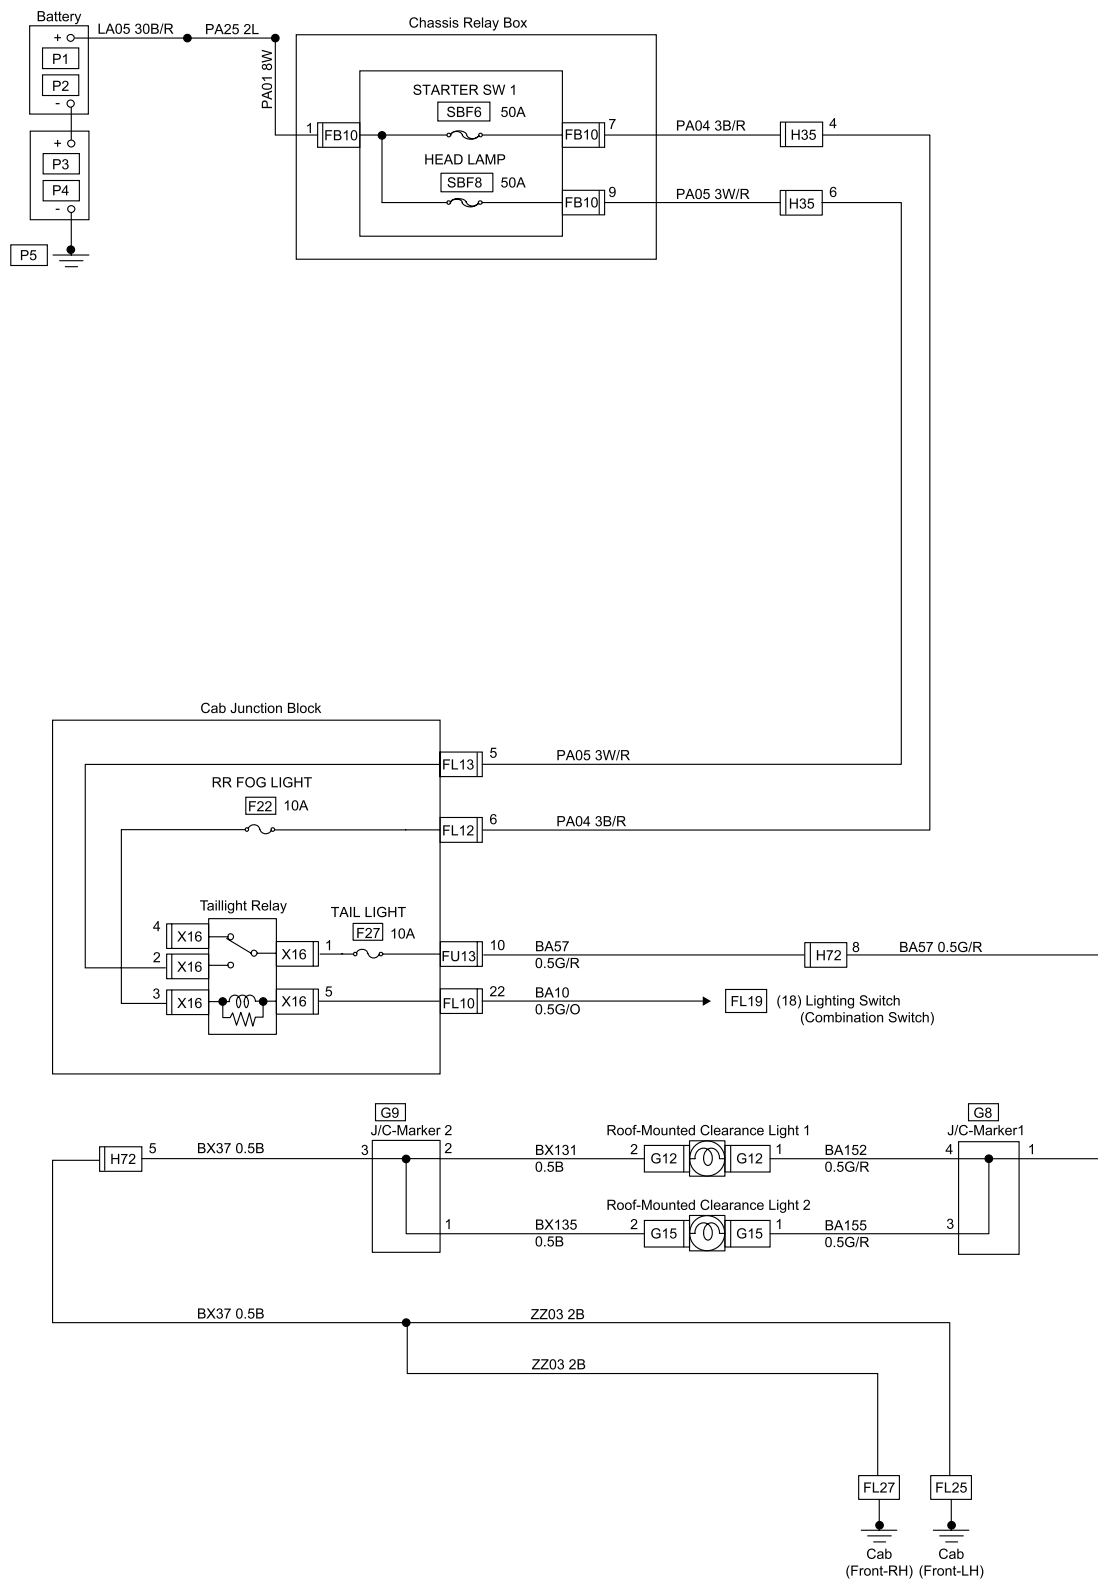Except Indonesia







Audio

Circuit Diagram

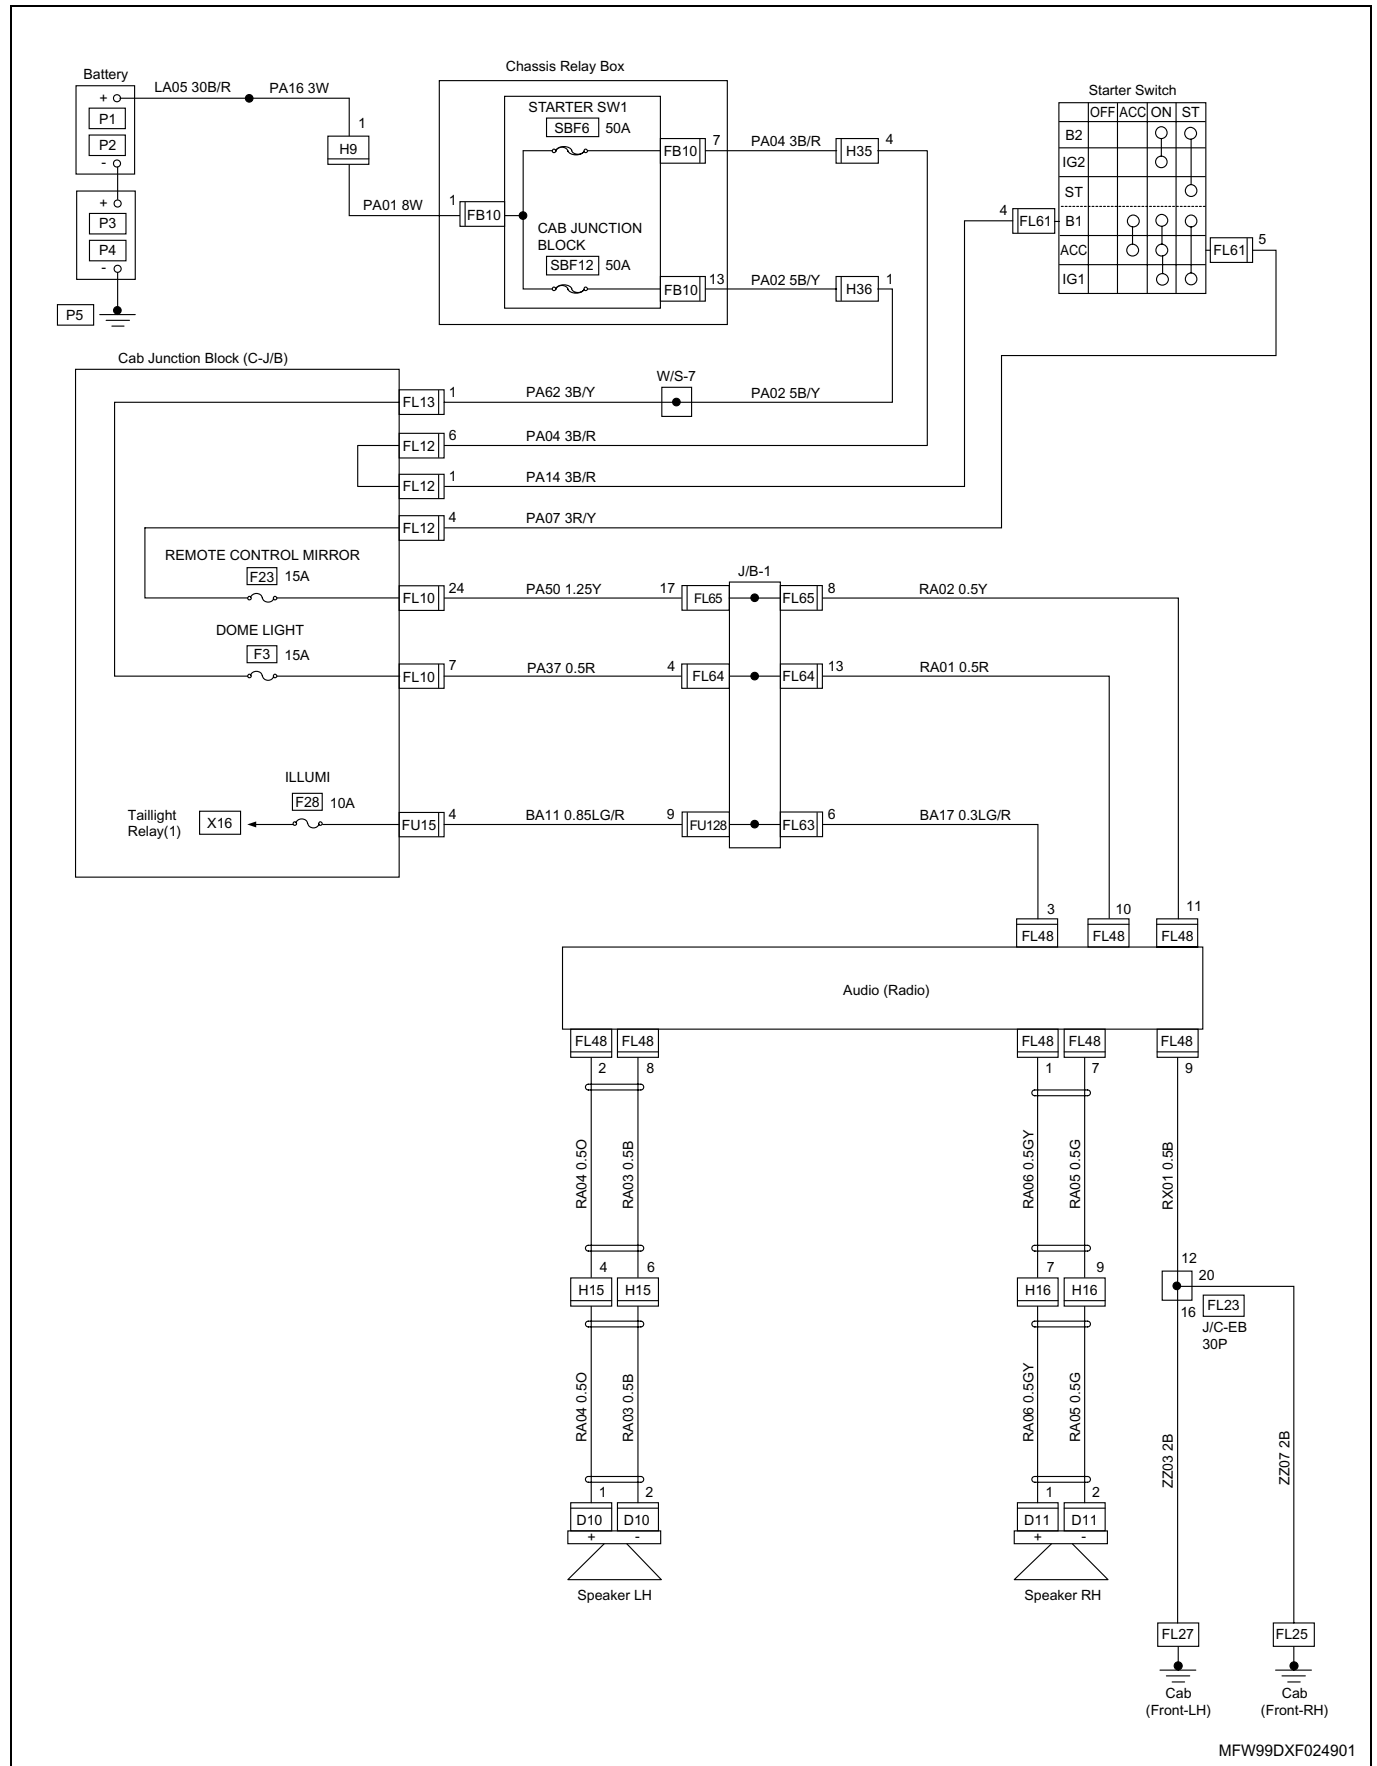Except Indonesia




Indonesia

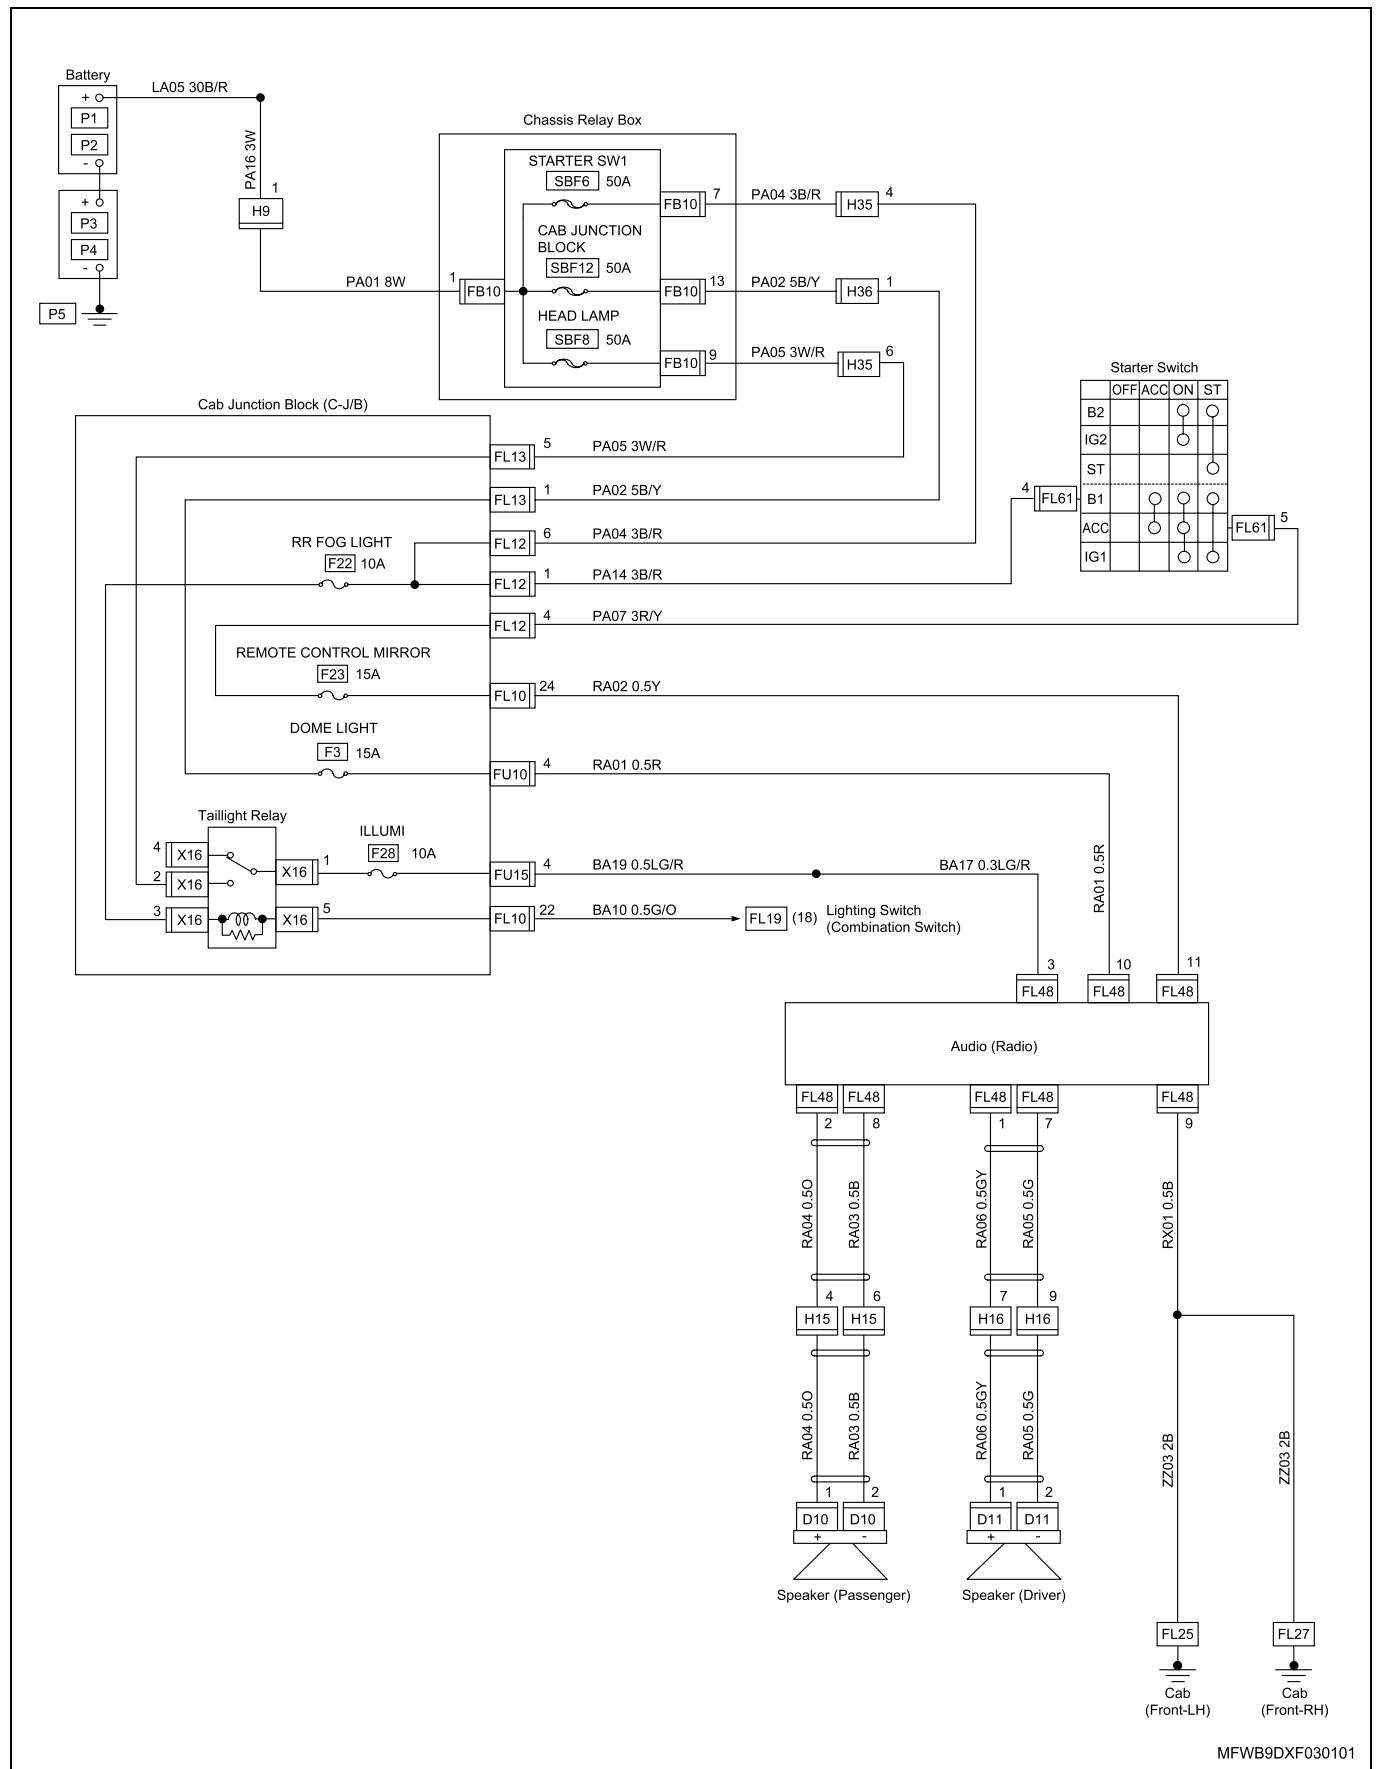


Cigarette Lighter/Seat Belt

Circuit Diagram

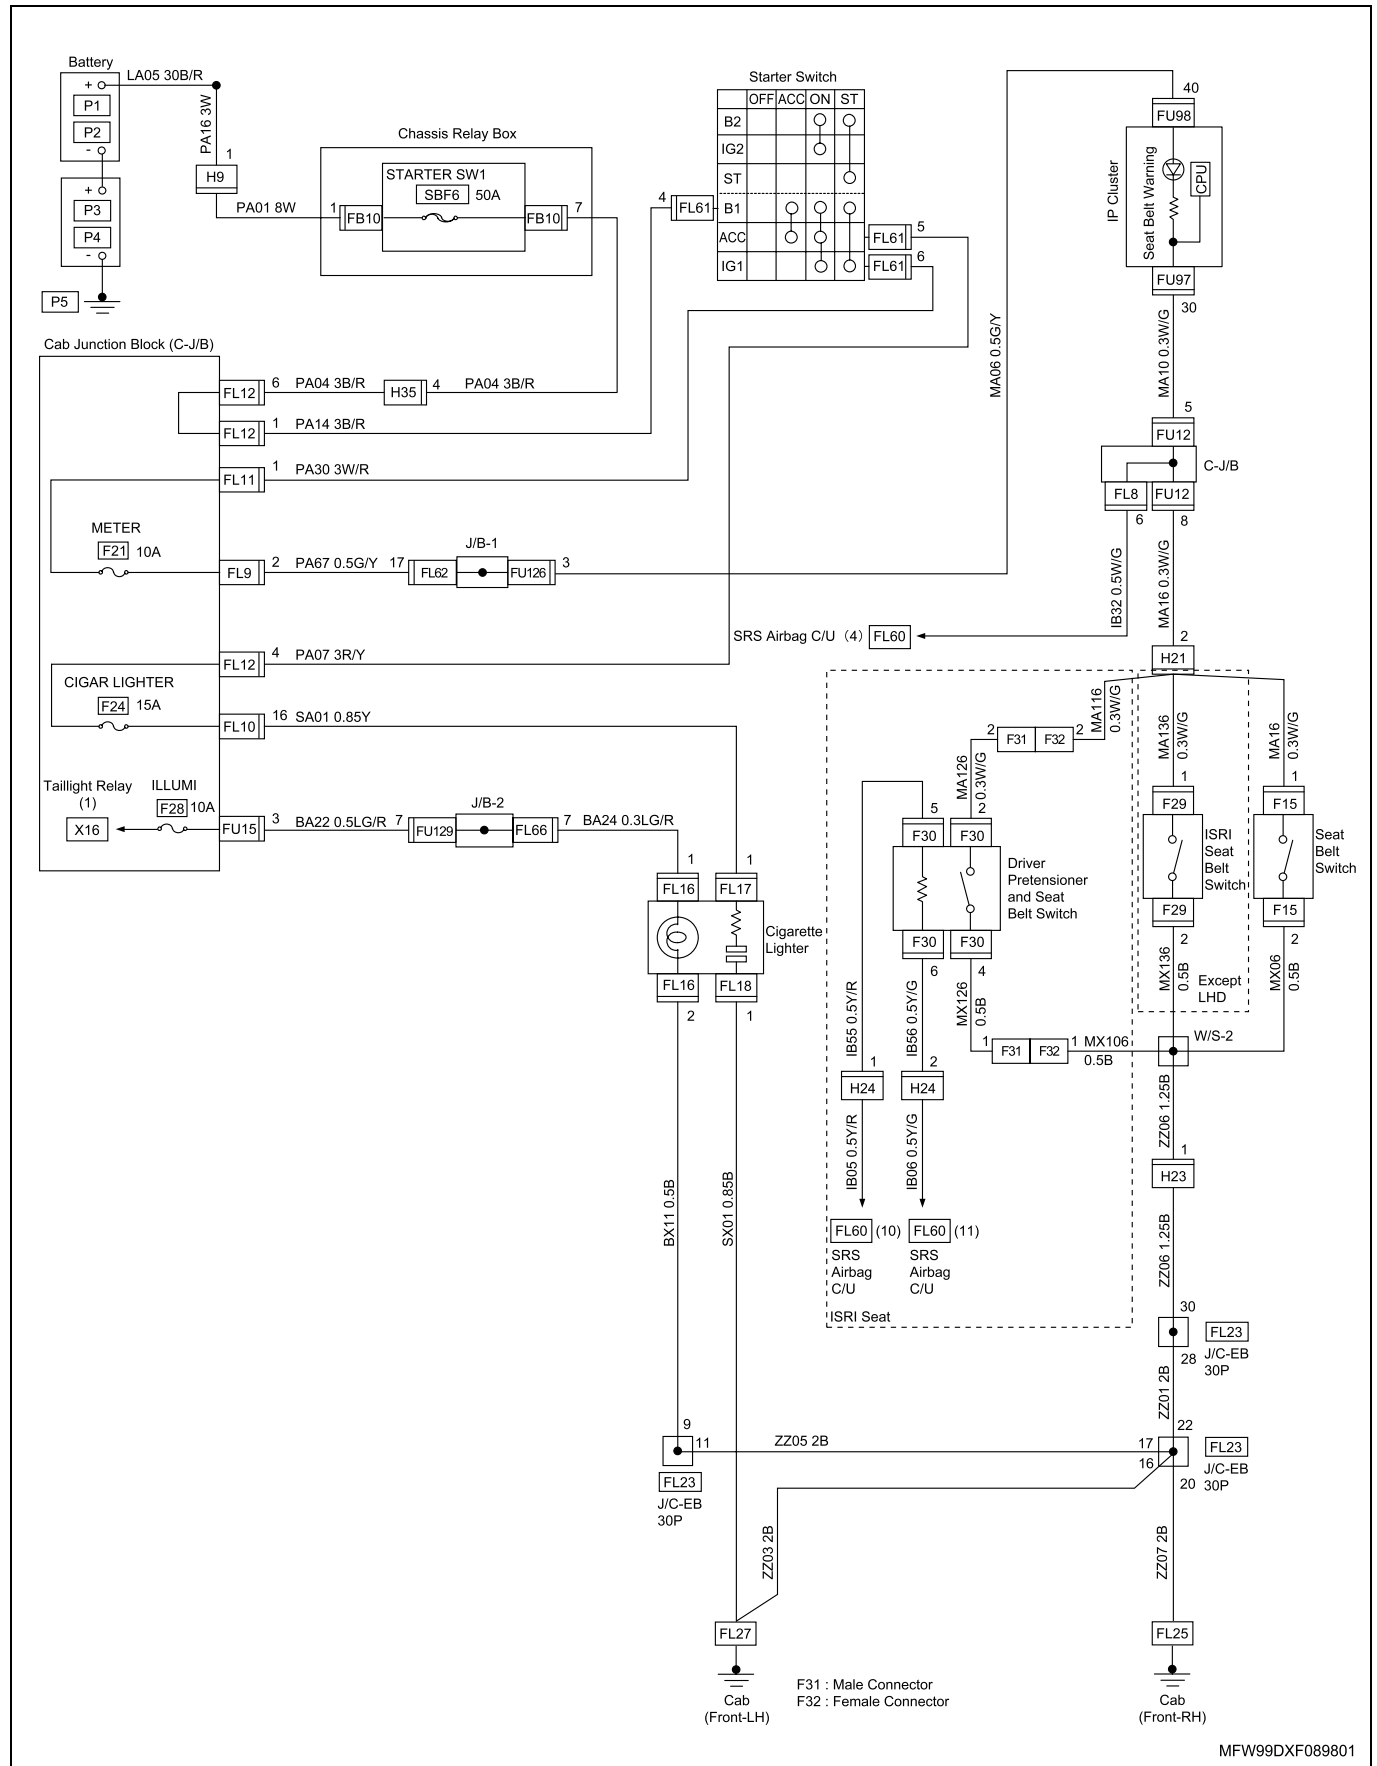Except Indonesia



Indonesia

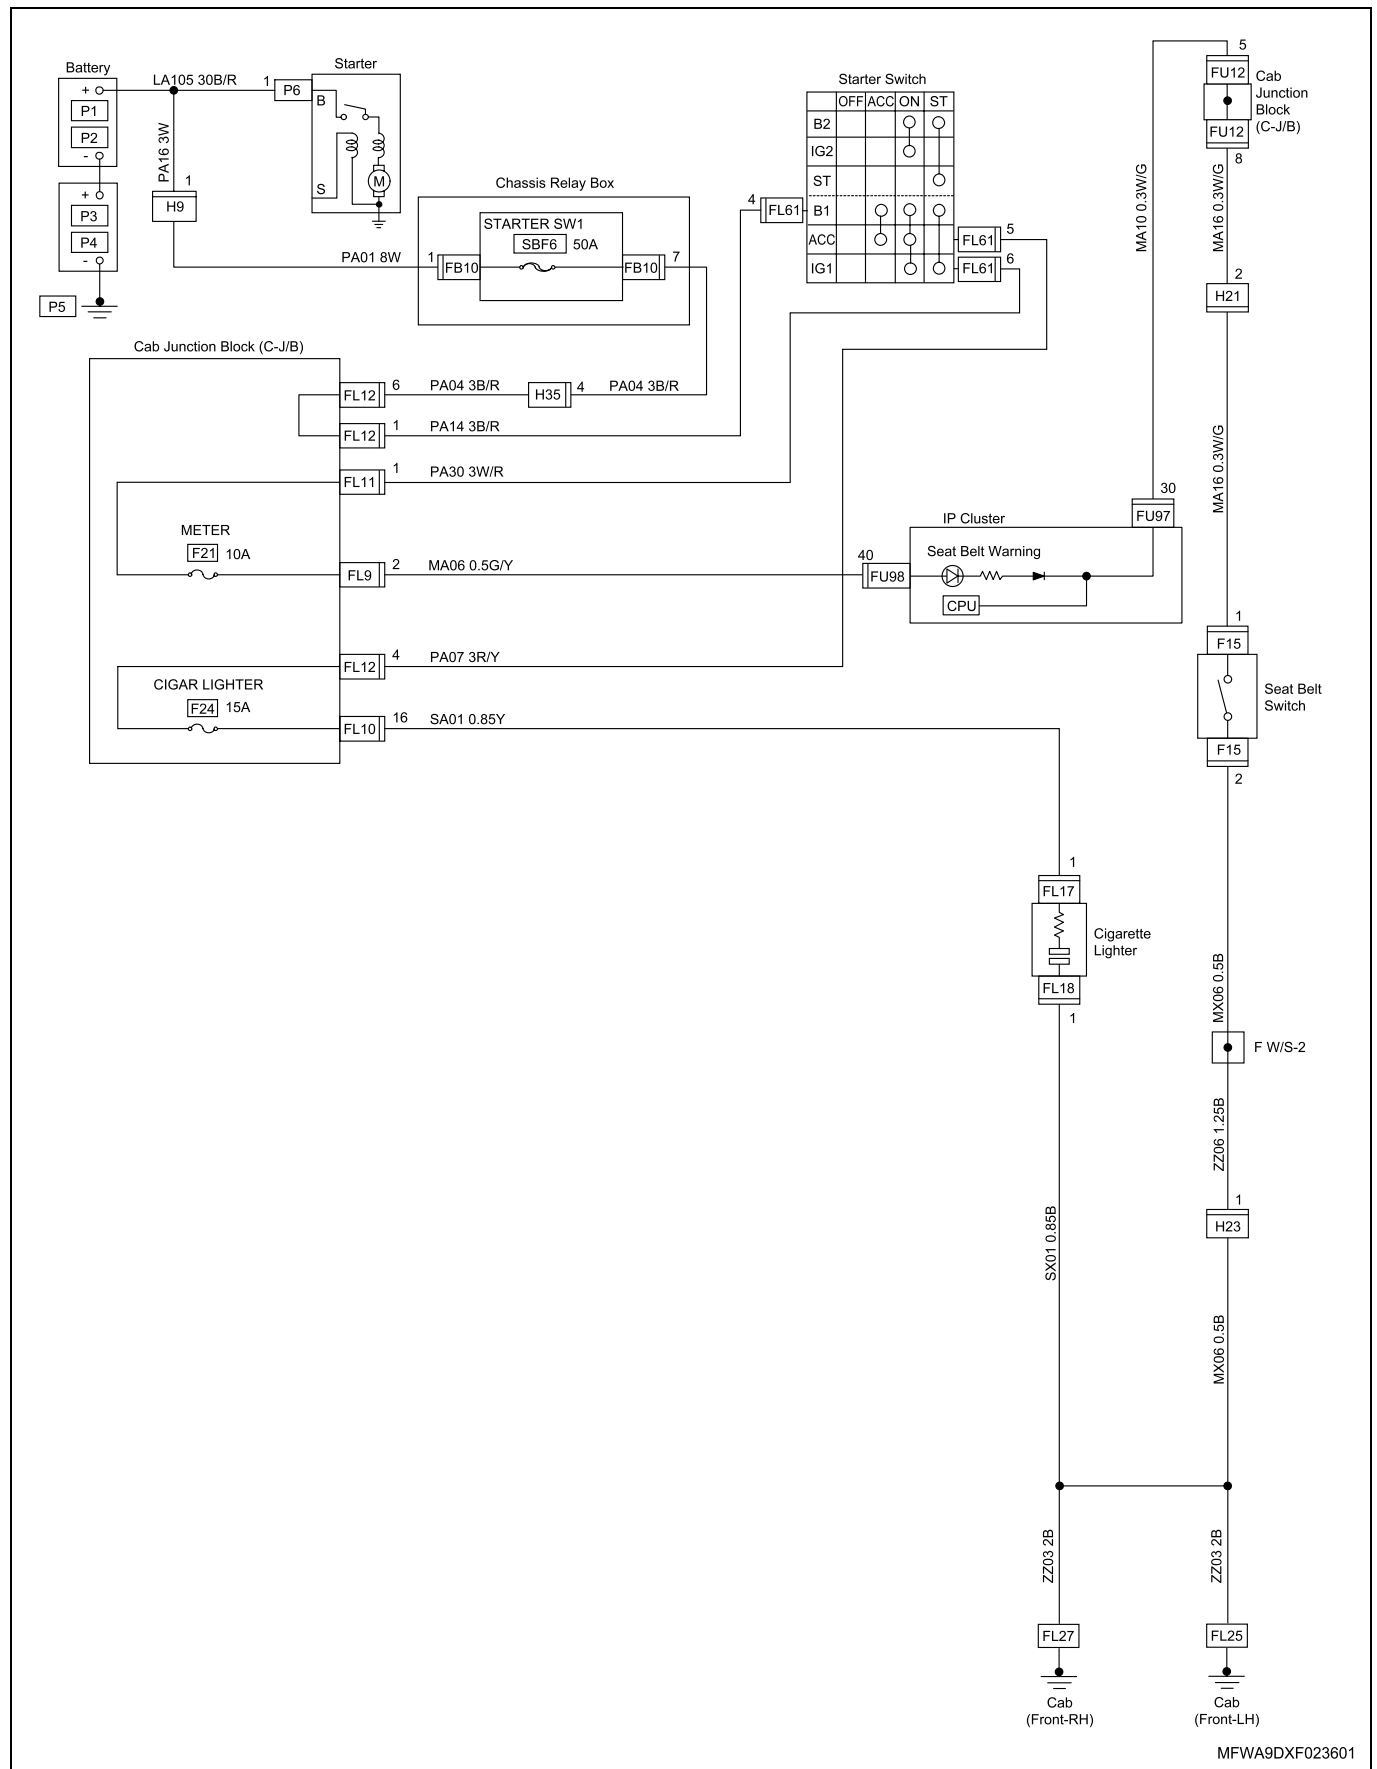



Heater and Air Conditioning (Manual)

Circuit Diagram


Except Indonesia

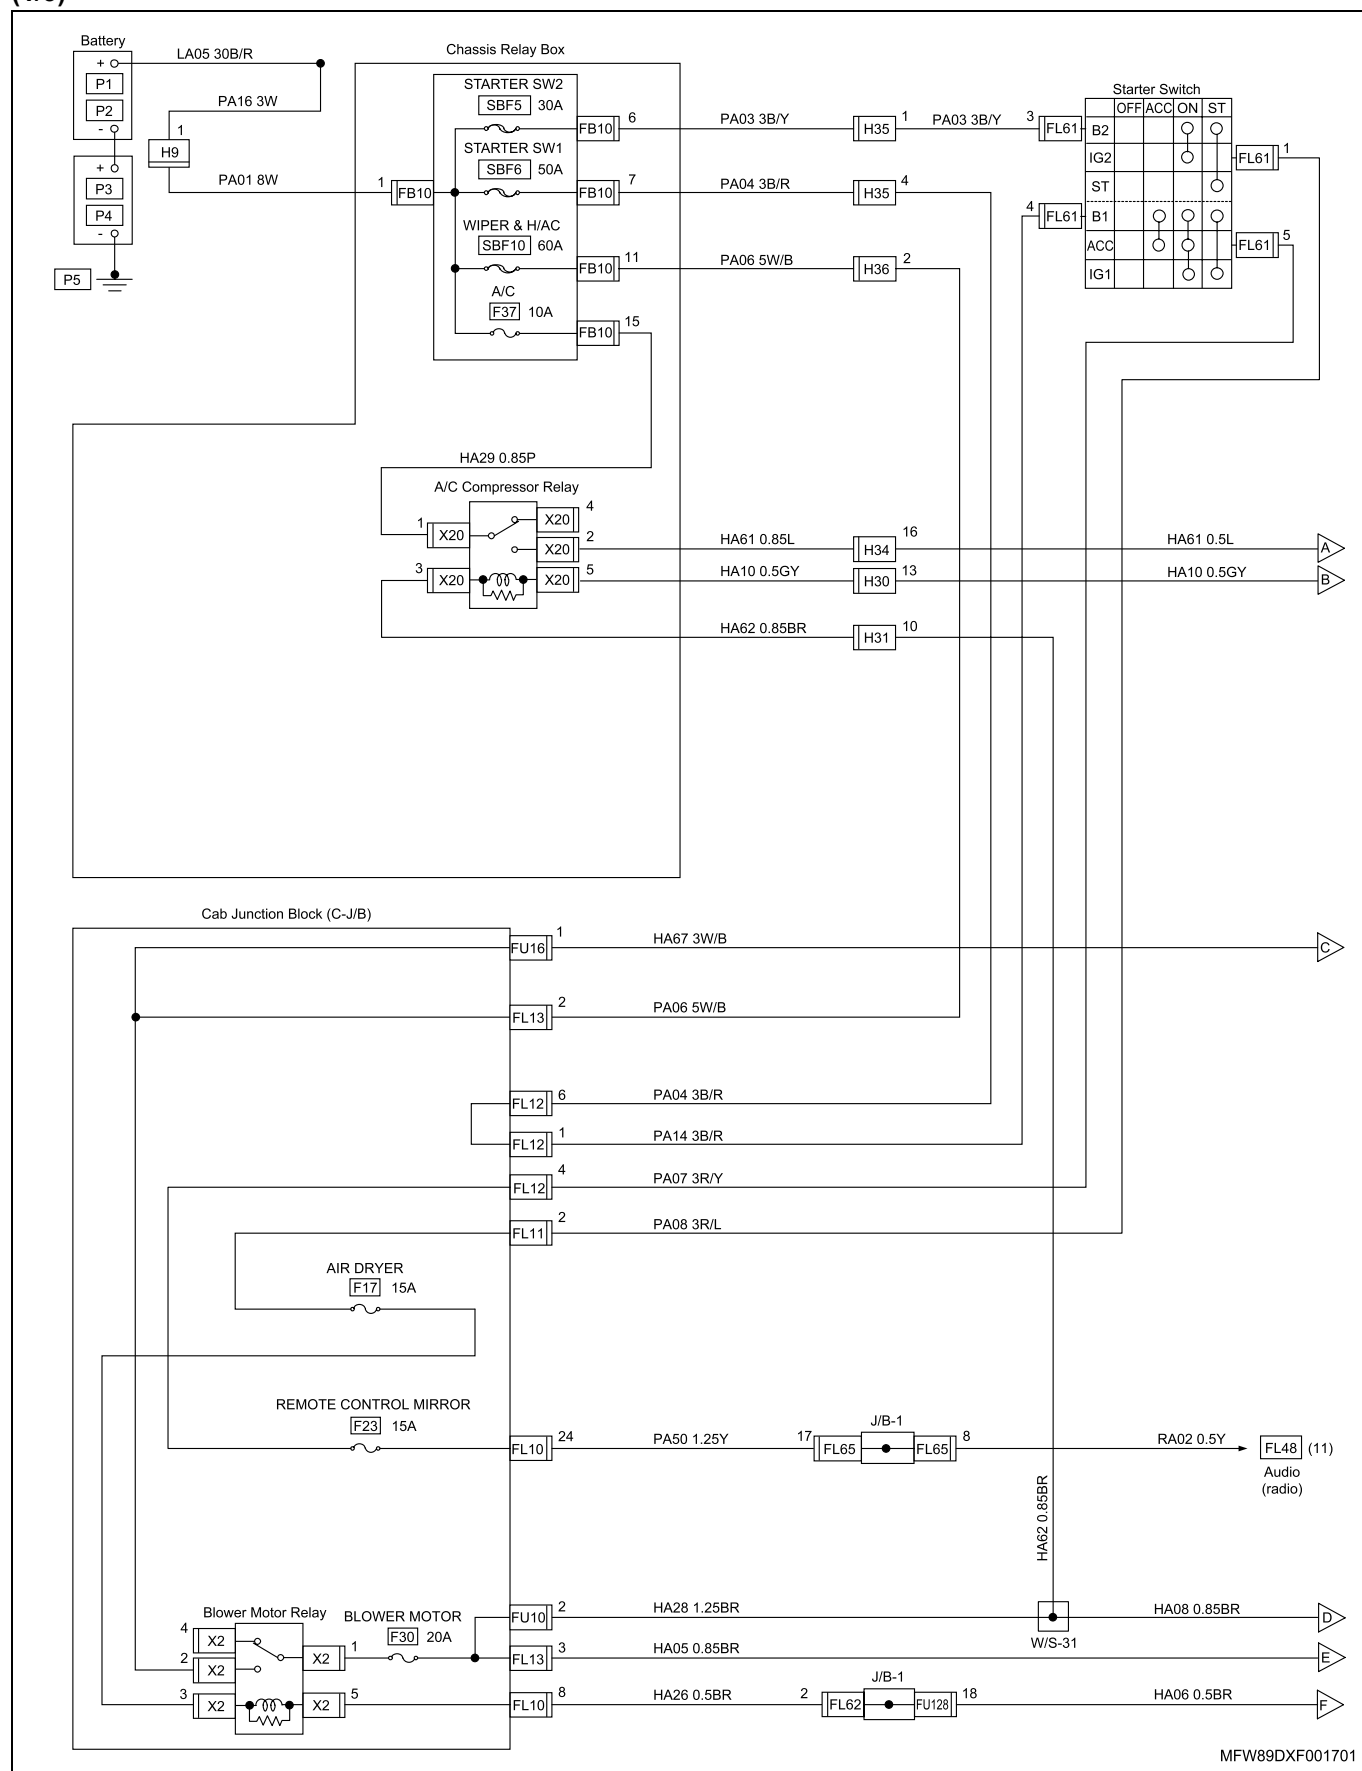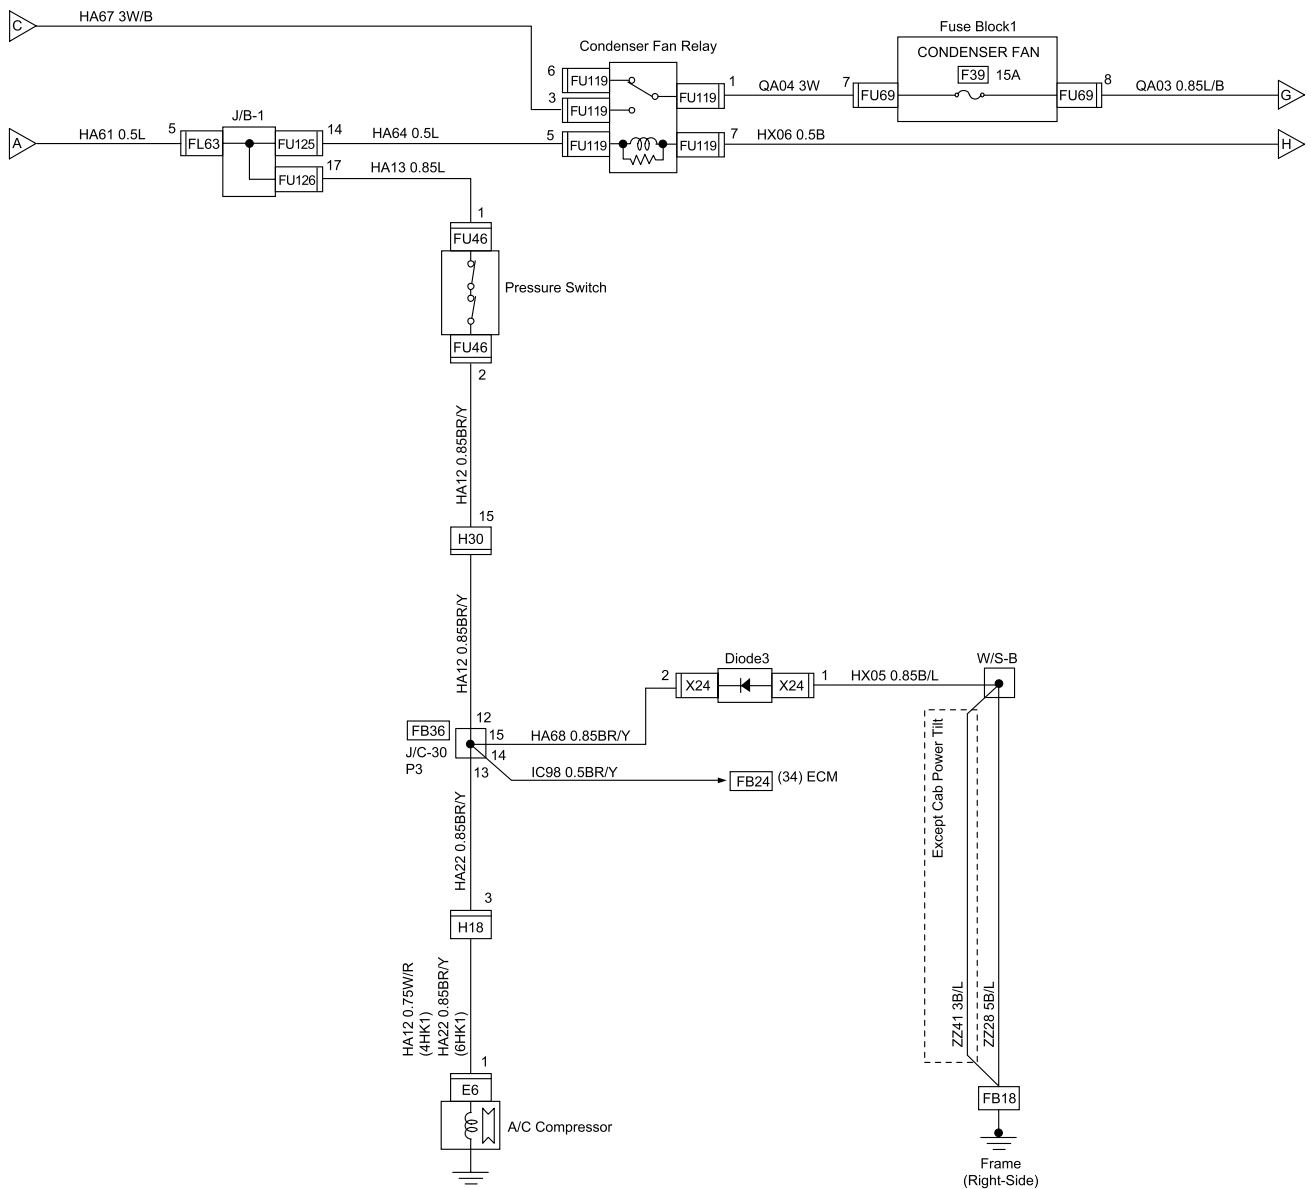(1/3)





(3/3)

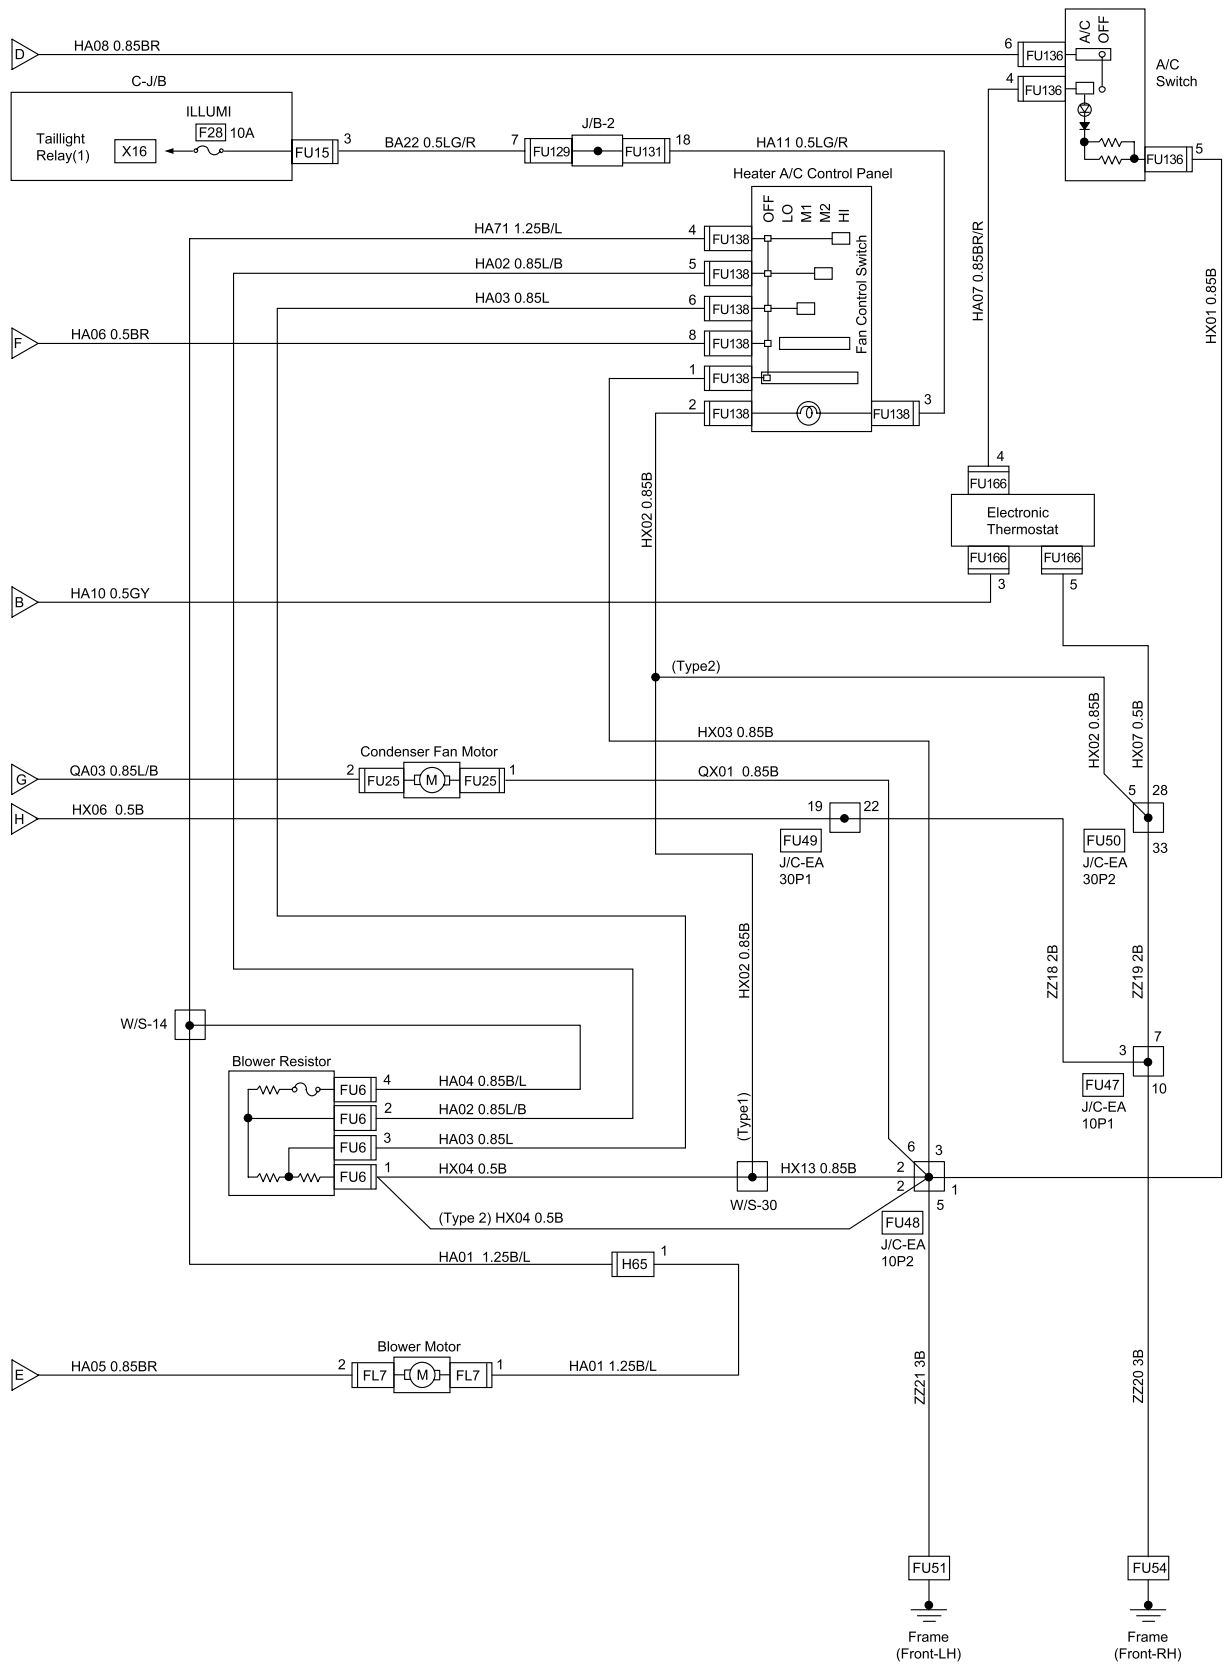


MF99DXF027201


9D-216 Wiring System (RHD model)

Indonesia

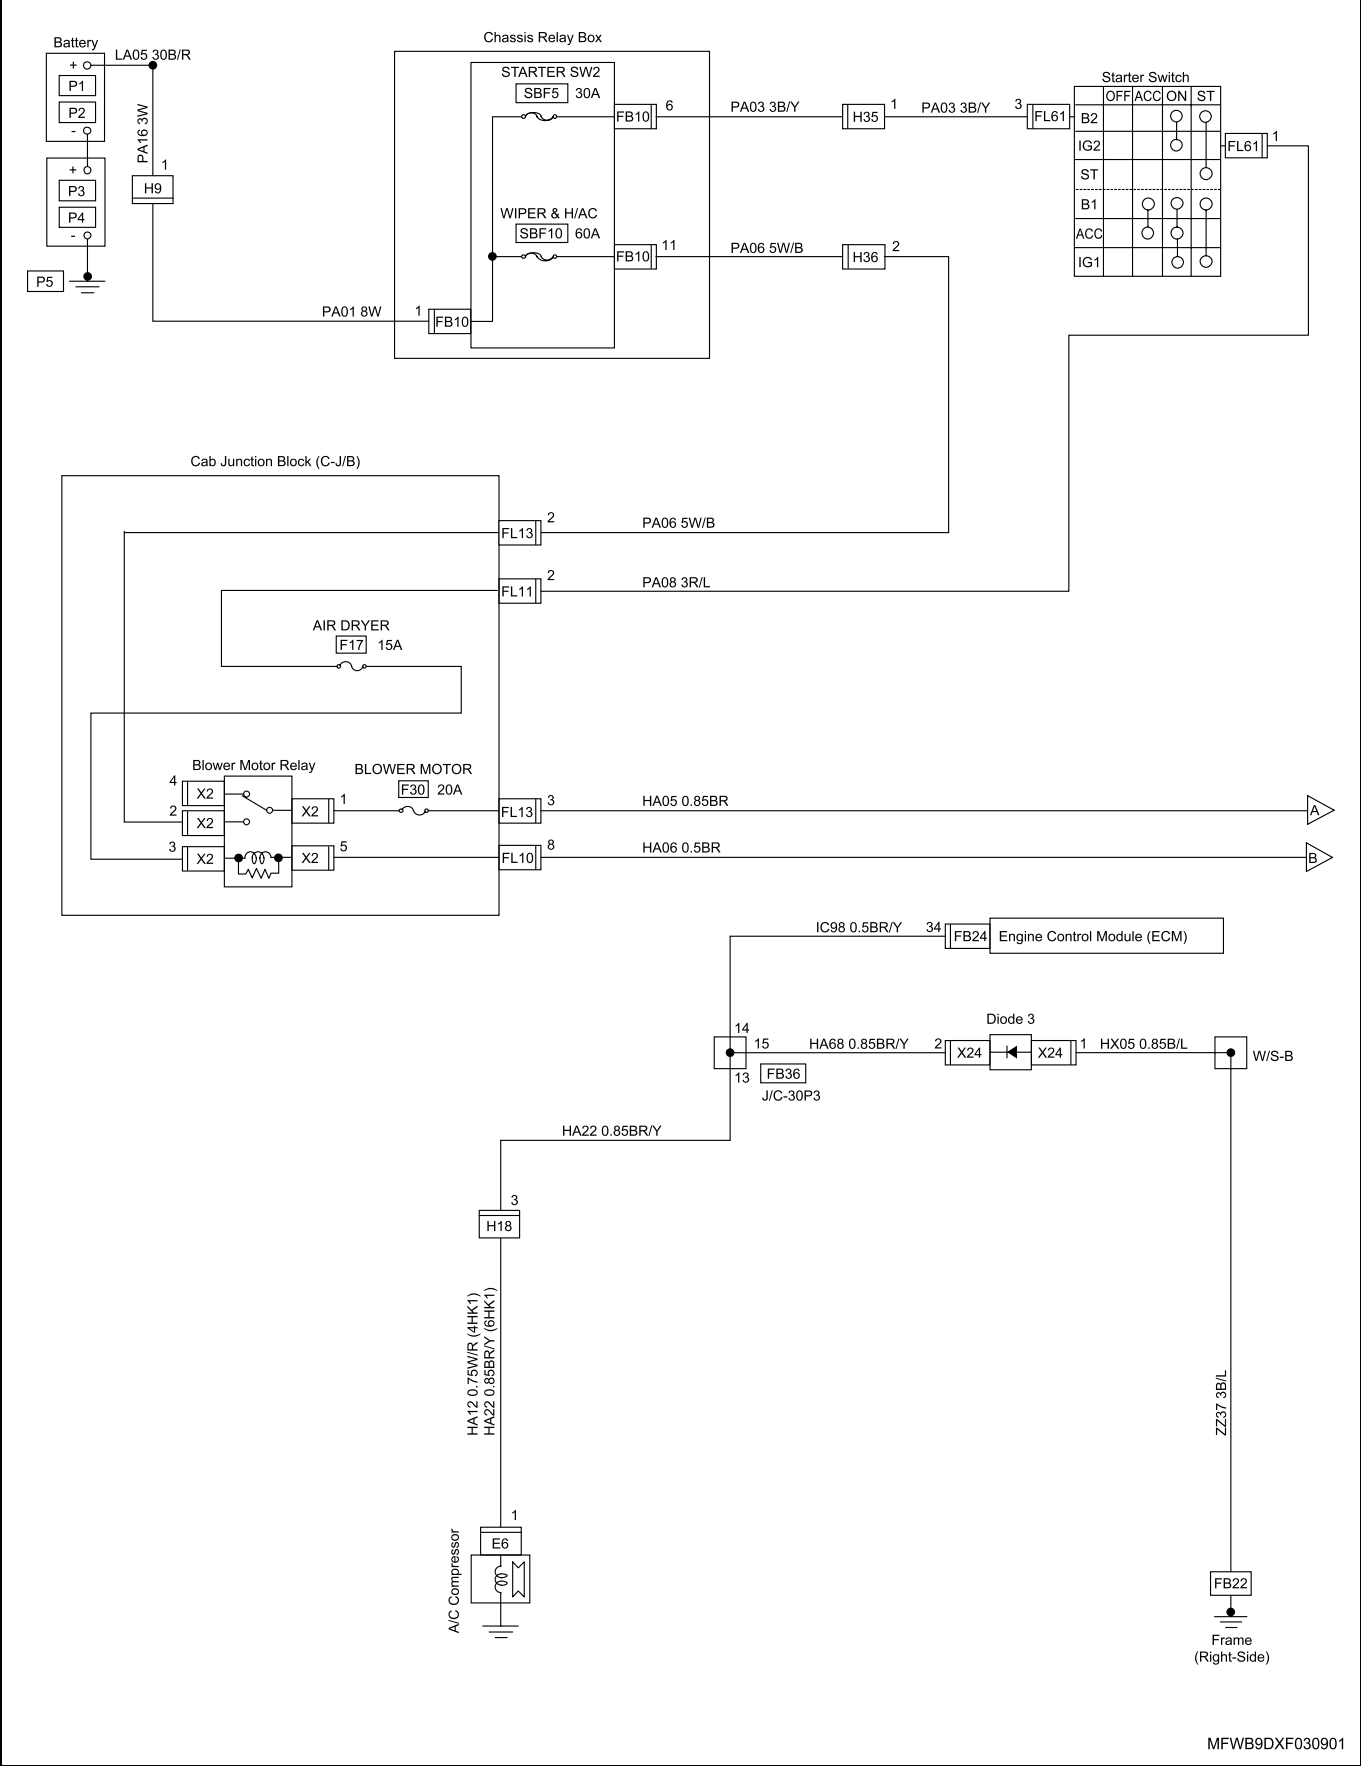(1/2)



(2/2)

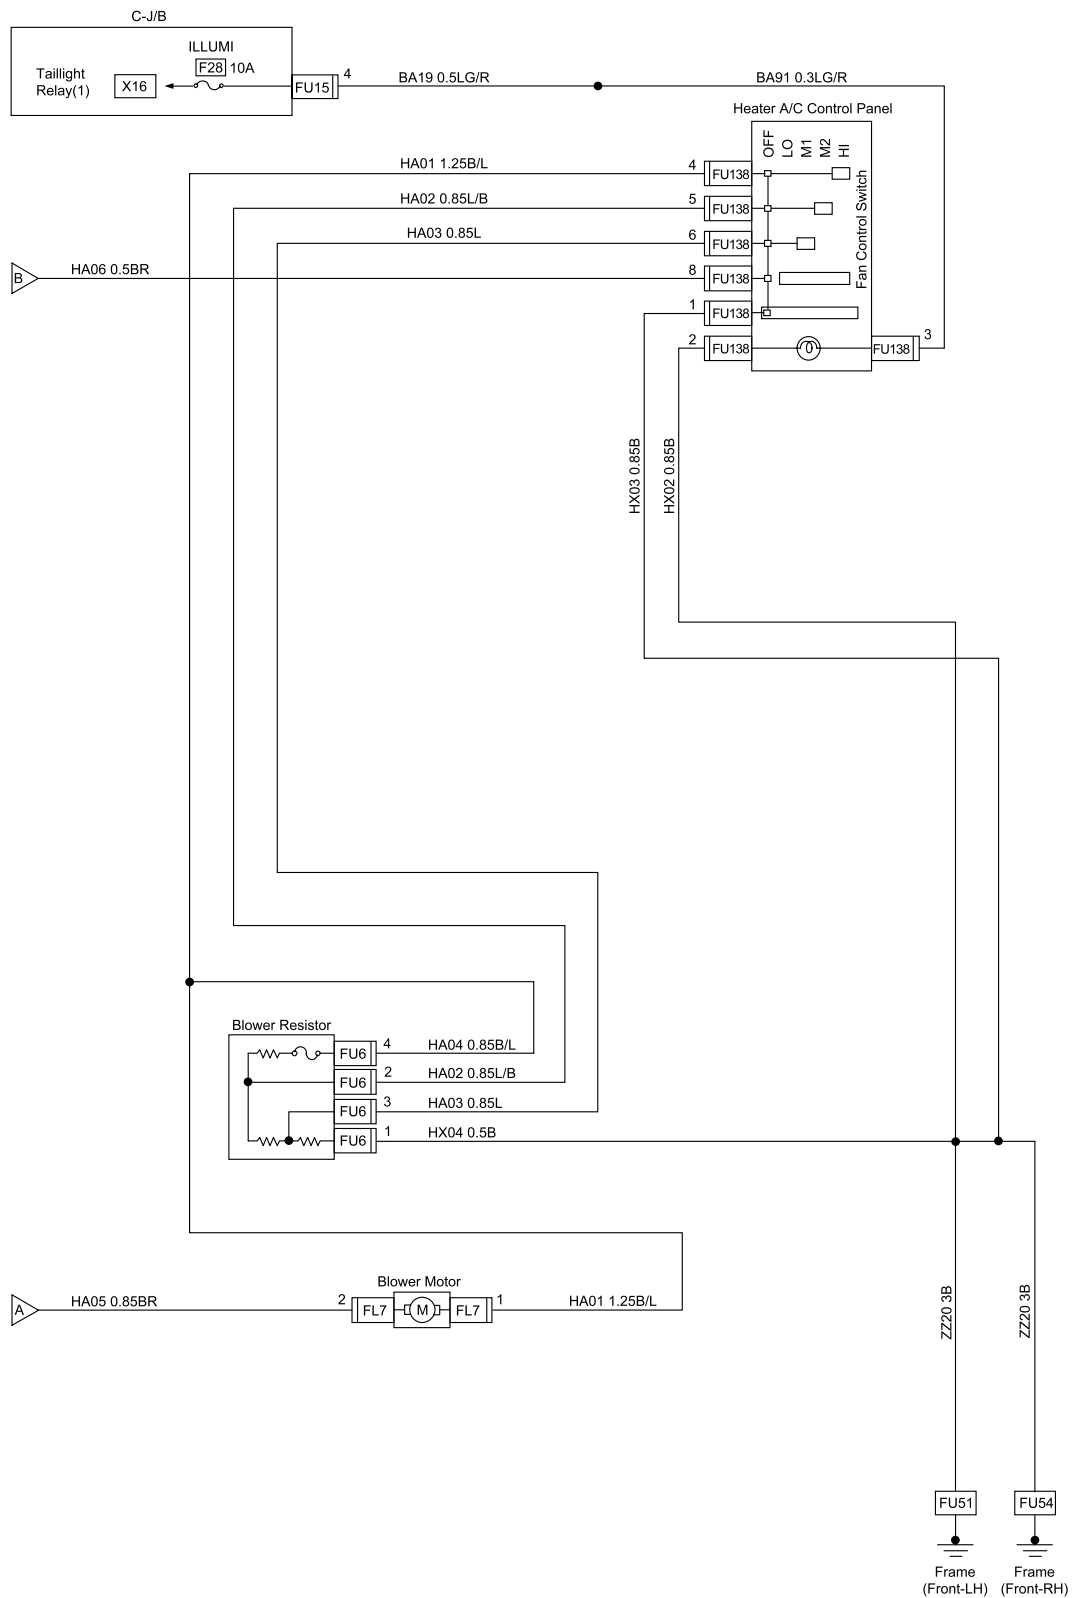


Heater and Air Conditioning (Auto)


Circuit Diagram

Except Indonesia

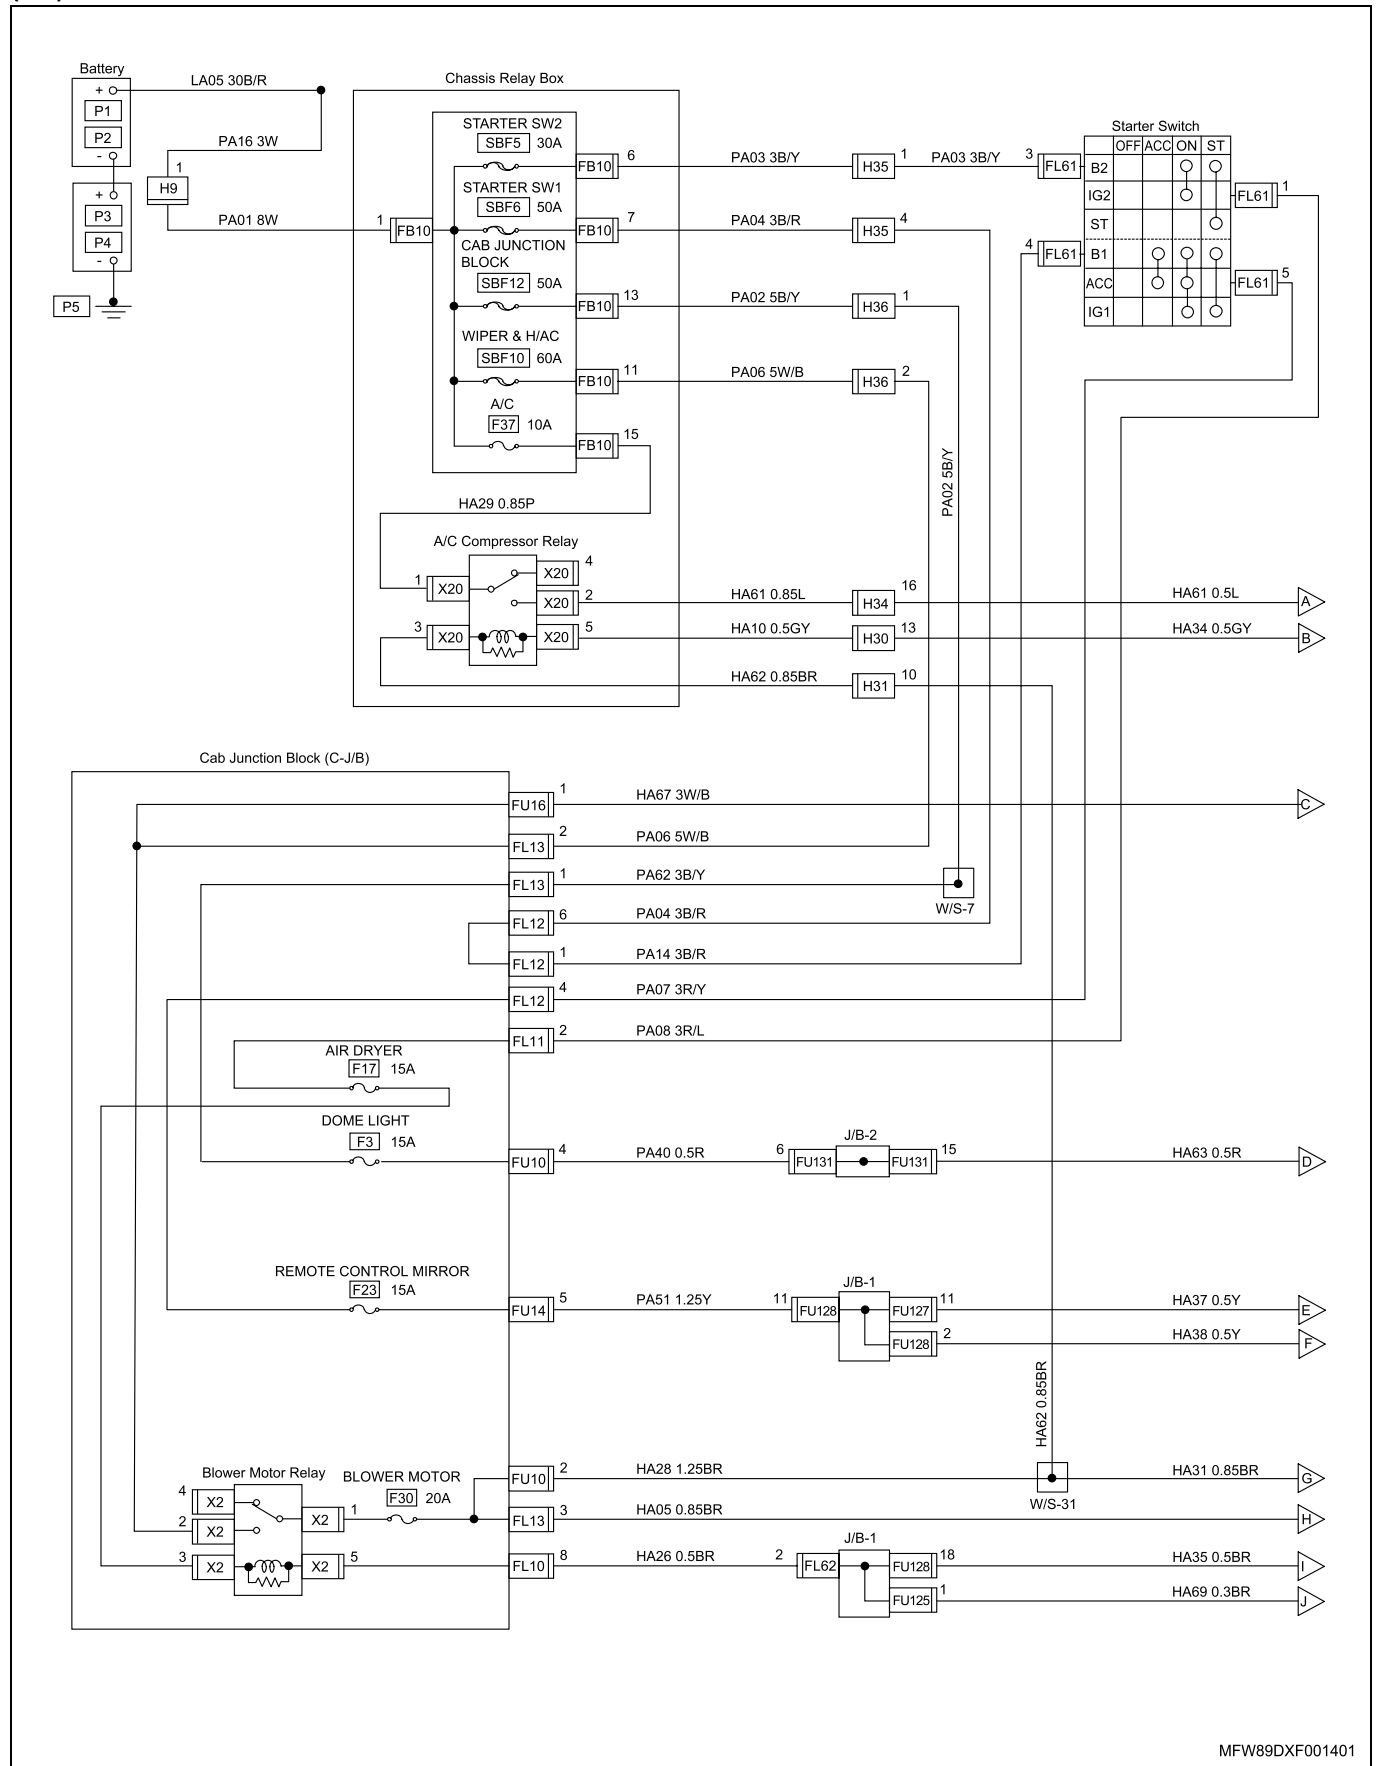(1/3)




(2/3)

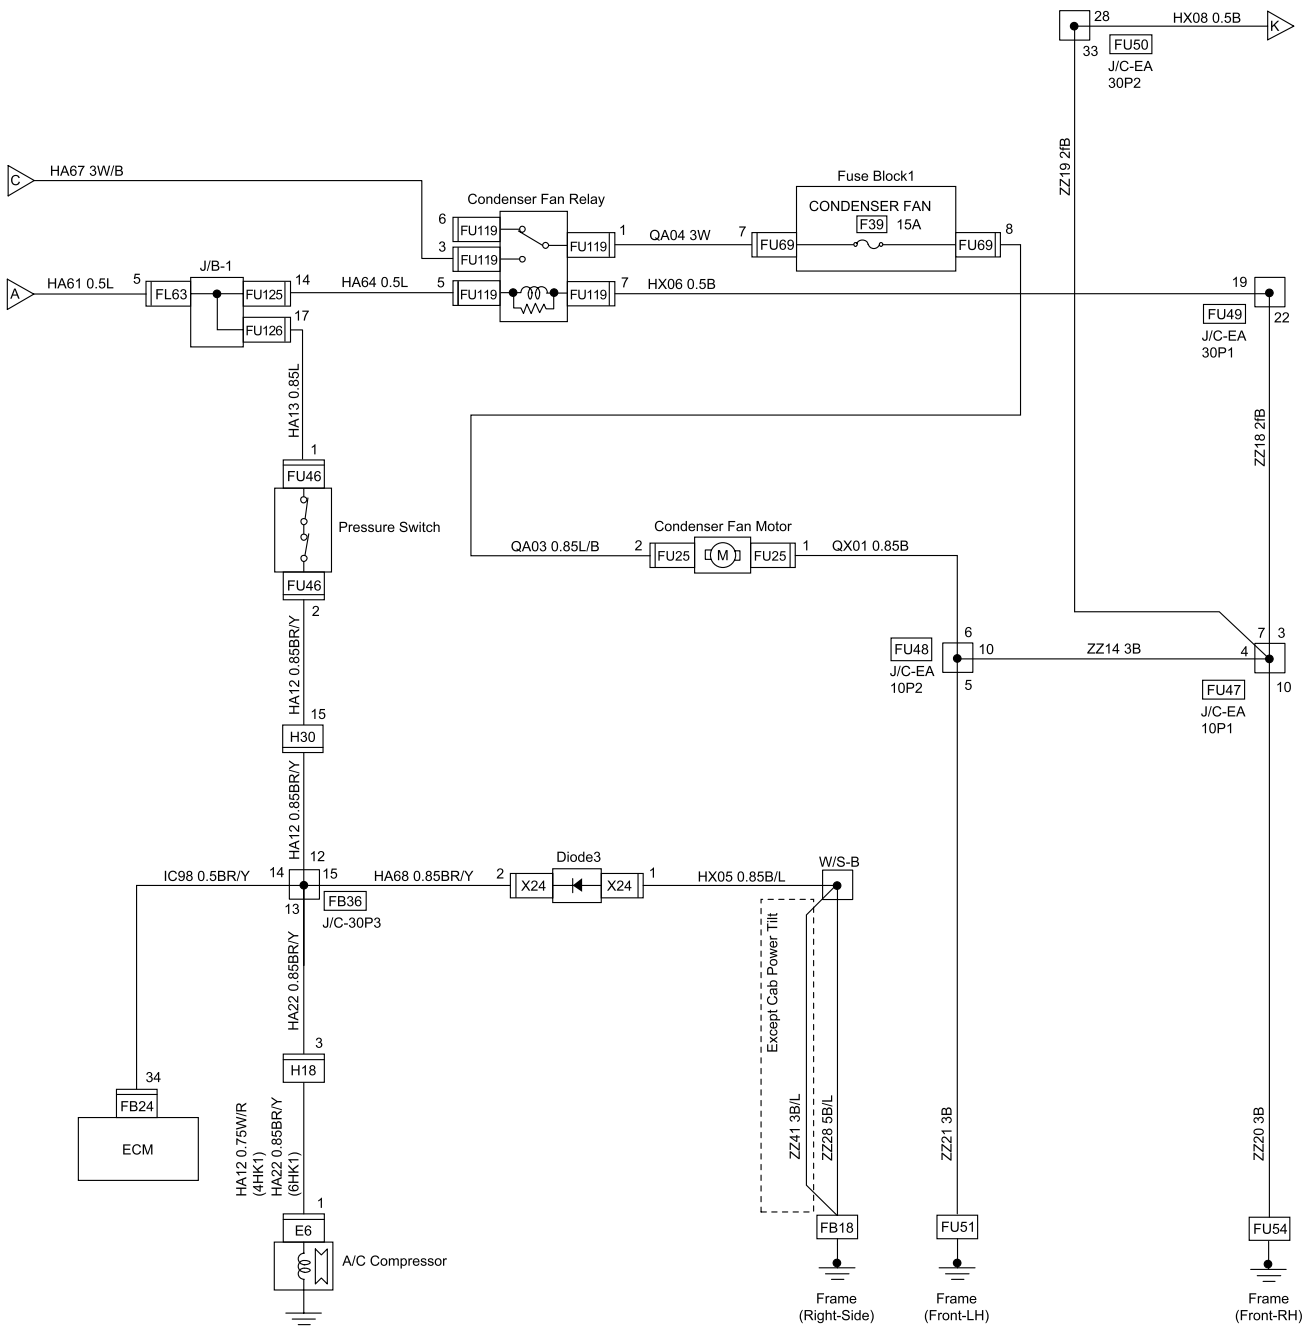

MF090001

9D-220 Wiring System (RHD model)

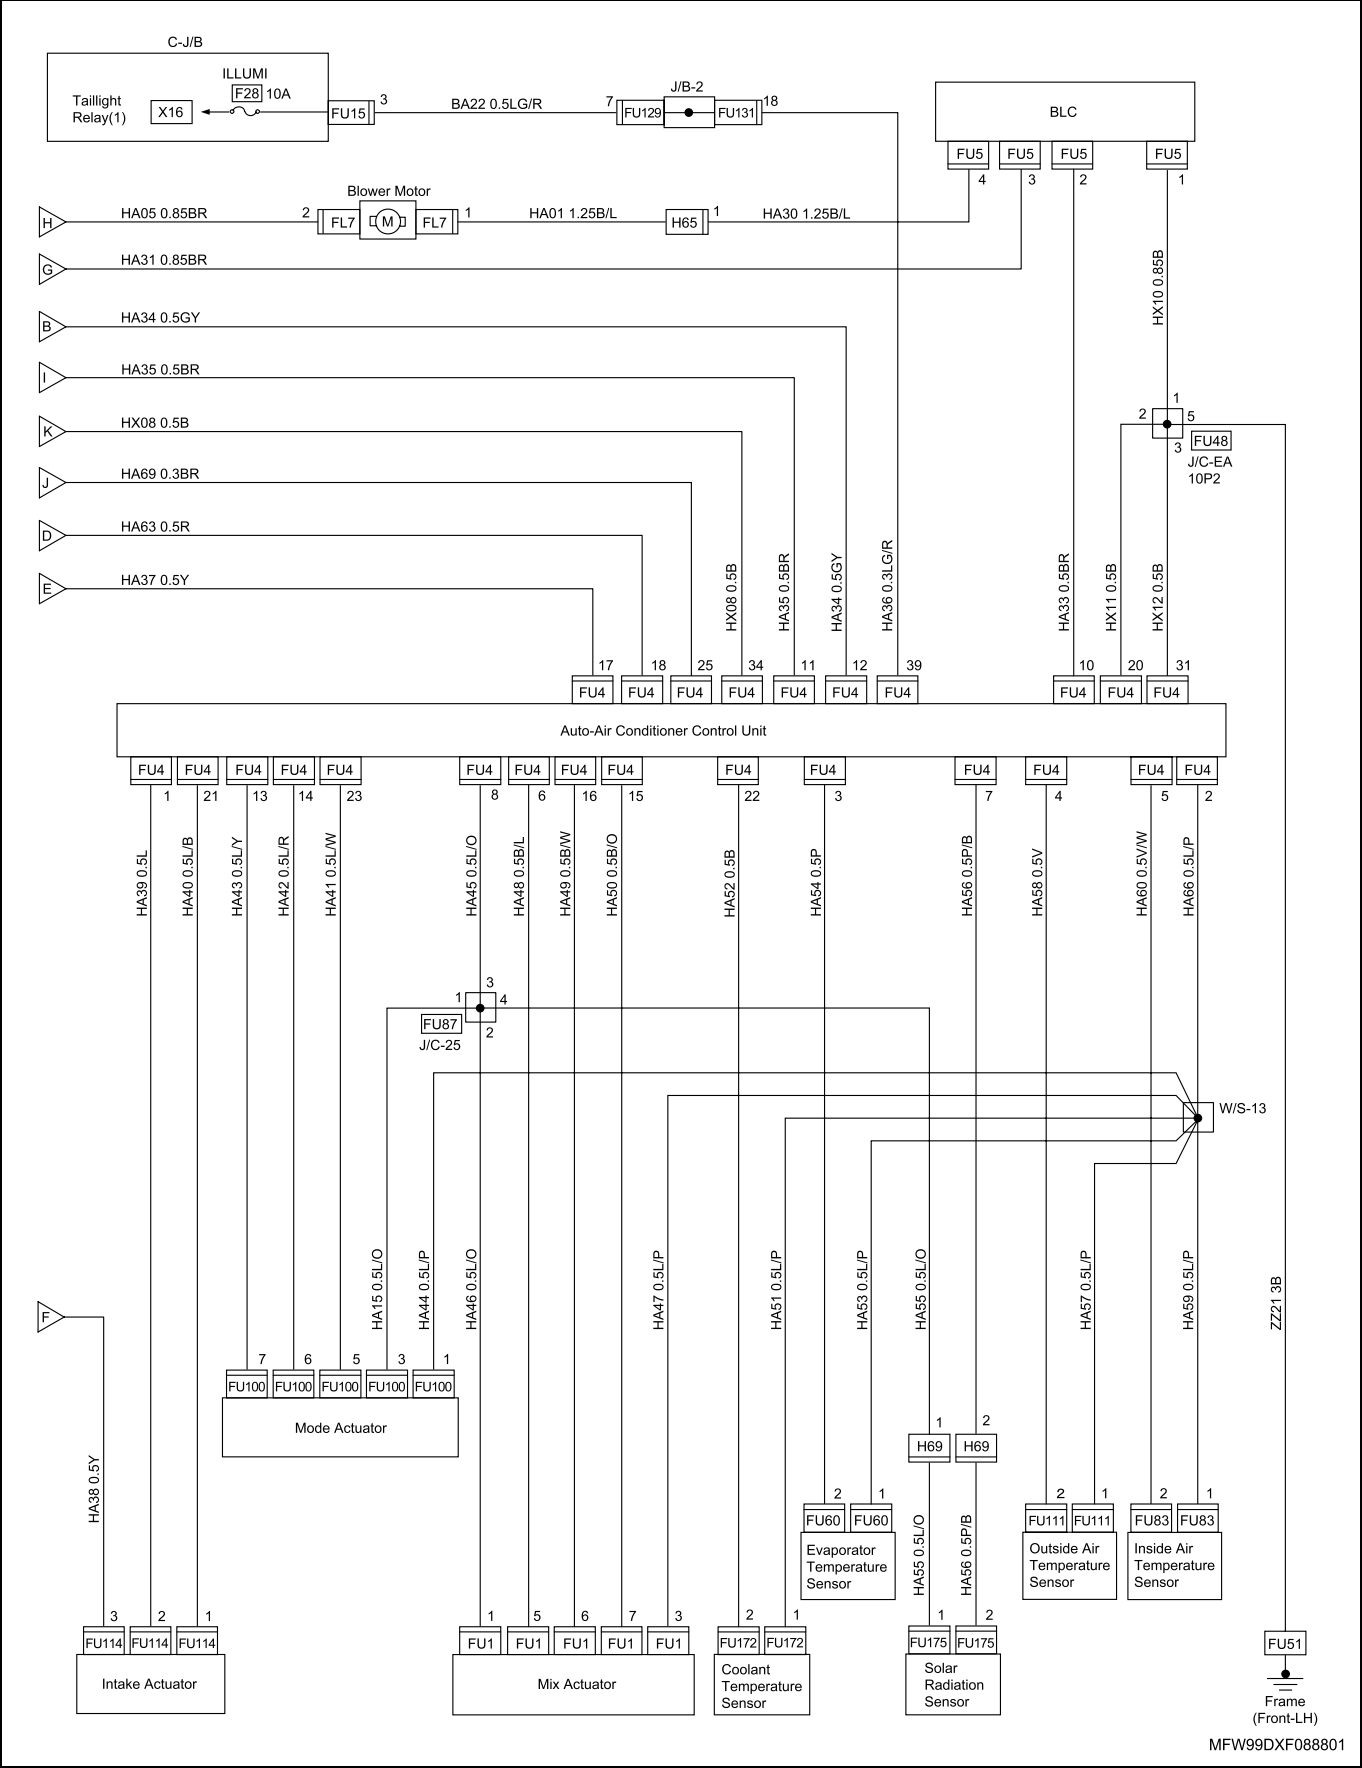
(3/3)



Exhaust Brake

Circuit Diagram

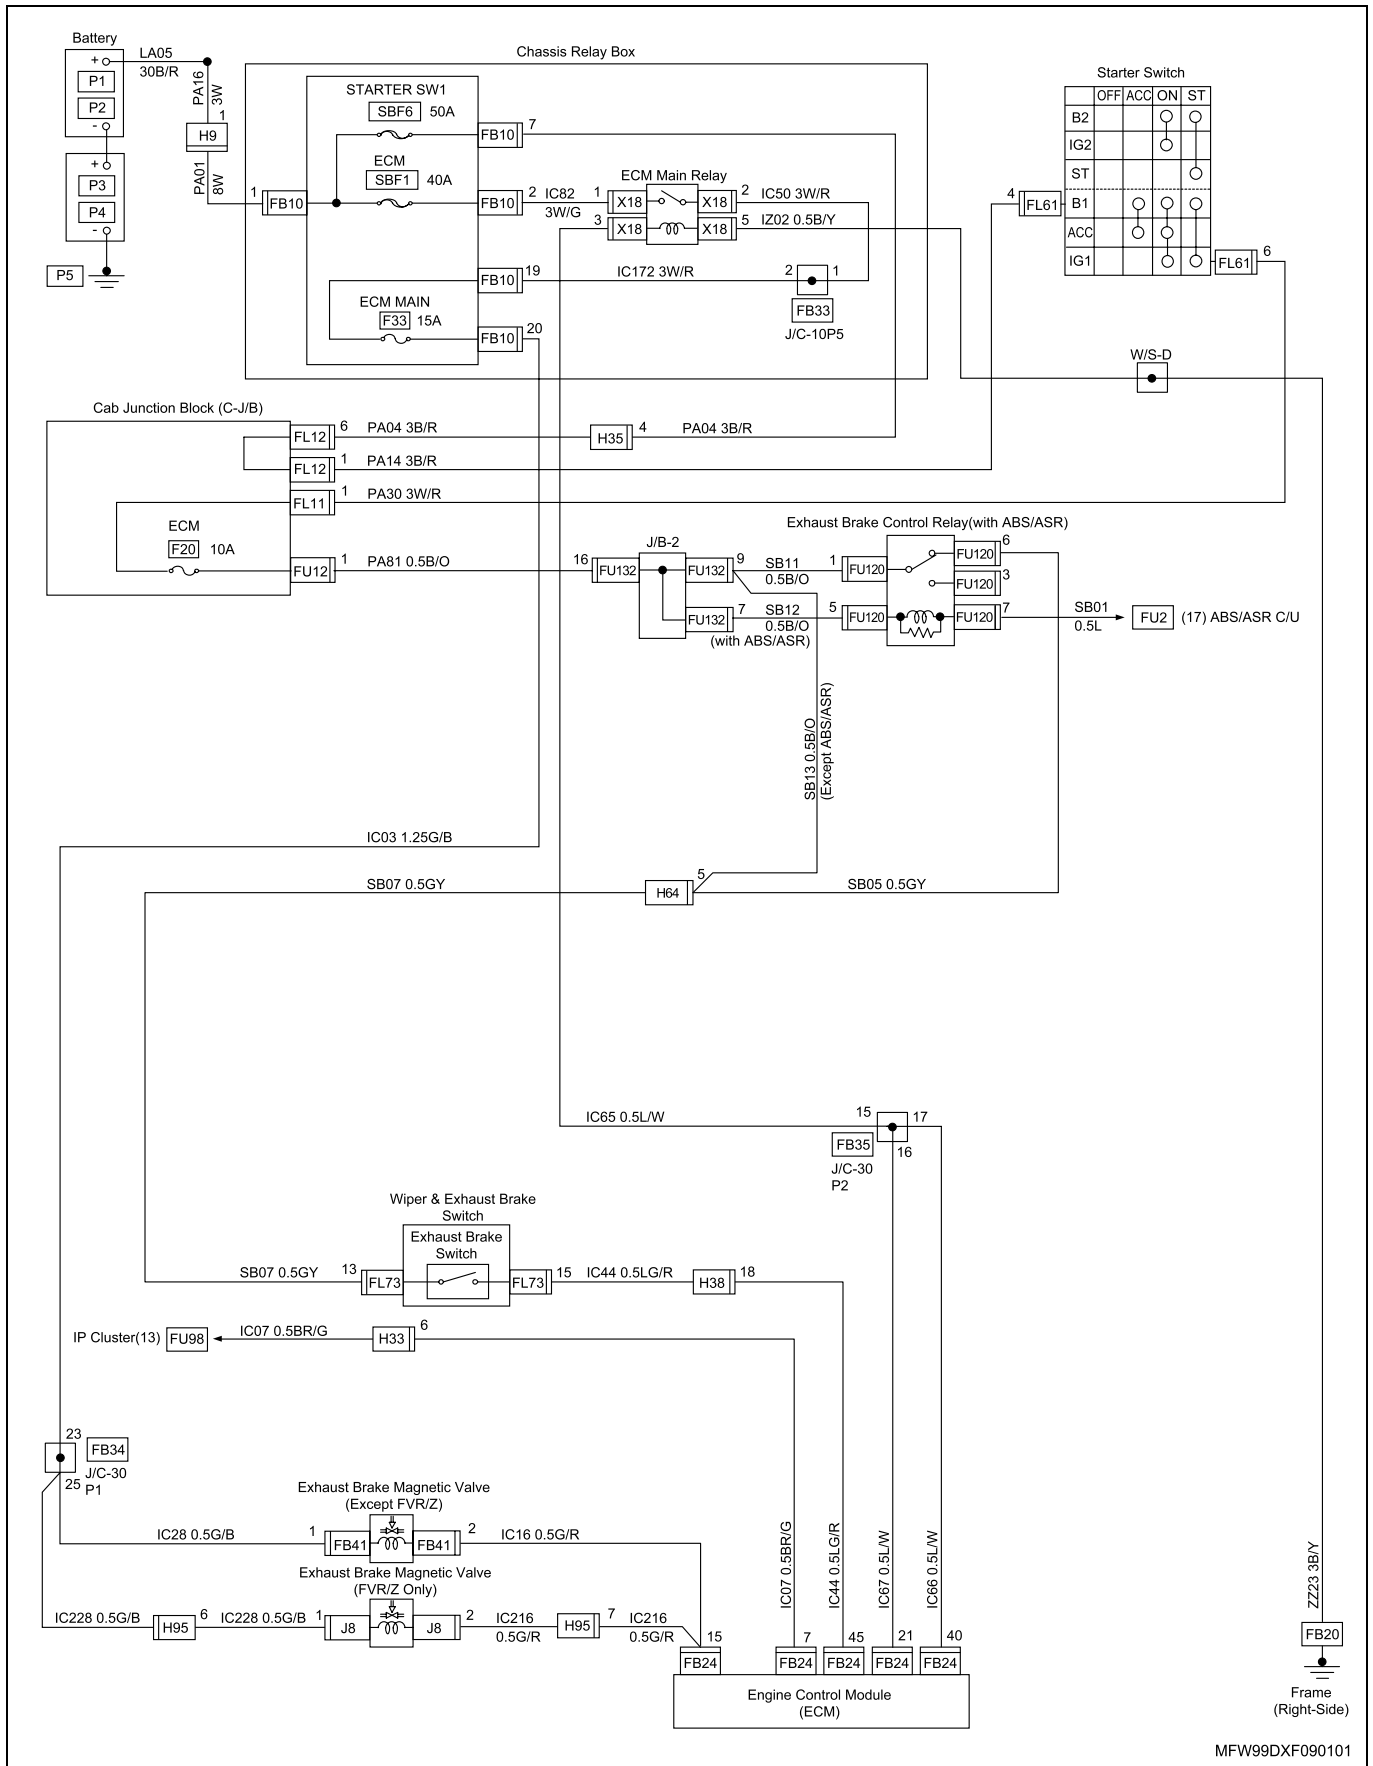Except Indonesia




Indonesia



Cab Power Tilt

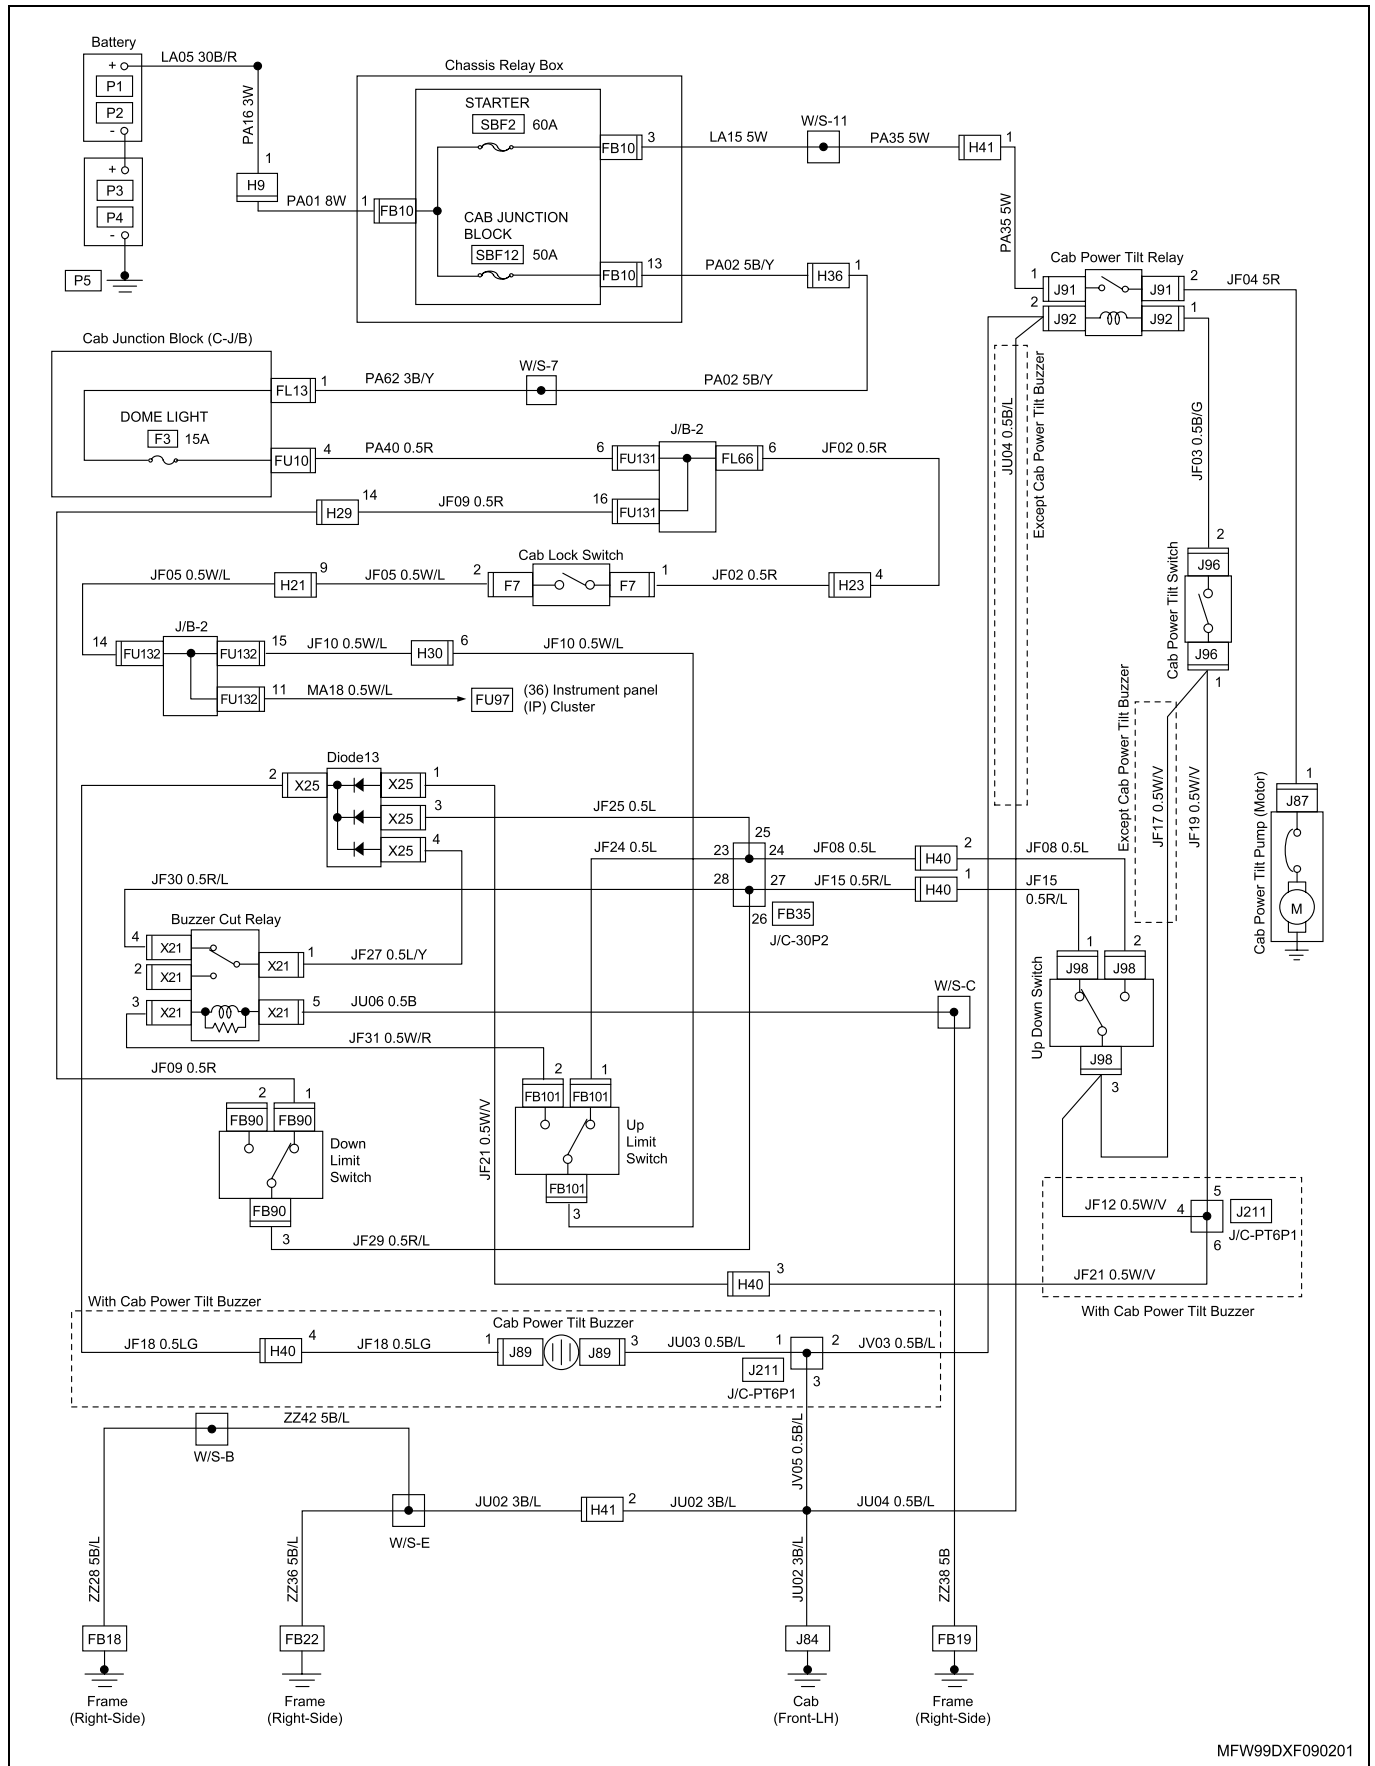Circuit Diagram Except Indonesia Full Cab




Crew Cab




Differential Lock, Front Drive

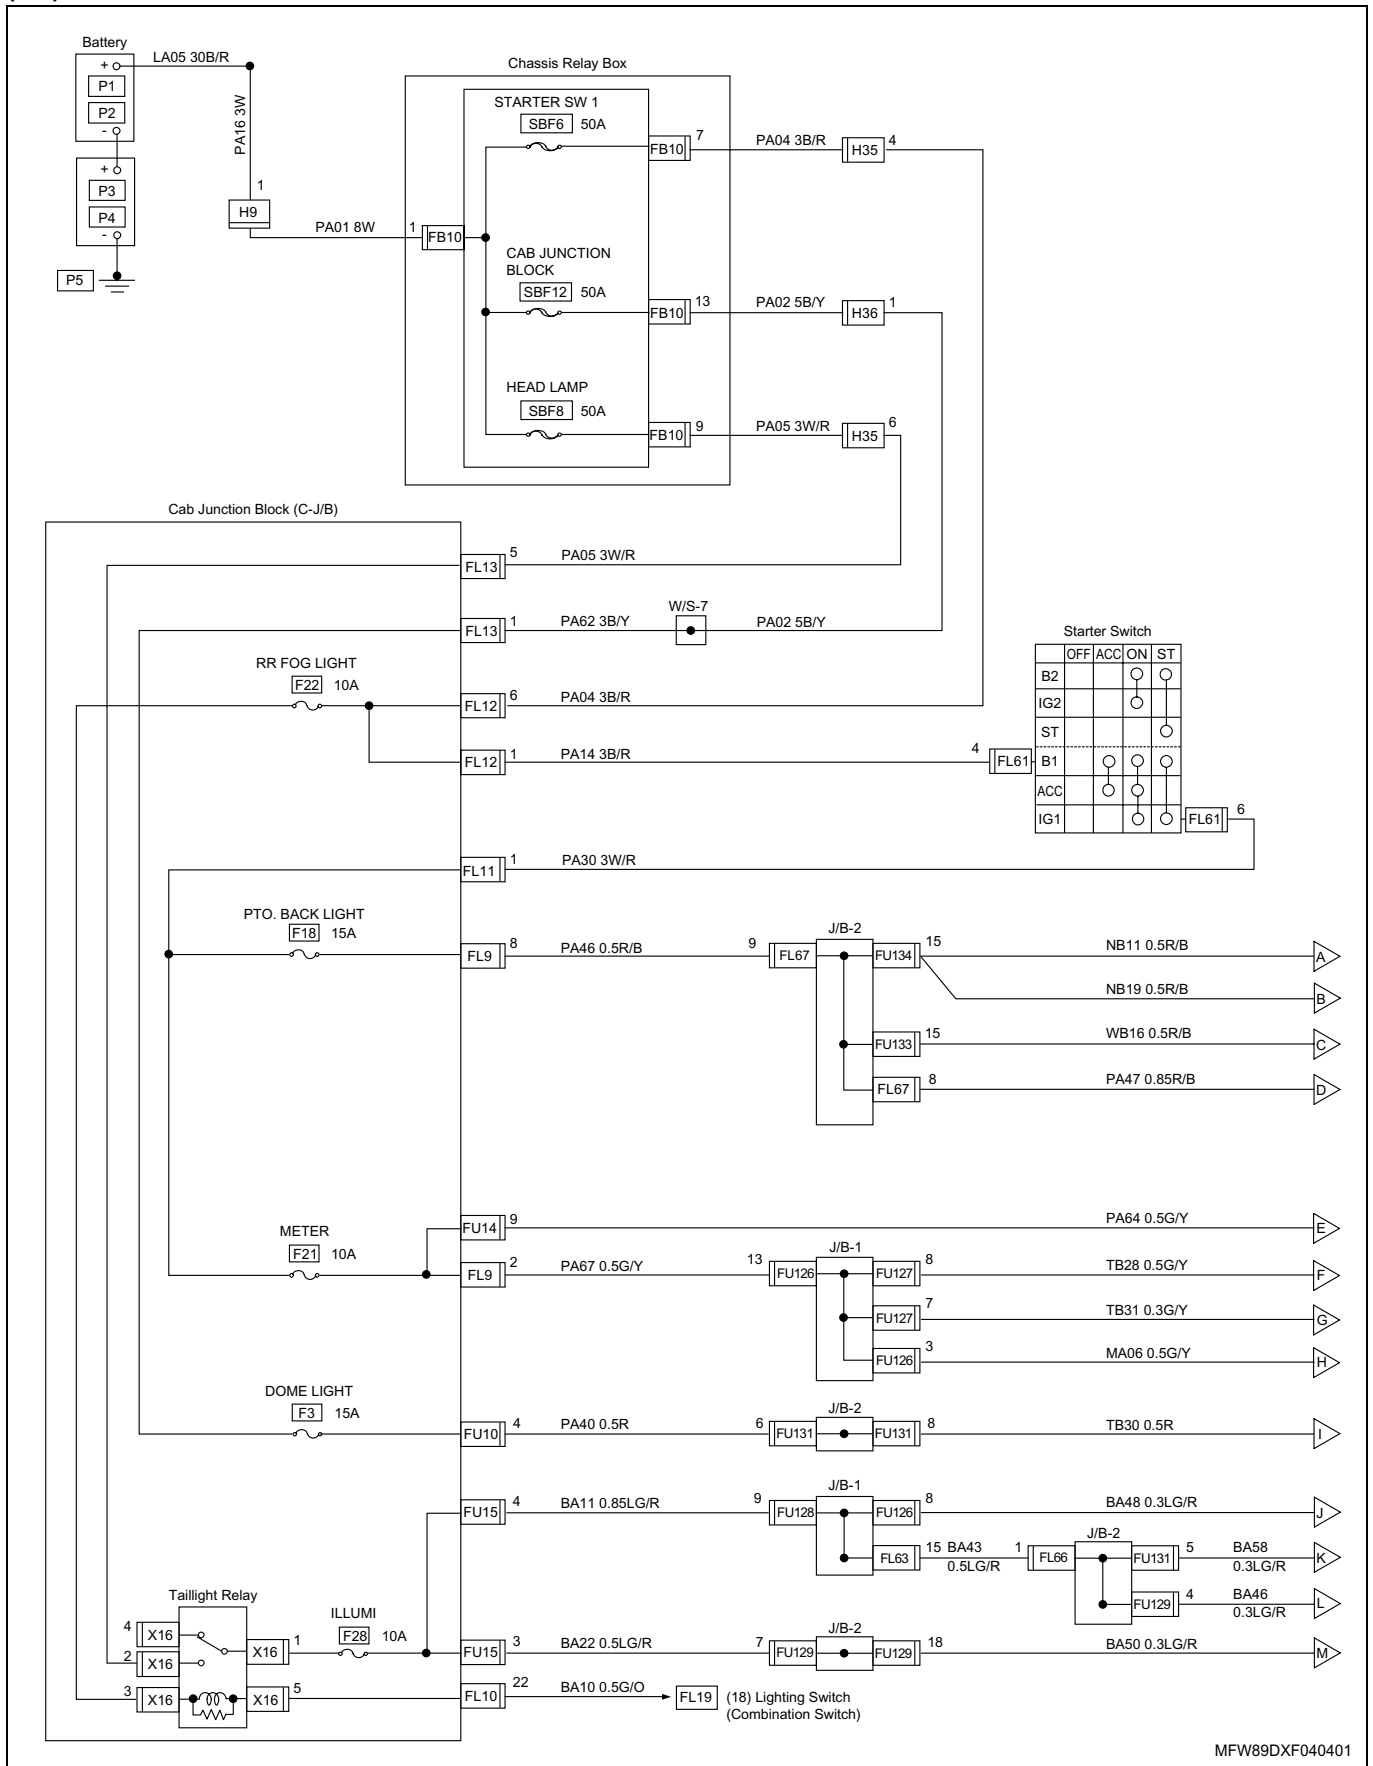Circuit Diagram Except Indonesia (1/4)







(3/4)

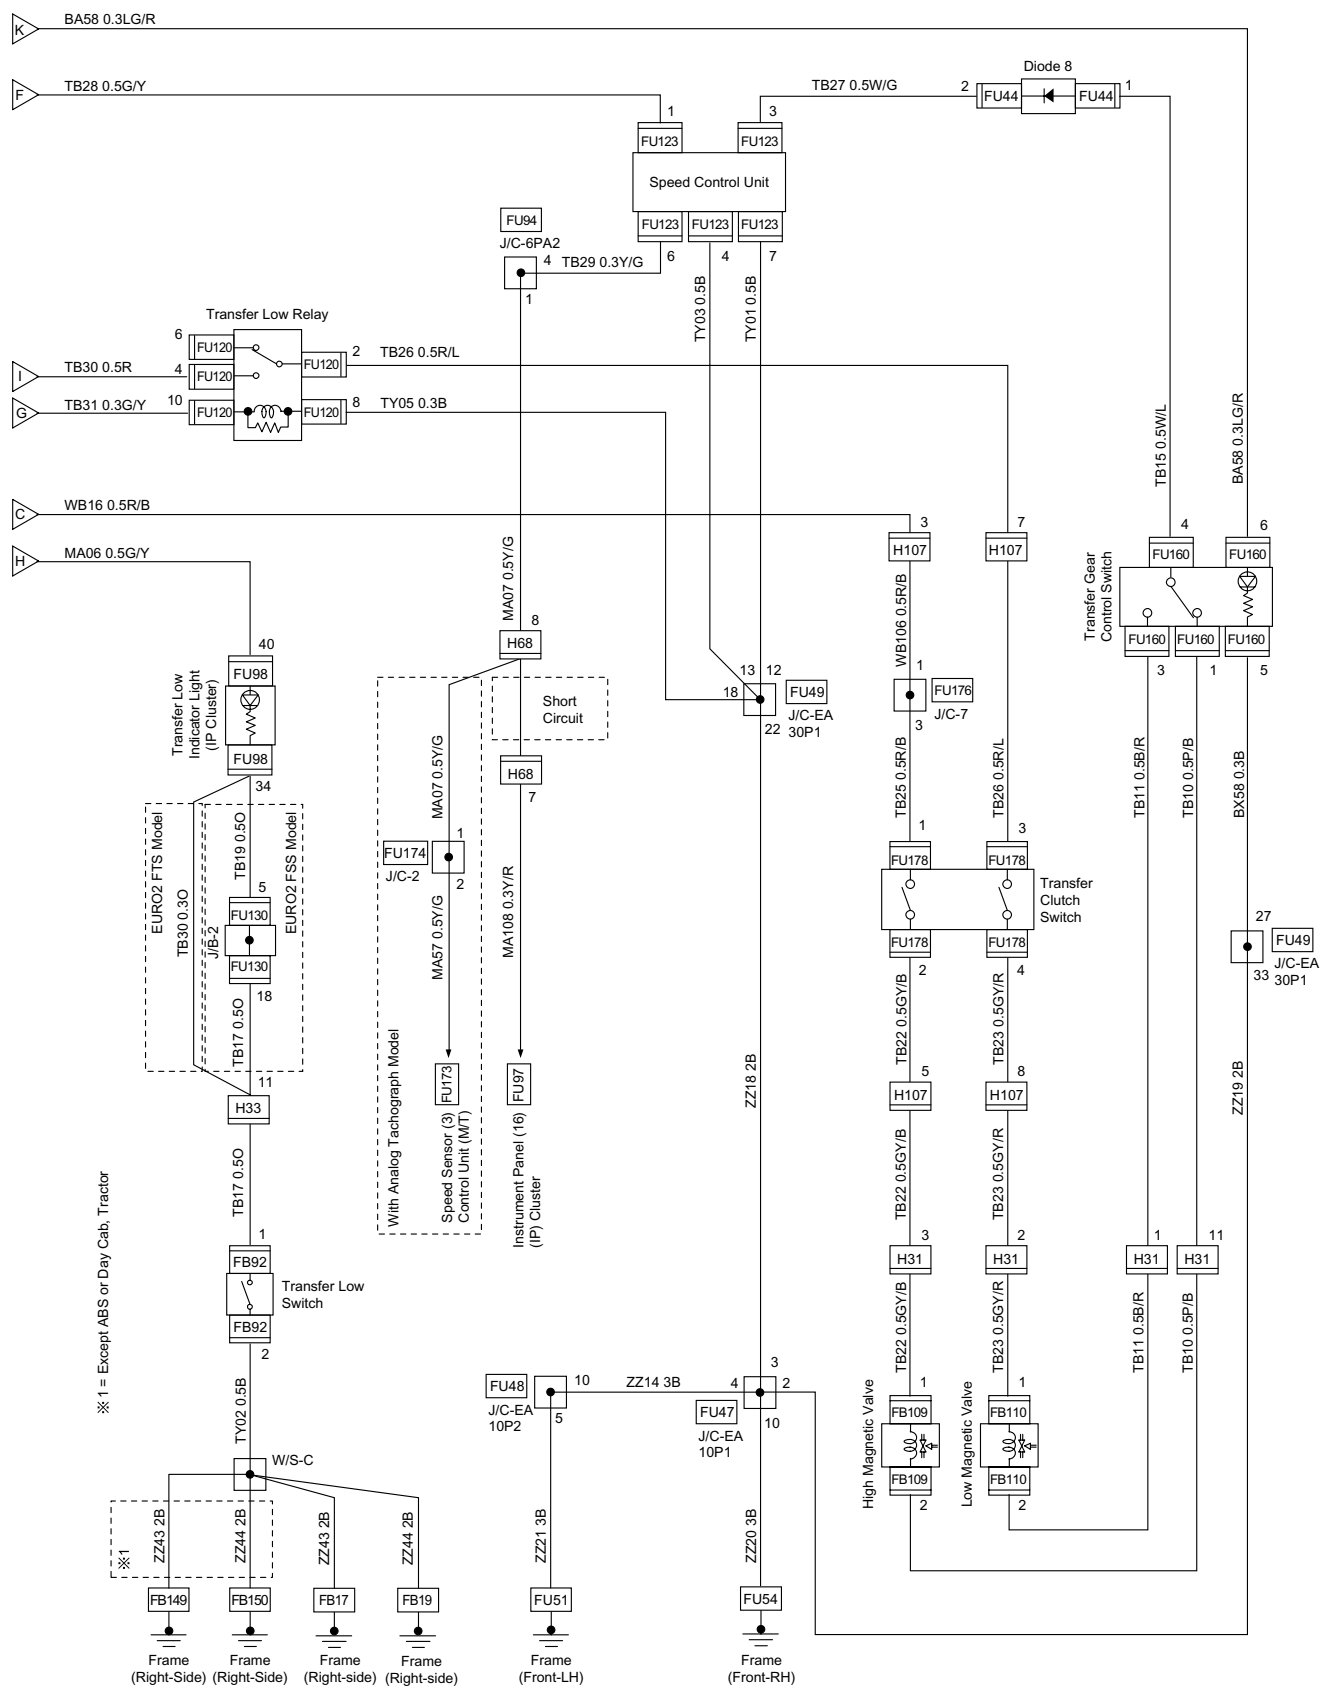

(4/4)

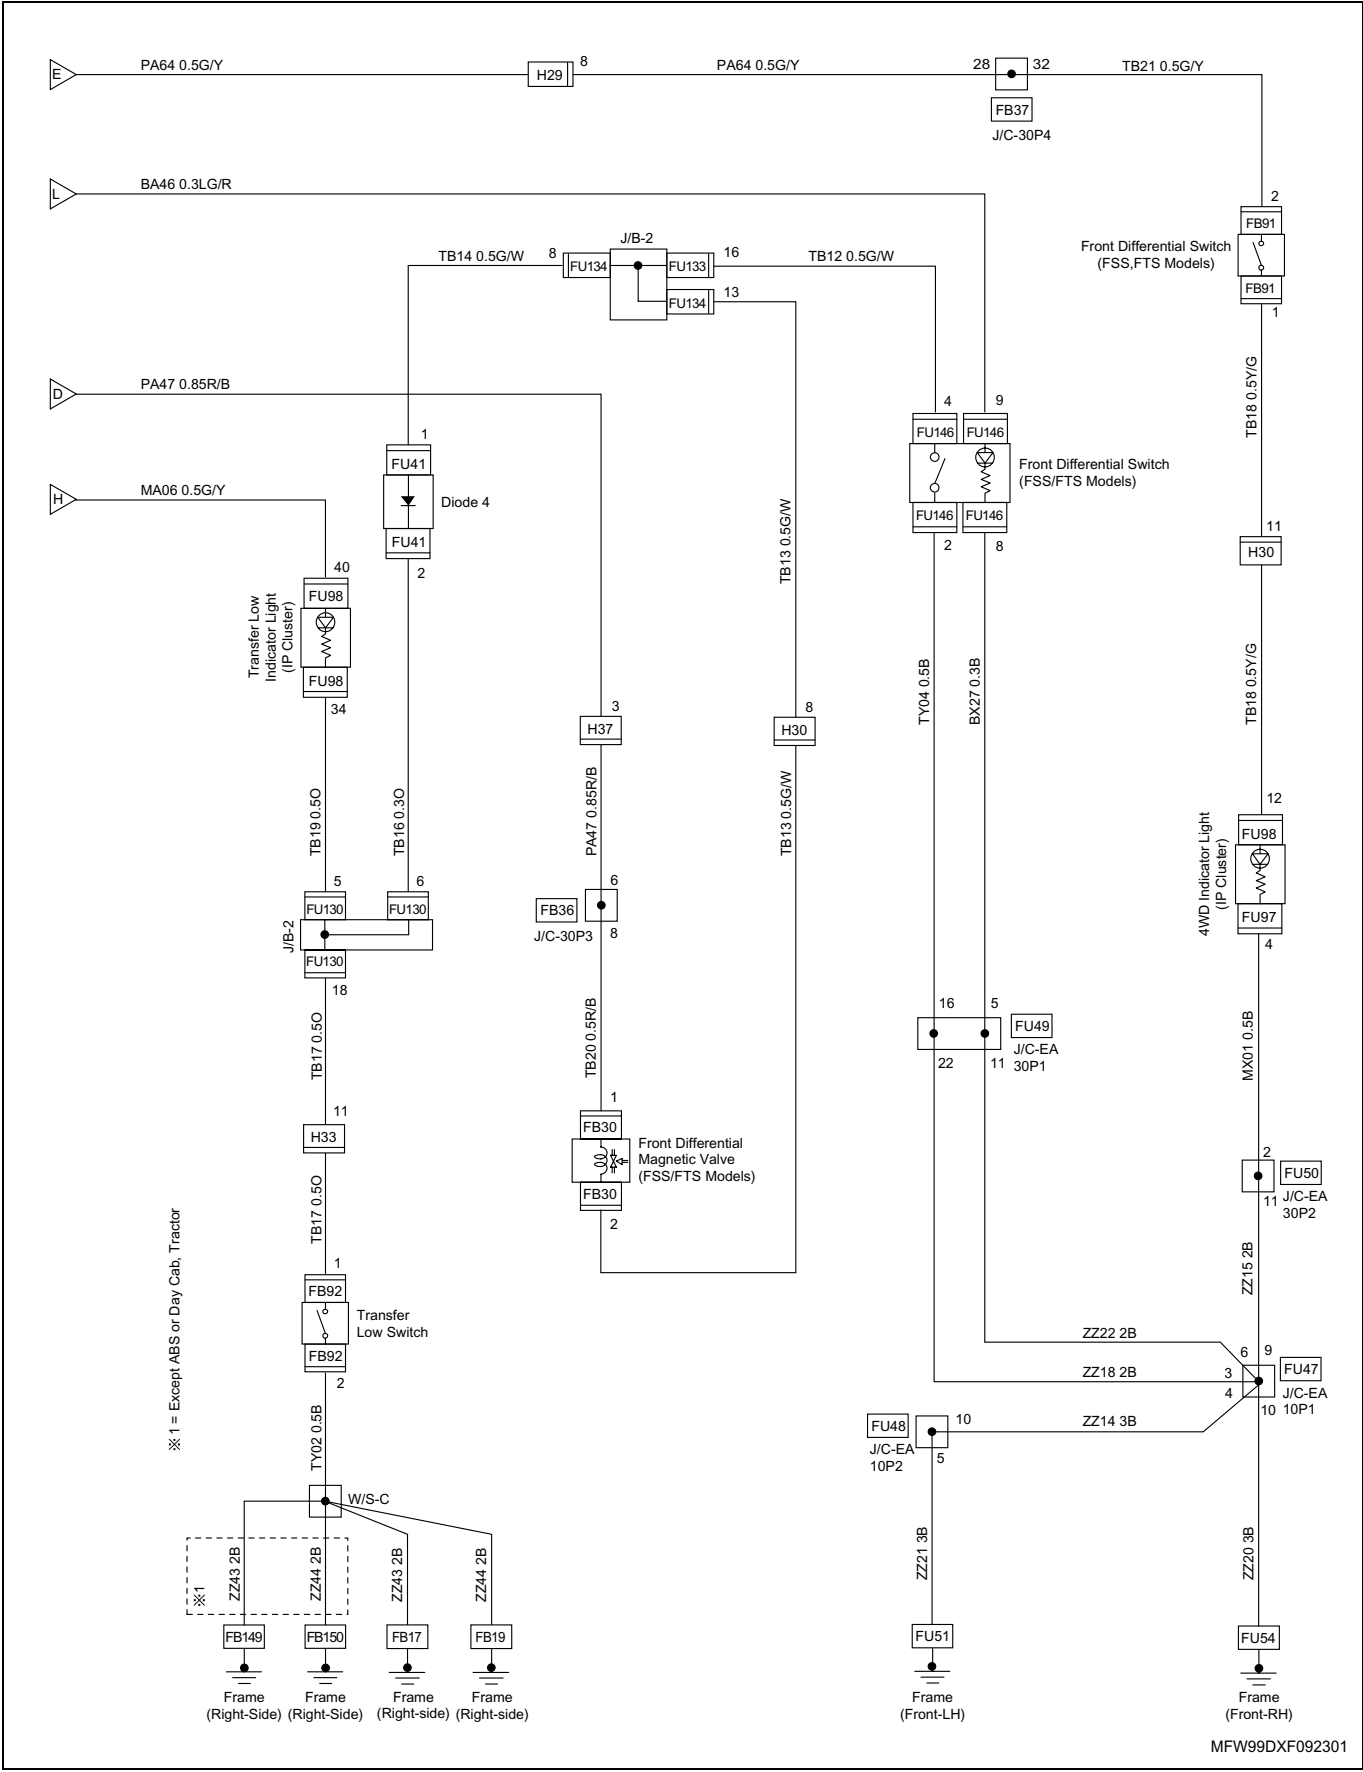

Indonesia

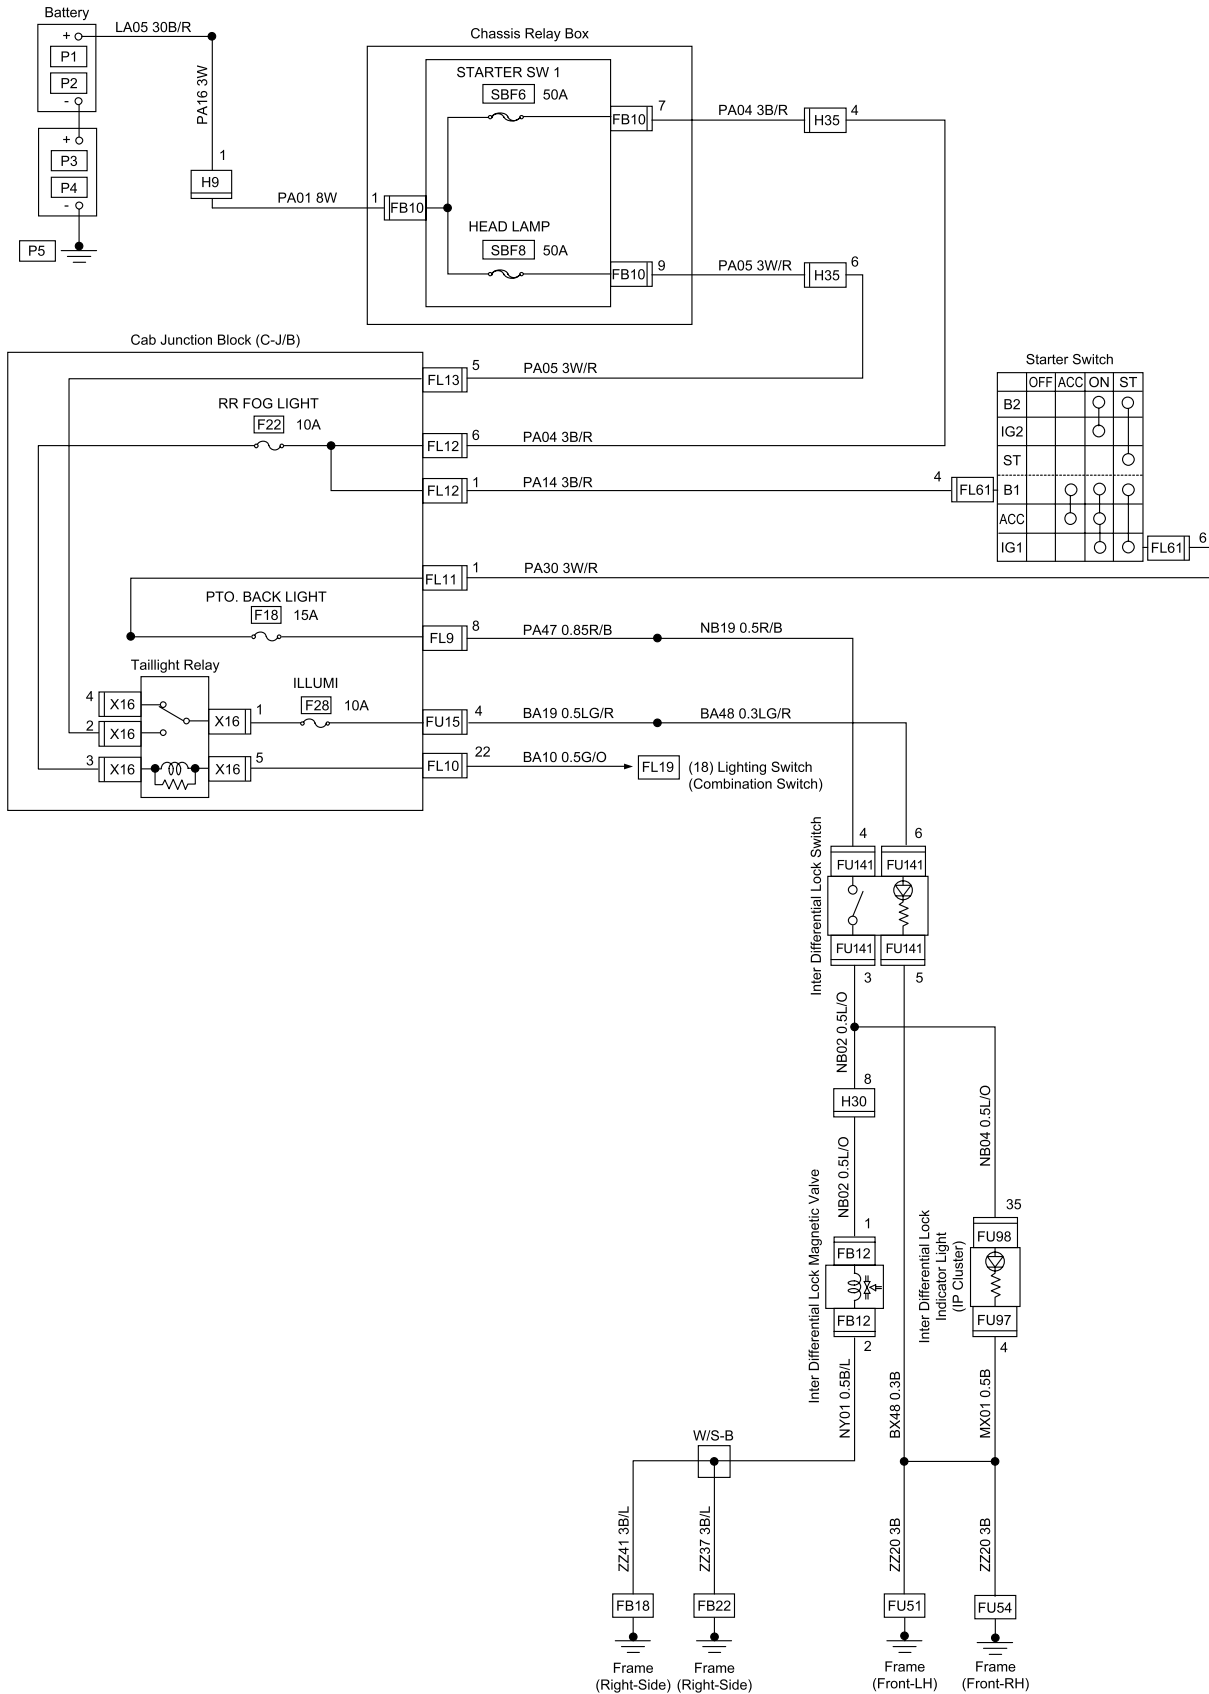


Tractor


Circuit Diagram

Except Indonesia

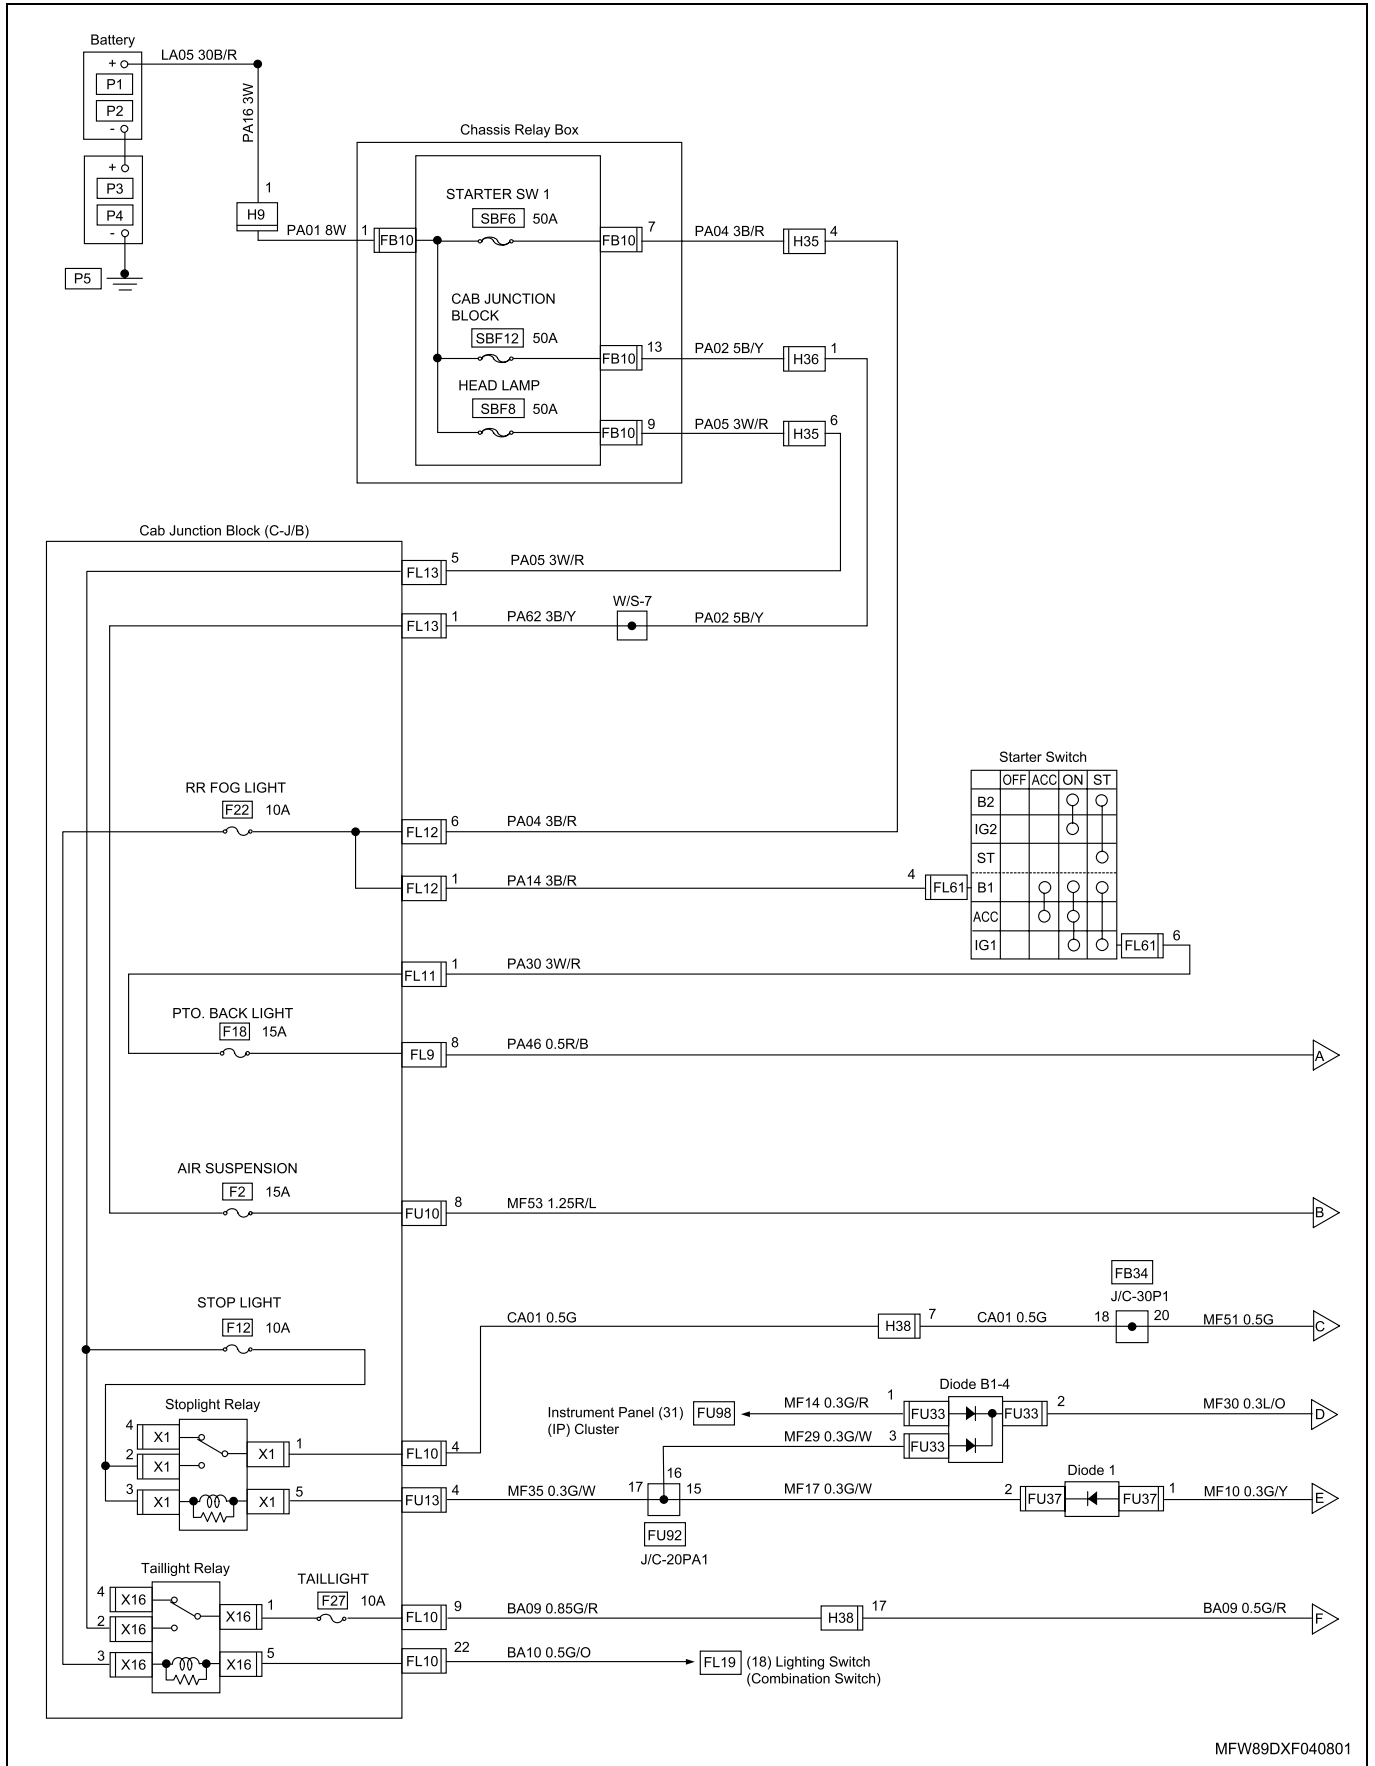(1/3)




(2/3)

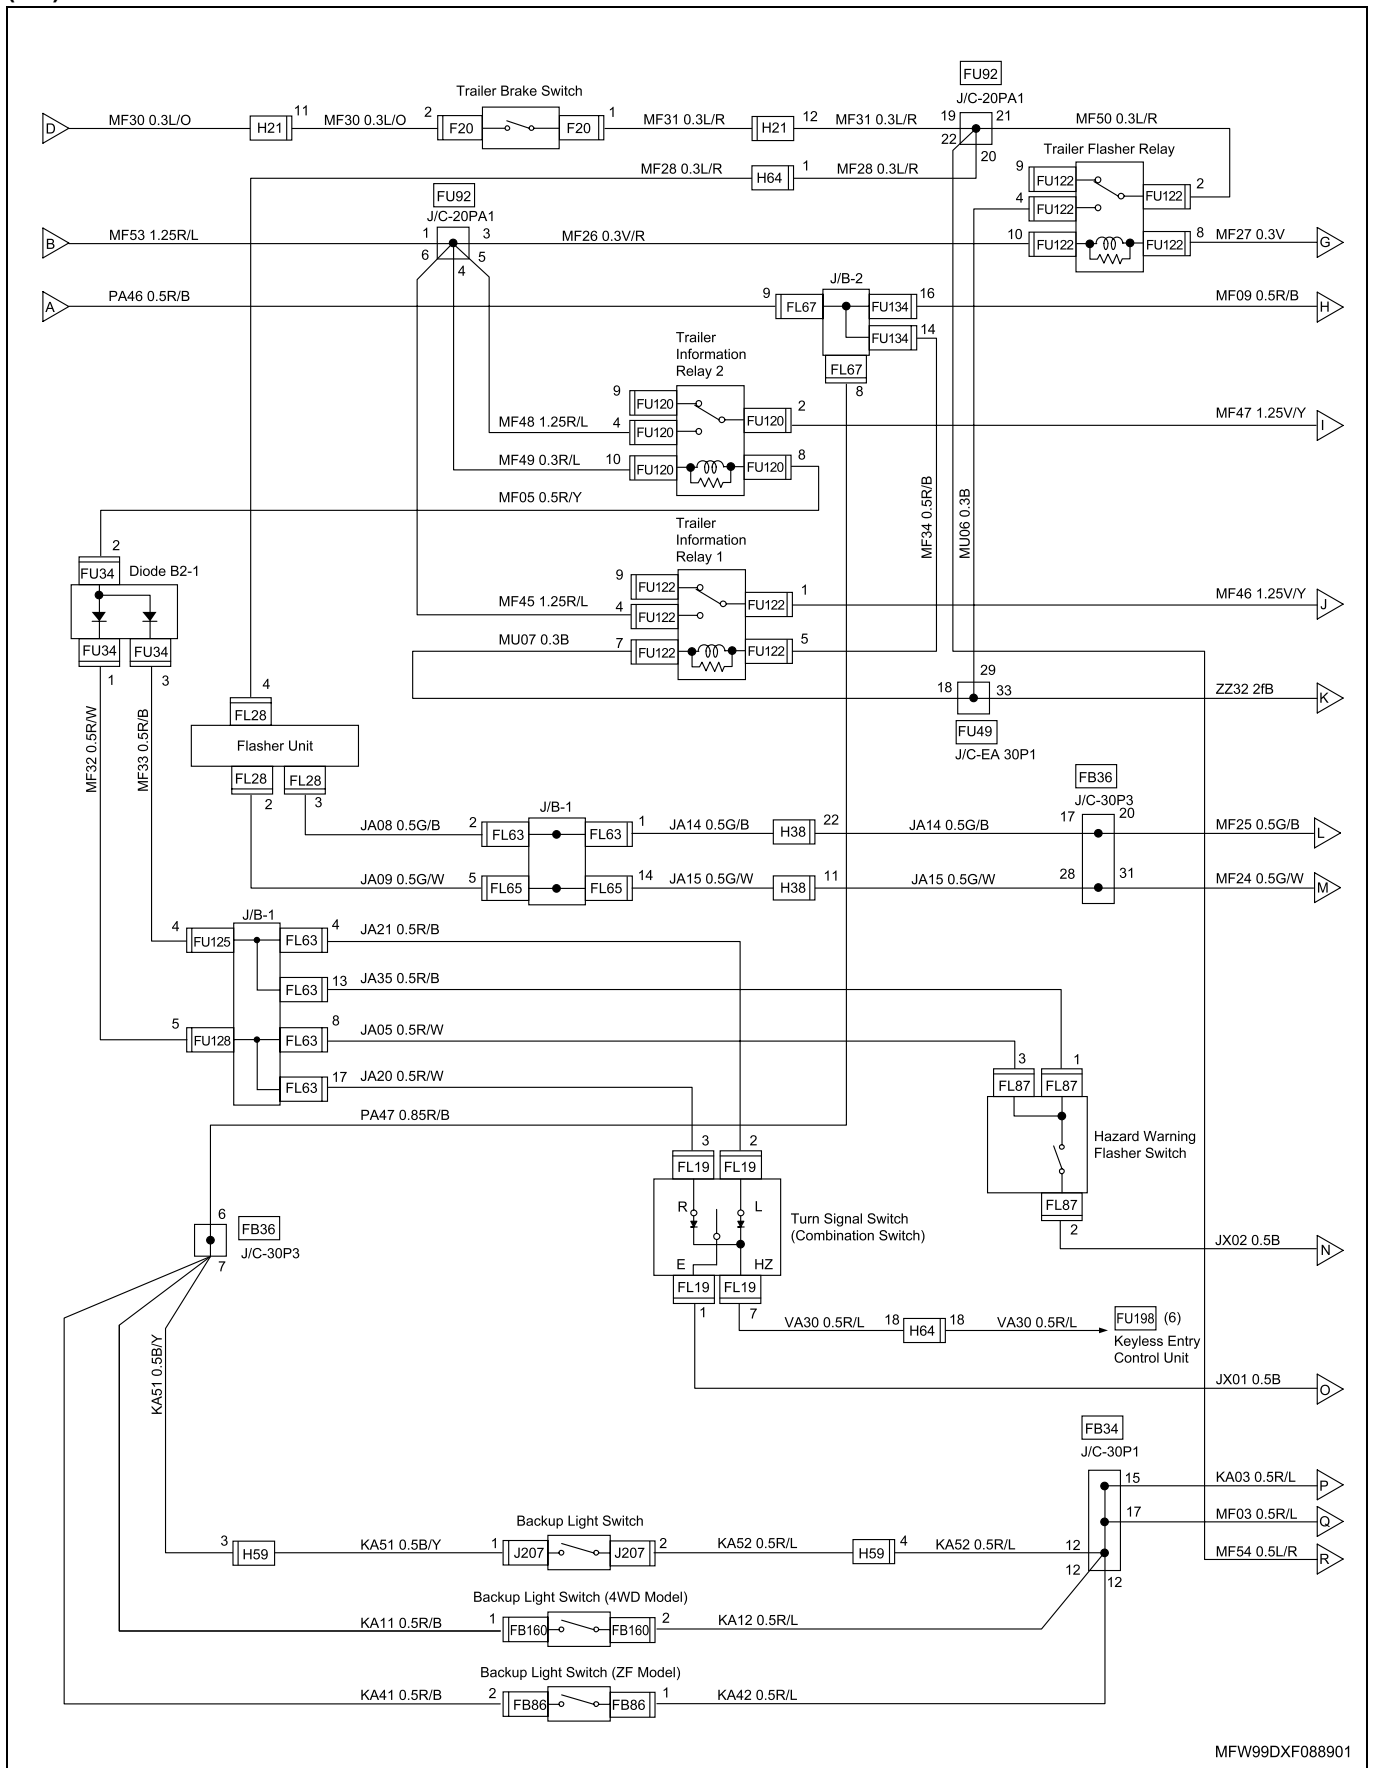


9D-232 Wiring System (RHD model)

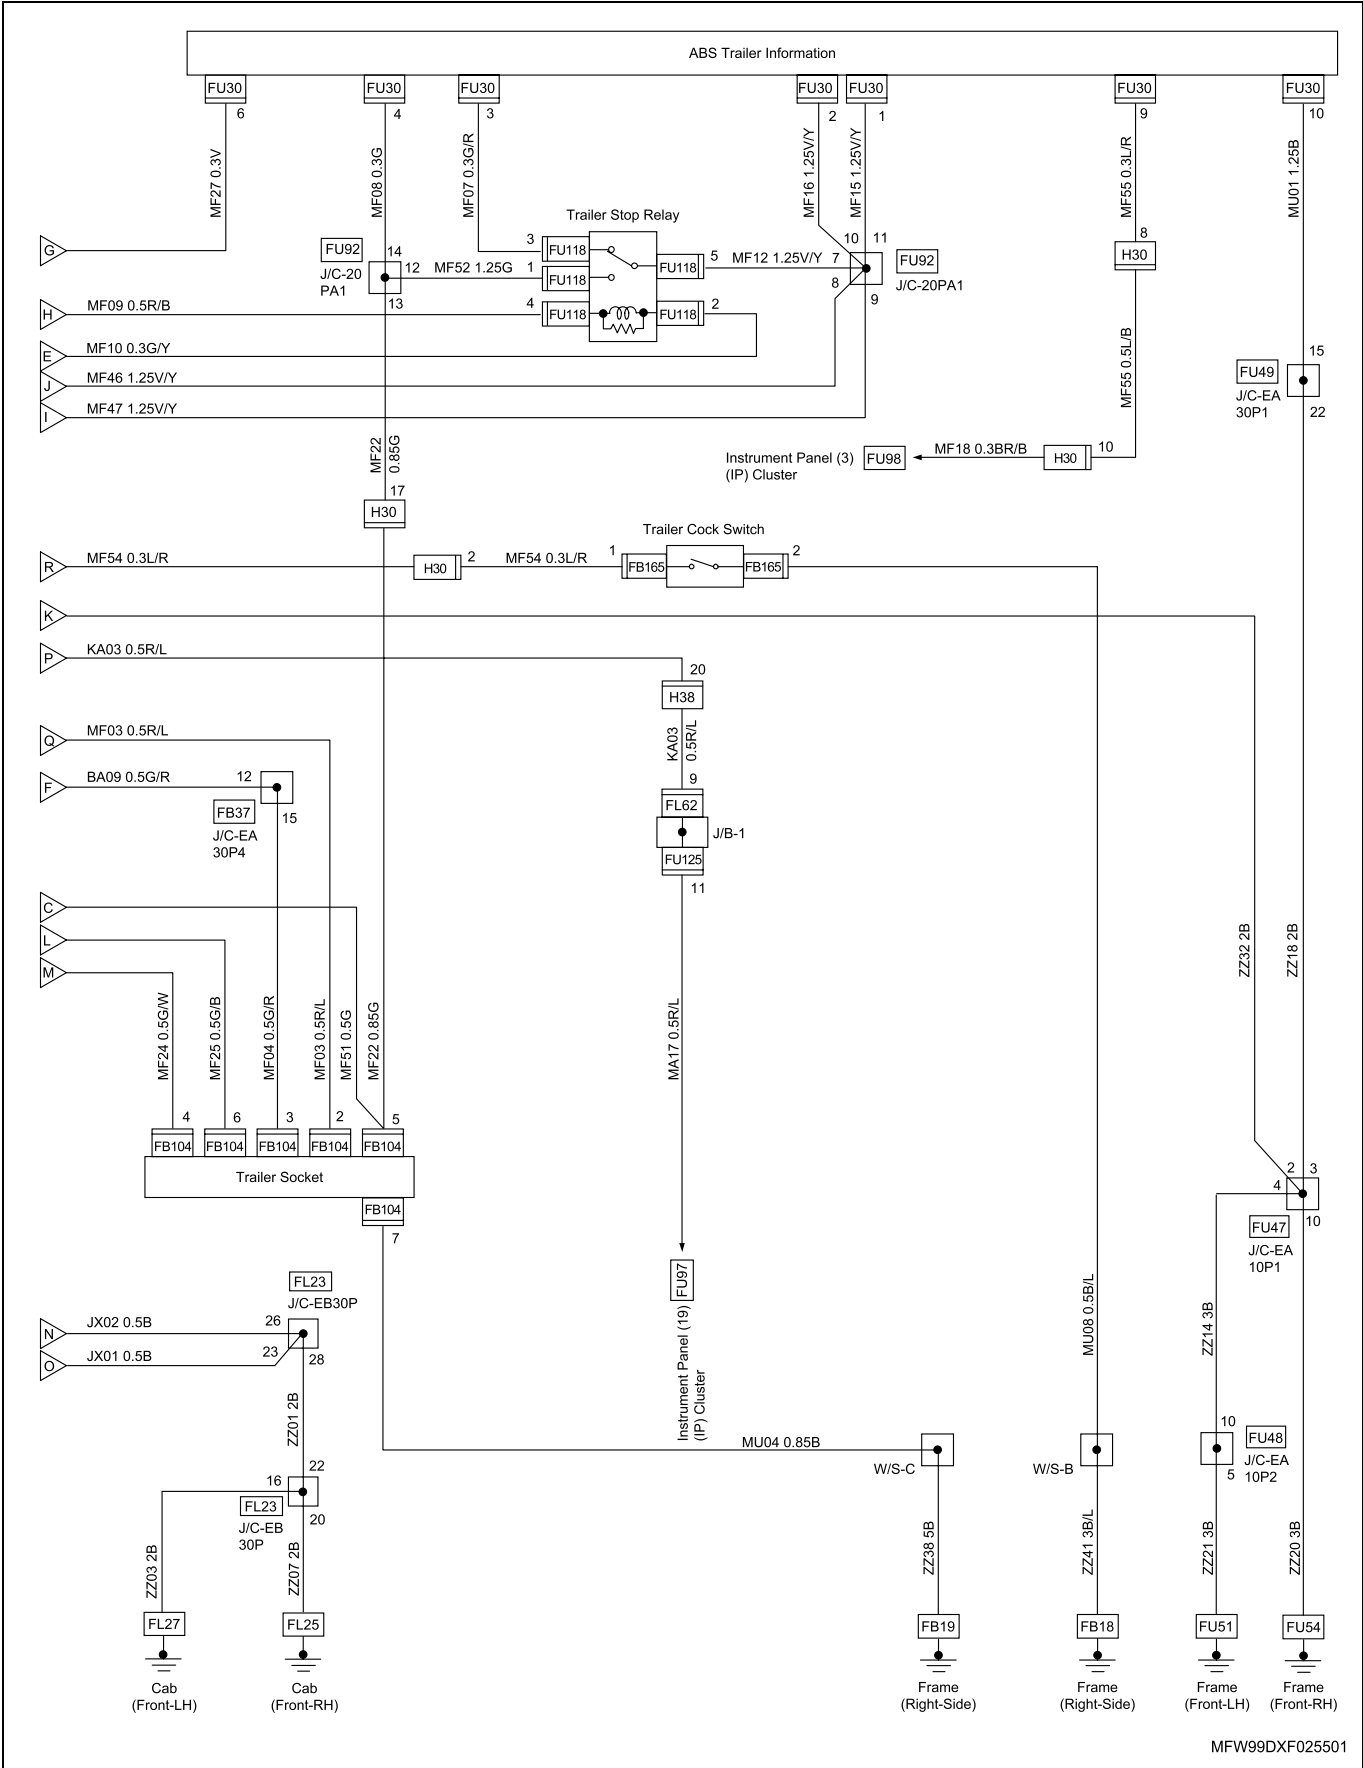(3/3)




Power Take-Off (PTO)

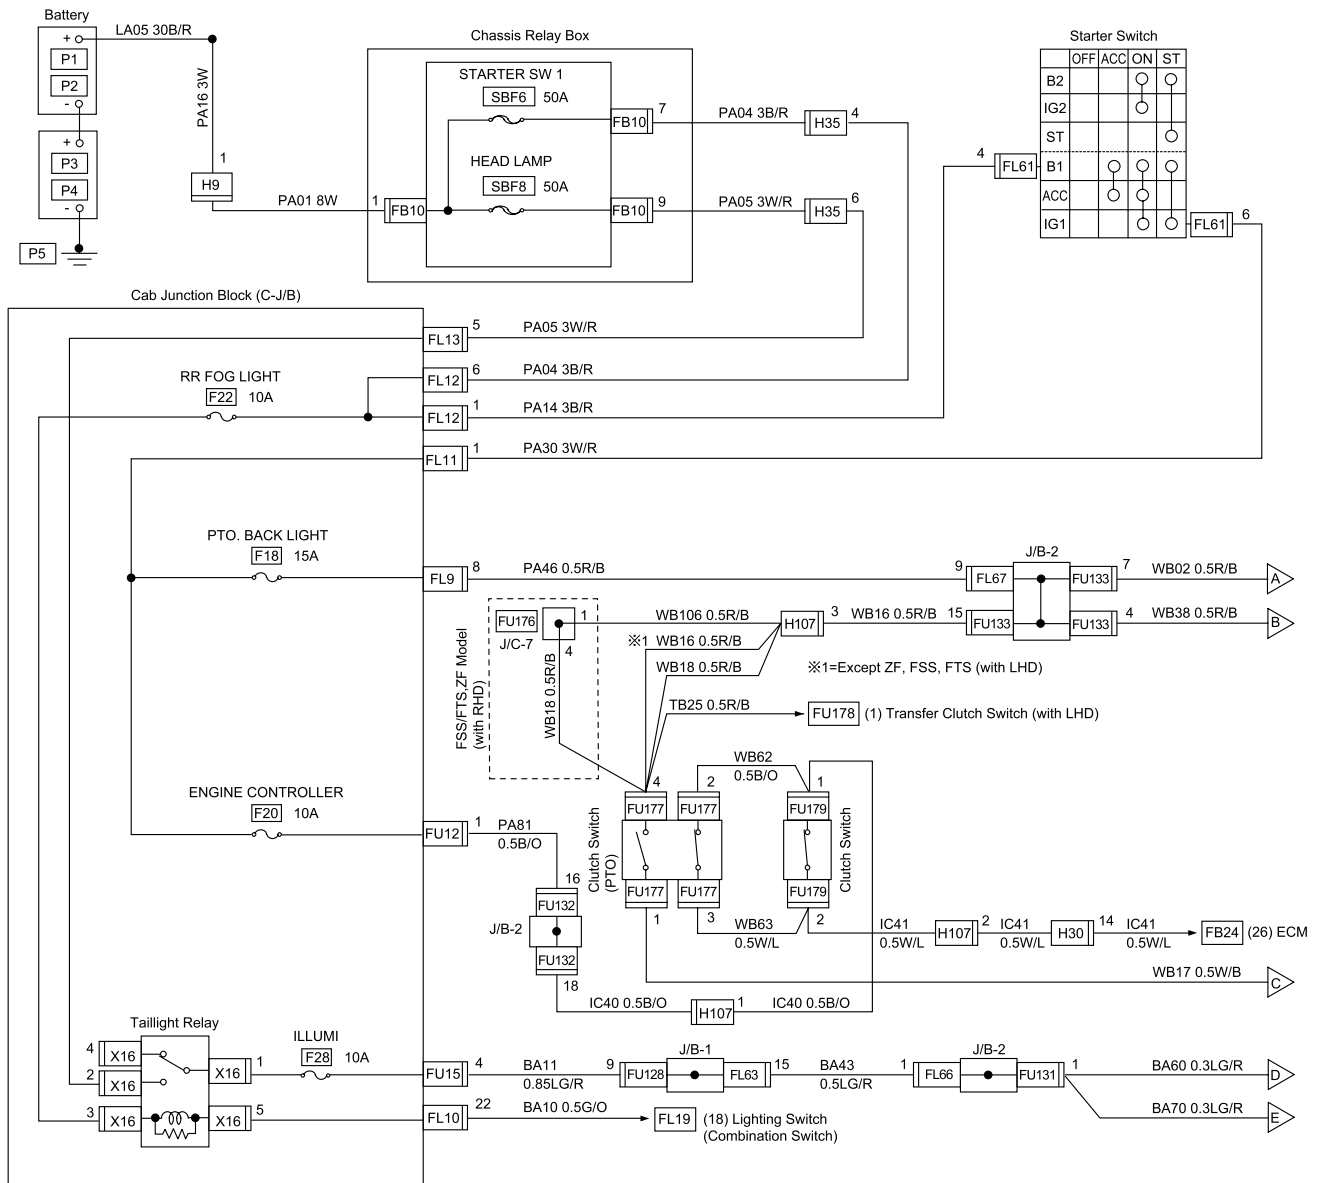Circuit Diagram Except Indonesia (1/2)




9D-234 Wiring System (RHD model)

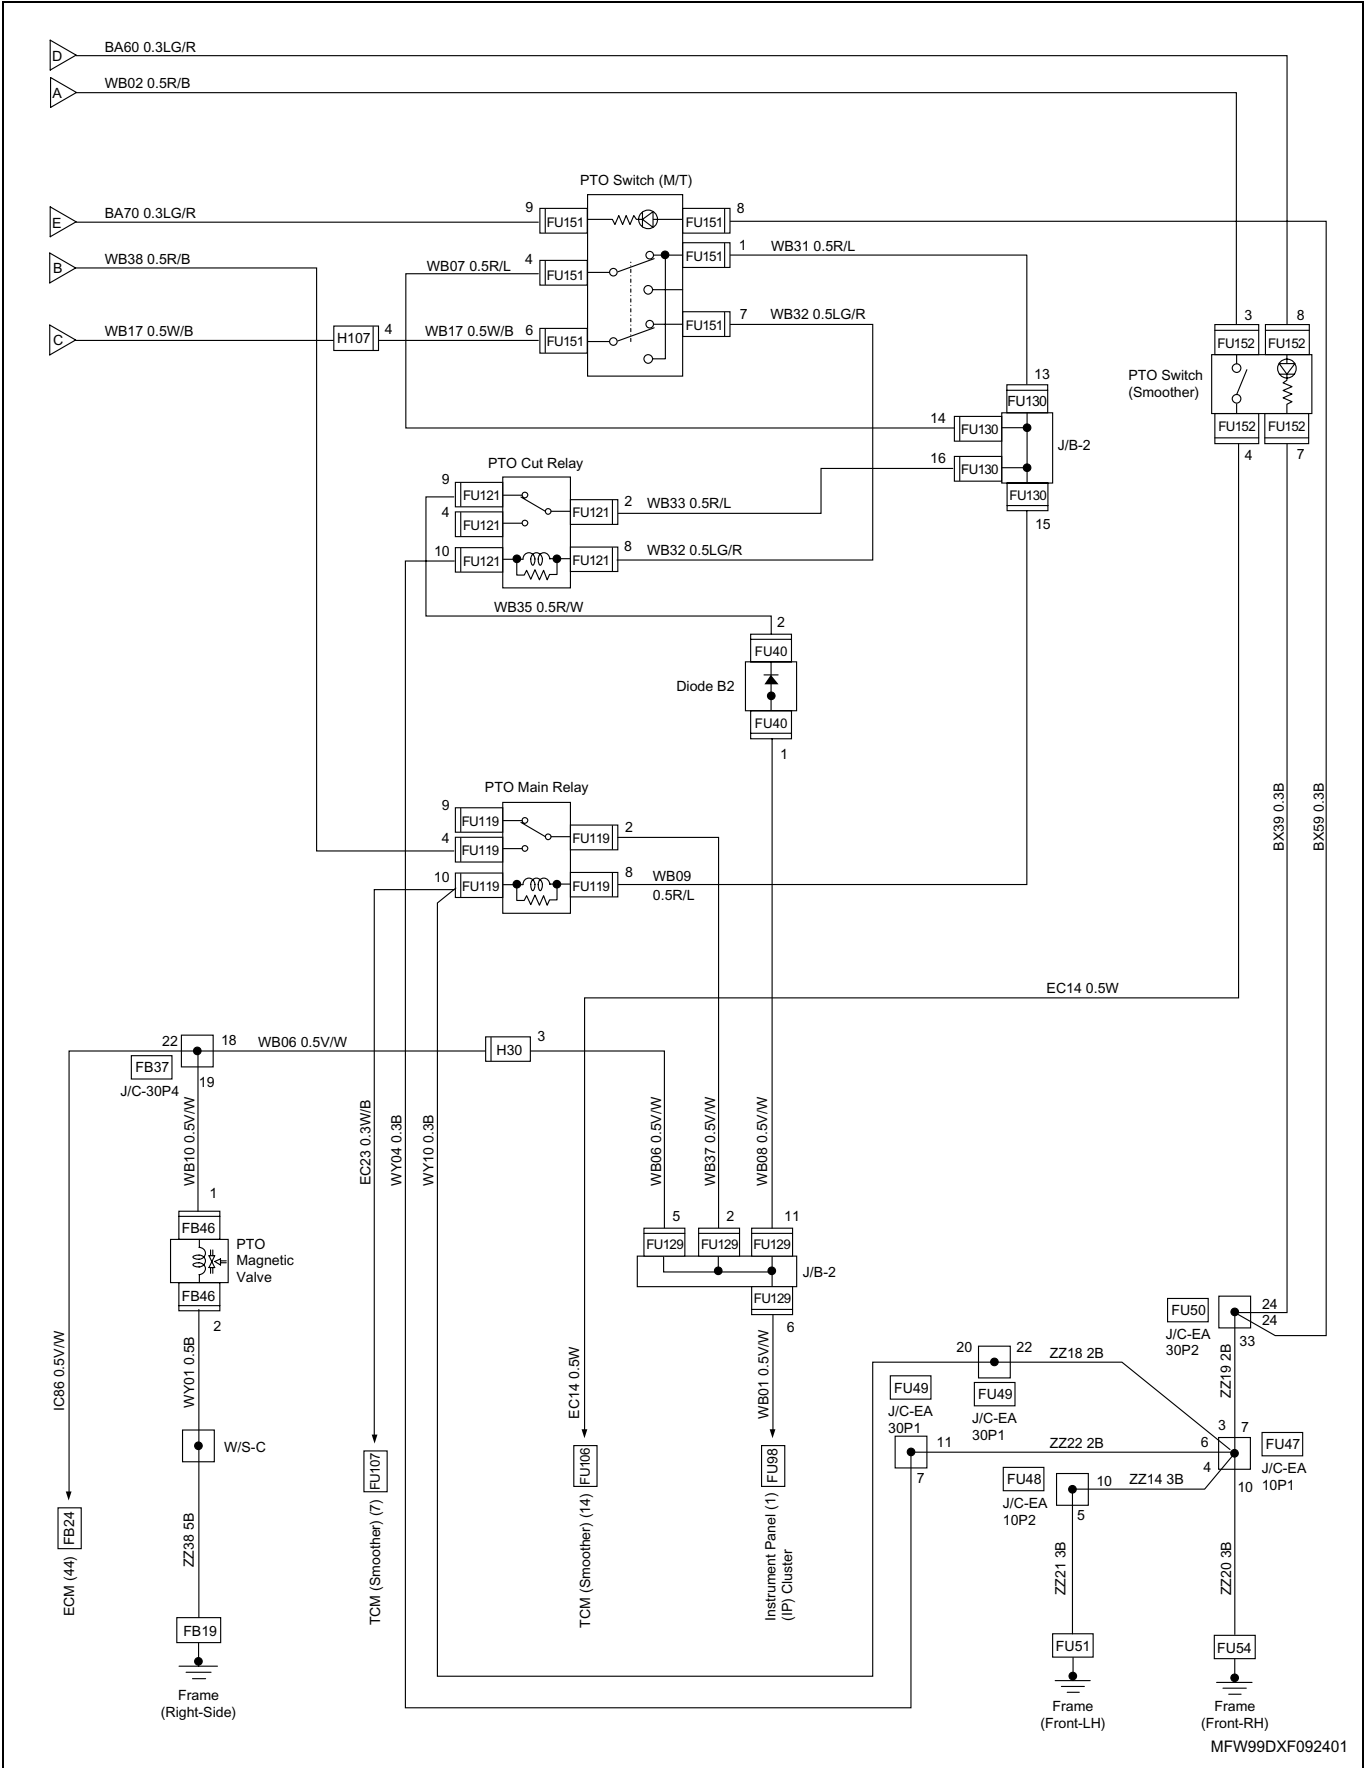(2/2)



Indonesia

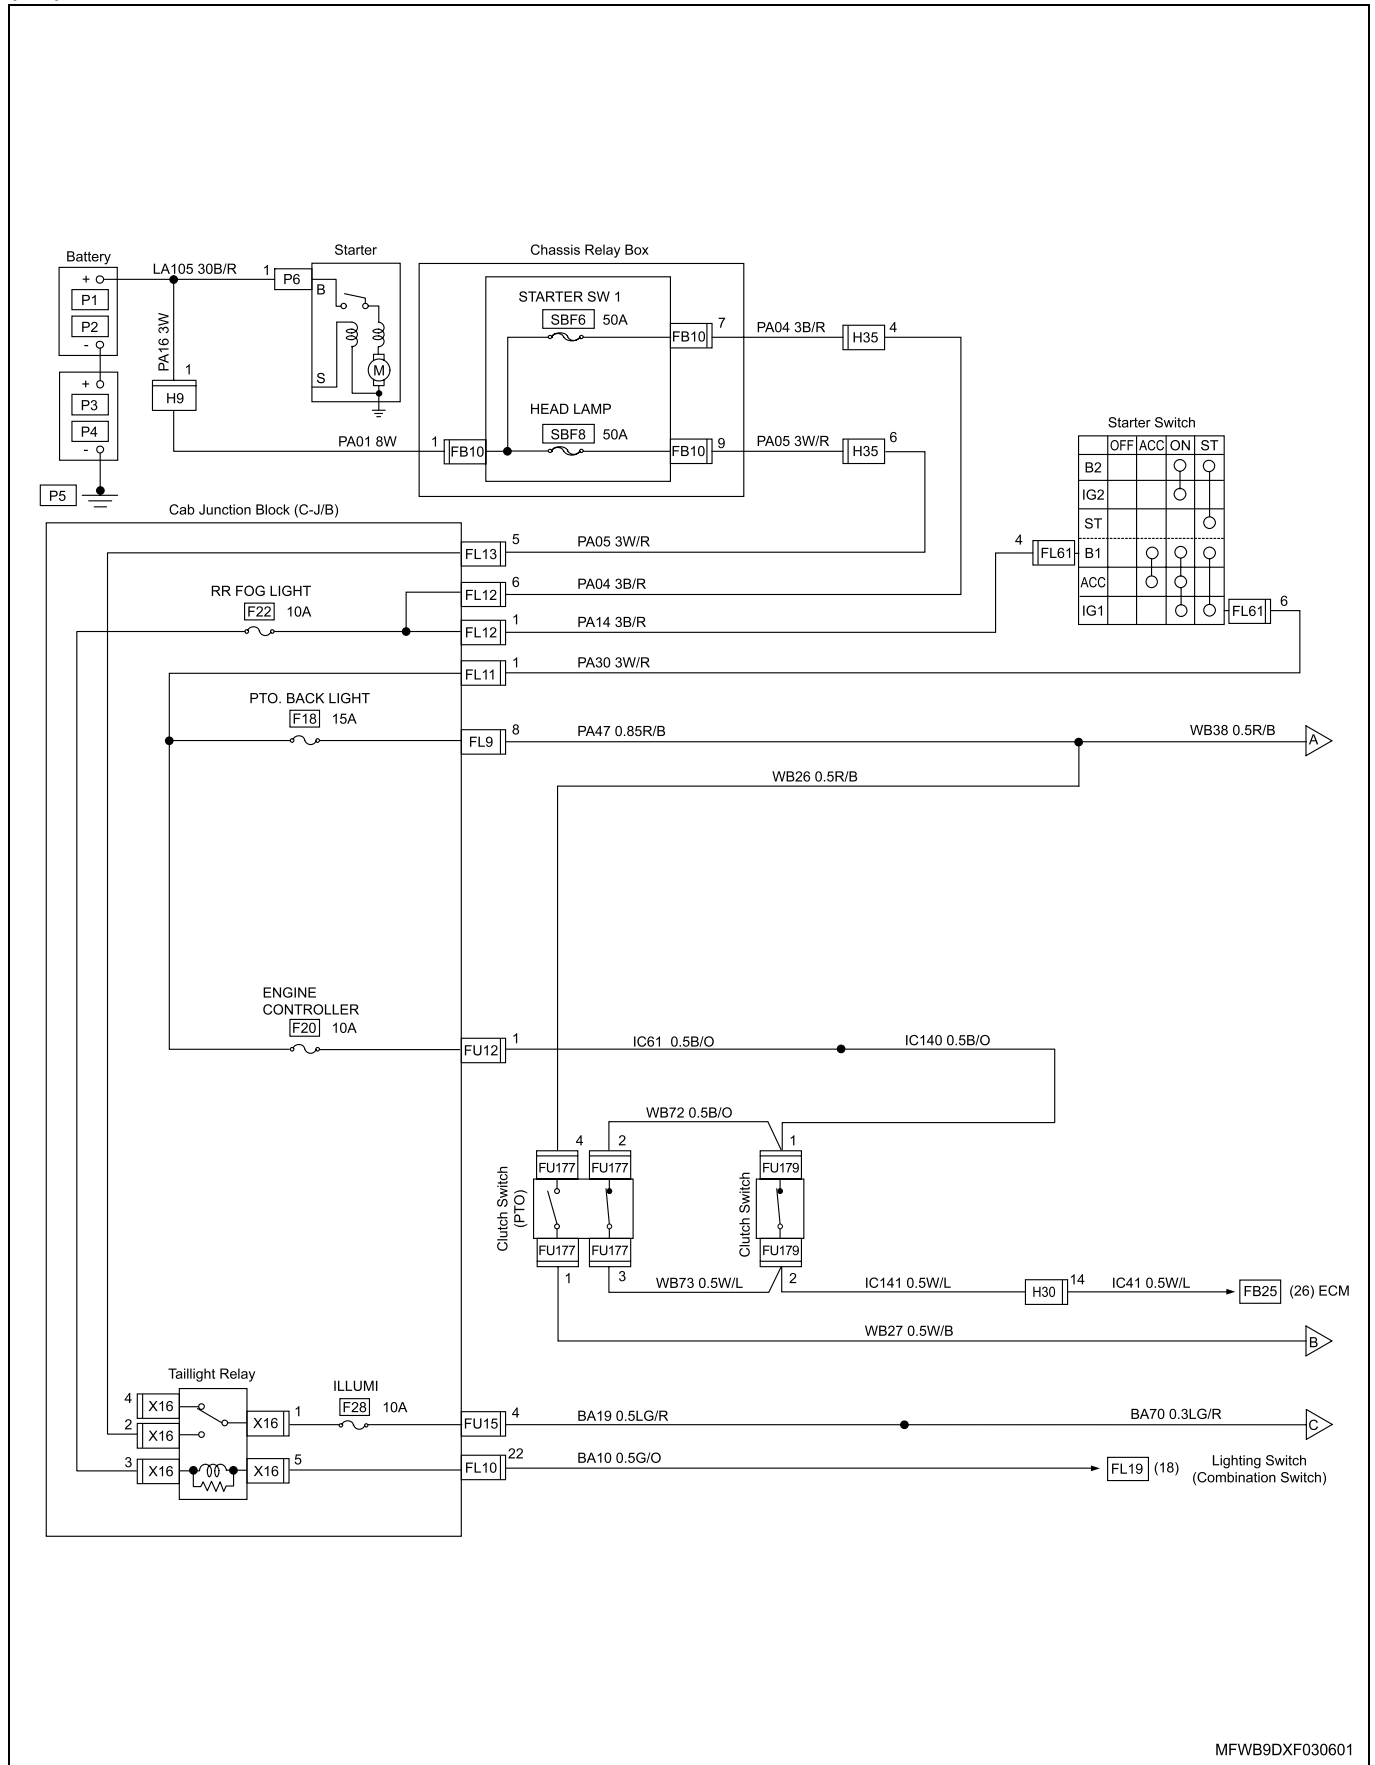(1/2)




(2/2)



Immobilizer Control Unit (ICU)

Circuit Diagram

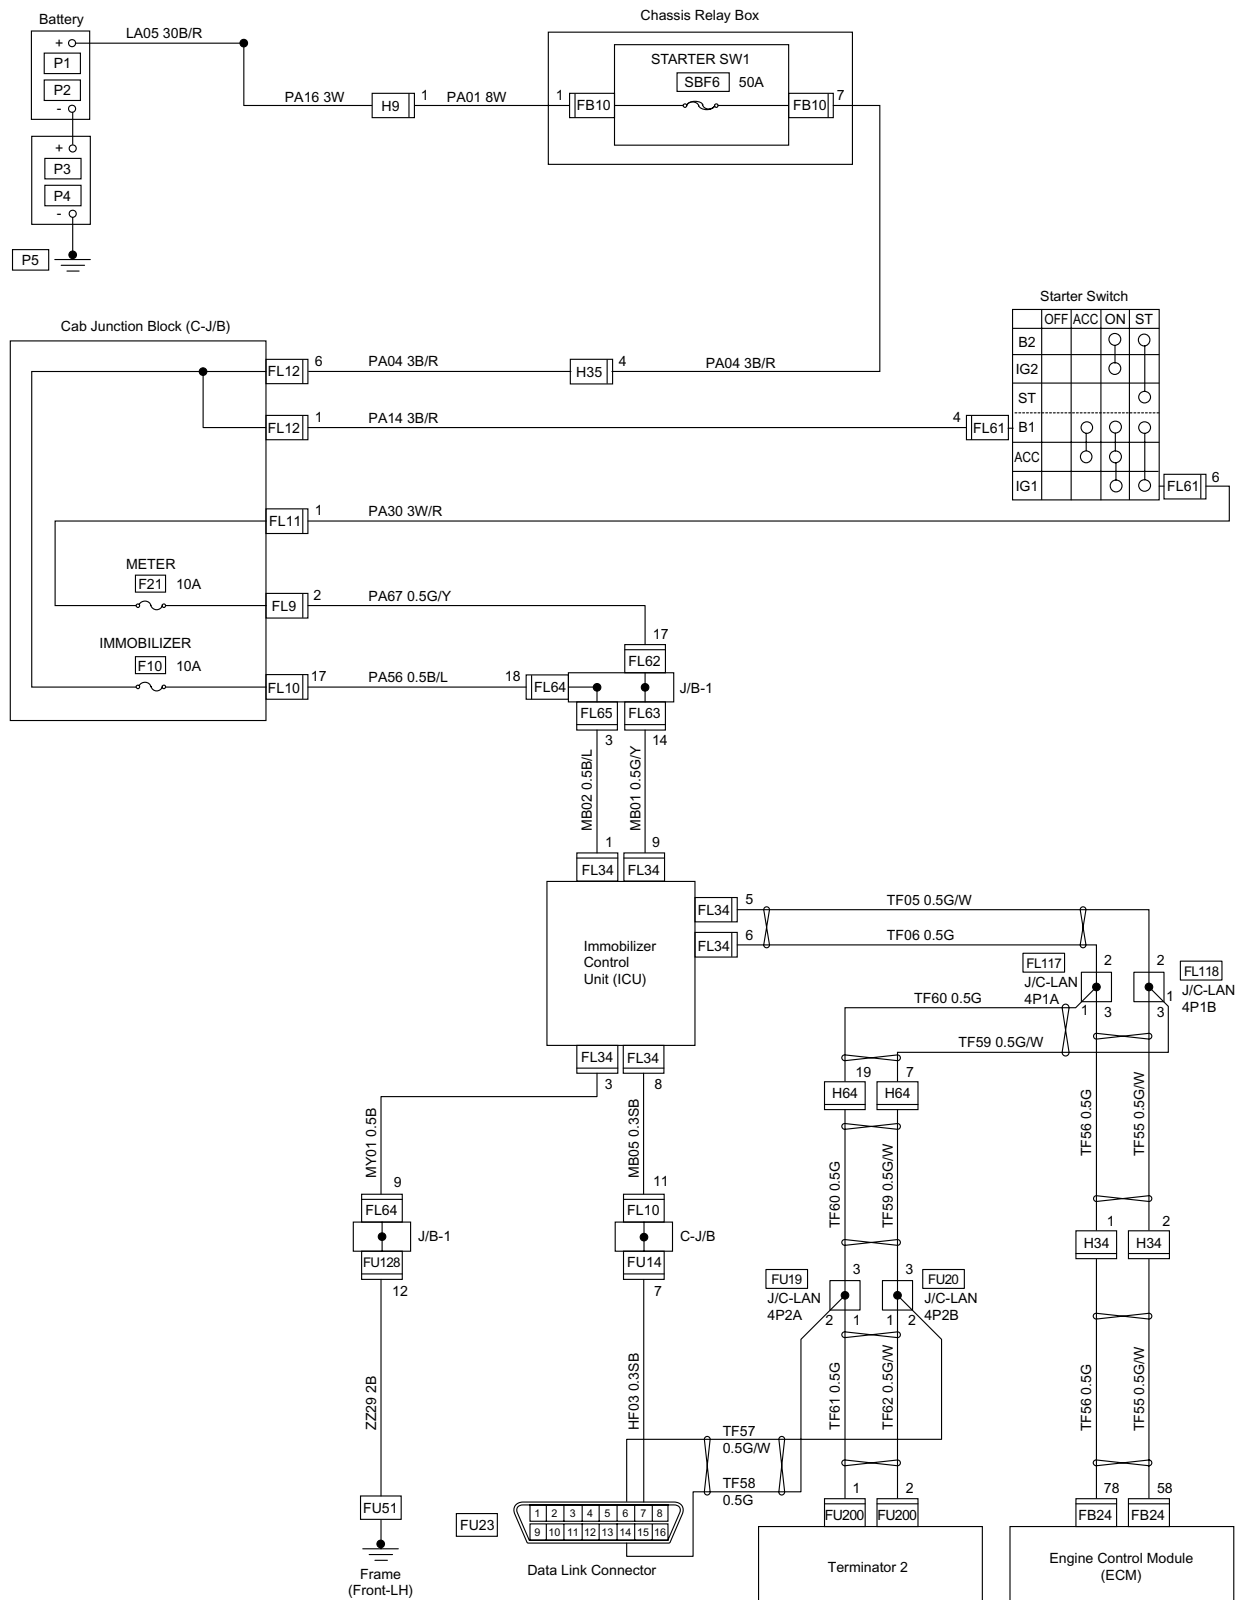
Except Indonesia



Tachograph

Circuit Diagram

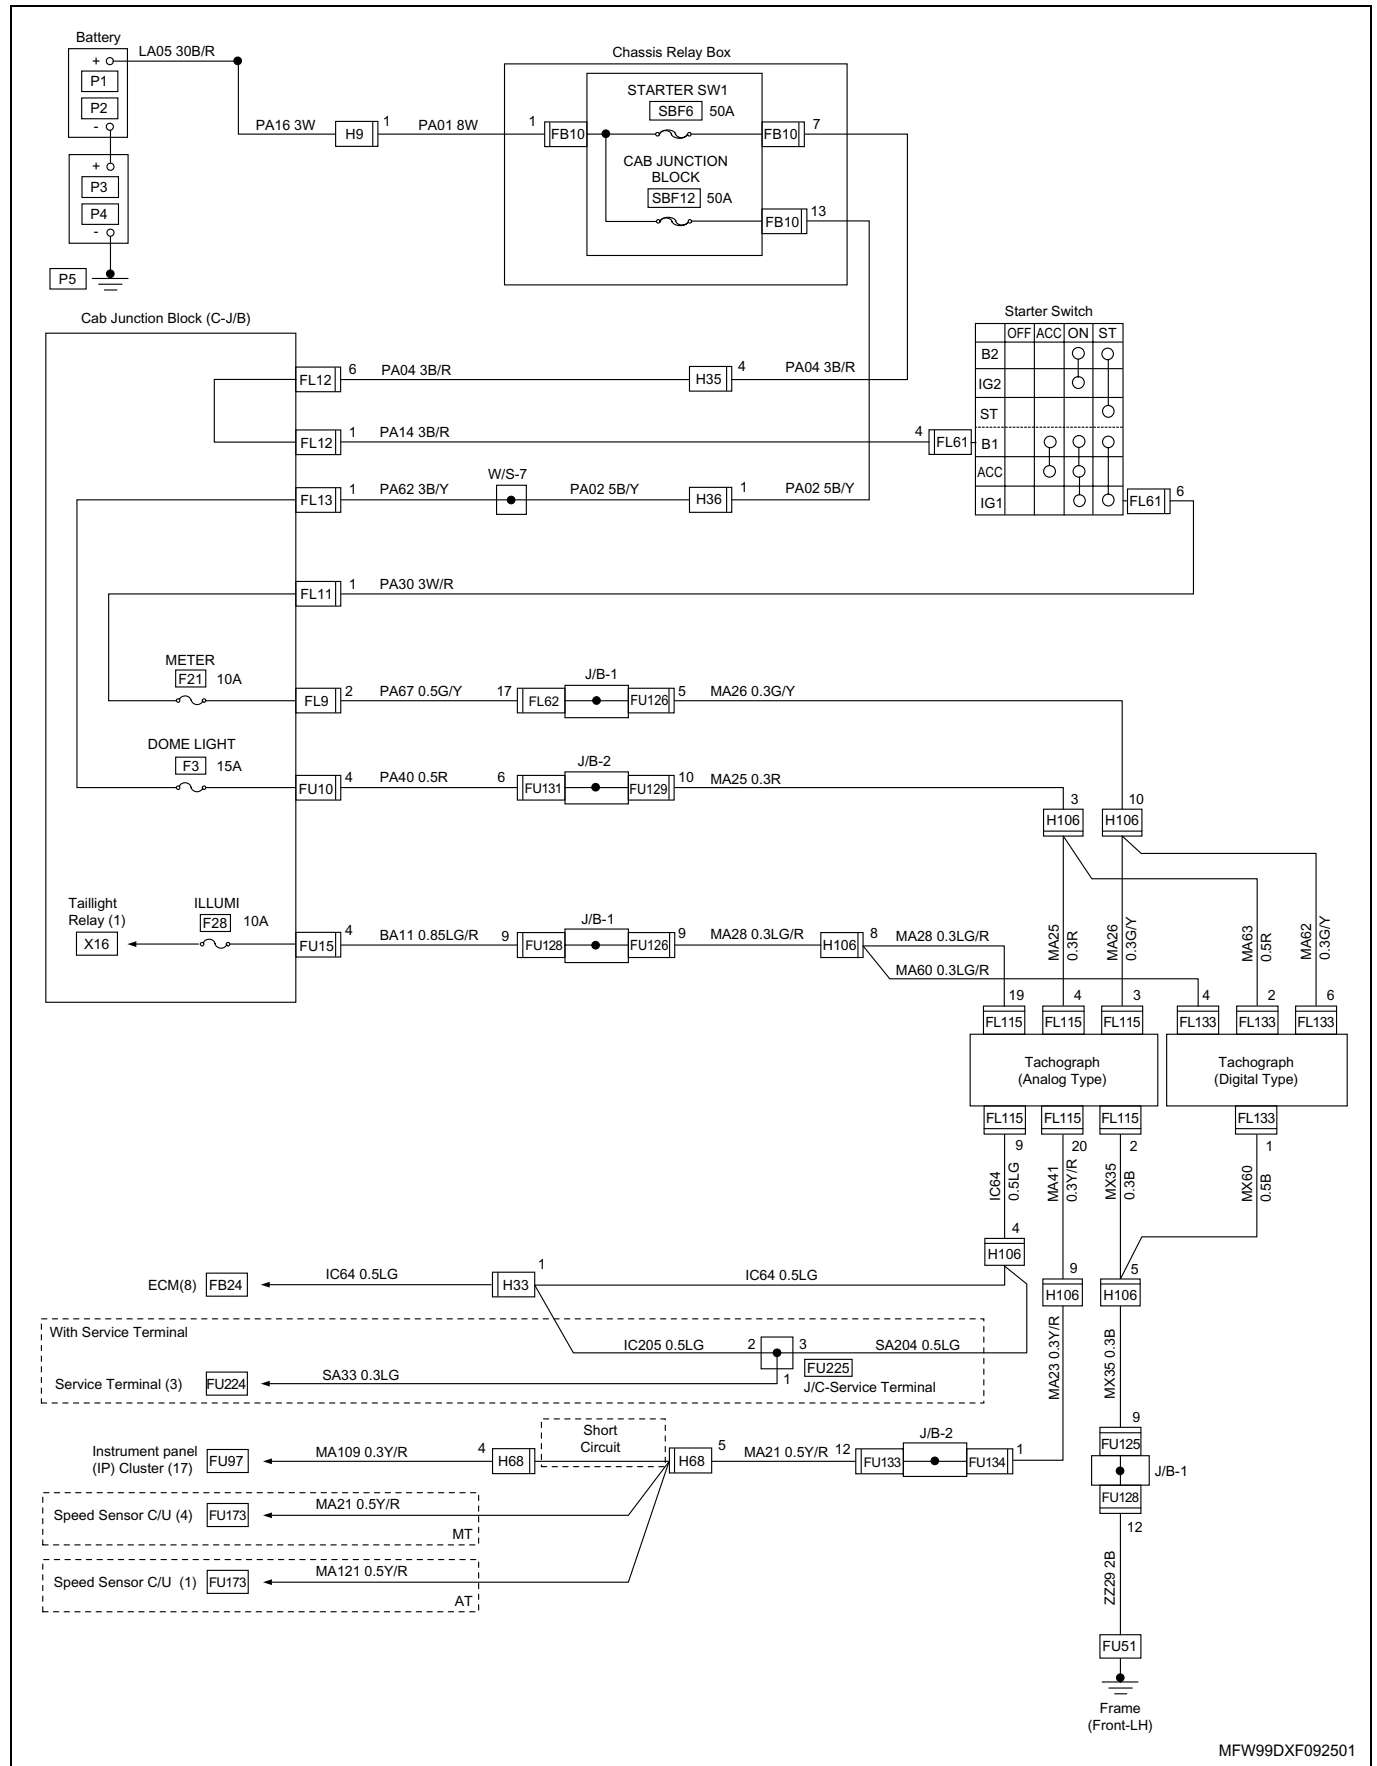
Except Indonesia



Service Terminal

Circuit Diagram

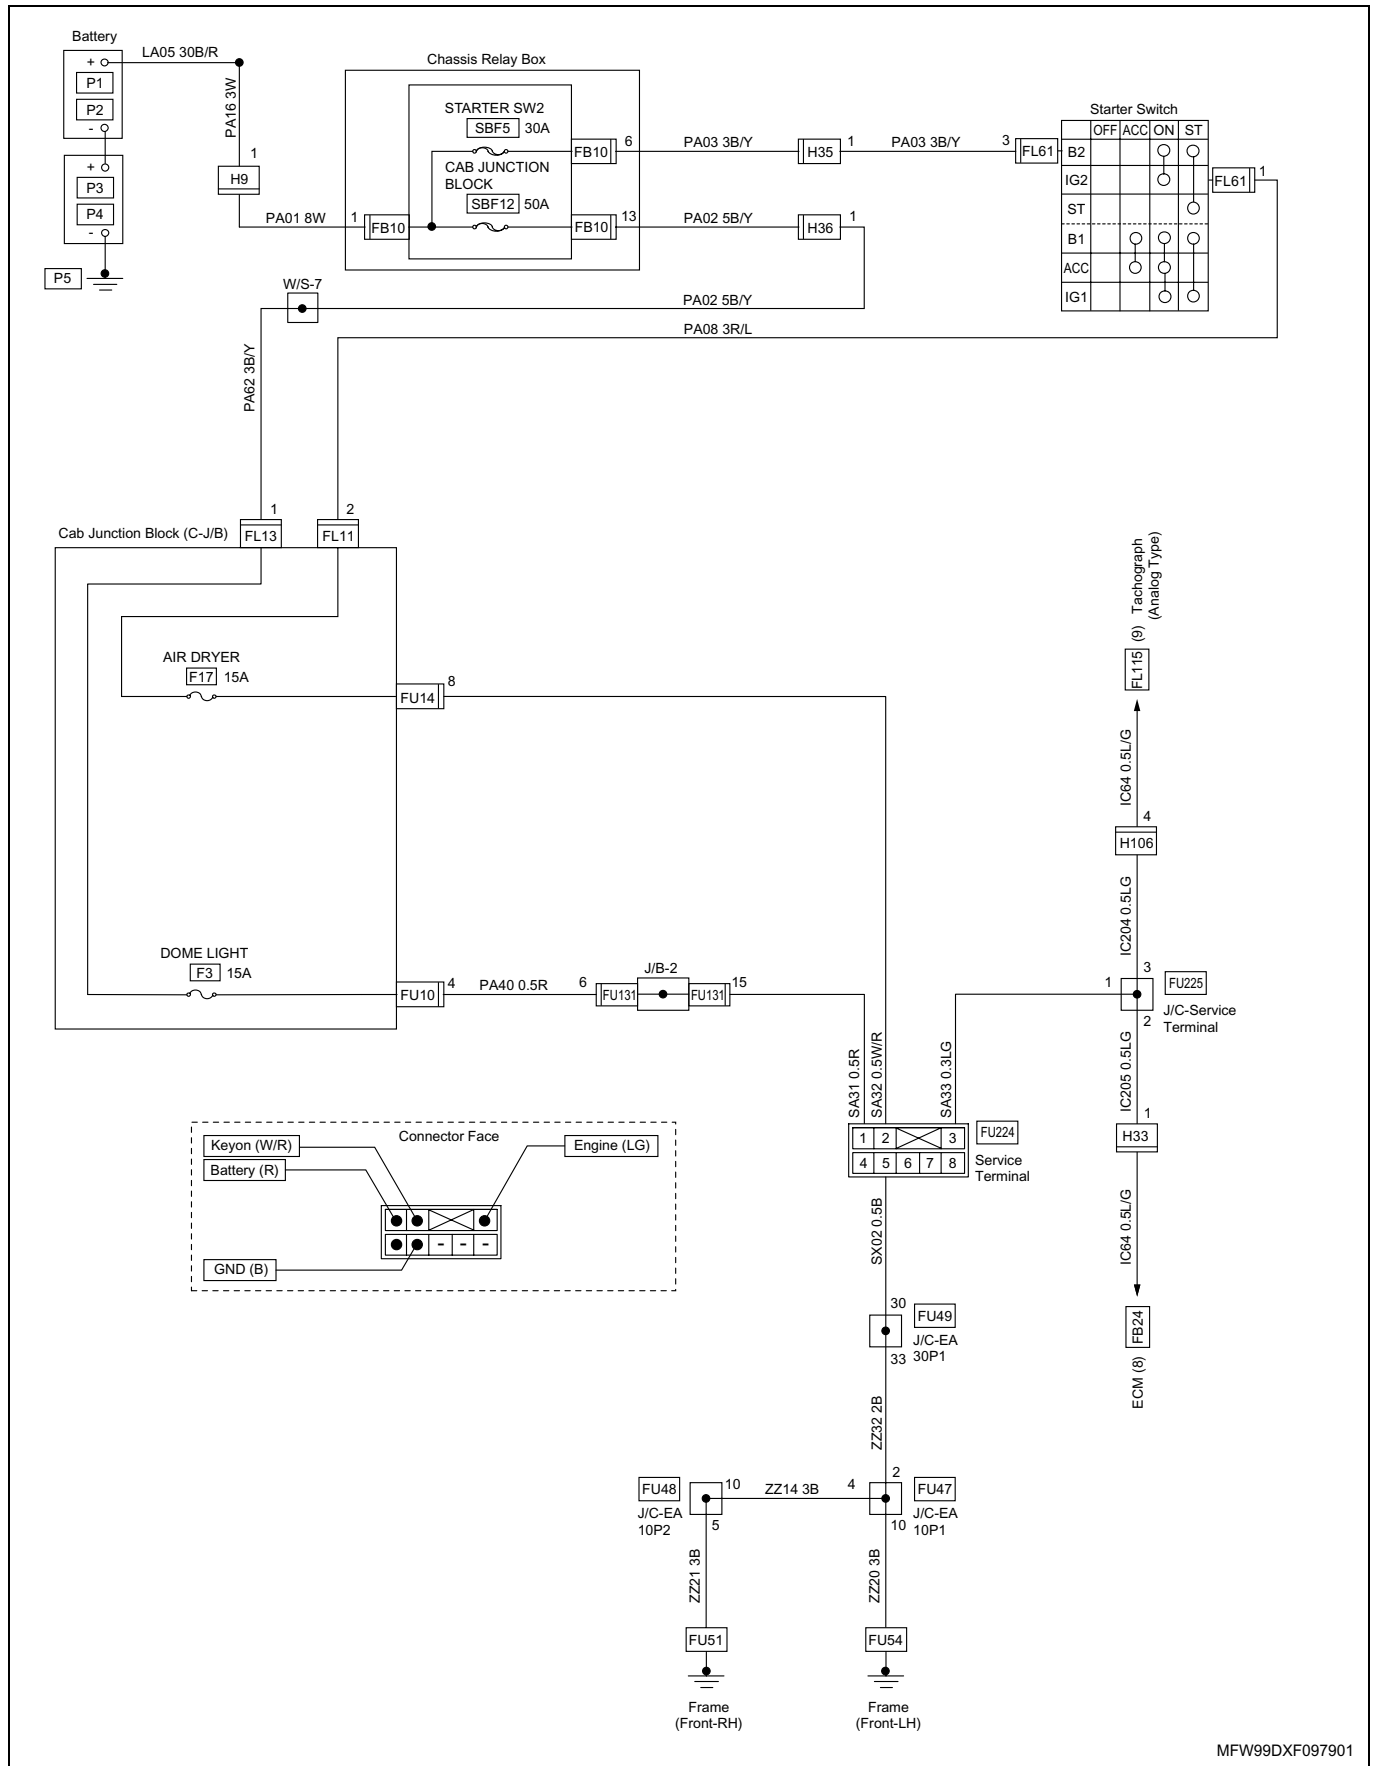Except Indonesia




Legend

FL1	Accelerator Pedal Position Sensor	FU107	Transmission Control Module (TCM) (Smoother)
FL4	SRS Coil	FU108	Transmission Control Module (TCM) (Smoother)
FL16	Cigarette Lighter	FU115	Gear Shifter Relay
FL17	Cigarette Lighter	FU116	Gear Shifter Relay
FL18	Cigarette Lighter	FU117	Gear Shifter Relay
FL19	Combination Switch	FU124	Clutch Stroke Sensor
FL25	Cab (Front-RH) GND	FU135	HSA Adjustment Switch
FL26	Cab (Front-RH) GND	FU136	A/C Switch
FL27	Cab (Front-RH) GND	FU137	ASR OFF Switch
FL28	Flasher Unit	FU138	Heater A/C Control Panel
FL33	Idle Up Volume	FU139	Headlight Washer Switch
FL34	Immobilizer Control Unit (ICU)	FU140	Center Differential Lock Switch
FL48	Audio	FU141	Inter Differential Lock Switch
FL51	RS232 ch1	FU142	DPD Switch
FL53	Satellite Sensor	FU143	Smoother Emergency Switch
FL61	Starter Switch	FU145	Front Fog Light Switch
FL73	Wiper & Exhaust Brake Switch	FU146	Front Differential Switch
FL79	Driver Airbag	FU147	Headlight Leveling Switch
FL87	Hazard Warning Flasher Switch	FU148	Mirror Heater Switch
FL96	Horn Switch	FU149	Rear Power Window Switch (LH)
FL97	Key Remind Switch	FU150	Rear Power Window Switch (RH)
FL101	DRM	FU151	PTO Switch (MT)
FL115	Analog Tachograph	FU152	PTO Switch (Smoother)
FL133	Digital Tachograph	FU153	Remote Control Mirror Switch
FU1	Mix Actuator	FU154	HSA Reset Switch
FU4	Auto-Air Conditioner Control Unit	FU158	Retractable Power Mirror Switch
FU9	HSA Control Unit	FU159	Stoplight Switch 1
FU23	Data Link Connector	FU160	Transfer Gear Control Switch
FU31	DC-DC Converter	FU162	Rear Power Window Lock Switch
FU33	Diode B1-4	FU163	Transmission Control Module (TCM) (AT)
FU37	Diode 1	FU166	Electronic Thermostat
FU44	Diode 8	FU170	Front Turn Signal Light (RH)
FU52	Frame (Front-RH) GND	FU173	Speed Sensor Control Unit
FU54	Frame (Front-RH) GND	FU175	Solar Radiation Sensor
FU56	Cab (Front-RH) GND	FU177	Clutch Switch (PTO)
FU60	Evaporator Temperature Sensor	FU178	Transfer Clutch Switch
FU62	Front Fog Light (RH)	FU179	Clutch Switch
FU64	Clearance Light (RH)	FU182	Diode EMR1
FU69	Fuse Block 1	FU183	Diode EMR2
FU71	Headlight Leveling Actuator (RH)	FU188	Memory Clear Switch
FU73	Headlight High (Halogen) (RH)	FU192	Horn LH (Spiral Type)
FU75	Headlight (RH)	FU193	Horn RH (Spiral Type)
FU77	Headlight High (Halogen) (RH)	FU198	Body Control Module (BCM)
FU81	Horn LH (Flat Type)	FU200	Terminator 2
FU82	Horn RH (Flat Type)	FU208	Cruise Main Switch
FU83	Inside Air Temperature Sensor	FU211	Dome Light Switch
FU95	Memory Clear Connector	FU224	Service Terminal
FU97	Instrument Panel (IP) Cluster	H12	Joint between Harnesses Connector
FU98	Instrument Panel (IP) Cluster	H14	Joint between Harnesses Connector
FU100	Mode Actuator	H16	Joint between Harnesses Connector
FU105	Transmission Control Module (TCM) (Smoother)	H21	Joint between Harnesses Connector
FU106	Transmission Control Module (TCM) (Smoother)	H22	Joint between Harnesses Connector

9D-242 Wiring System (RHD model)

H23	Joint between Harnesses Connector	H69	Joint between Harnesses Connector
H24	Joint between Harnesses Connector	H90	Joint between Harnesses Connector
H64	Joint between Harnesses Connector	H105	Joint between Harnesses Connector
H67	Joint between Harnesses Connector	H106	Joint between Harnesses Connector
H68	Joint between Harnesses Connector	H107	Joint between Harness Connector

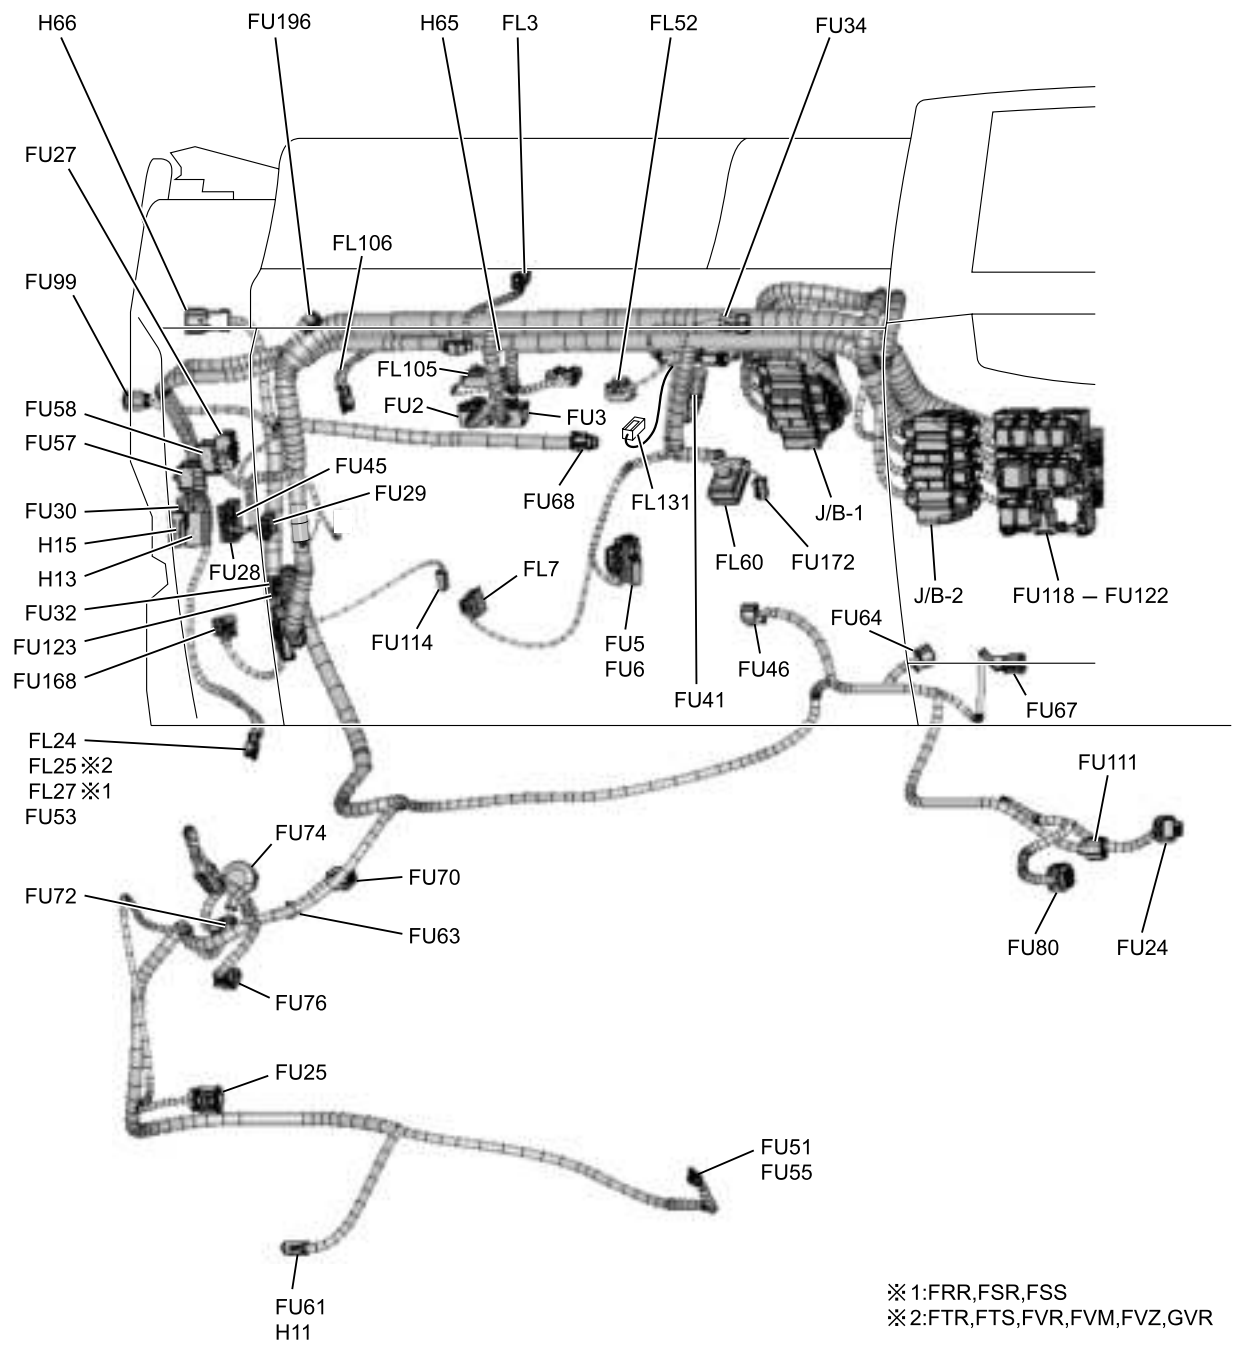
Body Harness (2/2)



Legend

FL3	Passenger Airbag	FU70	Headlight Leveling Actuator (LH)
FL7	Blower Motor	FU72	Headlight High (Halogen) (LH)
FL24	Cab (Front-LH) GND	FU74	Headlight (LH)
FL25	Cab (Front-LH) GND	FU76	Headlight Low (HID) (LH)
FL27	Cab (Front-LH) GND	FU80	Headlight Washer Control Unit
FL52	Barometric Pressure Sensor	FU99	Mirror (LH)
FL60	SRS Airbag Control Unit	FU111	Outside Air Temperature Sensor
FL105	Body Control Module (BCM)	FU114	Intake Actuator
FL106	Intermittent Relay	FU118	Trailer Stop Relay / Rear Power Window Relay
FL131	Resistor	FU119	PTO Main Relay / Exhaust Brake Cut Relay
FU2	ABS/ASR Control Unit	(1)	
FU3	ABS/ASR Control Unit	FU119	Condenser Fan Relay
FU5	BLC	(2)	
FU6	Blower Resistor	FU120	Transfer Low Relay / Trailer Information 2 Relay
FU24	Headlight Washer Motor	(1)	
FU25	Condenser Fan Motor	FU120	Exhaust Brake Control Relay
FU27	Air Suspension Control Unit	(2)	
FU28	Air Suspension Control Unit	FU121	Exhaust Brake Cut Relay / Neutral Relay
FU29	Retractable Power Mirror Control Unit	(1)	
FU30	ABS Trailer Information	FU121	—
FU32	Diode B1-2	(2)	
FU34	Diode B2-1	FU122	Trailer Flasher Relay / Trailer Information 1 Relay
FU41	Diode 4	(1)	
FU45	Distributor	FU122	—
FU46	Pressure Switch	(2)	
FU51	Frame (Front-LH) GND	FU123	Speed Control Unit
FU53	Frame (Front-RH) GND	FU168	Front Turn Signal Light (LH)
FU55	Frame (Front-LH) GND	FU172	Coolant Temperature Sensor
FU57	Range Inter Lock Control Unit	FU196	Door Lock Controller
FU58	Gate Inter Lock Control Unit	H11	Joint between Harnesses Connector
FU61	Front Fog Light (LH)	H13	Joint between Harnesses Connector
FU63	Clearance Light (LH)	H15	Joint between Harnesses Connector
FU64	Clearance Light (RH)	H65	Joint between Harnesses Connector
FU67	Washer Motor	H66	Joint between Harnesses Connector
FU68	Wiper Motor		

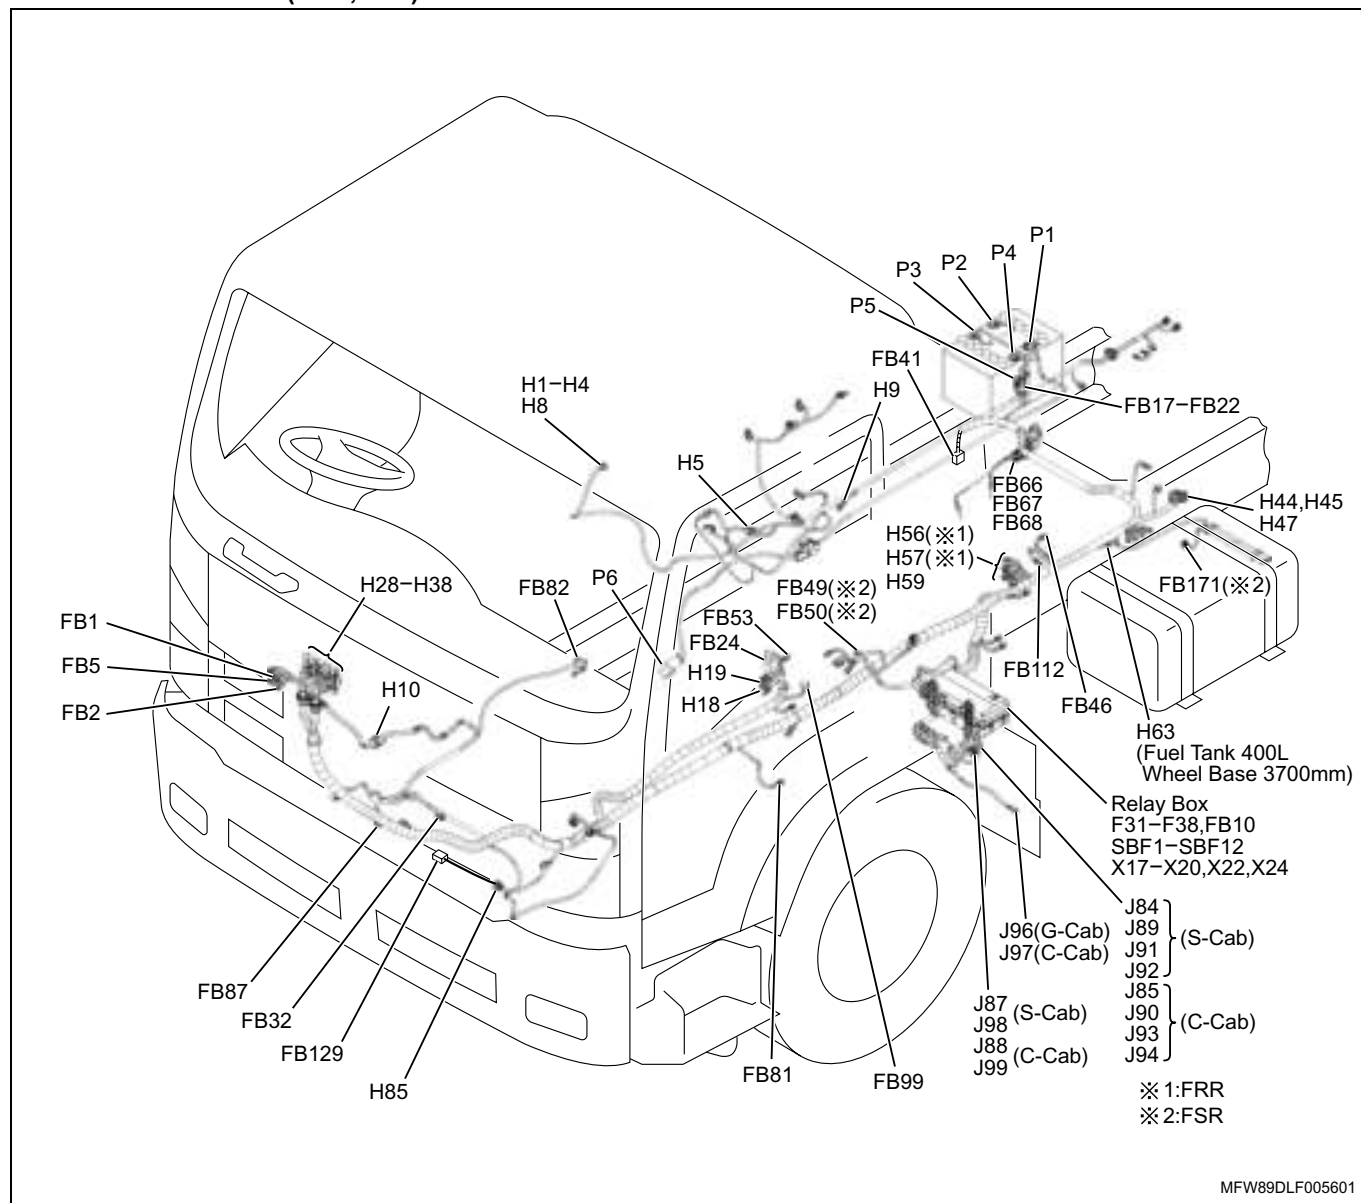Frame Front Harness (FRR,FSR)




Legend

F31	POWER SOURCE Fuse	FB24	Engine Control Module (ECM)
F32	TCM Fuse	FB32	HSA Valve (6HK1Crew Cab)
F33	ECM MAIN Fuse	FB41	Exhaust Brake Magnetic Valve
F34	—	FB46	PTO Magnetic Valve
F35	—	FB49	Starter Relay (6HK1)
F36	—	FB50	Starter Relay (6HK1)
F37	AIR CONDITIONER Fuse	FB53	Dropping Resistor
F38	—	FB66	Exhaust Differential Pressure Sensor
FB1	Air Pressure Sensor 1	FB67	Exhaust Temperature Sensor 1
FB2	Air Pressure Sensor 2	FB68	Exhaust Temperature Sensor 2
FB5	Stoplight Switch 2	FB81	Wheel Speed Sensor (Front Left)
FB10	Chassis Relay Box	FB82	Wheel Speed Sensor (Front Right)
FB17	Frame (Right-Side) GND	FB87	Clutch Oil Pressure Switch
FB18	Frame (Right-Side) GND	FB99	Water Separator Switch
FB19	Frame (Right-Side) GND	FB112	Exhaust Throttle Magnetic Valve
FB20	Frame (Right-Side) GND	FB129	All Speed Accel Sensor
FB21	Frame (Right-Side) GND	FB171	Fuel Tank Unit (Left-Side)
FB22	Frame (Right-Side) GND	H1	Joint between Harnesses Connector

9D-246 Wiring System (RHD model)

H2	Joint between Harnesses Connector	J90	Cab Power Tilt Buzzer (Crew Cab)
H3	Joint between Harnesses Connector	J91	Cab Power Tilt Relay (Day Cab)
H4	Joint between Harnesses Connector	J92	Cab Power Tilt Relay (Day Cab)
H5	Joint between Harnesses Connector	J93	Cab Power Tilt Relay (Crew Cab)
H8	Joint between Harnesses Connector	J94	Cab Power Tilt Relay (Crew Cab)
H9	Joint between Harnesses Connector	J96	Cab Power Tilt Switch (Day Cab)
H10	Joint between Harnesses Connector	J97	Cab Power Tilt Switch (Crew Cab)
H18	Joint between Harnesses Connector	J98	Up Down Switch (Day Cab)
H19	Joint between Harnesses Connector	J99	Up Down Switch (Crew Cab)
H28	Joint between Harnesses Connector	P1	Battery(+)
H29	Joint between Harnesses Connector	P2	Battery (-)
H30	Joint between Harnesses Connector	P3	Battery (+)
H31	Joint between Harnesses Connector	P4	Battery (-)
H32	Joint between Harnesses Connector	P5	Battery (Frame) GND
H33	Joint between Harnesses Connector	P6	Starter
H34	Joint between Harnesses Connector	SBF1	ECM Fuse
H35	Joint between Harnesses Connector	SBF2	STARTER Fuse
H36	Joint between Harnesses Connector	SBF3	—
H37	Joint between Harnesses Connector	SBF4	GLOW Fuse
H38	Joint between Harnesses Connector	SBF5	STARTER SW2 Fuse
H44	Joint between Harnesses Connector	SBF6	STARTER SW1 Fuse
H45	Joint between Harnesses Connector	SBF7	Smoother Fuse
H47	Joint between Harnesses Connector	SBF8	HEAD LAMP Fuse
H56	Joint between Harnesses Connector	SBF9	—
H57	Joint between Harnesses Connector	SBF10	WIPER & H/AC Fuse
H59	Joint between Harnesses Connector	SBF11	ABS Fuse (4HK1)
H63	Joint between Harnesses Connector	SBF12	CAB JUNCTION BLOCK Fuse
H85	Joint between Harnesses Connector	X17	Starter Relay
J84	Cab (Front-LH) GND (Day Cab)	X18	ECM Main Relay
J85	Cab (Front-LH) GND (Crew Cab)	X19	Glow Relay
J87	Cab Power Tilt Pump (Day Cab)	X20	A/C Compressor Relay
J88	Cab Power Tilt Pump (Crew Cab)	X22	Starter Cut Relay
J89	Cab Power Tilt Buzzer (Day Cab)	X24	Diode 3

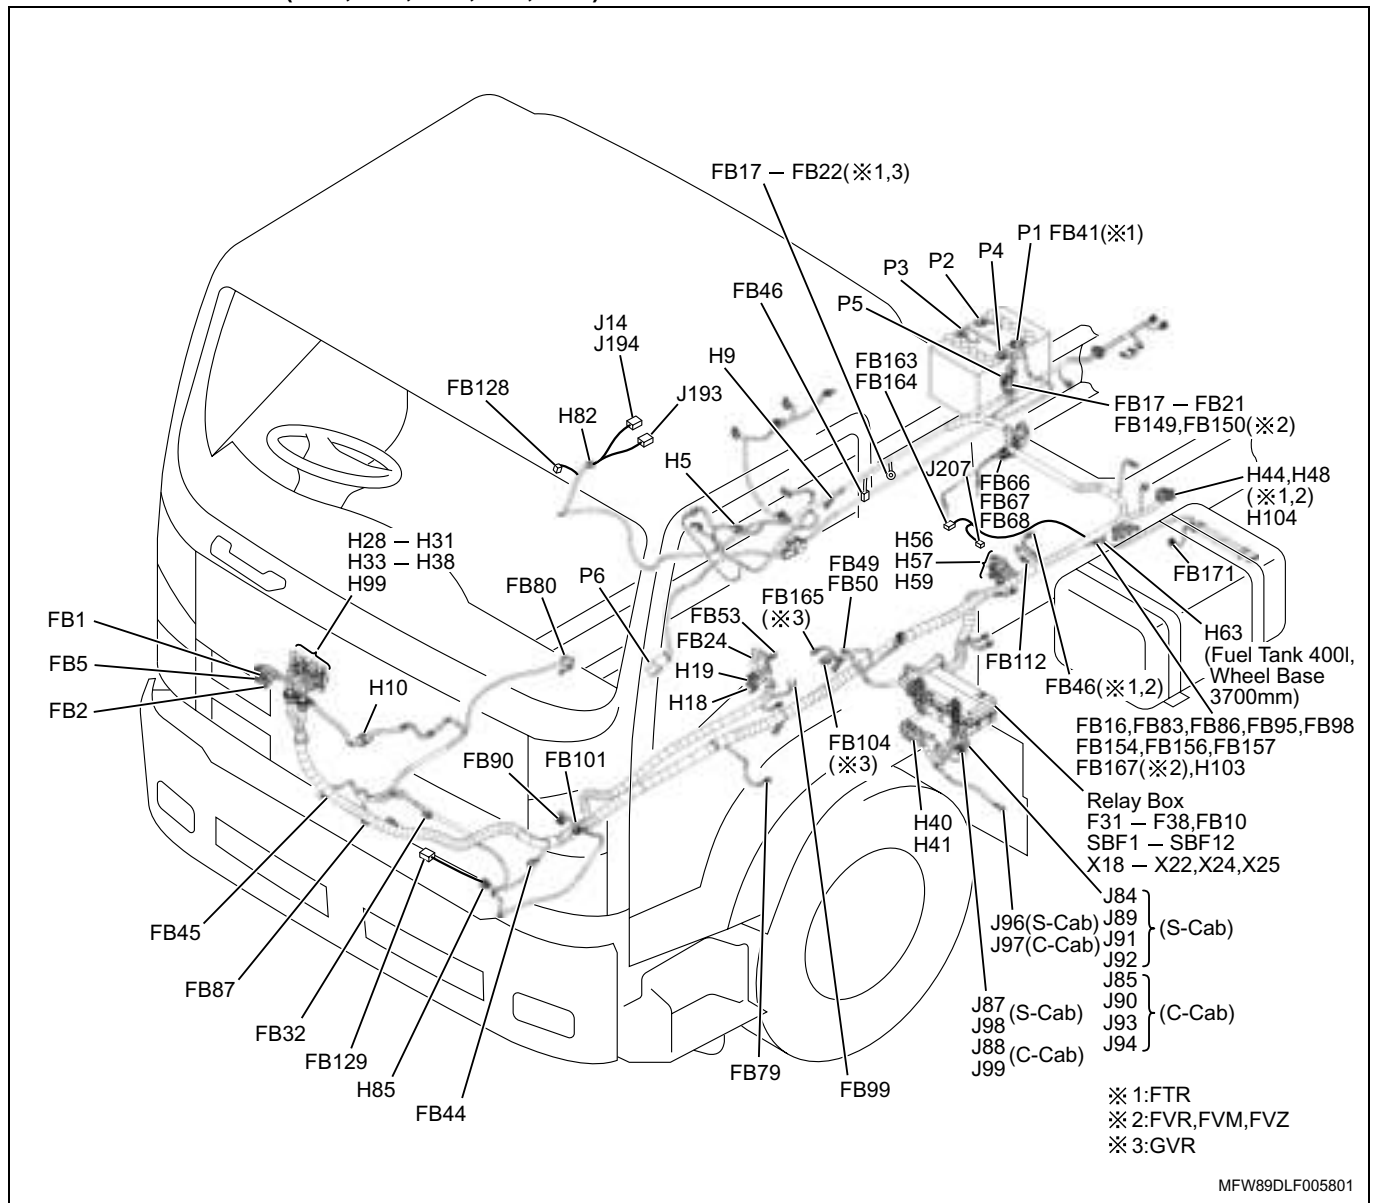Frame Front Harness (FTR,FVR,FVM,FVZ,GVR)




Legend

F31	POWER SOURCE Fuse	FB22	Frame (Right-Side) GND
F32	TCM Fuse	FB24	Engine Control Module (ECM)
F33	ECM MAIN Fuse	FB32	HSA Valve
F34	—	FB41	Exhaust Brake Magnetic Valve
F35	—	FB44	Modulator (Front-Left)
F36	—	FB45	Modulator (Front-Right)
F37	AIR CONDITIONER Fuse	FB46	PTO Magnetic Valve
F38	—	FB49	Starter Relay (6HK1)
FB1	Air Pressure Sensor 1	FB50	Starter Relay (6HK1)
FB2	Air Pressure Sensor 2	FB53	Dropping Resistor
FB5	Stoplight Switch 2	FB66	Exhaust Differential Pressure Sensor
FB10	Chassis Relay Box	FB67	Exhaust Temperature Sensor 1
FB16	Valve Box	FB68	Exhaust Temperature Sensor 2
FB17	Frame (Right-Side) GND	FB79	Wheel Speed Sensor (Front-Left)
FB18	Frame (Right-Side) GND	FB80	Wheel Speed Sensor (Front-Right)
FB19	Frame (Right-Side) GND	FB83	Impulse Sensor
FB20	Frame (Right-Side) GND	FB86	Backup Light Switch
FB21	Frame (Right-Side) GND	FB87	Clutch Oil Pressure Switch

9D-248 Wiring System (RHD model)

FB90	Down Limit Switch	H103	Joint between Harnesses Connector
FB95	Neutral Switch (ZF)	H104	Joint between Harnesses Connector
FB98	Low Renge Switch (ZF)	J14	MAF & IAT Sensor
FB99	Water Separator Switch	J84	Cab (Front-LH) GND (Day Cab)
FB101	Up Limit Switch	J85	Cab (Front-LH) GND (Crew Cab)
FB104	Trailer Socket	J87	Cab Power Tilt Pump (Day Cab)
FB112	Exhaust Throttle Magnetic Valve	J88	Cab Power Tilt Pump (Crew Cab)
FB128	MAF & IAT Sensor (Crew Cab)	J89	Cab Power Tilt Buzzer (Day Cab)
FB129	All Speed Accel Sensor	J90	Cab Power Tilt Buzzer (Crew Cab)
FB149	Frame (Right-Side) GND	J91	Cab Power Tilt Relay (Day Cab)
FB150	Frame (Right-Side) GND	J92	Cab Power Tilt Relay (Day Cab)
FB154	Power Assist Magnetic Valve (ZF)	J93	Cab Power Tilt Relay (Crew Cab)
FB156	Vehicle Speed Sensor (A/T)	J94	Cab Power Tilt Relay (Crew Cab)
FB157	Vehicle Speed Sensor (FULLER)	J96	Cab Power Tilt Switch (Day Cab)
FB163	Neutral Switch (M/T)	J97	Cab Power Tilt Switch (Crew Cab)
FB164	Neutral Switch (FULLER)	J98	Up Down Switch (Day Cab)
FB165	Trailer Cock Switch (GVR)	J99	Up Down Switch (Crew Cab)
FB167	A/T	J193	Air Flow Sensor
FB171	Fuel Tank Unit (LH)	J194	IAT Sensor (Euro2)
H5	Joint between Harnesses Connector	J207	Backup Light Switch (M/T)
H9	Joint between Harnesses Connector	P1	Battery(+)
H10	Joint between Harnesses Connector	P2	Battery (-)
H18	Joint between Harnesses Connector	P3	Battery(+)
H19	Joint between Harnesses Connector	P4	Battery (-)
H28	Joint between Harnesses Connector	P5	Battery (Frame) GND
H29	Joint between Harnesses Connector	P6	Starter
H30	Joint between Harnesses Connector	SBF1	ECM Fuse
H31	Joint between Harnesses Connector	SBF2	STARTER Fuse
H33	Joint between Harnesses Connector	SBF3	—
H34	Joint between Harnesses Connector	SBF4	GLOW Fuse
H35	Joint between Harnesses Connector	SBF5	STARTER SW2 Fuse
H36	Joint between Harnesses Connector	SBF6	STARTER SW1 Fuse
H37	Joint between Harnesses Connector	SBF7	Smoother Fuse
H38	Joint between Harnesses Connector	SBF8	HEAD LAMP Fuse
H40	Joint between Harnesses Connector	SBF9	—
H41	Joint between Harnesses Connector	SBF10	WIPER & H/AC Fuse
H44	Joint between Harnesses Connector	SBF11	ABS Fuse (4HK1)
H48	Joint between Harnesses Connector	SBF12	CAB JUNCTION BLOCK Fuse
H56	Joint between Harnesses Connector	X18	ECM Main Relay
H57	Joint between Harnesses Connector	X19	Glow Relay
H59	Joint between Harnesses Connector	X20	A/C Compressor Relay
H63	Joint between Harnesses Connector	X21	Buzzer Cut Relay
H82	Joint between Harnesses Connector	X22	Starter Cut Relay
H85	Joint between Harnesses Connector	X24	Diode 3
H99	Joint between Harnesses Connector	X25	Diode 13

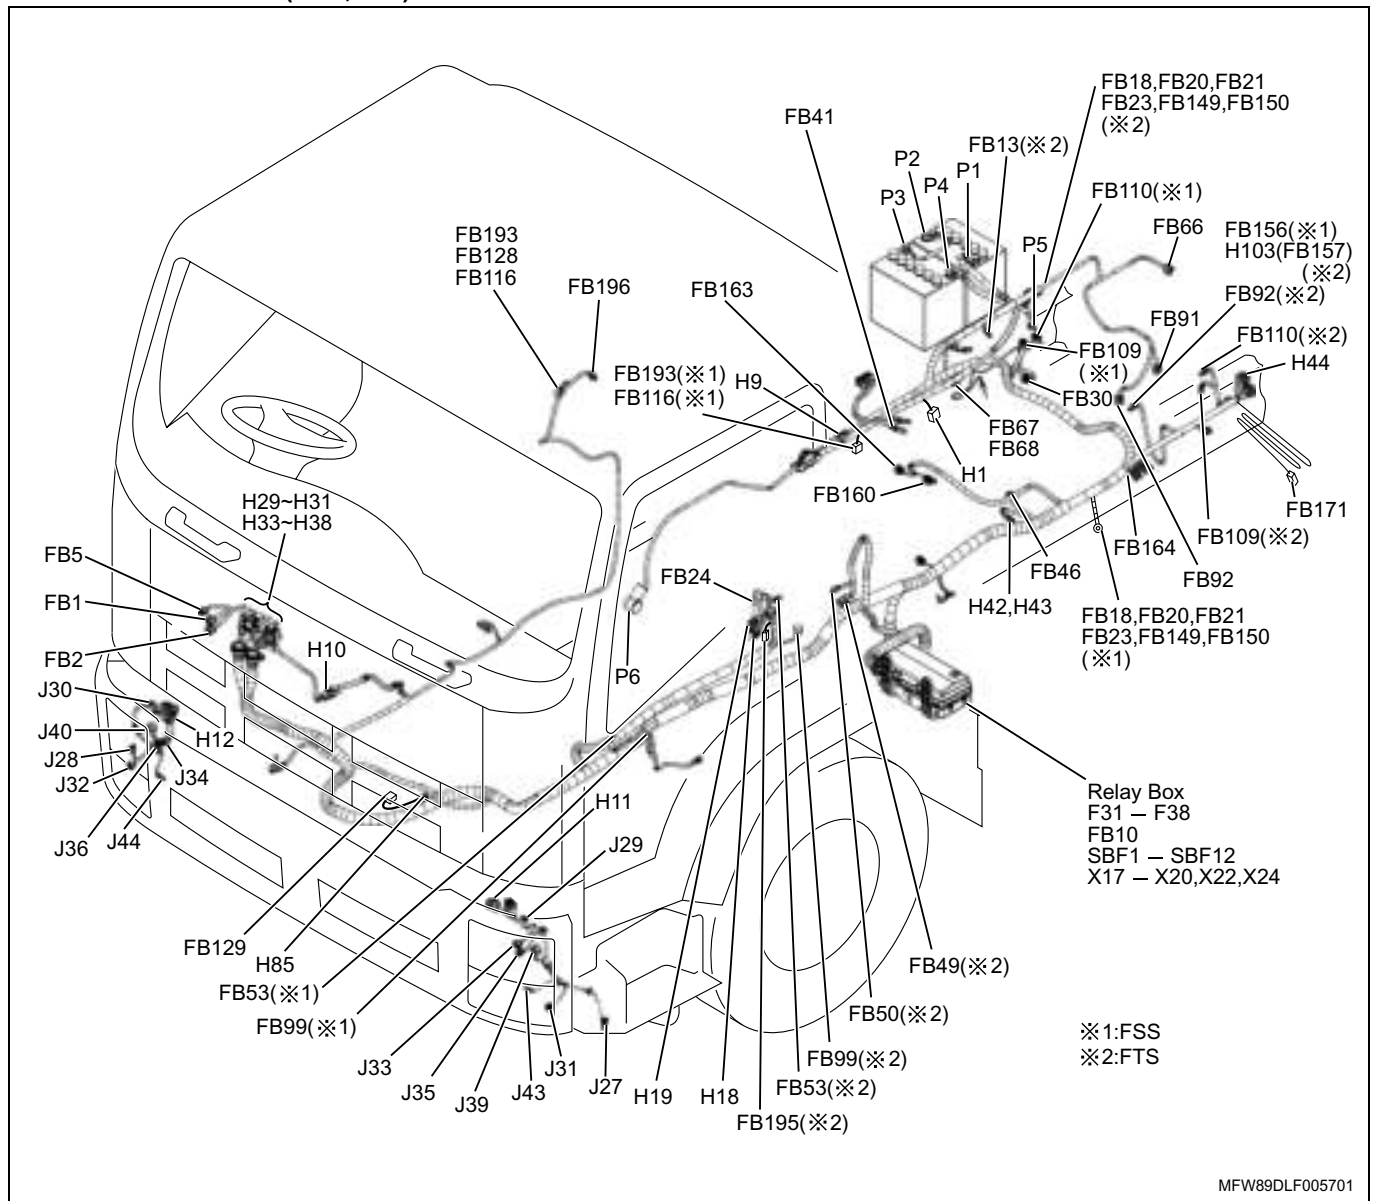Frame Front Harness (FSS,FTS)




Legend

F31	POWER SOURCE Fuse	FB30	Front Differential Magnetic Valve
F32	TCM Fuse	FB41	Exhaust Brake Magnetic Valve
F33	ECM MAIN Fuse	FB46	PTO Magnetic Valve
F34	—	FB49	Starter Relay (6HK1)
F35	—	FB50	Starter Relay (6HK1)
F36	—	FB53	Dropping Resistor
F37	AIR CONDITIONER Fuse	FB66	Exhaust Differential Pressure Sensor
F38	—	FB67	Exhaust Temperature Sensor 1
FB1	Air Pressure Sensor 1	FB68	Exhaust Temperature Sensor 2
FB2	Air Pressure Sensor 2	FB91	Front Differential Switch
FB5	Stoplight Switch 2	FB92	Transfer Low Switch
FB10	Chassis Relay Box	FB99	Water Separator Switch
FB13	Center Differential Lock Magnetic Valve	FB109	High Magnetic Valve
FB18	Frame (Right-Side) GND	FB110	Low Magnetic Valve
FB20	Frame (Right-Side) GND	FB116	Air Flow Sensor 2
FB21	Frame (Right-Side) GND	FB128	MAF & IAT Sensor (Euro4)
FB23	Frame (Right-Side) GND	FB129	All Speed Accel Sensor
FB24	Engine Control Module (ECM)	FB149	Frame (Right-Side) GND

9D-250 Wiring System (RHD model)


FB150	Frame (Right-Side) GND	J33	Clearance Light (LH) (Bumper Installation)
FB156	Vehicle Speed Sensor (FSS)		
FB157	Vehicle Speed Sensor (FULLER)	J34	Clearance Light (RH) (Bumper Installation)
FB160	Backup Light Switch		
FB163	Neutral Switch(4WD)	J35	Headlight Leveling Actuator (LH) (Bumper Installation)
FB164	Neutral Switch (FULLER)		
FB171	Fuel Tank Unit (LH)	J36	Headlight Leveling Actuator (RH) (Bumper Installation)
FB193	Air Flow Sensor (Euro2)		
FB195	Terminator (FTS Euro2)	J39	Headlight High (Halogen) (LH) (Bumper Headlight Type)
FB196	IAT Sensor (Euro2)		
H1	Joint between Harnesses Connector	J40	Headlight High (Halogen) (RH) (Bumper Headlight Type)
H9	Joint between Harnesses Connector		
H10	Joint between Harnesses Connector	J43	Front Turn Signal Light (LH) (Bumper Installation)
H11	Joint between Harnesses Connector		
H12	Joint between Harnesses Connector	J44	Front Turn Signal Light (RH) (Bumper Installation)
H18	Joint between Harnesses Connector		
H19	Joint between Harnesses Connector	P1	Battery(+)
H29	Joint between Harnesses Connector	P2	Battery (-)
H30	Joint between Harnesses Connector	P3	Battery(+)
H31	Joint between Harnesses Connector	P4	Battery (-)
H33	Joint between Harnesses Connector	P5	Battery (Frame) GND
H34	Joint between Harnesses Connector	P6	Starter
H35	Joint between Harnesses Connector	SBF1	ECM Fuse
H36	Joint between Harnesses Connector	SBF2	STARTER Fuse
H37	Joint between Harnesses Connector	SBF3	—
H38	Joint between Harnesses Connector	SBF4	GLOW Fuse
H42	Joint between Harnesses Connector	SBF5	STARTER SW2 Fuse
H43	Joint between Harnesses Connector	SBF6	STARTER SW1 Fuse
H44	Joint between Harnesses Connector	SBF7	Smoother Fuse
H85	Joint between Harnesses Connector	SBF8	HEAD LAMP Fuse
H103	Joint between Harnesses Connector	SBF9	—
J27	Cornering Light (LH) (Bumper Installation)	SBF10	WIPER & H/AC Fuse
		SBF11	ABS Fuse (4HK1)
J28	Cornering Light (RH) (Bumper Installation)	SBF12	CAB JUNCTION BLOCK Fuse
		X17	Starter Relay (4HK1)
J29	J/C-EBUL8P	X18	ECM Main Relay
J30	J/C-EBUR8P	X19	Glow Relay
J31	Front Fog Light (LH) (Bumper Installation)	X20	A/C Compressor Relay
		X22	Starter Cut Relay
J32	Front Fog Light (RH) (Bumper Installation)	X24	Diode 3

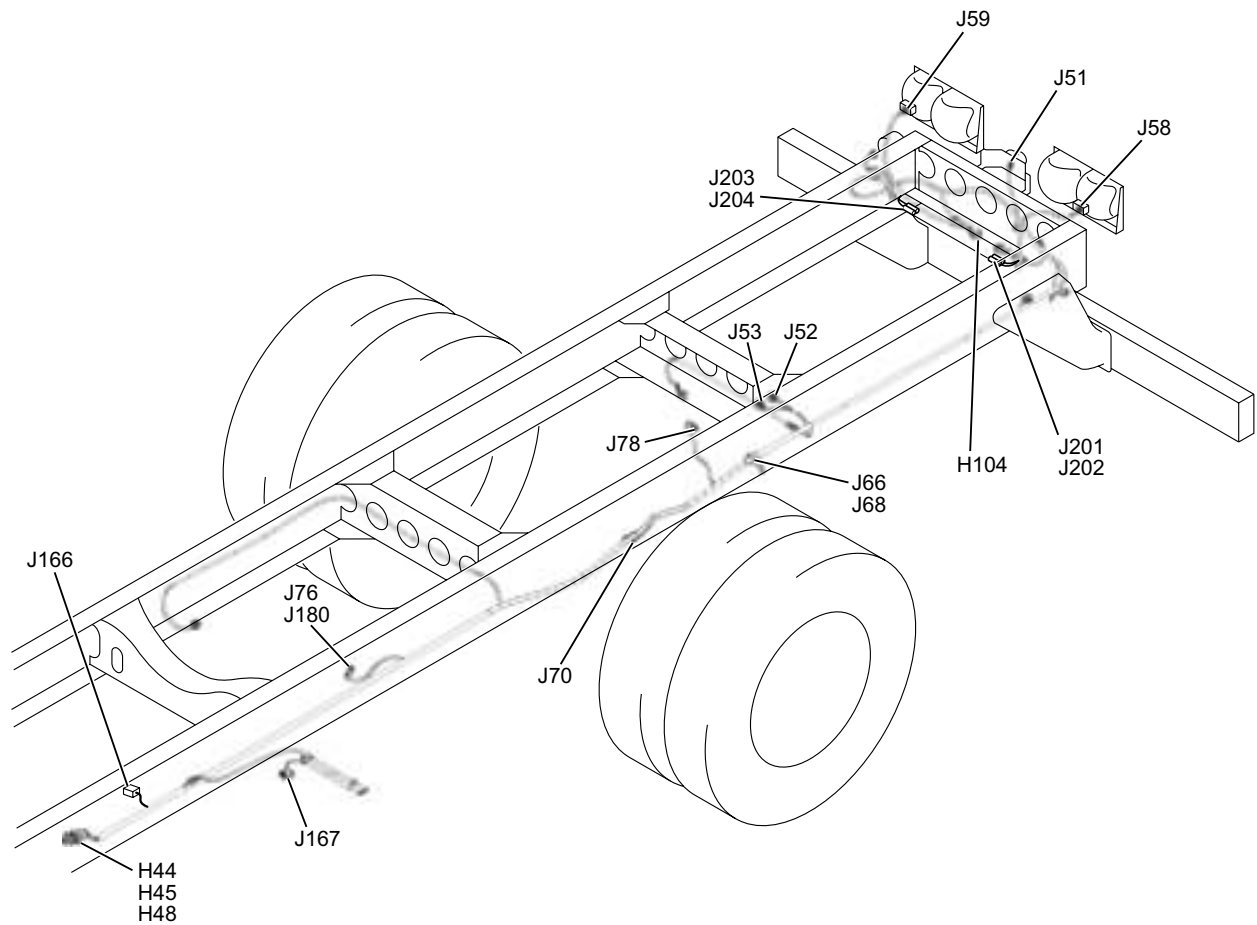Frame Rear Harness (Leaf Suspension)

MFW99DLF003801

Legend

H44	Joint between Harnesses Connector	J70	Wheel Speed Sensor (Rear)
H45	Joint between Harnesses Connector	J76	Air Low Pressure Switch
H48	Joint between Harnesses Connector	J78	Wheel Parking Brake Switch
H104	Joint between Harnesses Connector	J166	Inter Differential Lock Magnetic Valve
J51	License Plate Light	J167	Fuel Tank Unit (Rear)
J52	Modulator (Rear-Left)	J180	Air Low Pressure Switch (Australia)
J53	Modulator (Rear-Right)	J201	Tail Spare (LH)
J58	Rear Combination Light (LH)	J202	Tail Spare (LH) GND
J59	Rear Combination Light (RH)	J203	Tail Spare (RH)
J66	Wheel Speed Sensor (Rear-Left)	J204	Tail Spare(RH) GND
J68	Wheel Speed Sensor (Rear-Right)		

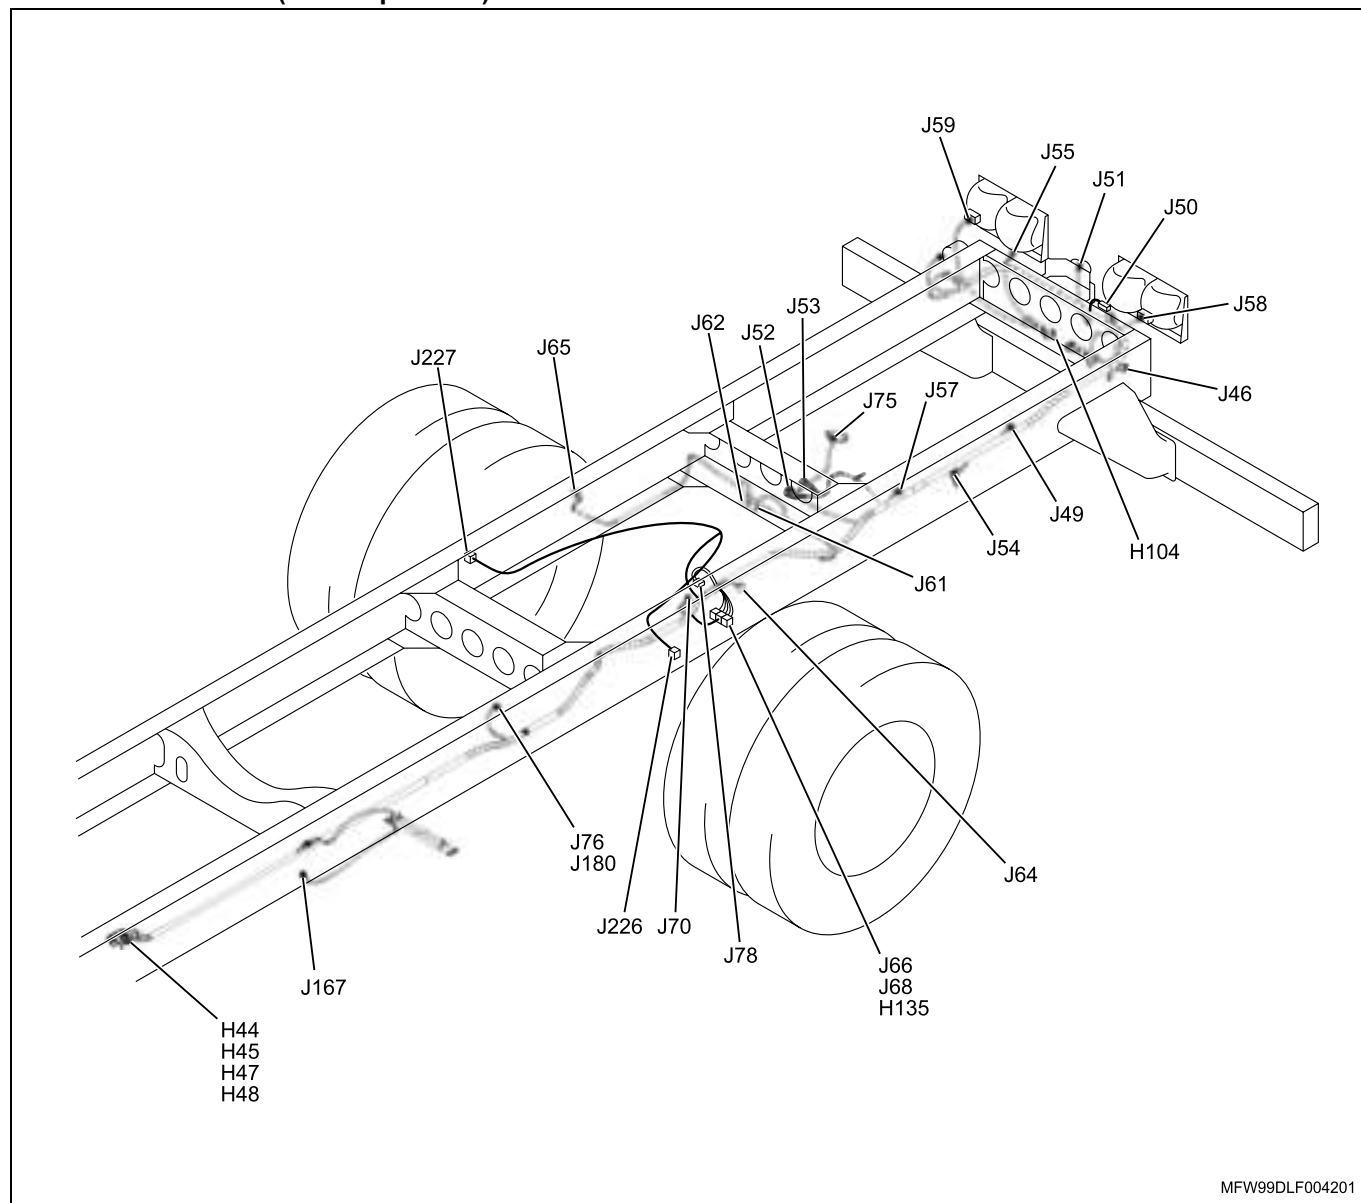
Frame Rear Harness (Air Suspension)


MFV99DLF004201

Legend

H44	Joint between Harnesses Connector	J59	Rear Combination Light (RH)
H45	Joint between Harnesses Connector	J61	Air Pressure Sensor (Front Left)
H47	Joint between Harnesses Connector	J62	Air Pressure Sensor (Front Right)
H48	Joint between Harnesses Connector	J64	Height Sensor (Rear Left)
H104	Joint between Harnesses Connector	J65	Height Sensor (Rear Right)
H135	Joint between Harnesses Connector	J66	Wheel Speed Sensor (Rear-Left)
J46	Air Suspension Buzzer	J68	Wheel Speed Sensor (Rear-Right)
J49	J/C-8P2	J70	Wheel Speed Sensor (Rear)
J50	J/C-8P1	J75	Air Low Pressure Switch
J51	License Plate Light	J76	Air Low Pressure Switch
J52	Modulator (Rear-Left)	J78	Wheel Parking Brake Switch
J53	Modulator (Rear-Right)	J167	Fuel Tank Unit (Rear)
J54	Air Suspension Magnetic Valve	J180	Air Low Pressure Switch (Australia)
J55	Remote Control (External)	J226	Brake Wear Indicator (Rear-LH)
J57	J/C-RH6P2	J227	Brake Wear Indicator (Rear-RH)
J58	Rear Combination Light (LH)		

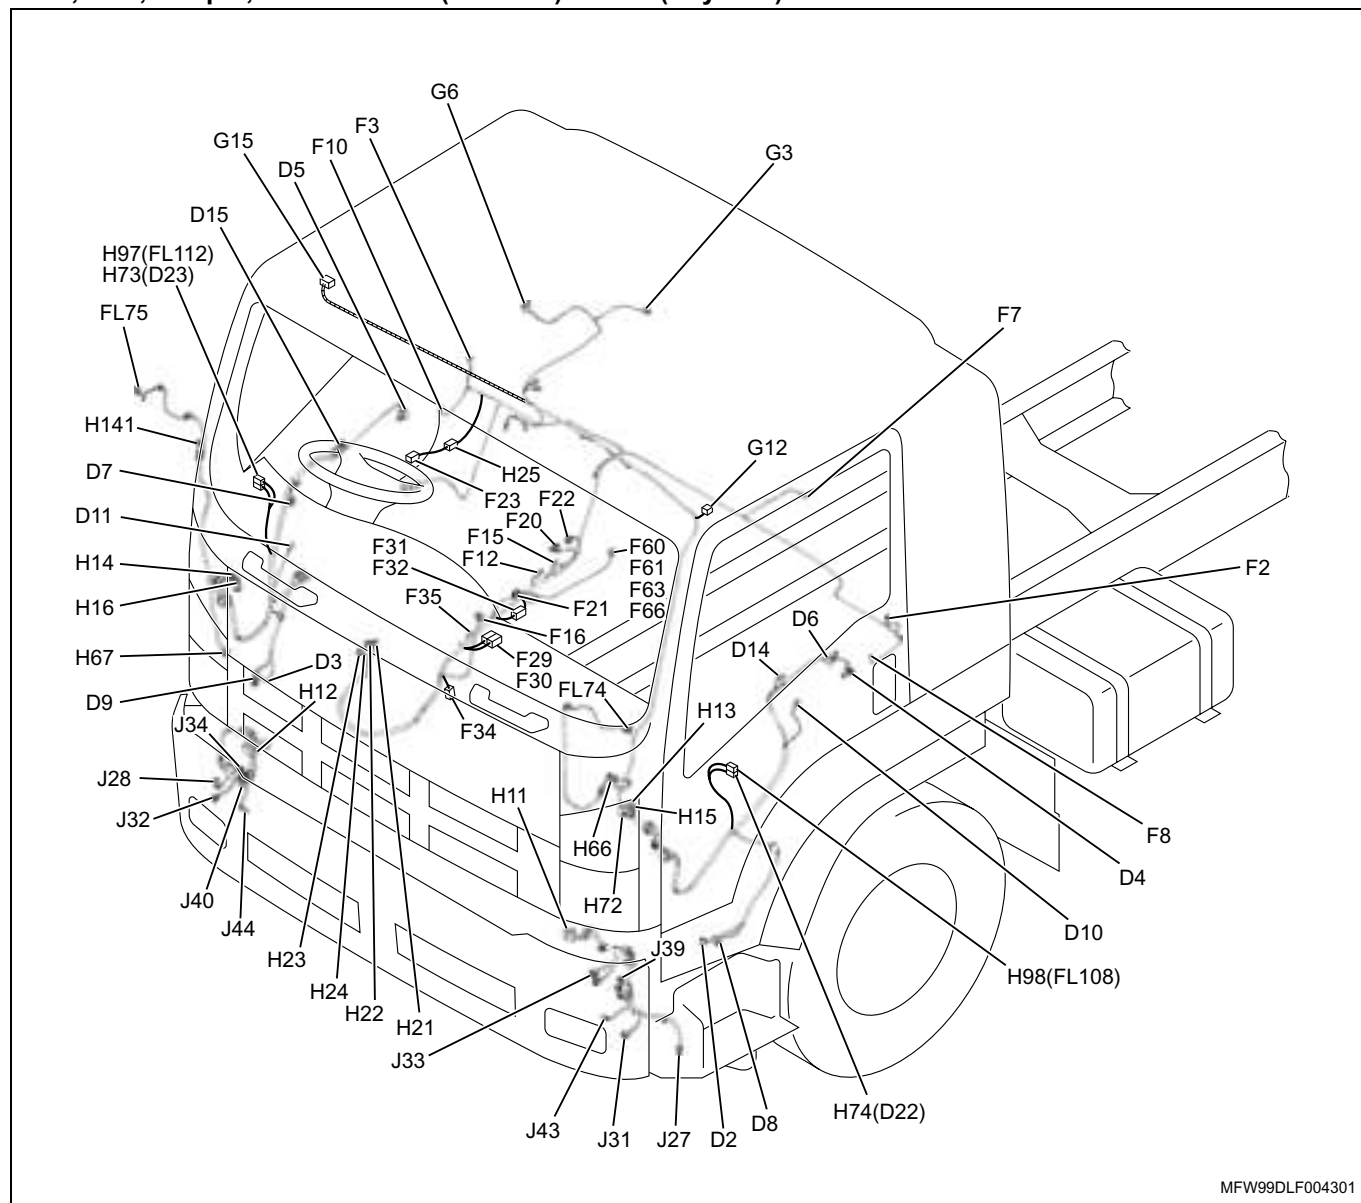Door,Roof,Bumper,Floor Harness (Full Cab) & FRR (Day Cab)




Legend

D2	Cornering Light (LH) (Door Installation)	D23	Remote Control Mirror (RH) (With Heater) Door Mirror Type (Except Australia)
D3	Cornering Light (RH) (Door Installation)		
D4	Door Lock Actuator Front (LH)		
D5	Door Lock Switch & Actuator Front (RH)	F2	Passenger Pretensioner
D6	Front Power Window Motor (LH)	F3	Driver Pretensioner
D7	Front Power Window Motor (RH)	F7	Cab Lock Switch
D8	Side Turn Signal Light (LH) (Door Installation)	F8	Front Door Switch (LH)
		F10	Front Door Switch (RH)
D9	Side Turn Signal Light (RH) (Door Installation)	F12	Parking Brake Switch
		F15	Seat Belt Switch
D10	Speaker (LH)	F16	Shift Lever Switch
D11	Speaker (RH)	F20	Trailer Brake Switch
D14	Front Power Window Switch (LH)	F21	Wheel Parking Brake Switch (Except Trailer)
D15	Front Power Window Switch (RH)		
D22	Remote Control Mirror (LH) (With Heater) Door Mirror Type (Except Australia)	F22	Wheel Parking Brake Switch
		F23	Remote Control (Internal)
		F29	ISRI Seat Belt Switch (Australia Equipment)

9D-254 Wiring System (RHD model)

F30	Driver Pretensioner and Seat Belt Switch (ISRI Seat) (Australia Equipment)	H15	Joint between Harnesses Connector
		H16	Joint between Harnesses Connector
F31	ISRI SUB Plug (Australia Equipment)	H21	Joint between Harnesses Connector
F32	ISRI SUB Socket (Australia Equipment)	H22	Joint between Harnesses Connector
		H23	Joint between Harnesses Connector
F34	Shift Lever Light	H24	Joint between Harnesses Connector
F35	Shift Selector	H25	Joint between Harnesses Connector
F60	Remote Control Door Mirror Switch (Except Trailer Model)	H66	Joint between Harnesses Connector
F61	Remote Control Under Mirror Switch (Except Trailer Model)	H67	Joint between Harnesses Connector
F63	Remote Control Door Mirror Switch (Trailer Model)	H72	Joint between Harnesses Connector
F66	Remote Control Under Mirror Switch (Trailer Model)	H73	Joint between Harnesses Connector
		H74	Joint between Harnesses Connector
		H97	Joint between Harnesses Connector
		H98	Joint between Harnesses Connector
		H141	Joint between Harnesses Connector
FL74	Remote Control Mirror (LH) (With Heater) Pillar Mirror	J27	Cornering Light (LH) (Bumper Installation)
FL75	Remote Control Mirror (RH) (With Heater) Pillar Mirror	J28	Cornering Light (RH) (Bumper Installation)
FL108	Remote Control Mirror (LH) (With Heater) Australia Two-Mirror Type	J31	Front Fog Light (LH)
		J32	Front Fog Light (RH)
FL112	Remote Control Mirror (RH) (With Heater) Australia Two-Mirror Type	J33	Cornering Light (LH) (Bumper Installation)
G3	Fluorescent Light	J34	Cornering Light (RH) (Bumper Installation)
G6	Dome Light	J39	Headlight (Halogen) (LH)
G12	Roof-Mounted Clearance Light 1	J40	Headlight (Halogen) (RH)
G15	Roof-Mounted Clearance Light 2	J43	Front Turn Signal Light (LH) (Bumper Installation)
H11	Joint between Harnesses Connector		
H12	Joint between Harnesses Connector	J44	Front Turn Signal Light (RH) (Bumper Installation)
H13	Joint between Harnesses Connector		
H14	Joint between Harnesses Connector		

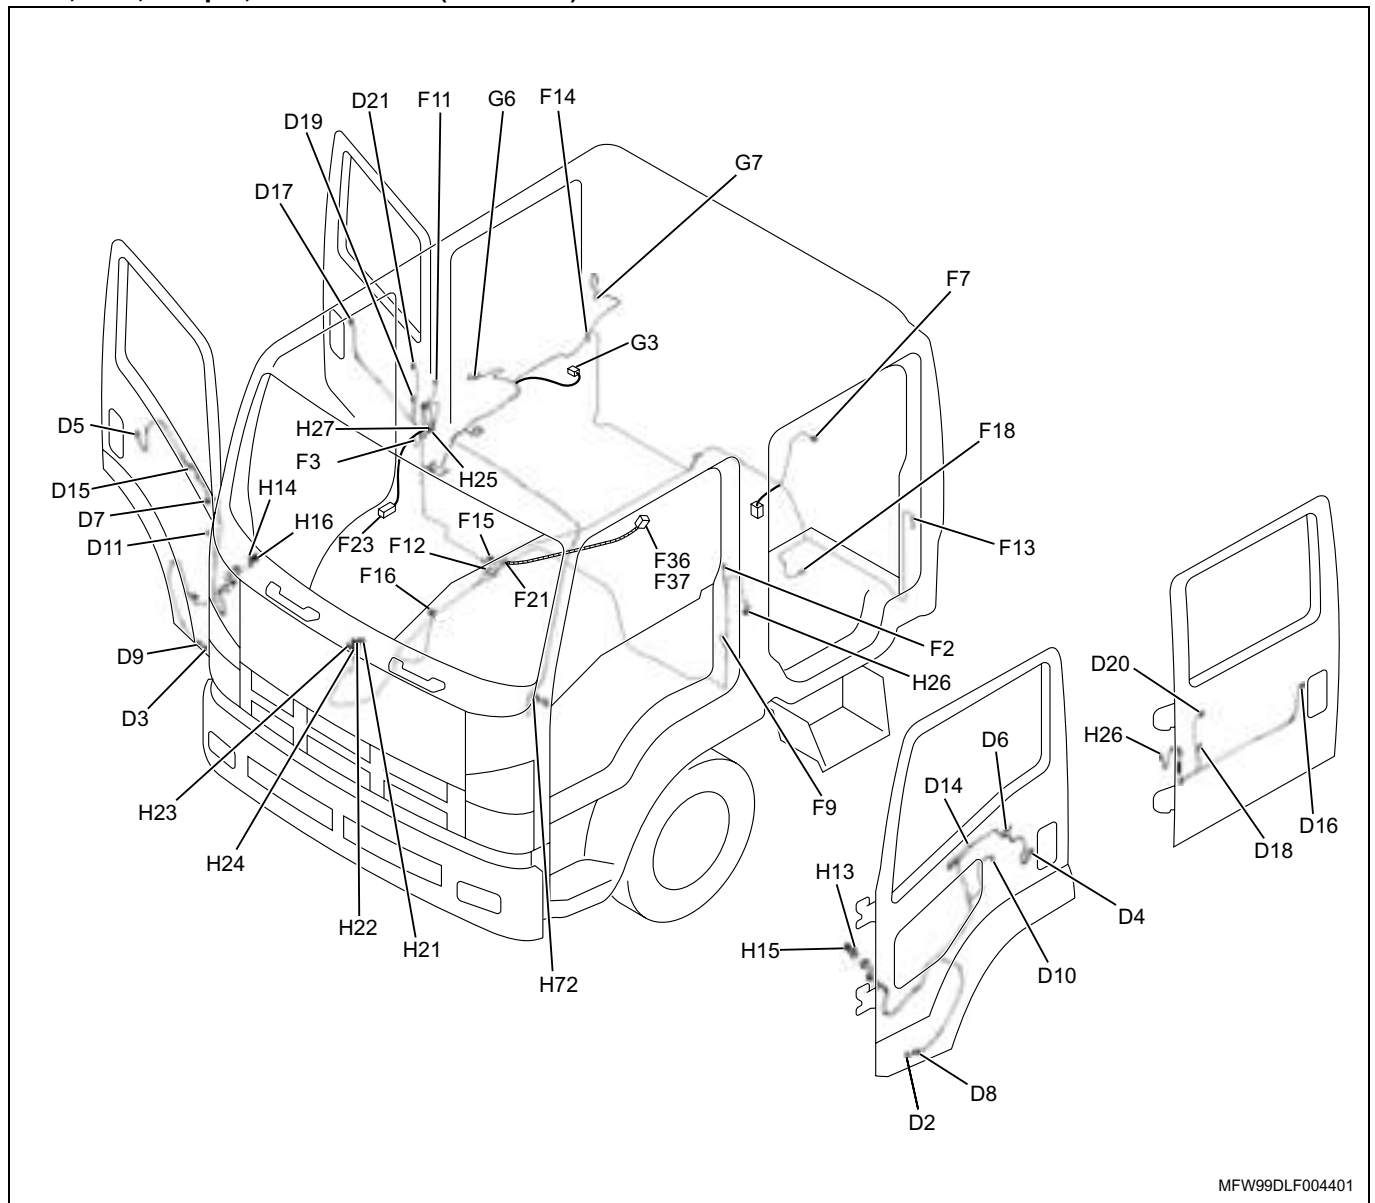Door, Roof, Bumper, Floor Harness (Crew Cab)

MFW99DLF004401



Legend

D2	Cornering Light (LH) (Door Installation)	D20	Rear Power Window Switch (LH)
D3	Cornering Light (RH) (Door Installation)	D21	Rear Power Window Switch (RH)
D4	Door Lock Actuator Front (LH)	F2	Passenger Pretensioner
D5	Door Lock Switch & Actuator Front (RH)	F3	Driver Pretensioner
D6	Front Power Window Motor (LH)	F7	Cab Lock Switch
D7	Front Power Window Motor (RH)	F9	Front Door Switch (LH)
D8	Side Turn Signal Light (LH) (Door Installation)	F11	Front Door Switch (RH)
D9	Side Turn Signal Light (RH) (Door Installation)	F12	Parking Brake Switch
D10	Speaker (LH)	F13	Rear Door Switch (LH)
D11	Speaker (RH)	F14	Rear Door Switch (RH)
D14	Front Power Window Switch (LH)	F15	Seat Belt Switch
D15	Front Power Window Switch (RH)	F16	Shift Lever Switch
D16	Door Lock Actuator Rear (LH)	F18	Stay Lock Switch
D17	Door Lock Actuator Rear (RH)	F21	Wheel Parking Brake Switch (Except Trailer)
D18	Rear Power Window Motor (LH)	F23	Remote Control (Internal)
D19	Rear Power Window Motor (RH)	F36	Remote Control Door Mirror Switch
		F37	Remote Control Under Mirror Switch

9D-256 Wiring System (RHD model)

G3	Fluorescent Light	H22	Joint between Harnesses Connector
G6	Dome Light	H23	Joint between Harnesses Connector
G7	Rear Dome Light	H24	Joint between Harnesses Connector
H13	Joint between Harnesses Connector	H25	Joint between Harnesses Connector
H14	Joint between Harnesses Connector	H26	Joint between Harnesses Connector
H15	Joint between Harnesses Connector	H27	Joint between Harnesses Connector
H16	Joint between Harnesses Connector	H72	Joint between Harnesses Connector
H21	Joint between Harnesses Connector		

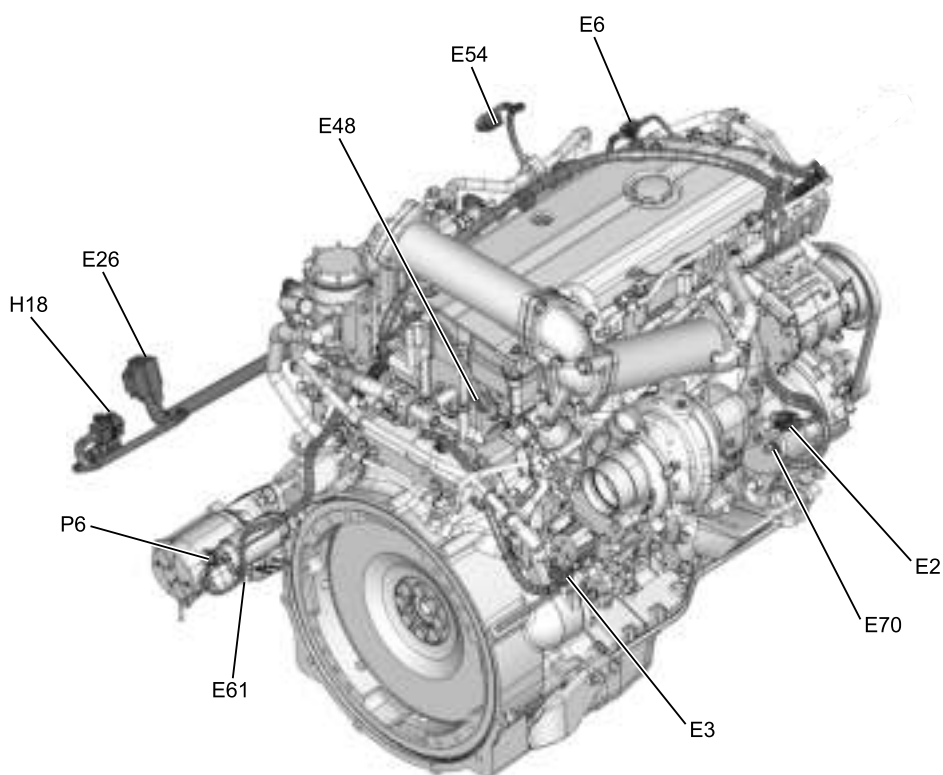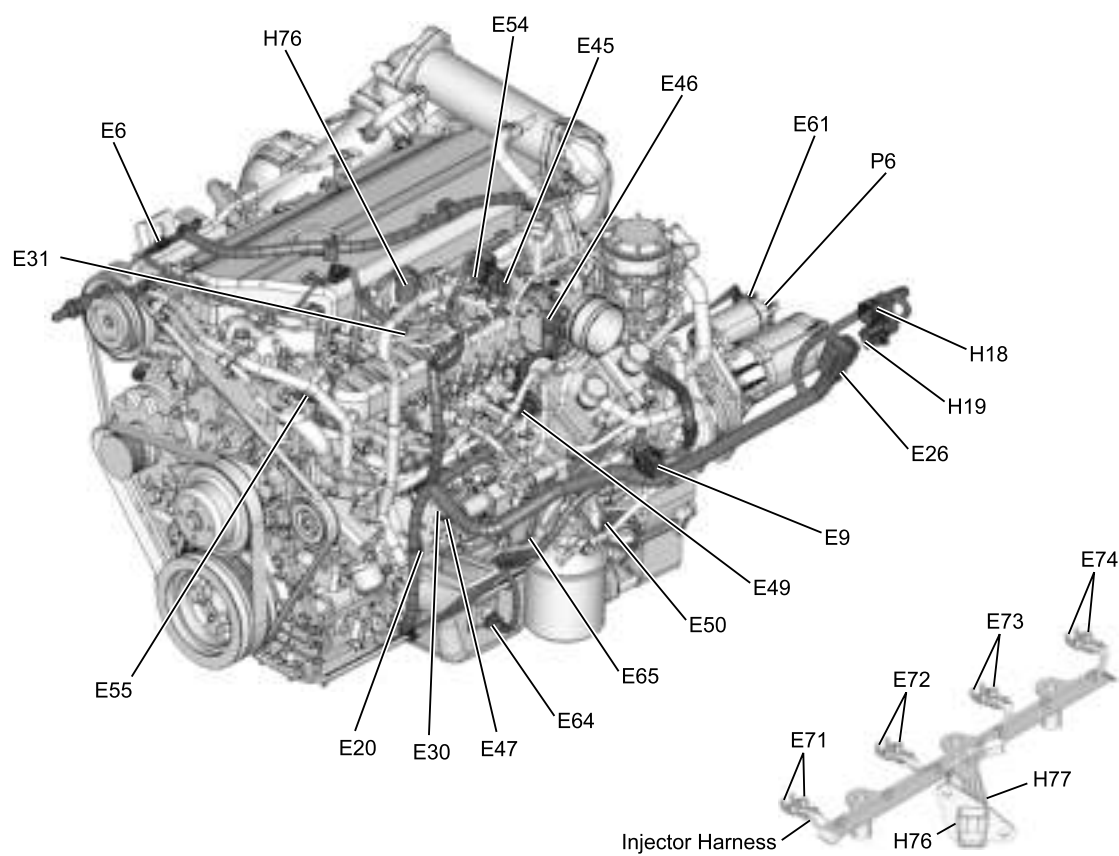Engine Harness (4HK1 Engine)




9D-258 Wiring System (RHD model)

Legend

E2	AC Generator (B)	E61	Starter
E3	VGS Actuator	E64	Engine Oil Level Switch
E6	A/C Compressor	E65	Oil Pressure Switch
E9	VNT Control Module	E70	AC Generator
E20	Engine GND	E71	Cylinder Fuel Injector No.1 (Cylinder No.1)
E26	Engine Control Module (ECM)	E72	Cylinder Fuel Injector No.4 (Cylinder No.2)
E30	Fuel Temperature (FT) Sensor	E73	Cylinder Fuel Injector No.2 (Cylinder No.3)
E31	Glow Plug	E74	Cylinder Fuel Injector No.3 (Cylinder No.3)
E45	EGR Valve	H18	Joint between Harnesses Connector
E46	Intake Throttle Valve	H19	Joint between Harnesses Connector
E47	Fule Rail Pressure (FRP) Regulator	H76	Joint between Harnesses Connector
E48	Camshaft Position (CMP) Sensor	H77	Joint between Harnesses Connector
E49	Fule Rail Pressure (FRP) Sensor	P6	Starter
E50	Crankshaft Position (CKP) Sensor		
E54	Boost Pressure Sensor		
E55	Engine Coolant Temperature (ECT) Sensor		

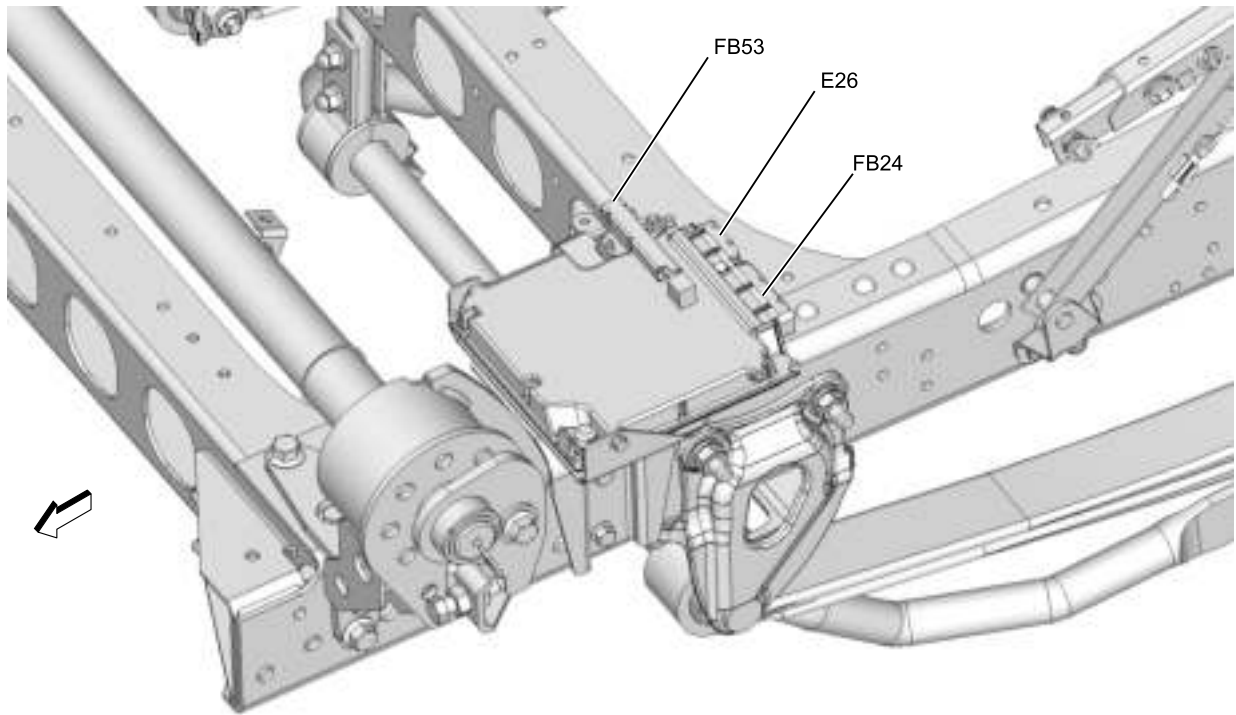Engine Harness (Day Cab 4HK1 Engine)




MFW99DLF003501

Legend

E26 Engine Control Module (ECM)
 FB24 Engine Control Module (ECM)

FB53 Dropping Resistor


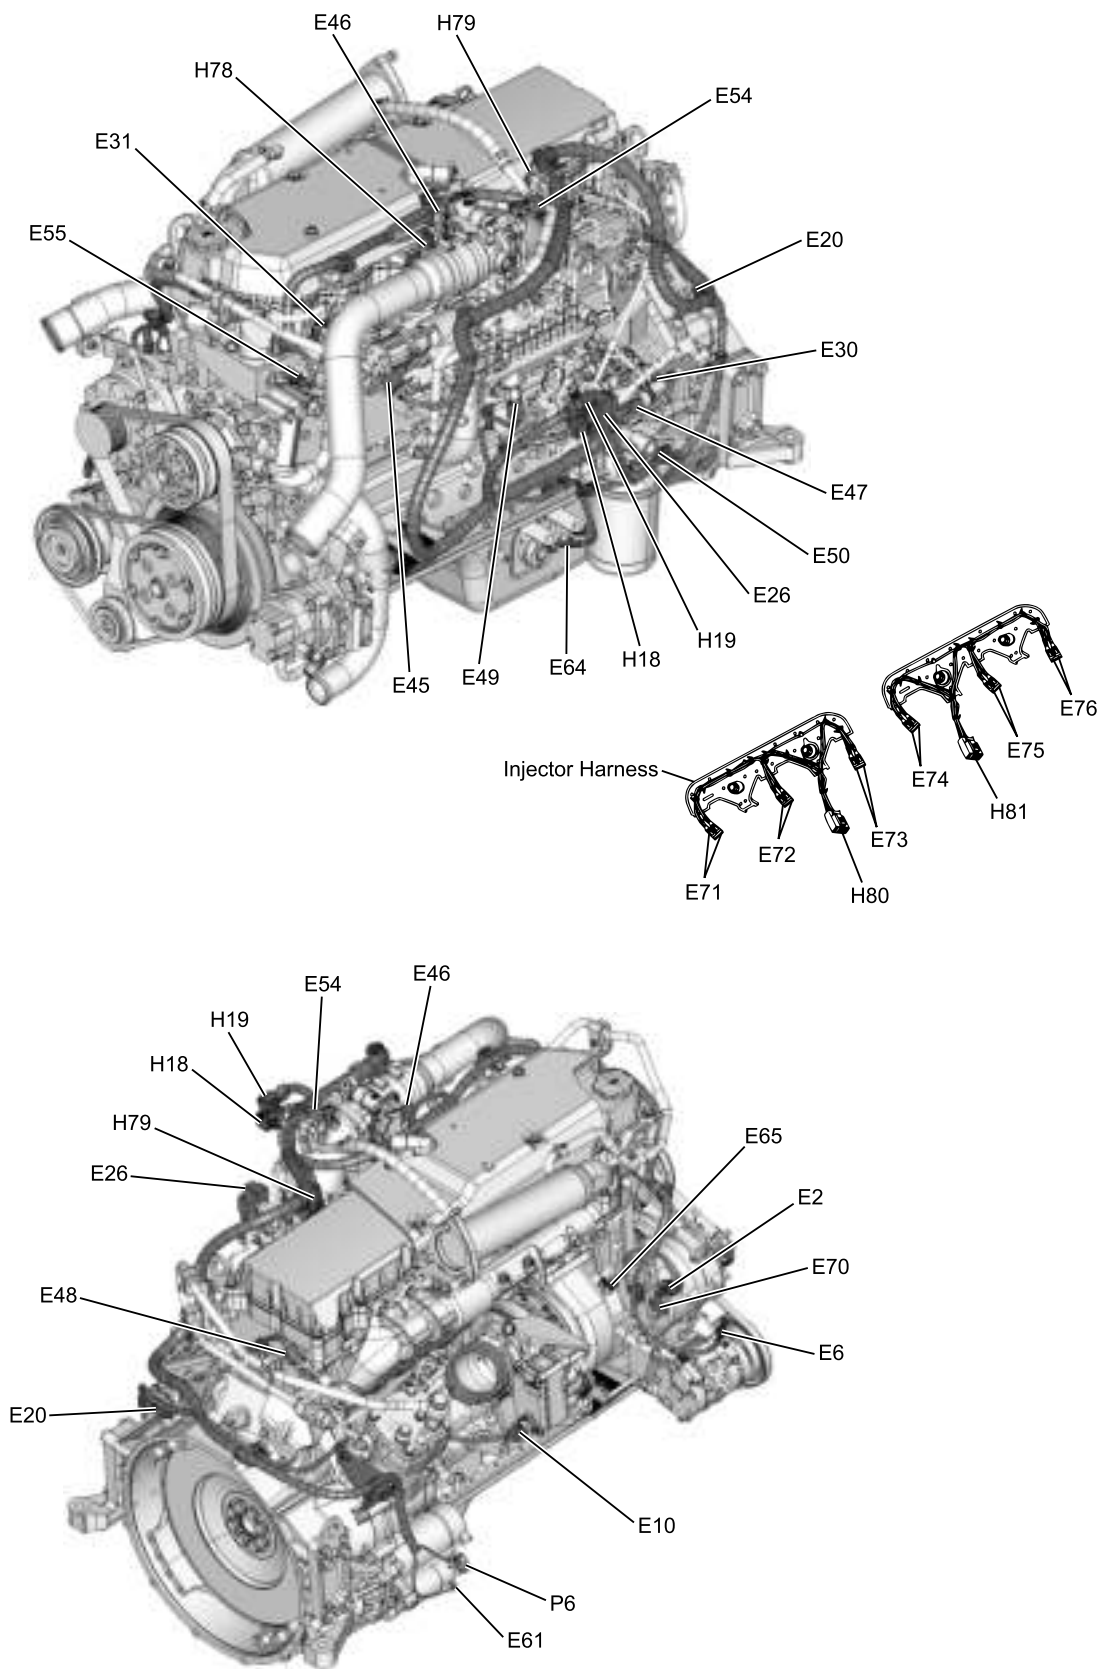
Engine Harness (6HK1 Engine)



Legend

E2	AC Generator (B)	E71	Cylinder Fuel Injector No.1 (Cylinder No.1)
E6	A/C Compressor		
E10	Rotary Electric Actuator (REA)	E72	Cylinder Fuel Injector No.5 (Cylinder No.2)
E20	Engine GND		
E26	Engine Control Module (ECM)	E73	Cylinder Fuel Injector No.3 (Cylinder No.3)
E30	Fuel Temperature (FT) Sensor		
E31	Glow Plug	E74	Cylinder Fuel Injector No.6 (Cylinder No.4)
E45	EGR Valve		
E46	Intake Throttle Valve	E75	Cylinder Fuel Injector No.2 (Cylinder No.5)
E47	Fule Rail Pressure (FRP) Regulator		
E48	Camshaft Position (CMP) Sensor	E76	Cylinder Fuel Injector No.4 (Cylinder No.6)
E49	Fule Rail Pressure (FRP) Sensor		
E50	Crankshaft Position (CKP) Sensor	H18	Joint between Harnesses Connector
E54	Boost Pressure Sensor	H19	Joint between Harnesses Connector
E55	Engine Coolant Temperature (ECT) Sensor	H78	Joint between Harnesses Connector
		H79	Joint between Harnesses Connector
E61	Starter	H80	Joint between Harnesses Connector
E64	Engine Oil Level Switch	H81	Joint between Harnesses Connector
E65	Oil Pressure Switch	P6	Starter
E70	AC Generator		

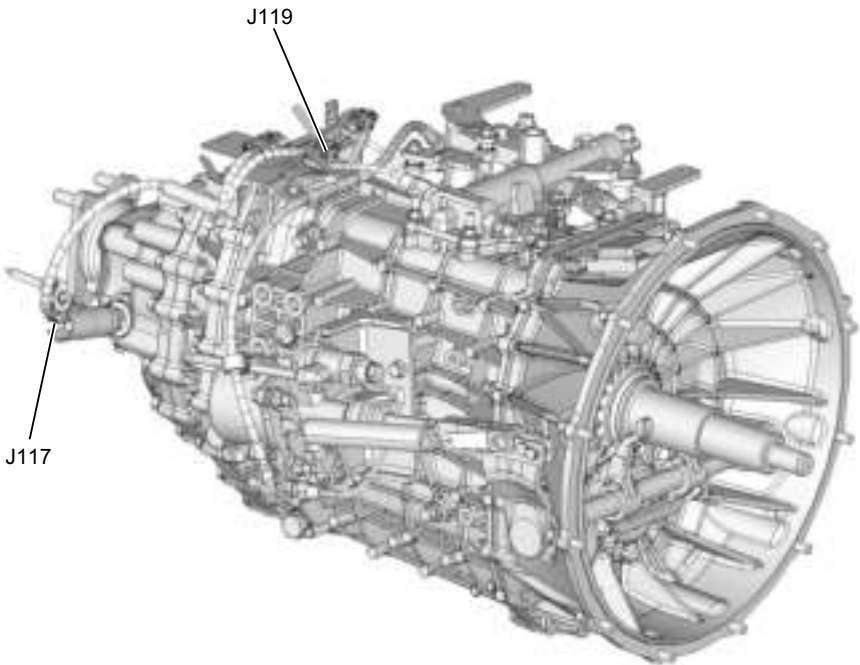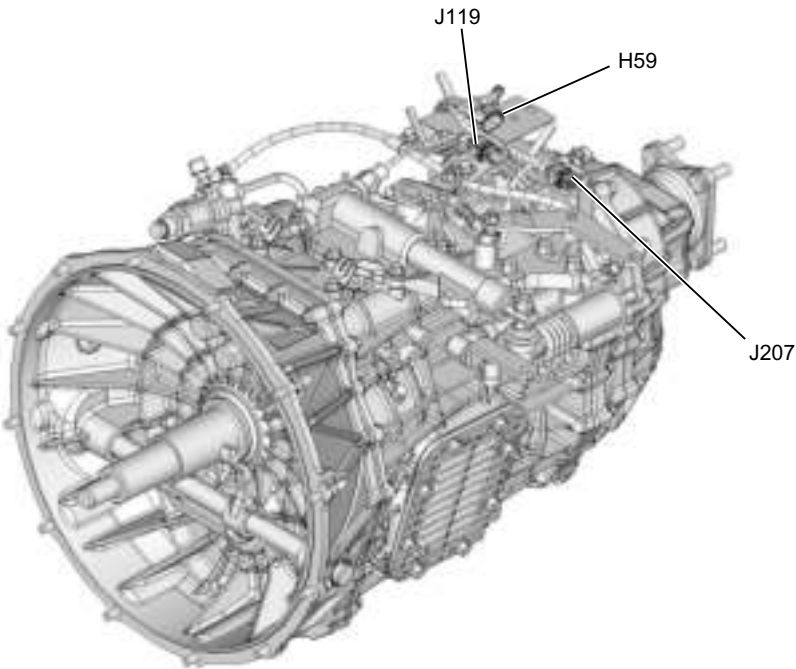
Transmission (MT) Harness



Legend

H59	Joint between Harnesses Connector	J119	Neutral Switch
J117	Vehicle Speed Sensor	J207	Backup Light Switch

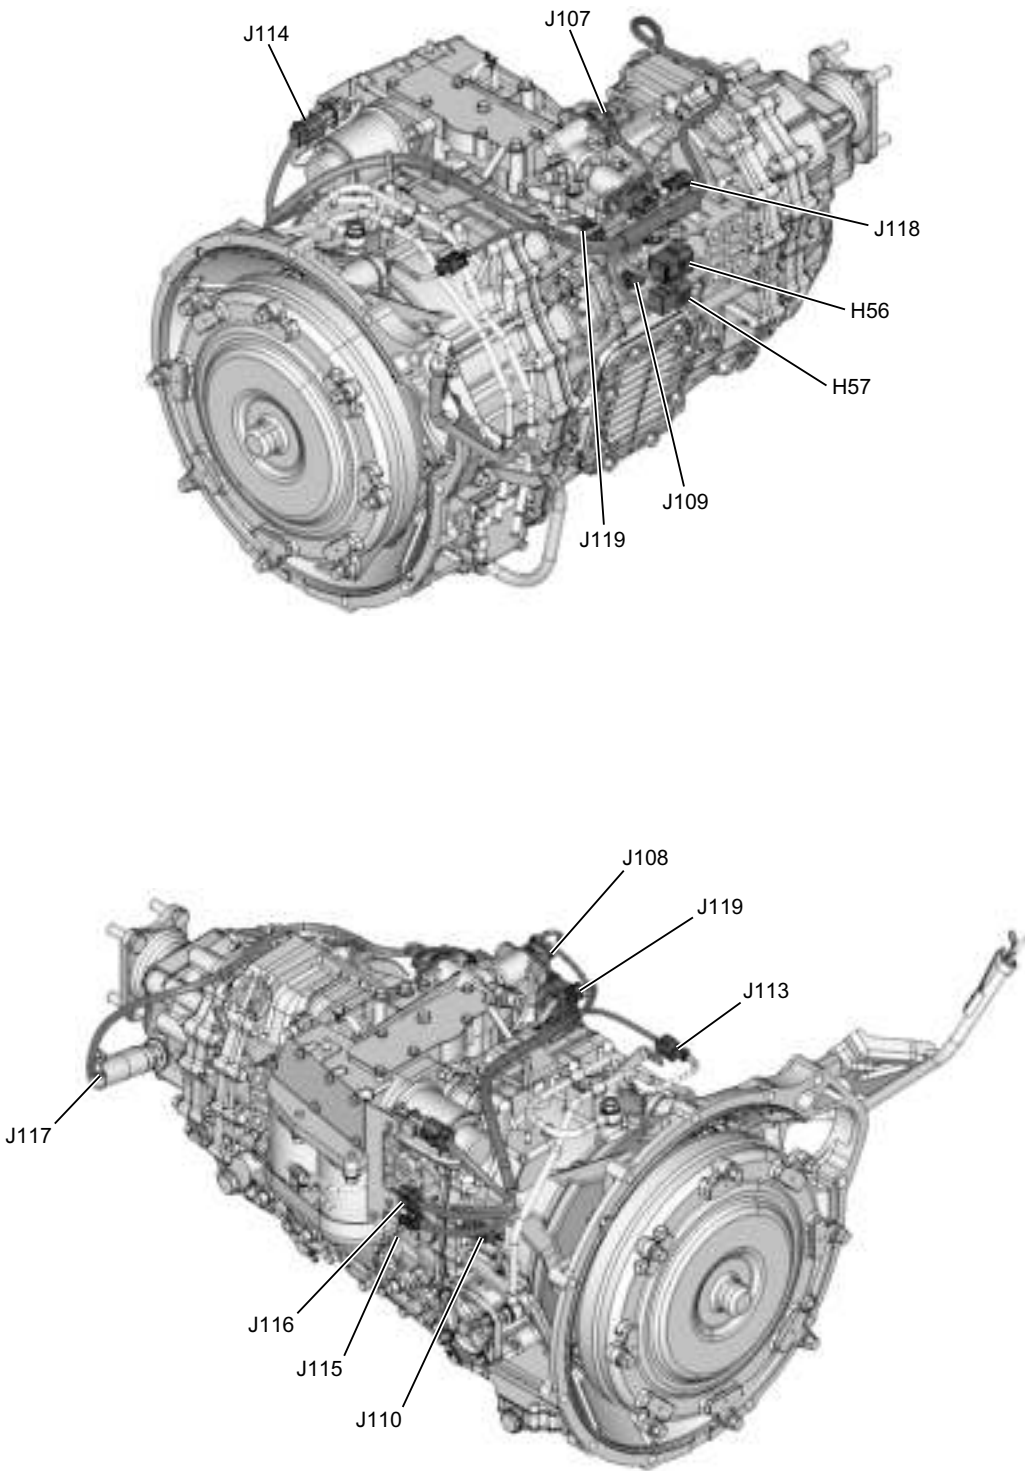Transmission (Smoother) Harness




Legend


H56	Joint between Harnesses Connector	J114	Select Solenoid
H57	Joint between Harnesses Connector	J115	1-3-5 Shift Solenoid
J107	Gear Select Position Sensor	J116	2-4-R Shift Solenoid
J108	Gear Shift Position Sensor	J117	Vehicle Speed Sensor
J109	Input Shaft Speed Sensor	J118	Backup Light Switch
J110	Turbine Speed Sensor	J119	Neutral Switch
J113	Oil Pump Assembly		

Air Tank Harness

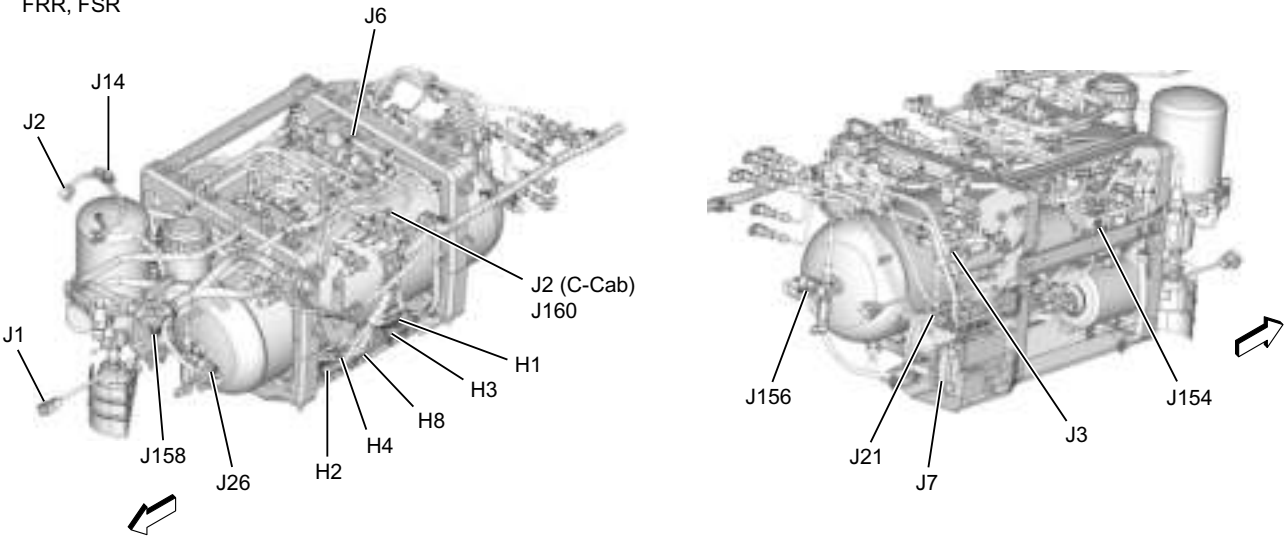
FRR, FSR



FTR, FVR, FVM, FVZ, GVR

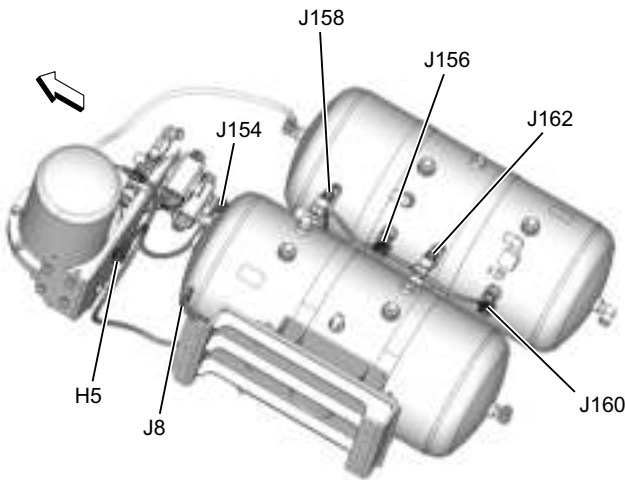


FSS, FTS

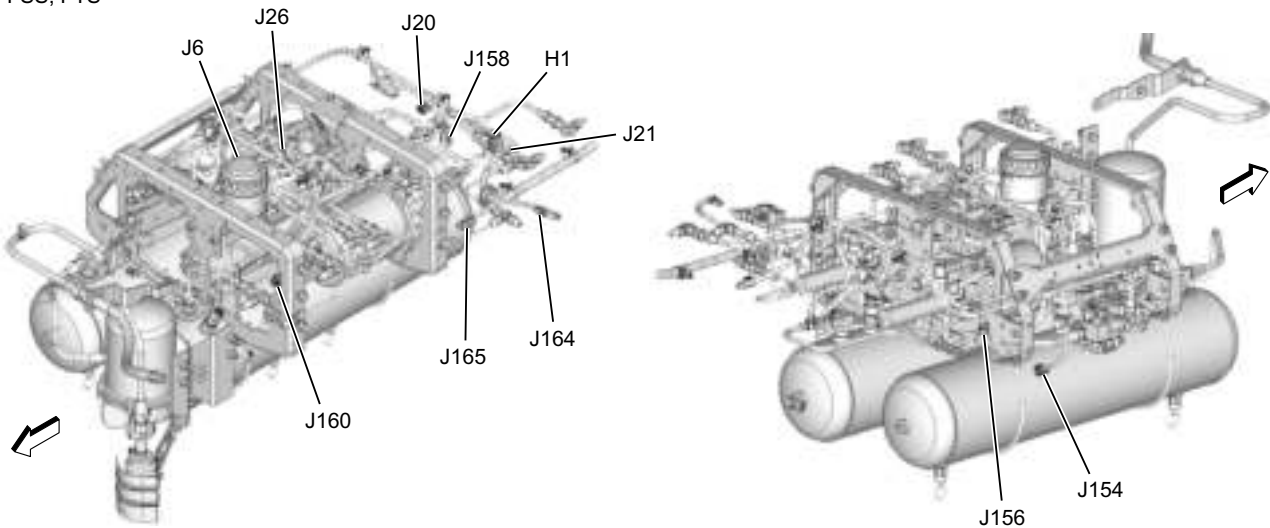

Legend

H1	Joint between Harnesses Connector	J20	Air Master Stroke Switch 1
H2	Joint between Harnesses Connector	J21	Air Master Stroke Switch 2
H3	Joint between Harnesses Connector	J26	Brake Fluid Level Switch
H4	Joint between Harnesses Connector	J154	Air Low Pressure Switch 4
H5	Joint between Harnesses Connector	J156	Air Low Pressure Switch 1
H8	Joint between Harnesses Connector	J158	Air Low Pressure Switch 2
J1	Air Dryer	J160	Air Low Pressure Switch 3
J2	Air Flow Sensor	J162	Air Low Pressure Switch WPA1
J3	ASR Valve	J164	Air Master Stroke Switch 5
J6	HSA Valve		(Euro2 FSS,FTS)
J7	EHCU (ABS/ASR Control Unit)	J165	Air Master Stroke Switch 6
J8	Exhaust Brake Magnetic Valve		(Euro2 FSS,FTS)
J14	MAF&IAT sensor		

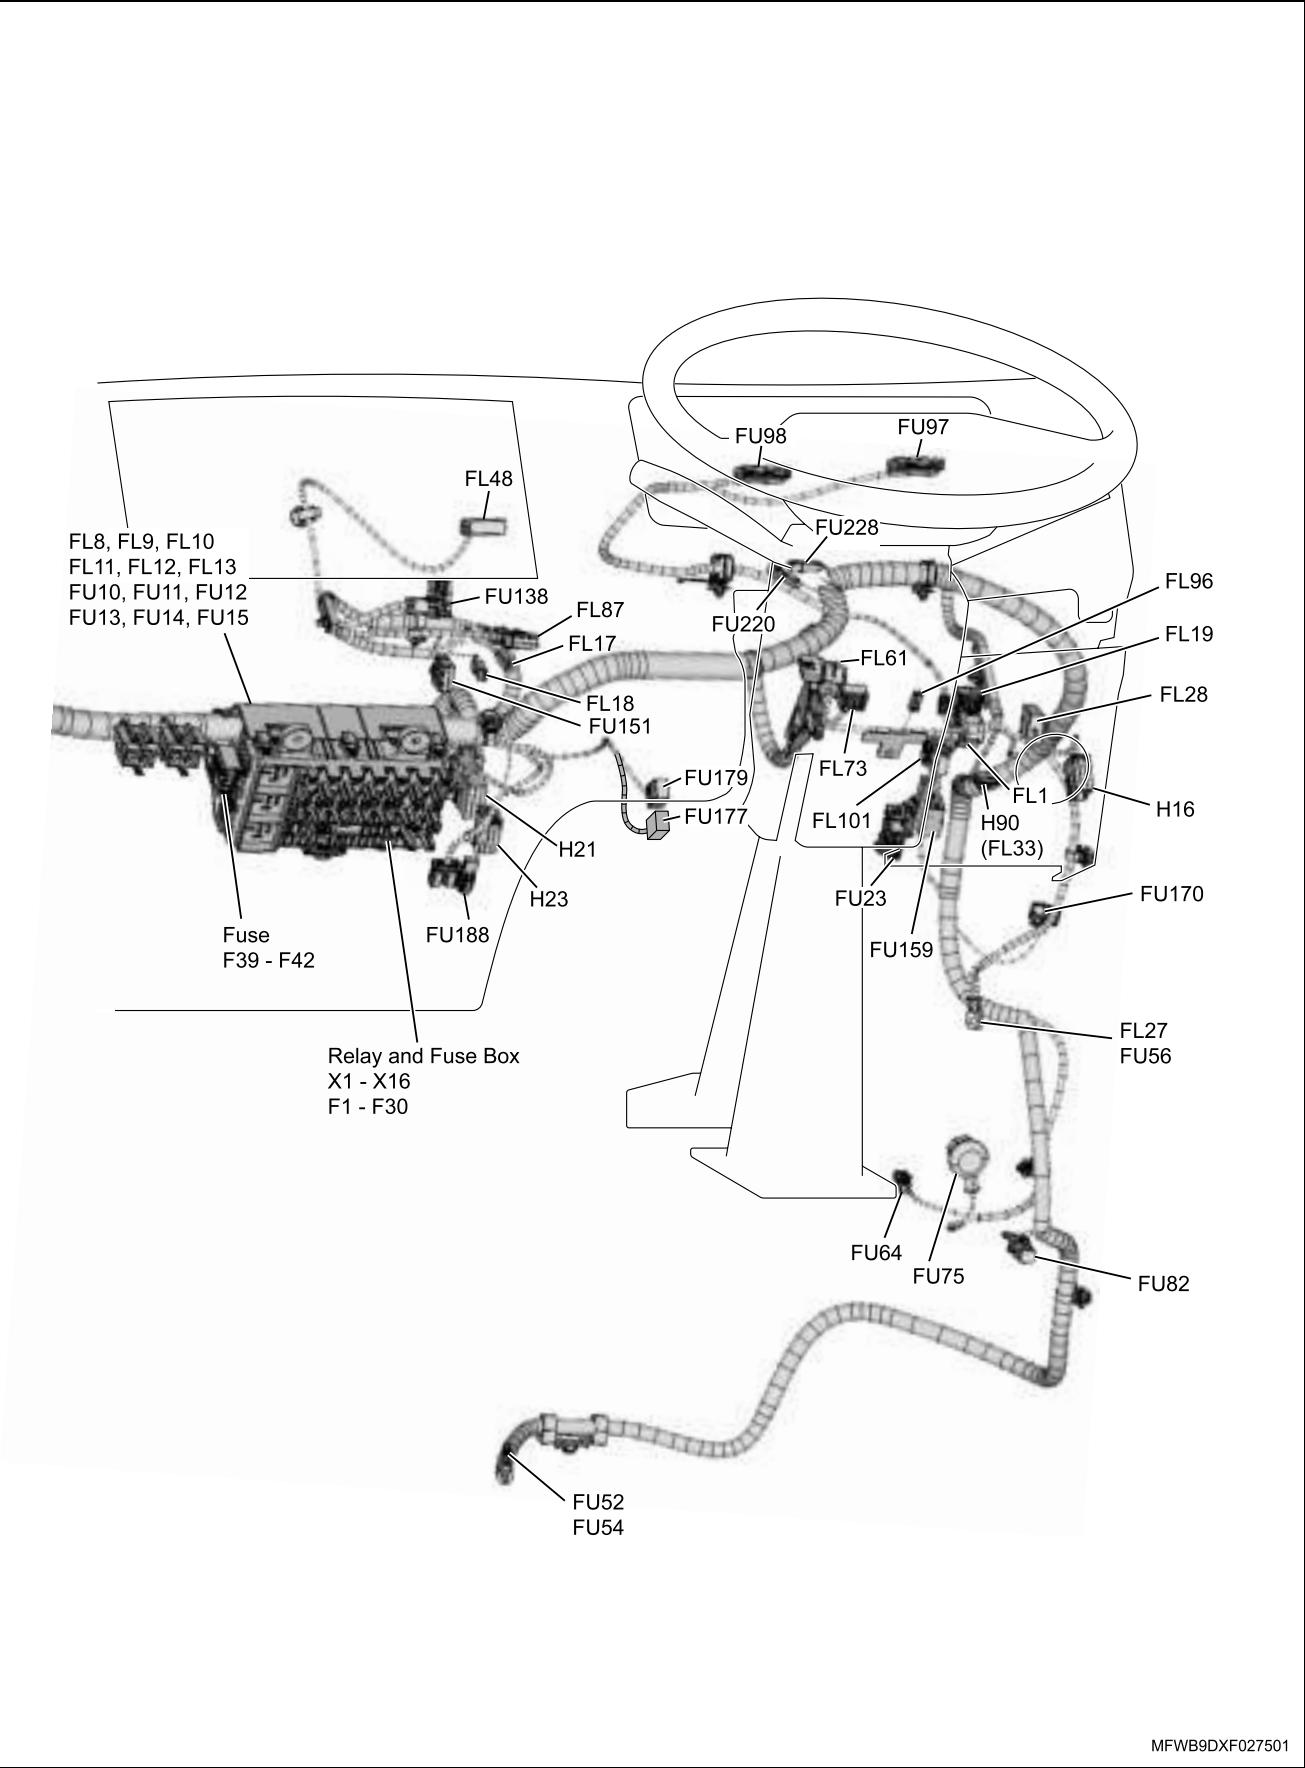
Body Harness (FRR,FTR)(1/2)



Legend

F1	H/LIGHT CLEANER Fuse	FL61	Starter Switch
F2	AIR SUSPENSION Fuse	FL73	Wiper & Exhaust Brake Switch
F3	DOME LIGHT Fuse	FL87	Hazard Warning Flasher Switch
F4	DOOR LOCK Fuse	FL96	Horn Switch
F5	FRT FOG LIGHT Fuse	FL101	DRM
F6	POWER WINDOW Fuse	FU10	Cab Junction Block
F7	ABS Fuse	FU11	Cab Junction Block
F8	FRONT WIPER&WASHER Fuse	FU12	Cab Junction Block
F9	H/LIGHT LH Fuse	FU13	Cab Junction Block
F10	IMMOBILIZER Fuse	FU14	Cab Junction Block
F11	H/LIGHT RH Fuse	FU15	Cab Junction Block
F12	STOP LIGHT Fuse	FU23	Data Link Connector
F13	STARTER Fuse	FU52	Frame (Front-RH) GND
F14	H/LIGHT LH Fuse	FU54	Frame (Front-RH) GND
F15	H/LIGHT RH Fuse	FU56	Cab (Front-RH) GND
F16	MIRROR HEATER Fuse	FU64	Clearance Light (RH)
F17	AIR DRYER Fuse	FU75	Headlight (RH)
F18	PTO. BACK LIGHT Fuse	FU82	Horn RH (Flat Type)
F19	SRS Fuse	FU97	Instrument Panel (IP) Cluster
F20	ENGINE CONTROLLER Fuse	FU98	Instrument Panel (IP) Cluster
F21	METER Fuse	FU138	Heater A/C Control Panel
F22	RR FOG LIGHT Fuse	FU151	PTO Switch (MT)
F23	REMOTE CONTROL MIRROR Fuse	FU159	Stoplight Switch 1
F24	CIGAR LIGHTER Fuse	FU170	Front Turn Signal Light (RH)
F25	HORN Fuse	FU177	Clutch Switch (PTO)
F26	TURN LIGHT, HAZARD Fuse	FU179	Clutch Switch
F27	TAIL LIGHT Fuse	FU188	Memory Clear Switch
F28	ILLUMI Fuse	FU220	DiodeB1-1
F29	CORNERING LIGHT/ RR FOG LIGHT Fuse	FU228	Diode4
F30	BLOWER MOTOR Fuse	H16	Joint between Harnesses Connector
F39	CONDENSER FAN (AIR CON) Fuse	H21	Joint between Harnesses Connector
F40	—	H23	Joint between Harnesses Connector
F41	POWER WINDOW(REAR)Fuse	H90	Joint between Harnesses Connector
F42	ABS Fuse	X1	Stoplight Relay
FL1	Accelerator Pedal Position Sensor	X2	Blower Motor Relay
FL8	Cab Junction Block	X3	—
FL9	Cab Junction Block	X4	—
FL10	Cab Junction Block	X5	—
FL11	Cab Junction Block	X6	Wiper Main Relay
FL12	Cab Junction Block	X7	Horn Relay
FL13	Cab Junction Block	X8	Wiper High/ Low Relay
FL17	Cigarette Lighter	X9	—
FL18	Cigarette Lighter	X10	—
FL19	Combination Switch	X11	—
FL27	Cab (Front-RH) GND	X12	—
FL28	Flasher Unit	X13	Headlight(Low) Relay
FL33	Idle Up Volume	X14	Stoplight Relay
FL48	Audio	X15	Headlight(High) Relay
		X16	Taillight Relay

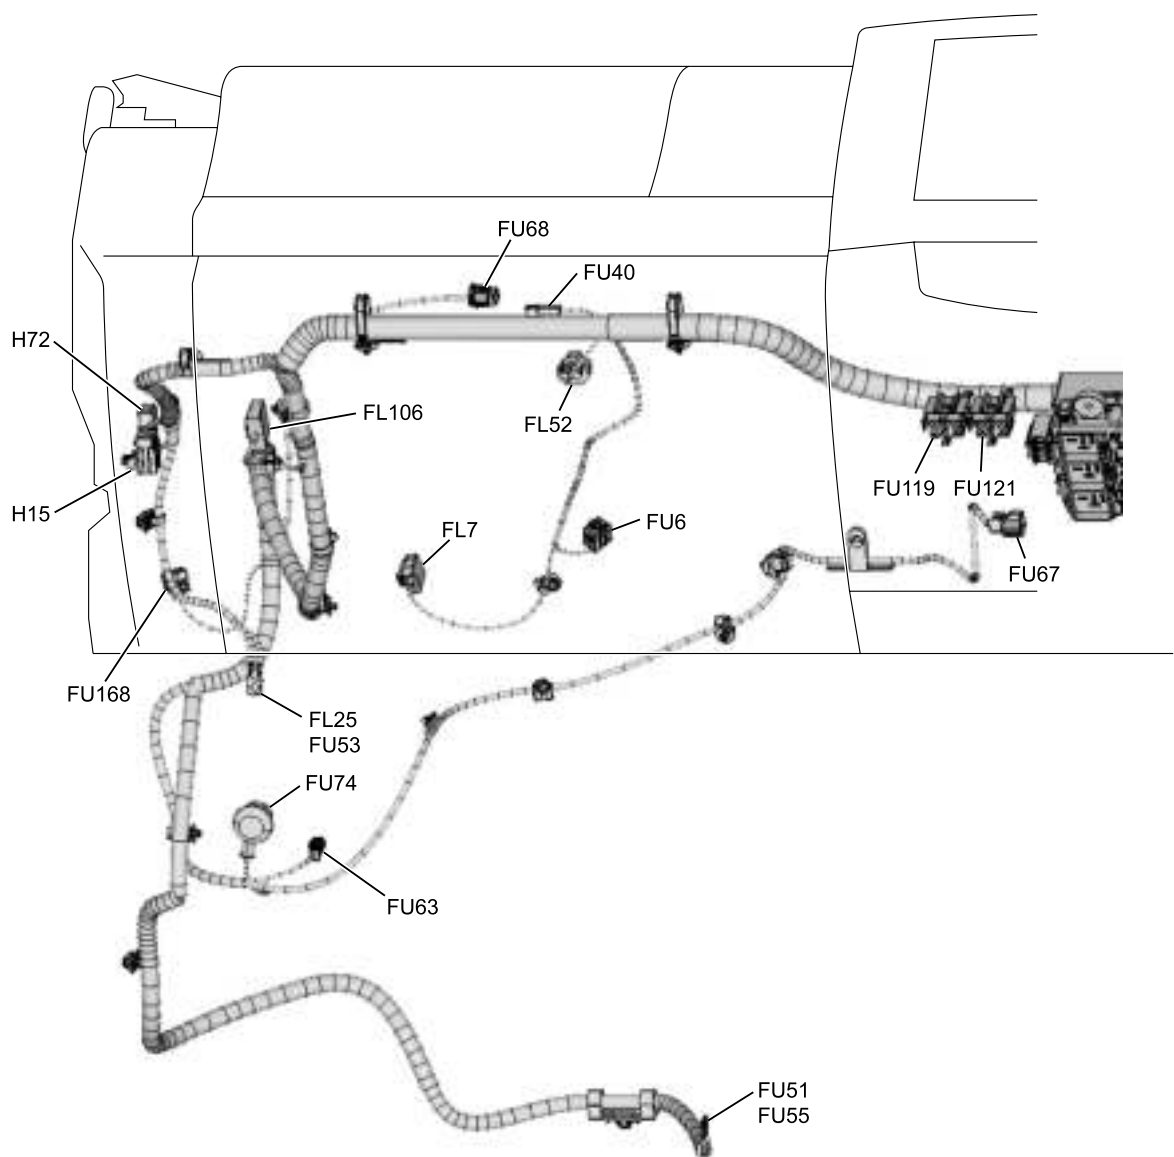
Body Harness (FRR,FTR)(2/2)



Legend

FL7	Blower Motor	FU63	Clearance Light (LH)
FL25	Cab (Front-LH) GND	FU67	Washer Motor
FL52	Barometric Pressure (BARO) Sensor	FU68	Wiper Motor
FL106	Intermittent Relay	FU74	Headlight (LH)
FU6	Blower Resistor	FU119	PTO Main Relay
FU40	Diode 4	FU121	PTO Cut Relay
FU51	Frame (Front-LH) GND	FU168	Front Turn Signal Light (LH)
FU53	Frame (Front-RH) GND	H15	Joint between Harnesses Connector
FU55	Frame (Front-LH) GND	H72	Joint between Harnesses Connector

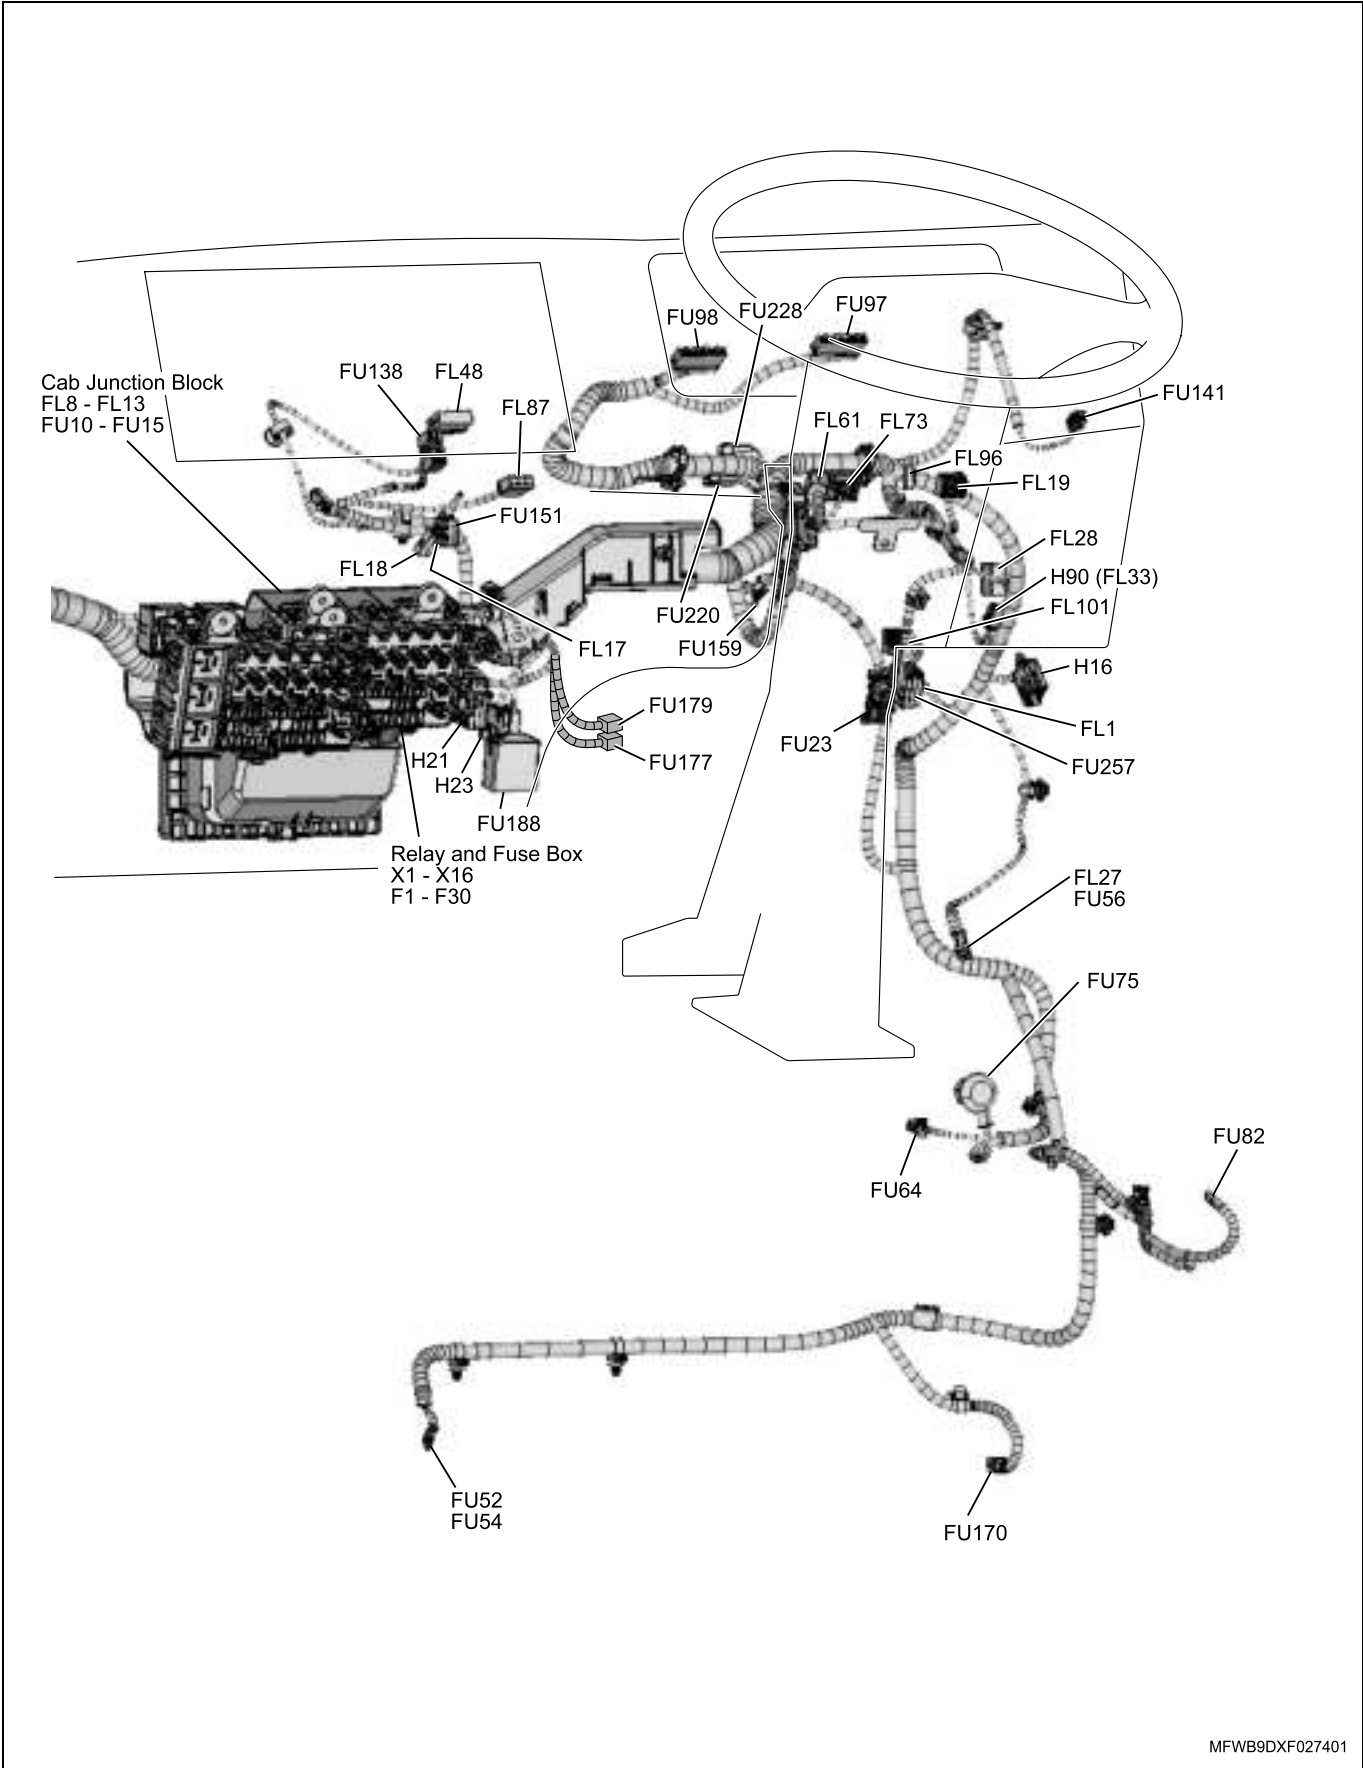
Body Harness (FVR,FVM,FVZ)(1/2)



Legend


F1	H/LIGHT CLEANER Fuse	FL96	Horn Switch
F2	AIR SUSPENSION Fuse	FL101	DRM
F3	DOME LIGHT Fuse	FU10	Cab Junction Block
F4	DOOR LOCK Fuse	FU11	Cab Junction Block
F5	FRT FOG LIGHT Fuse	FU12	Cab Junction Block
F6	POWER WINDOW Fuse	FU13	Cab Junction Block
F7	ABS Fuse	FU14	Cab Junction Block
F8	FRONT WIPER&WASHER Fuse	FU15	Cab Junction Block
F9	H/LIGHT LH Fuse	FU23	Data Link Connector
F10	IMMOBILIZER Fuse	FU52	Frame (Front-RH) GND
F11	H/LIGHT RH Fuse	FU54	Frame (Front-RH) GND
F12	STOP LIGHT Fuse	FU56	Cab (Front-RH) GND
F13	STARTER Fuse	FU64	Clearance Light (RH)
F14	H/LIGHT LH Fuse	FU75	Headlight (RH)
F15	H/LIGHT RH Fuse	FU82	Horn RH (Flat Type)
F16	MIRROR HEATER Fuse	FU97	Instrument Panel (IP) Cluster
F17	AIR DRYER Fuse	FU98	Instrument Panel (IP) Cluster
F18	PTO. BACK LIGHT Fuse	FU138	Heater A/C Control Panel
F19	SRS Fuse	FU141	Inter Differential Lock Switch
F20	ENGINE CONTROLLER Fuse	FU151	PTO Switch (MT)
F21	METER Fuse	FU159	Stoplight Switch 1
F22	RR FOG LIGHT Fuse	FU170	Front Turn Signal Light (RH)
F23	REMOTE CONTROL MIRROR Fuse	FU177	Clutch Switch (PTO)
F24	CIGAR LIGHTER Fuse	FU179	Clutch Switch
F25	HORN Fuse	FU188	Memory Clear Switch
F26	TURN LIGHT, HAZARD Fuse	FU220	DiodeB1-1
F27	TAIL LIGHT Fuse	FU228	Diode4
F28	ILLUMI Fuse	FU257	Speed Sensor Control Unit(ZF)
F29	CORNERING LIGHT/ RR FOG LIGHT Fuse	H16	Joint between Harnesses Connector
F30	BLOWER MOTOR Fuse	H21	Joint between Harnesses Connector
FL1	Accelerator Pedal Position Sensor	H23	Joint between Harnesses Connector
FL8	Cab Junction Block	H90	Joint between Harnesses Connector
FL9	Cab Junction Block	X1	Stoplight Relay
FL10	Cab Junction Block	X2	Blower Motor Relay
FL11	Cab Junction Block	X3	—
FL12	Cab Junction Block	X4	—
FL13	Cab Junction Block	X5	—
FL17	Cigarette Lighter	X6	Wiper Main Relay
FL18	Cigarette Lighter	X7	Horn Relay
FL19	Combination Switch	X8	Wiper High/ Low Relay
FL27	Cab (Front-RH) GND	X9	—
FL28	Flasher Unit	X10	—
FL33	Idle Up Volume	X11	—
FL48	Audio	X12	—
FL61	Starter Switch	X13	Headlight(Low) Relay
FL73	Wiper & Exhaust Brake Switch	X14	Stoplight Relay
FL87	Hazard Warning Flasher Switch	X15	Headlight(High) Relay
		X16	Taillight Relay

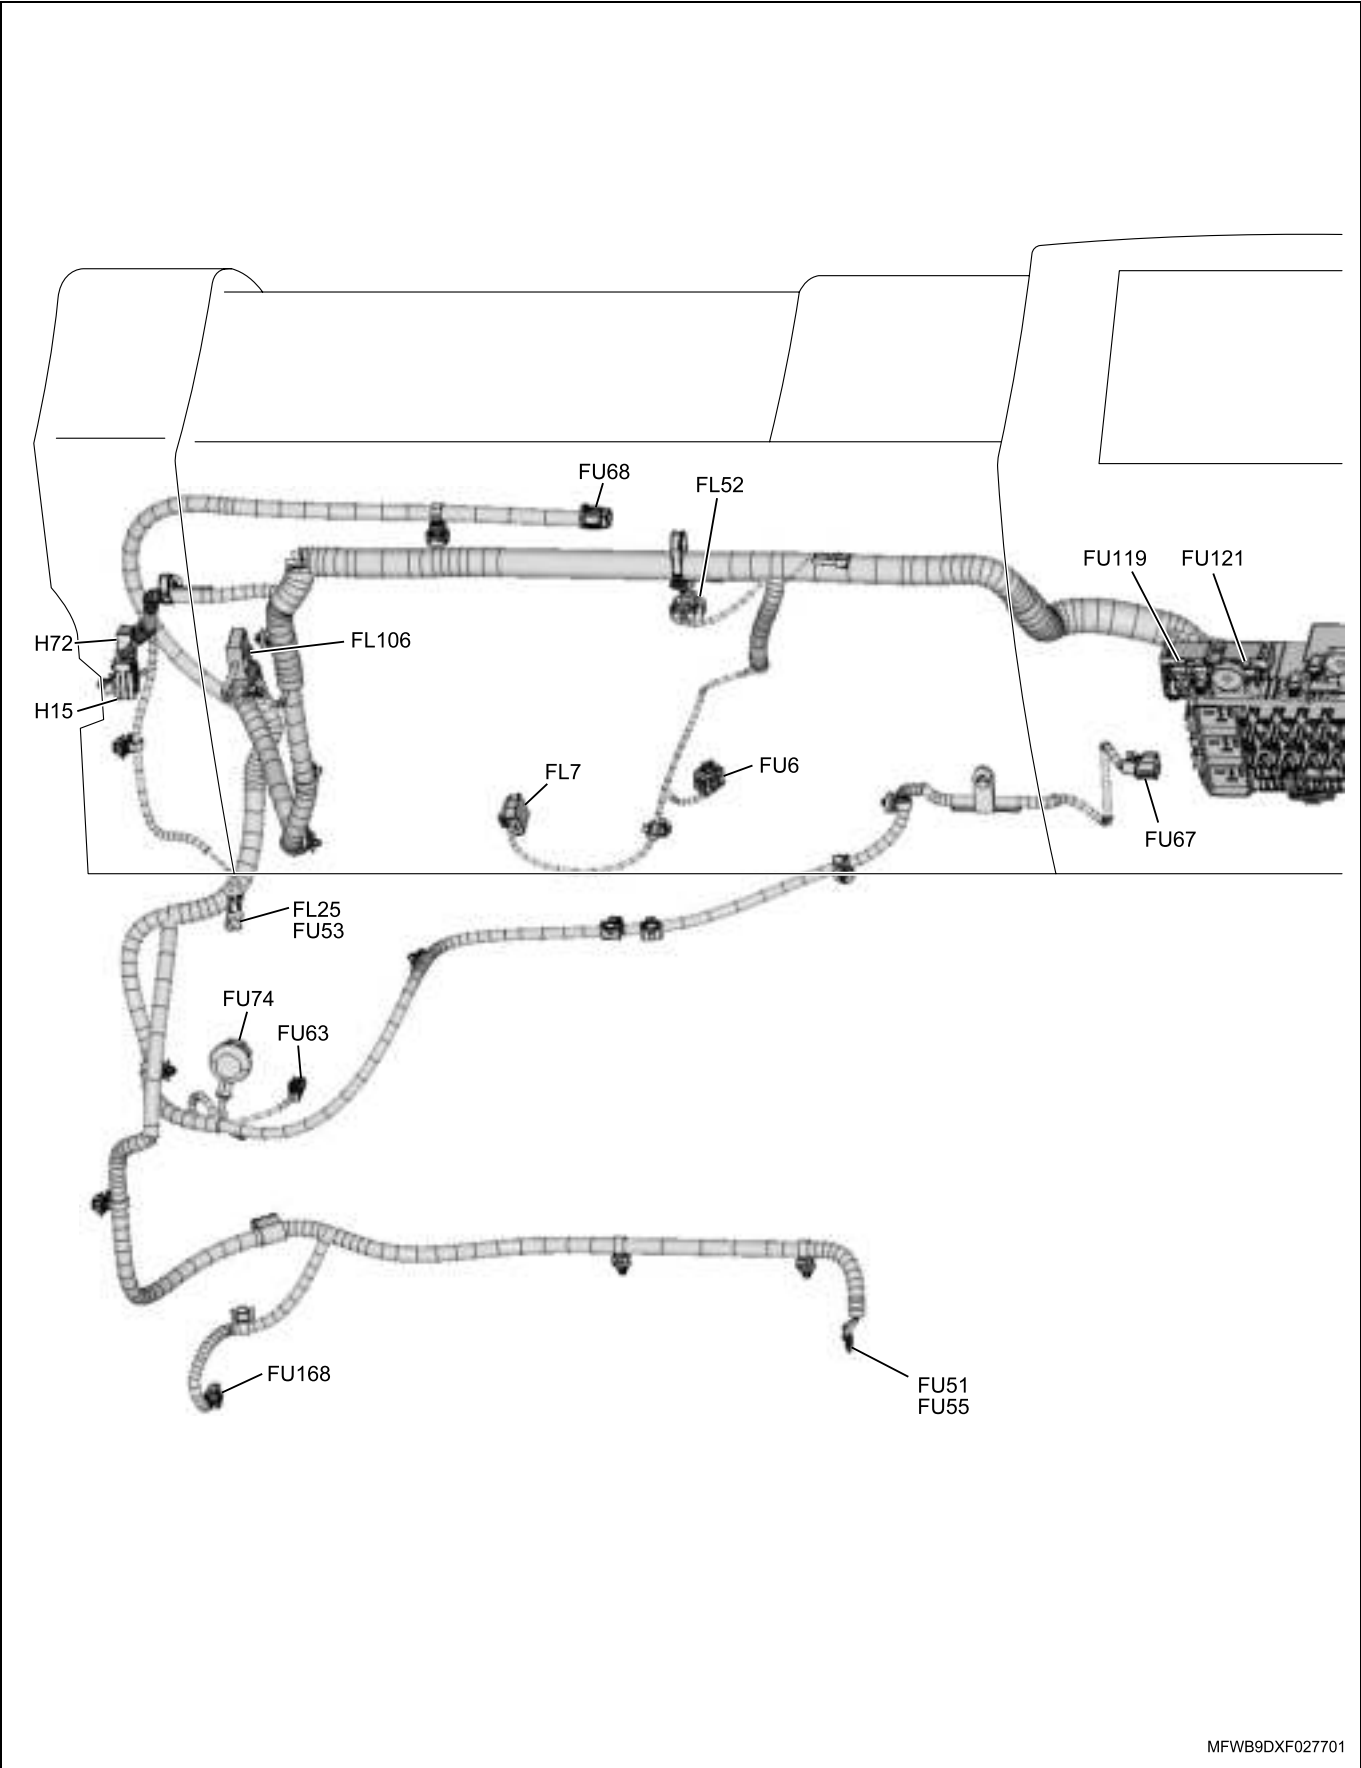Body Harness (FVR,FVM,FVZ)(2/2)



Legend

FL7	Blower Motor	FU63	Clearance Light (LH)
FL25	Cab (Front-LH) GND	FU67	Washer Motor
FL52	Barometric Pressure (BARO) Sensor	FU68	Wiper Motor
FL106	Intermittent Relay	FU74	Headlight (LH)
FU6	Blower Resistor	FU119	PTO Main Relay
FU40	Diode 4	FU121	PTO Cut Relay
FU51	Frame (Front-LH) GND	FU168	Front Turn Signal Light (LH)
FU53	Frame (Front-RH) GND	H15	Joint between Harnesses Connector
FU55	Frame (Front-LH) GND	H72	Joint between Harnesses Connector

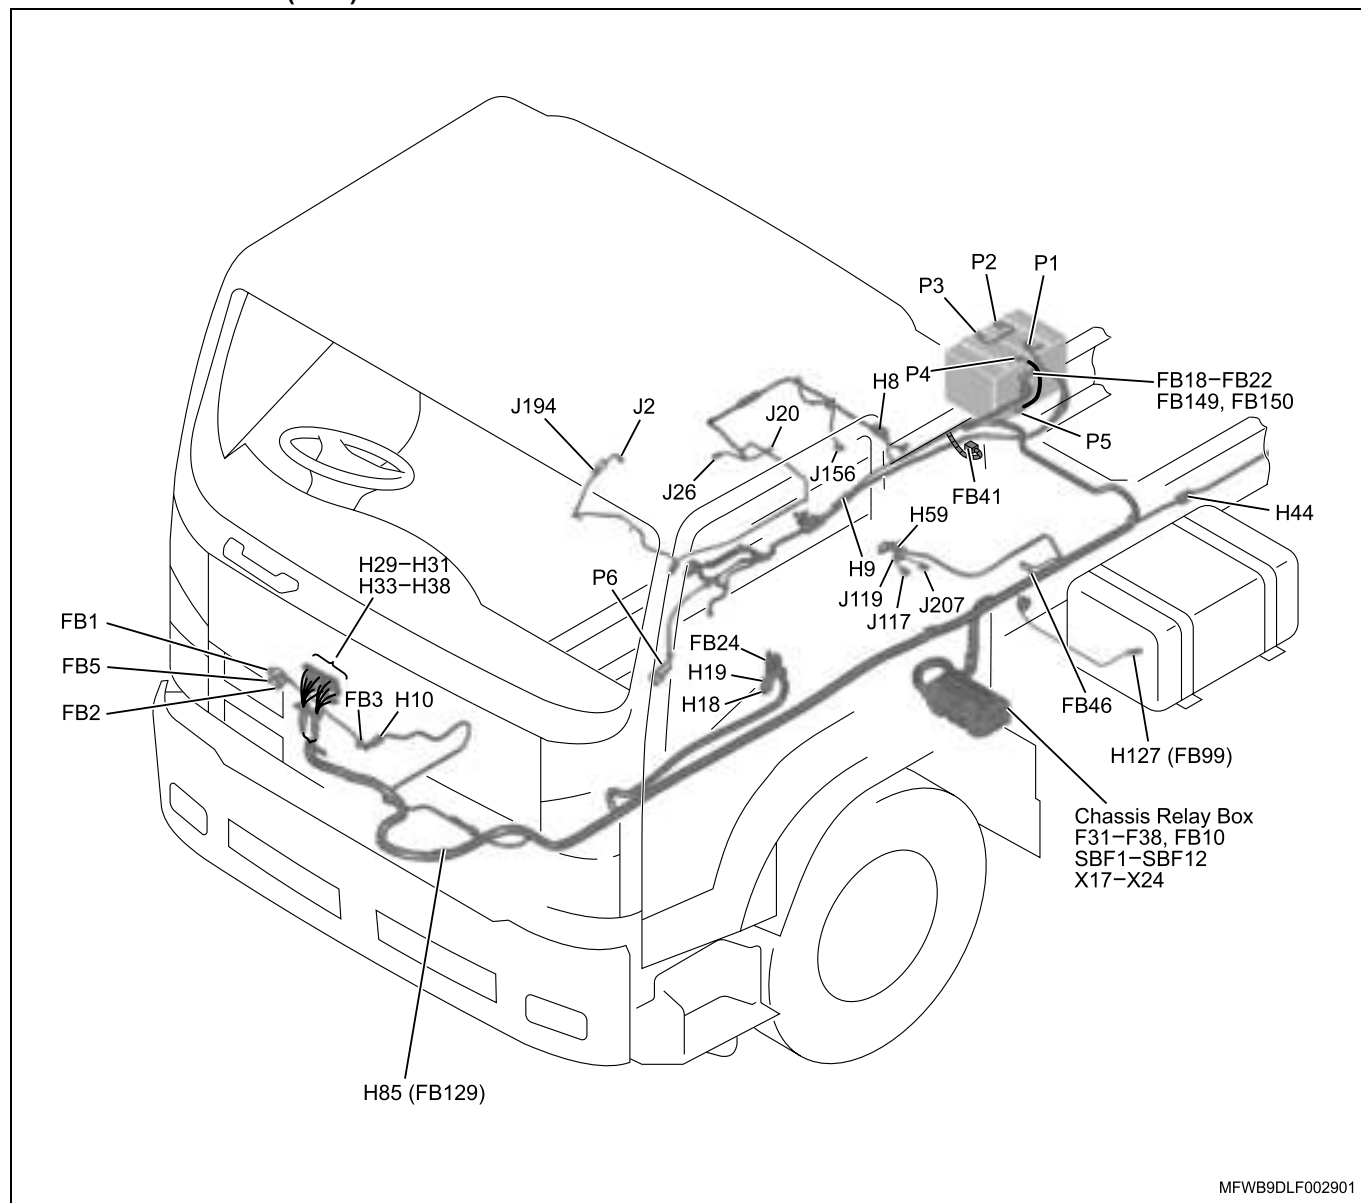
Frame Front Harness (FRR)

MFWB9DLF002901

Legend

F31	POWER SOURCE Fuse	FB24	Engine Control Module (ECM)
F32	—	FB41	Exhaust Brake Magnetic Valve
F33	ECM MAIN Fuse	FB46	PTO Magnetic Valve
F34	—	FB99	Water Separator Switch
F35	—	FB129	All Speed Accel Sensor
F36	—	FB149	Frame (Right-Side) GND
F37	AIR CONDITIONER Fuse	FB150	Frame (Right-Side) GND
F38	—	H8	Joint between Harnesses Connector
FB1	Air Pressure Sensor 1	H9	Joint between Harnesses Connector
FB2	Air Pressure Sensor 2	H10	Joint between Harnesses Connector
FB3	J/C-RH6P1	H18	Joint between Harnesses Connector
FB5	Stoplight Switch 2	H19	Joint between Harnesses Connector
FB10	Chassis Relay Box	H29	Joint between Harnesses Connector
FB18	Frame (Right-Side) GND	H30	Joint between Harnesses Connector
FB19	Frame (Right-Side) GND	H31	Joint between Harnesses Connector
FB20	Frame (Right-Side) GND	H32	Joint between Harnesses Connector
FB21	Frame (Right-Side) GND	H33	Joint between Harnesses Connector
FB22	Frame (Right-Side) GND	H34	Joint between Harnesses Connector

H35	Joint between Harnesses Connector	P6	Starter
H36	Joint between Harnesses Connector	SBF1	ECM Fuse
H37	Joint between Harnesses Connector	SBF2	STARTER Fuse
H38	Joint between Harnesses Connector	SBF3	—
H44	Joint between Harnesses Connector	SBF4	—
H59	Joint between Harnesses Connector	SBF5	STARTER SW2 Fuse
H85	Joint between Harnesses Connector	SBF6	STARTER SW1 Fuse
H127	Joint between Harnesses Connector	SBF7	—
J2	Air Flow Sensor	SBF8	HEAD LAMP Fuse
J20	Air Master Stroke Switch	SBF9	—
J26	Brake Fluid Level Switch	SBF10	WIPER & H/AC Fuse
J117	Vehicle Speed Sensor	SBF11	—
J119	Neutral Switch	SBF12	CAB JUNCTION BLOCK Fuse
J156	Air Low Pressure Switch 1	X17	Starter Relay
J194	IAT Sensor (AOH Brake)	X18	ECM Main Relay
J207	Backup Light Switch	X19	—
P1	Battery(+)	X20	A/C Compressor Relay
P2	Battery (-)	X21	—
P3	Battery (+)	X22	Starter Cut Relay
P4	Battery (-)	X23	—
P5	Battery (Frame) GND	X24	Diode 3

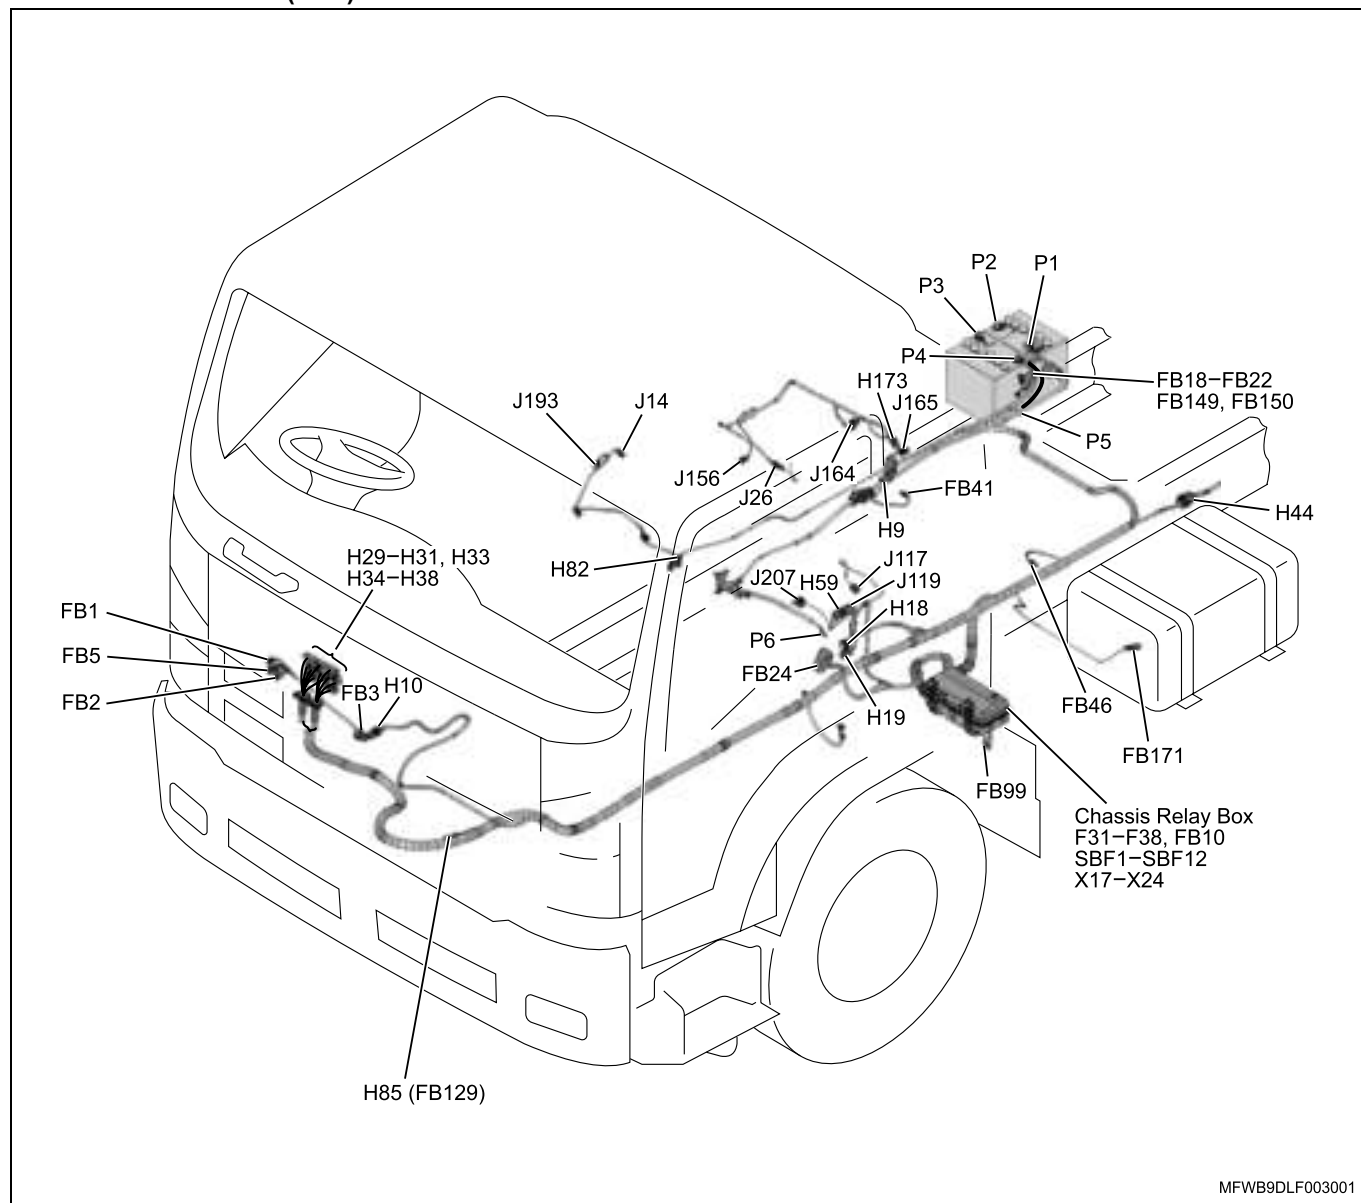
Frame Front Harness (FTR)

MFWB9DLF003001

Legend

F31	POWER SOURCE Fuse	FB24	Engine Control Module (ECM)
F32	—	FB41	Exhaust Brake Magnetic Valve
F33	ECM MAIN Fuse	FB46	PTO Magnetic Valve
F34	—	FB99	Water Separator Switch
F35	—	FB129	All Speed Accel Sensor
F36	—	FB149	Frame (Right-Side) GND
F37	AIR CONDITIONER Fuse	FB150	Frame (Right-Side) GND
F38	—	FB171	Fuel Tank Unit (LH)
FB1	Air Pressure Sensor 1	H9	Joint between Harnesses Connector
FB2	Air Pressure Sensor 2	H10	Joint between Harnesses Connector
FB3	J/C-RH6P1	H18	Joint between Harnesses Connector
FB5	Stoplight Switch 2	H19	Joint between Harnesses Connector
FB10	Chassis Relay Box	H29	Joint between Harnesses Connector
FB18	Frame (Right-Side) GND	H30	Joint between Harnesses Connector
FB19	Frame (Right-Side) GND	H31	Joint between Harnesses Connector
FB20	Frame (Right-Side) GND	H33	Joint between Harnesses Connector
FB21	Frame (Right-Side) GND	H34	Joint between Harnesses Connector
FB22	Frame (Right-Side) GND	H35	Joint between Harnesses Connector

H36	Joint between Harnesses Connector	P6	Starter
H37	Joint between Harnesses Connector	SBF1	ECM Fuse
H38	Joint between Harnesses Connector	SBF2	STARTER Fuse
H44	Joint between Harnesses Connector	SBF3	—
H59	Joint between Harnesses Connector	SBF4	—
H82	Joint between Harnesses Connector	SBF5	STARTER SW2 Fuse
H85	Joint between Harnesses Connector	SBF6	STARTER SW1 Fuse
H173	Joint between Harnesses Connector	SBF7	—
J14	IAT Sensor	SBF8	HEAD LAMP Fuse
J26	Brake Fluid Level Switch	SBF9	—
J117	Vehicle Speed Sensor	SBF10	WIPER & H/AC Fuse
J119	Neutral Switch	SBF11	—
J156	Air Low Pressure Switch 1	SBF12	CAB JUNCTION BLOCK Fuse
J164	Air Master Stroke Switch 5 (FTR)	X17	Starter Relay(4HK1)
J165	Air Master Stroke Switch 6 (FTR)	X18	ECM Main Relay
J193	Air Flow Sensor	X19	—
J207	Backup Light Switch	X20	A/C Compressor Relay
P1	Battery(+)	X21	—
P2	Battery (-)	X22	Starter Cut Relay
P3	Battery(+)	X23	—
P4	Battery (-)	X24	Diode 3
P5	Battery (Frame) GND		

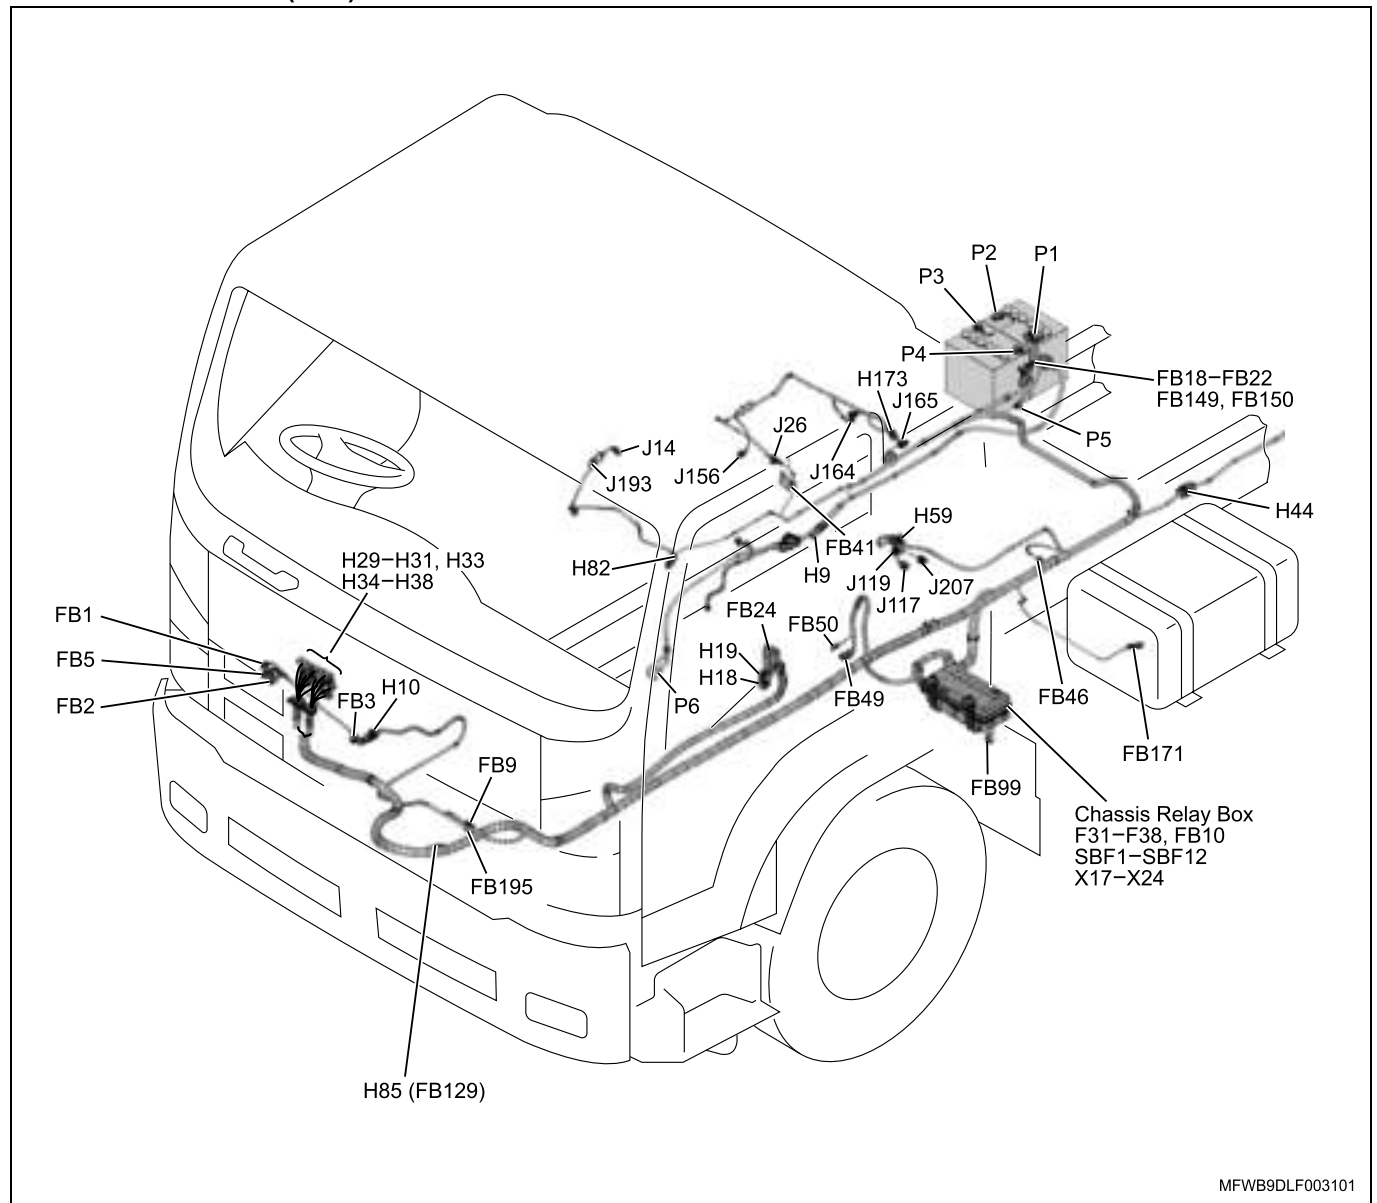
Frame Front Harness (FVR)

MFWB9DLF003101

Legend

F31	POWER SOURCE Fuse	FB22	Frame (Right-Side) GND
F32	—	FB24	Engine Control Module (ECM)
F33	ECM MAIN Fuse	FB41	Exhaust Brake Magnetic Valve
F34	—	FB46	PTO Magnetic Valve
F35	—	FB49	Starter Relay (6HK1)
F36	—	FB50	Starter Relay (6HK1)
F37	AIR CONDITIONER Fuse	FB99	Water Separator Switch
F38	—	FB129	All Speed Accel Sensor
FB1	Air Pressure Sensor 1	FB149	Frame (Right-Side) GND
FB2	Air Pressure Sensor 2	FB150	Frame (Right-Side) GND
FB3	J/C-RH6P1	FB171	Fuel Tank Unit (LH)
FB5	Stoplight Switch 2	FB195	Terminator
FB9	J/C-CAN 6P2	H9	Joint between Harnesses Connector
FB10	Chassis Relay Box	H10	Joint between Harnesses Connector
FB18	Frame (Right-Side) GND	H18	Joint between Harnesses Connector
FB19	Frame (Right-Side) GND	H19	Joint between Harnesses Connector
FB20	Frame (Right-Side) GND	H29	Joint between Harnesses Connector
FB21	Frame (Right-Side) GND	H30	Joint between Harnesses Connector

H31	Joint between Harnesses Connector	P4	Battery (-)
H33	Joint between Harnesses Connector	P5	Battery (Frame) GND
H34	Joint between Harnesses Connector	P6	Starter
H35	Joint between Harnesses Connector	SBF1	ECM Fuse
H36	Joint between Harnesses Connector	SBF2	STARTER Fuse
H37	Joint between Harnesses Connector	SBF3	—
H38	Joint between Harnesses Connector	SBF4	—
H44	Joint between Harnesses Connector	SBF5	STARTER SW2 Fuse
H59	Joint between Harnesses Connector	SBF6	STARTER SW1 Fuse
H82	Joint between Harnesses Connector	SBF7	—
H85	Joint between Harnesses Connector	SBF8	HEAD LAMP Fuse
H173	Joint between Harnesses Connector	SBF9	—
J14	IAT Sensor	SBF10	WIPER & H/AC Fuse
J26	Brake Fluid Level Switch	SBF11	ABS Fuse (4HK1)
J117	Vehicle Speed Sensor	SBF12	CAB JUNCTION BLOCK Fuse
J119	Neutral Switch	X17	—
J156	Air Low Pressure Switch 1	X18	ECM Main Relay
J164	Air Master Stroke Switch 5 (FVR)	X19	—
J165	Air Master Stroke Switch 6 (FVR)	X20	A/C Compressor Relay
J193	Air Flow Sensor	X21	—
J207	Backup Light Switch	X22	Starter Cut Relay
P1	Battery(+)	X23	—
P2	Battery (-)	X24	Diode 3
P3	Battery(+)		

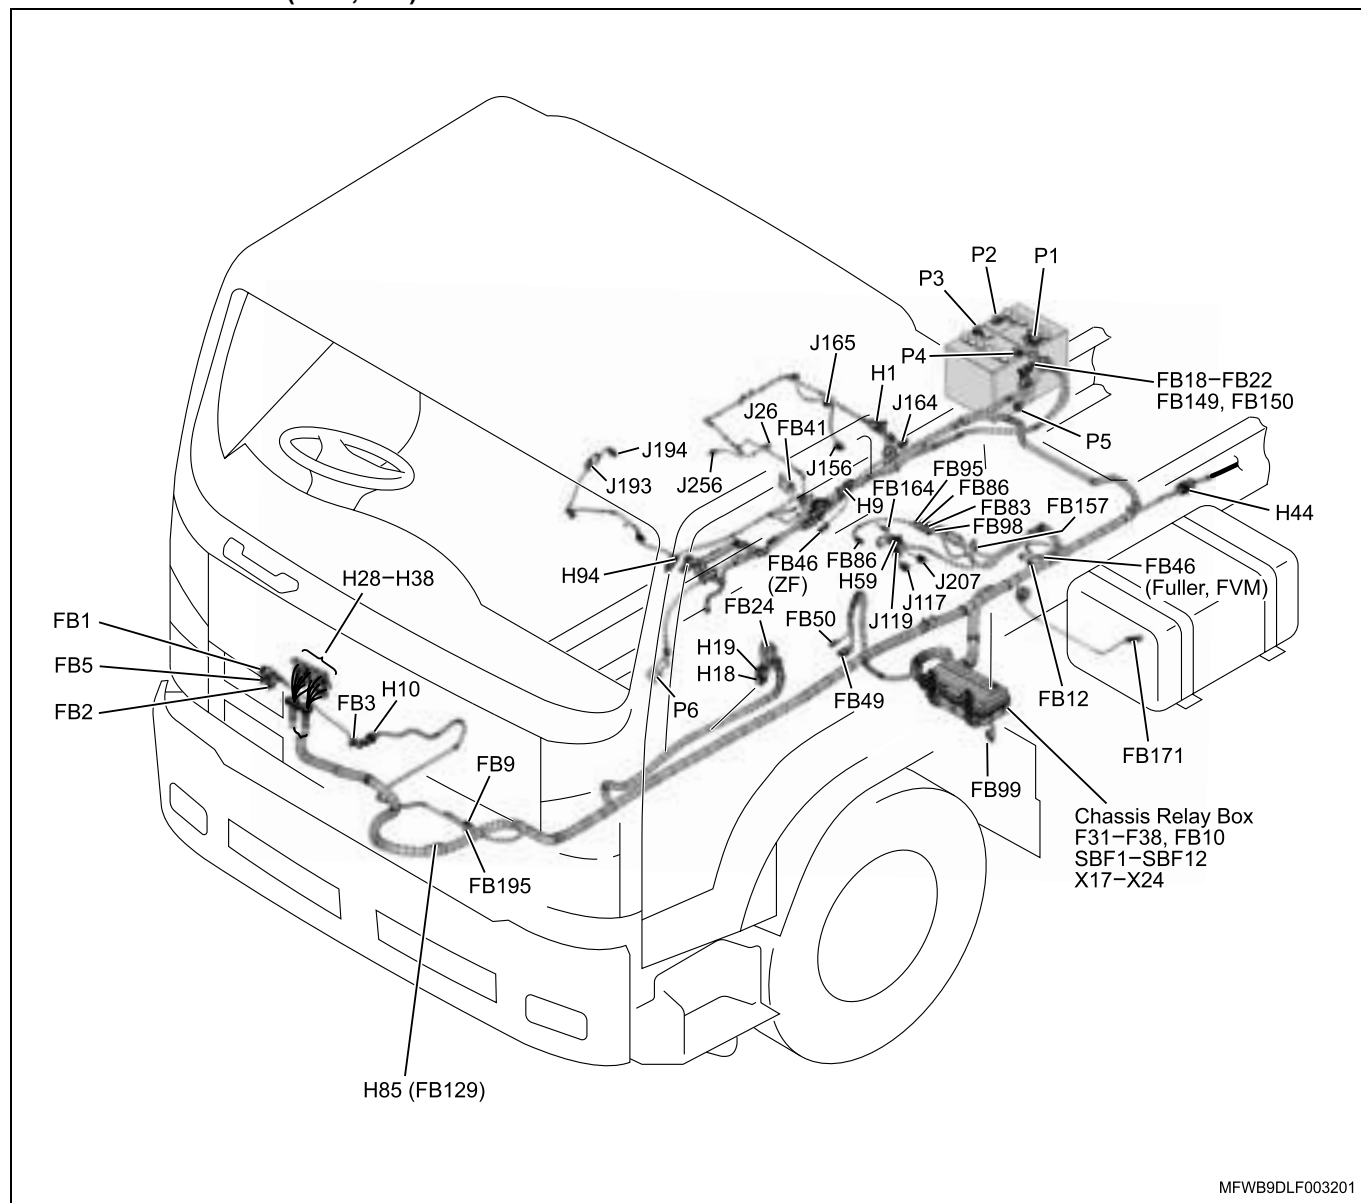Frame Front Harness (FVM,FVZ)


MFWB9DLF003201

Legend

F31	POWER SOURCE Fuse	FB21	Frame (Right-Side) GND
F32	—	FB22	Frame (Right-Side) GND
F33	ECM MAIN Fuse	FB24	Engine Control Module (ECM)
F34	—	FB41	Exhaust Brake Magnetic Valve
F35	—	FB46	PTO Magnetic Valve
F36	—	FB49	Starter Relay (6HK1)
F37	AIR CONDITIONER Fuse	FB50	Starter Relay (6HK1)
F38	—	FB83	Impulse Sensor
FB1	Air Pressure Sensor 1	FB86	Backup Light Switch (ZF, Fuller)
FB2	Air Pressure Sensor 2	FB95	Neutral Switch (ZF)
FB3	J/C-RH6P1	FB98	Low Range Switch (ZF)
FB5	Stoplight Switch 2	FB99	Water Separator Switch
FB9	J/C-CAN 6P2	FB129	All Speed Accel Sensor
FB10	Chassis Relay Box	FB149	Frame (Right-Side) GND
FB12	Inter Differential Lock Magnetic Valve (FVZ)	FB150	Frame (Right-Side) GND
FB18	Frame (Right-Side) GND	FB157	Vehicle Speed Sensor (FULLER)
FB20	Frame (Right-Side) GND	FB164	Neutral Switch (FULLER)
		FB171	Fuel Tank Unit (LH)

FB195	Terminator	J207	Backup Light Switch
H1	Joint between Harnesses Connector	J256	Exhaust Brake Magnetic Valve
H9	Joint between Harnesses Connector	P1	Battery(+)
H10	Joint between Harnesses Connector	P2	Battery (-)
H18	Joint between Harnesses Connector	P3	Battery(+)
H19	Joint between Harnesses Connector	P4	Battery (-)
H28	Joint between Harnesses Connector	P5	Battery (Frame) GND
H29	Joint between Harnesses Connector	P6	Starter
H30	Joint between Harnesses Connector	SBF1	ECM Fuse
H31	Joint between Harnesses Connector	SBF2	STARTER Fuse
H33	Joint between Harnesses Connector	SBF3	—
H34	Joint between Harnesses Connector	SBF4	—
H35	Joint between Harnesses Connector	SBF5	STARTER SW2 Fuse
H36	Joint between Harnesses Connector	SBF6	STARTER SW1 Fuse
H37	Joint between Harnesses Connector	SBF7	—
H38	Joint between Harnesses Connector	SBF8	HEAD LAMP Fuse
H44	Joint between Harnesses Connector	SBF9	—
H59	Joint between Harnesses Connector	SBF10	WIPER & H/AC Fuse
H85	Joint between Harnesses Connector	SBF11	—
H94	Joint between Harnesses Connector	SBF12	CAB JUNCTION BLOCK Fuse
J26	Brake Fluid Level Switch	X17	—
J117	Vehicle Speed Sensor	X18	ECM Main Relay
J119	Neutral Switch	X19	—
J156	Air Low Pressure Switch 1	X20	A/C Compressor Relay
J164	Air Master Stroke Switch 5 (FVR)	X21	—
J165	Air Master Stroke Switch 6 (FVR)	X22	Starter Cut Relay
J193	Air Flow Sensor	X23	—
J194	IAT Sensor	X24	Diode 3

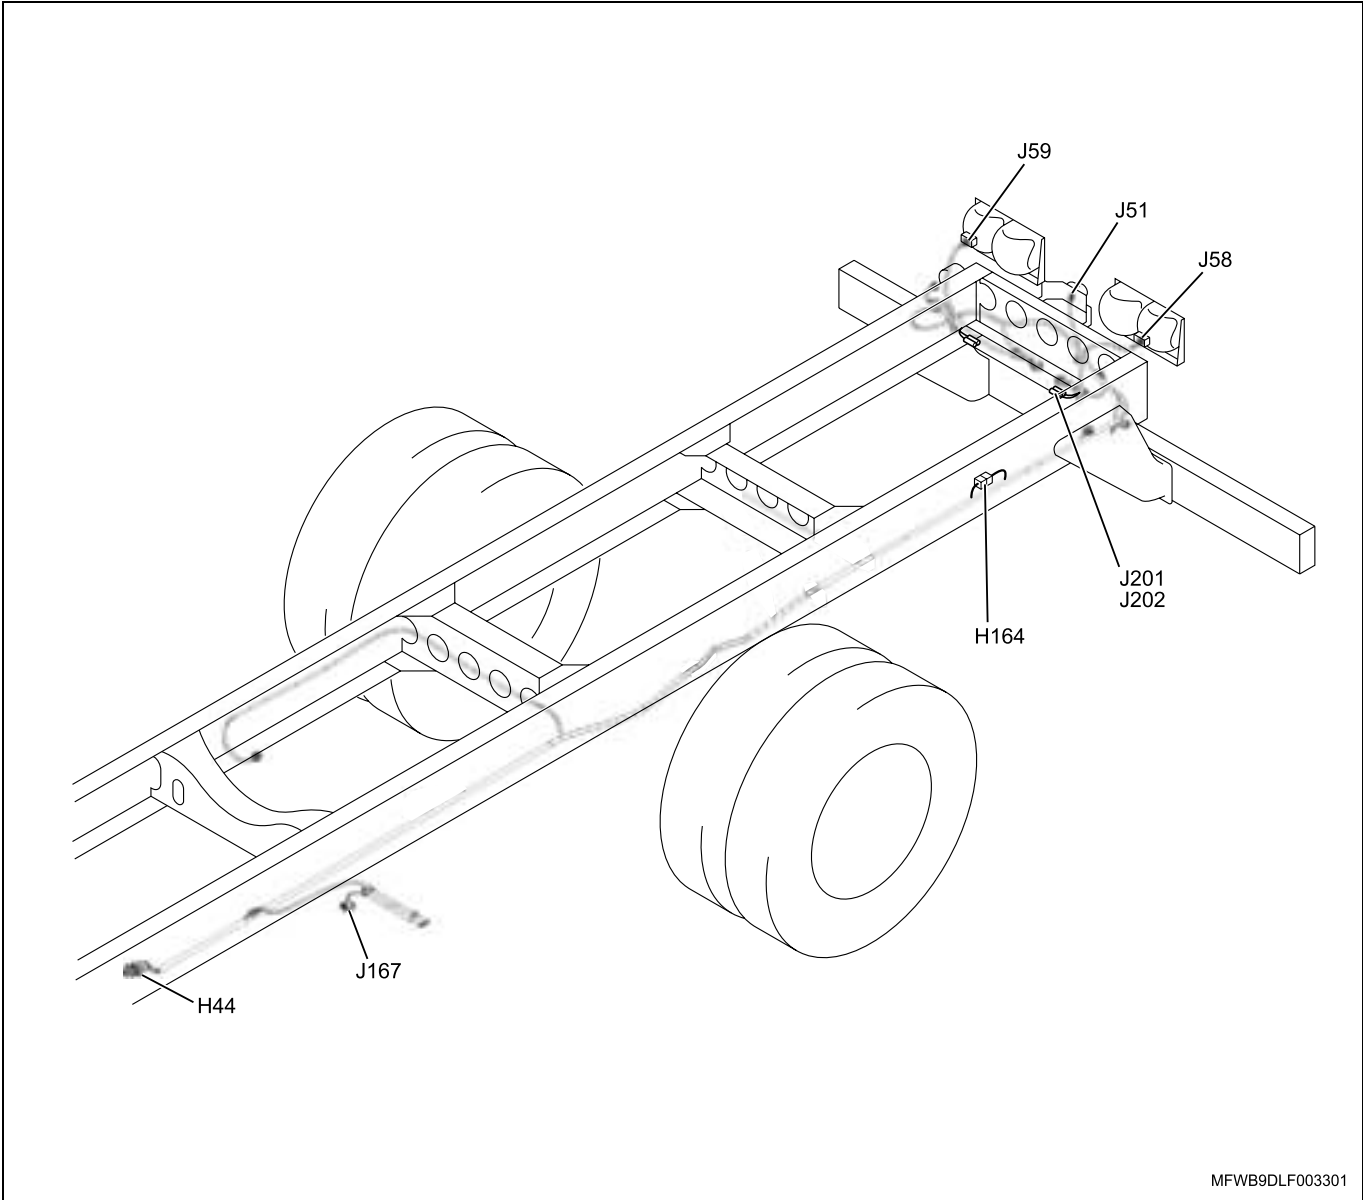Frame Rear Harness (Leaf Suspension)




MFWB9DLF003301

Legend

H44	Joint between Harnesses Connector	J59	Rear Combination Light (RH)
H164	Joint between Harnesses Connector	J167	Fuel Tank Unit (FRR Rear)
J51	License Plate Light	J201	Tail Spare (LH)
J58	Rear Combination Light (LH)	J202	Tail Spare (LH) GND

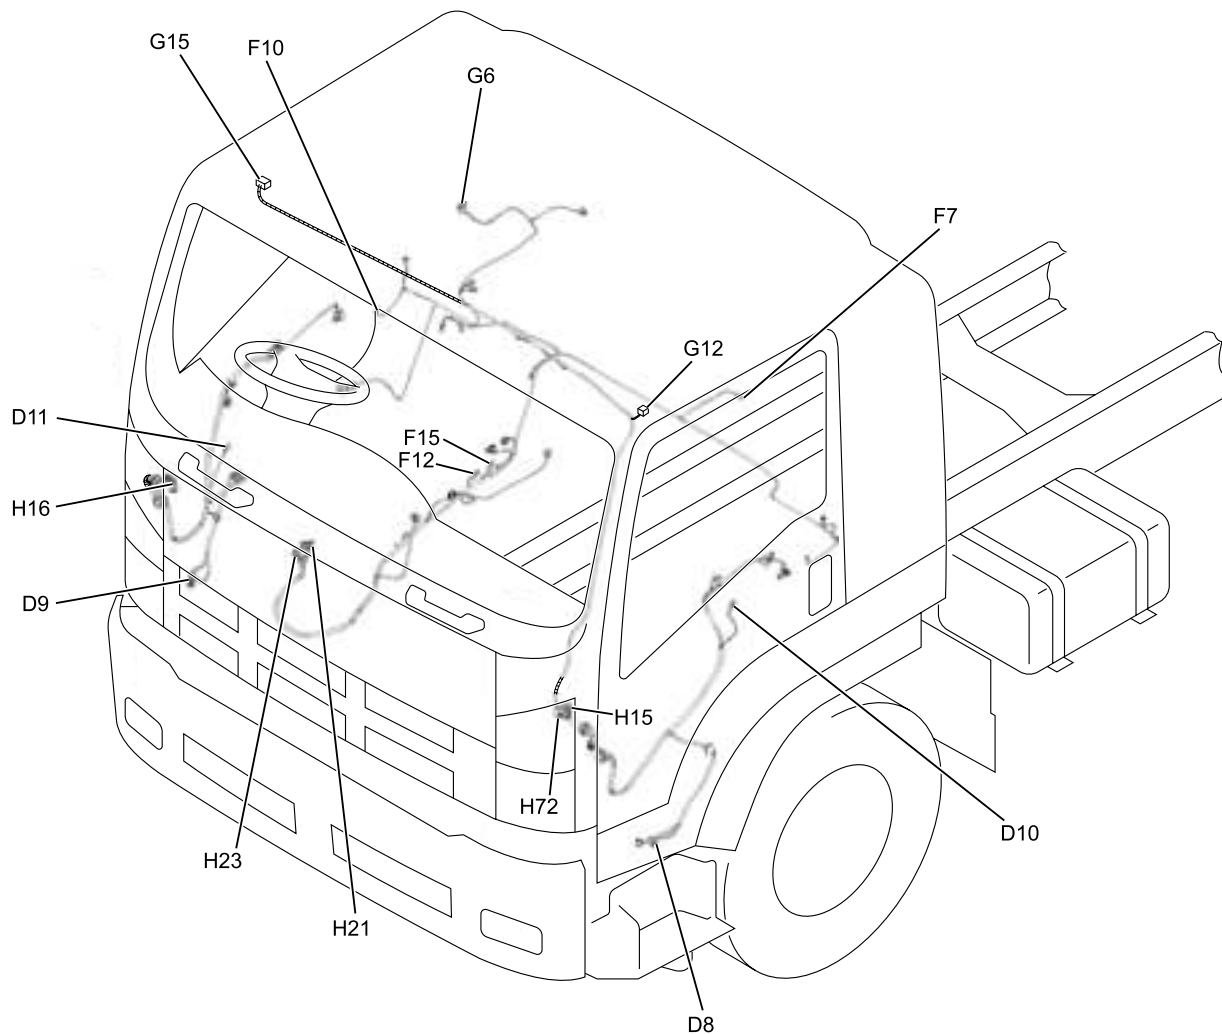Door, Roof, Bumper, Floor Harness (Full Cab) & FRR (Day Cab)




MFWB9DLF002801

Legend

D8	Side Turn Signal Light (LH) (Door Installation)	F15	Seat Belt Switch
D9	Side Turn Signal Light (RH) (Door Installation)	G6	Dome Light
D10	Speaker (LH)	G12	Roof-Mounted Clearance Light 1
D11	Speaker (RH)	G15	Roof-Mounted Clearance Light 2
F7	Cab Lock Switch	H15	Joint between Harnesses Connector
F10	Front Door Switch (RH)	H16	Joint between Harnesses Connector
F12	Parking Brake Switch	H21	Joint between Harnesses Connector
		H23	Joint between Harnesses Connector
		H72	Joint between Harnesses Connector

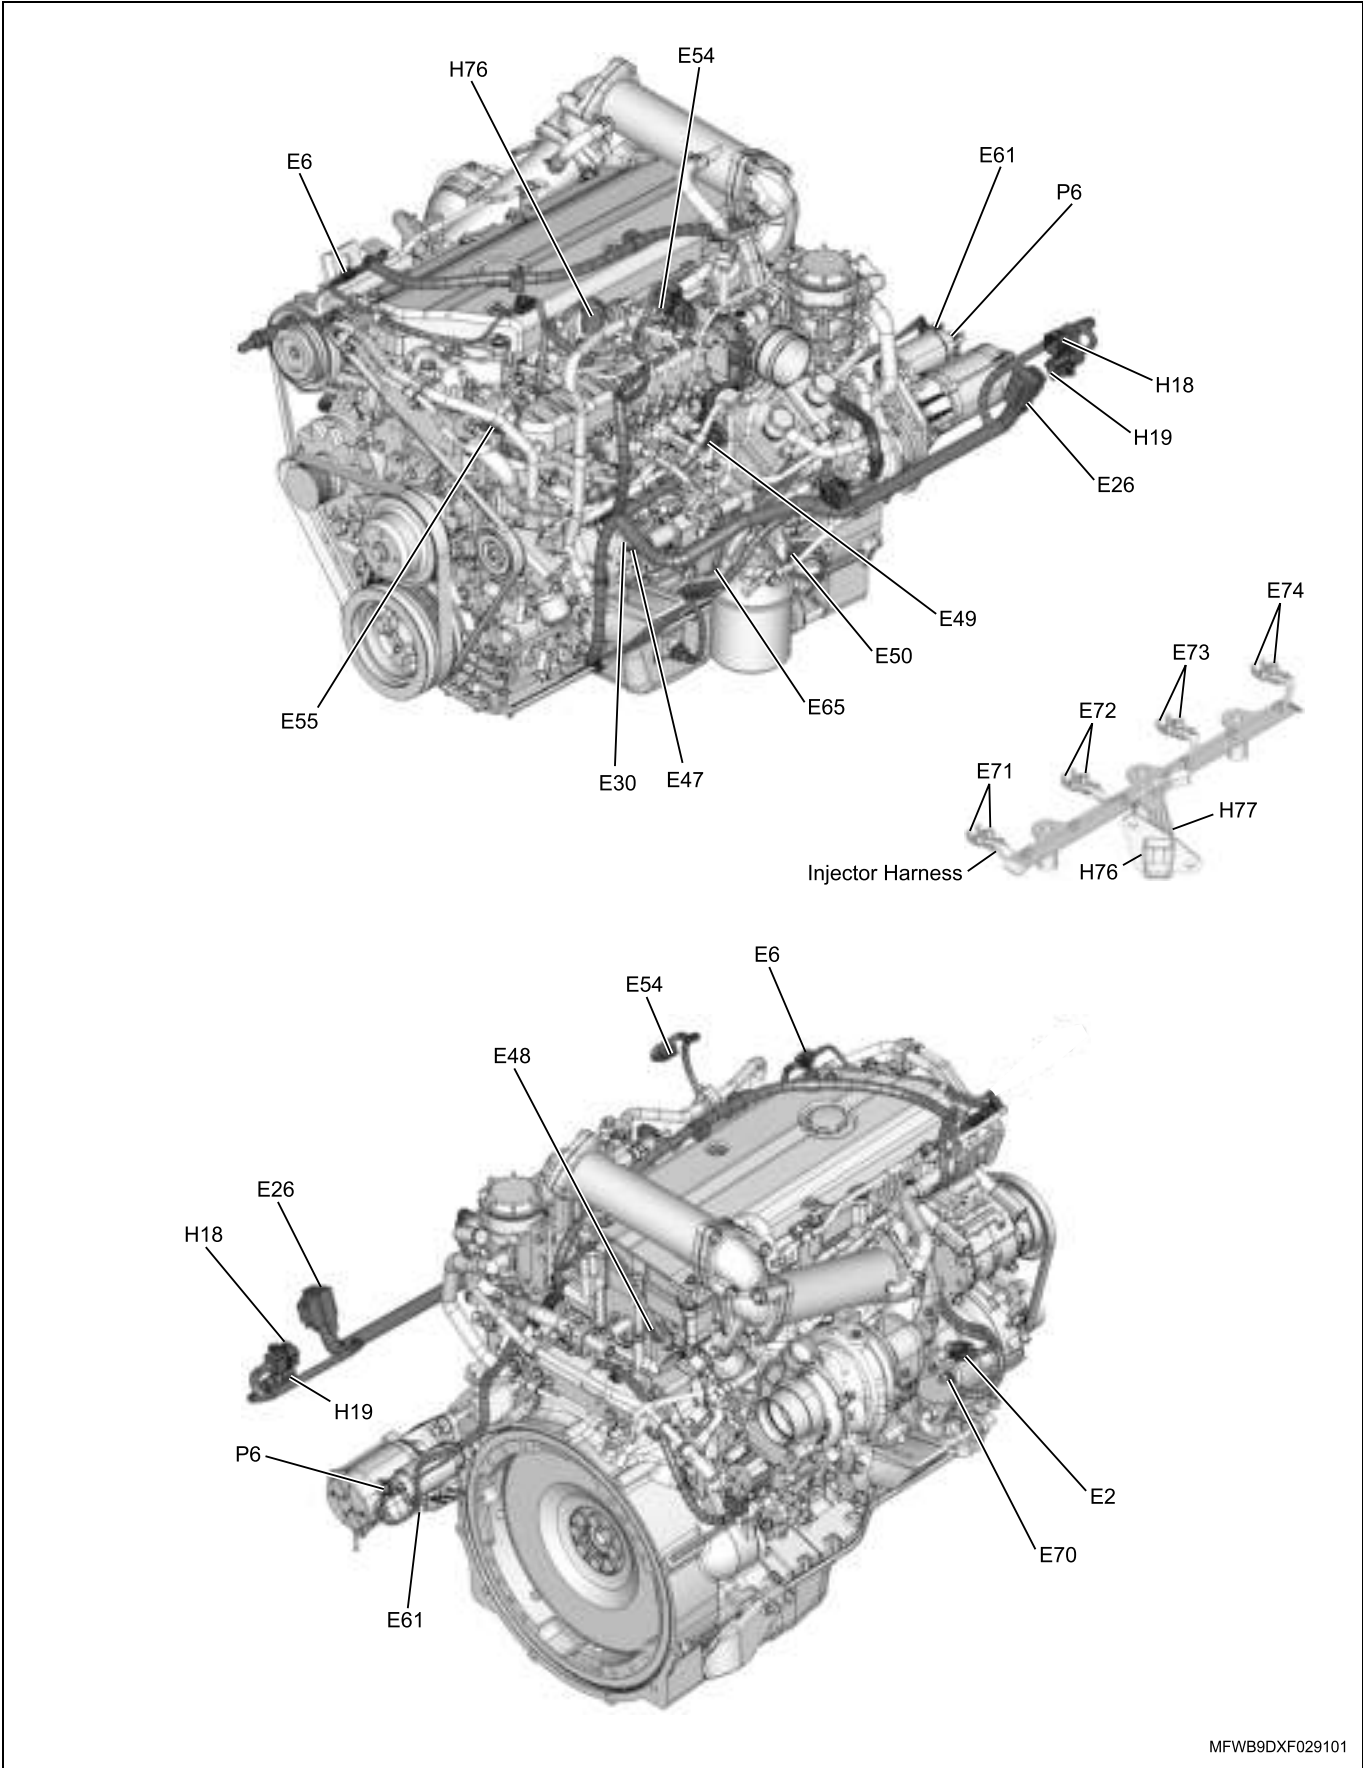
Engine Harness (4HK1 Engine)



Legend

E2	AC Generator (B)	E71	Cylinder Fuel Injector No.1 (Cylinder No.1)
E6	A/C Compressor		
E26	Engine Control Module (ECM)	E72	Cylinder Fuel Injector No.4 (Cylinder No.2)
E30	Fuel Temperature (FT) Sensor		
E47	Fule Rail Pressure (FRP) Regulator	E73	Cylinder Fuel Injector No.2 (Cylinder No.3)
E48	Camshaft Position (CMP) Sensor		
E49	Fule Rail Pressure (FRP) Sensor	E74	Cylinder Fuel Injector No.3 (Cylinder No.3)
E50	Crankshaft Position (CKP) Sensor		
E54	Boost Pressure Sensor	H18	Joint between Harnesses Connector
E55	Engine Coolant Temperature (ECT) Sensor	H19	Joint between Harnesses Connector
		H76	Joint between Harnesses Connector
E61	Starter	H77	Joint between Harnesses Connector
E65	Oil Pressure Switch	P6	Starter
E70	AC Generator		

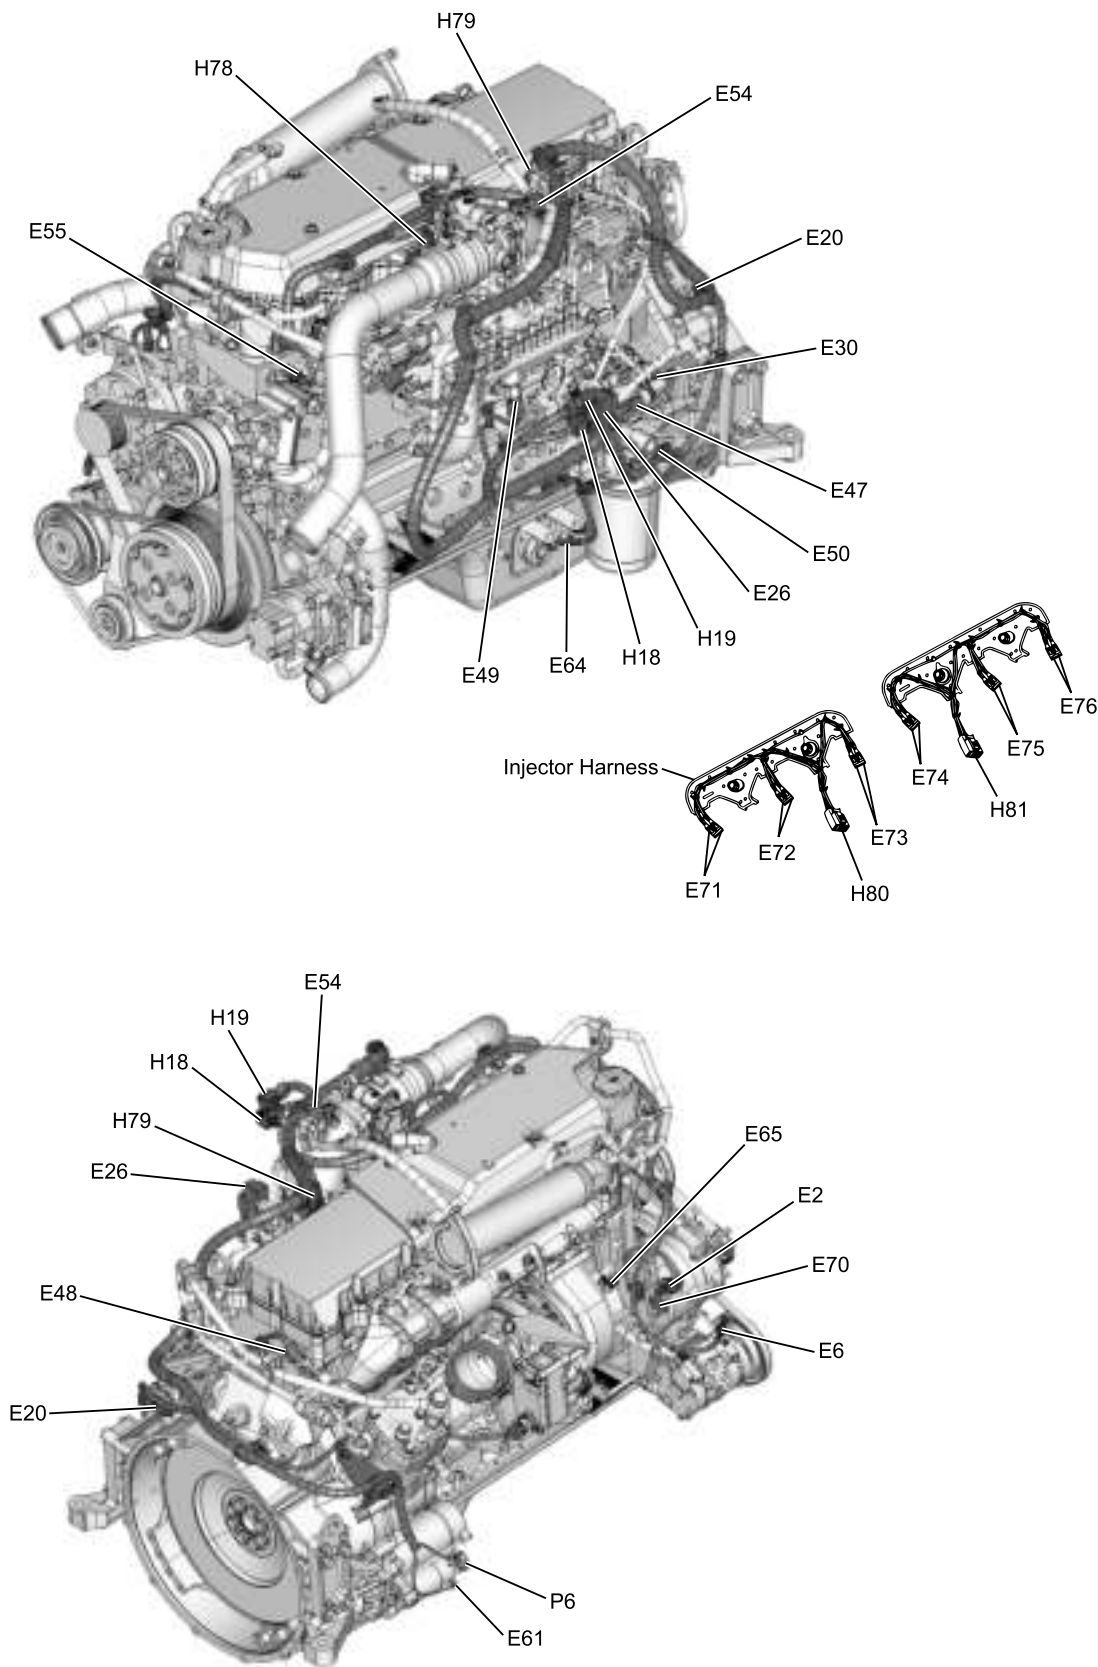
Engine Harness (6HK1 Engine)



Legend

E2	AC Generator (B)	E72	Cylinder Fuel Injector No.5 (Cylinder No.2)
E6	A/C Compressor		
E20	Engine GND	E73	Cylinder Fuel Injector No.3 (Cylinder No.3)
E26	Engine Control Module (ECM)		
E30	Fuel Temperature (FT) Sensor	E74	Cylinder Fuel Injector No.6 (Cylinder No.4)
E47	Fule Rail Pressure (FRP) Regulator		
E48	Camshaft Position (CMP) Sensor	E75	Cylinder Fuel Injector No.2 (Cylinder No.5)
E49	Fule Rail Pressure (FRP) Sensor		
E50	Crankshaft Position (CKP) Sensor	E76	Cylinder Fuel Injector No.4 (Cylinder No.6)
E54	Boost Pressure Sensor		
E55	Engine Coolant Temperature (ECT) Sensor	H18	Joint between Harnesses Connector
		H19	Joint between Harnesses Connector
E61	Starter	H78	Joint between Harnesses Connector
E64	Engine Oil Level Switch	H79	Joint between Harnesses Connector
E65	Oil Pressure Switch	H80	Joint between Harnesses Connector
E70	AC Generator	H81	Joint between Harnesses Connector
E71	Cylinder Fuel Injector No.1 (Cylinder No.1)	P6	Starter

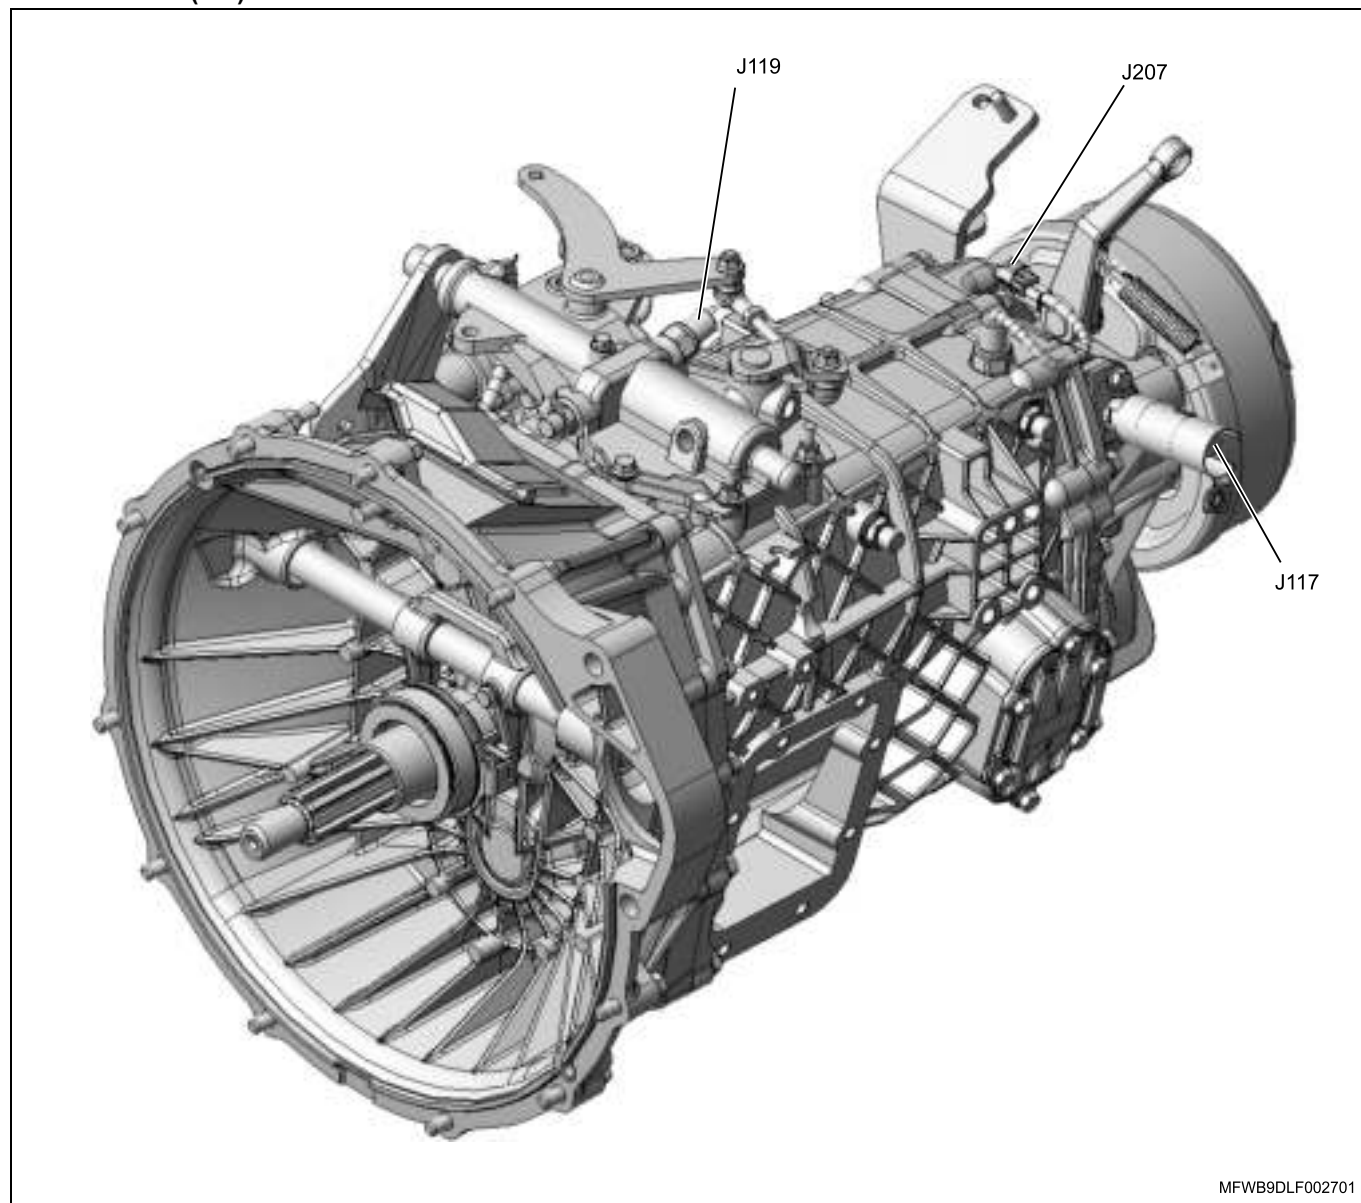
Transmission (MT) Harness



Legend

J117 Vehicle Speed Sensor
J119 Neutral Switch

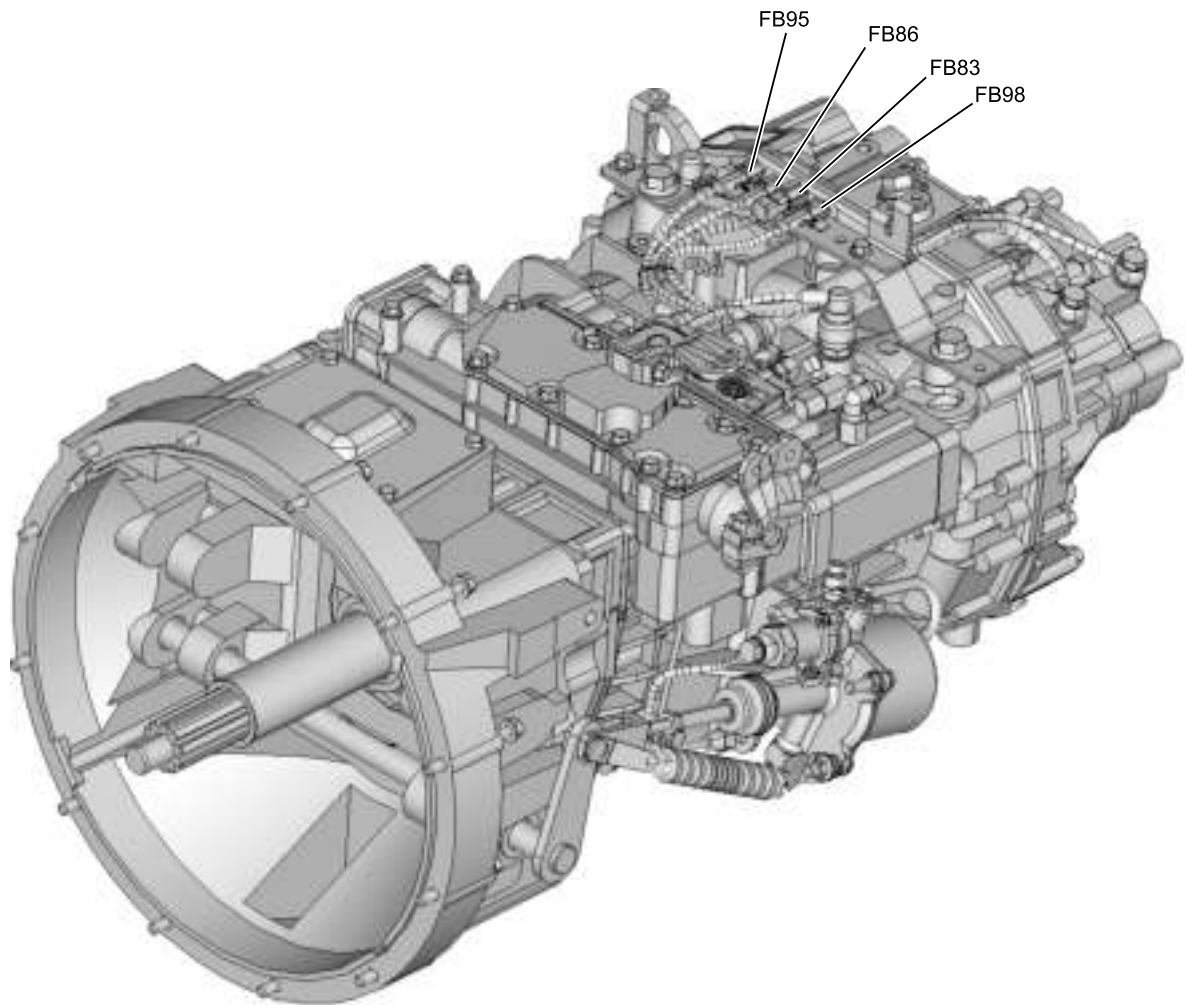J207 Backup Light Switch

Transmission (ZF) Harness

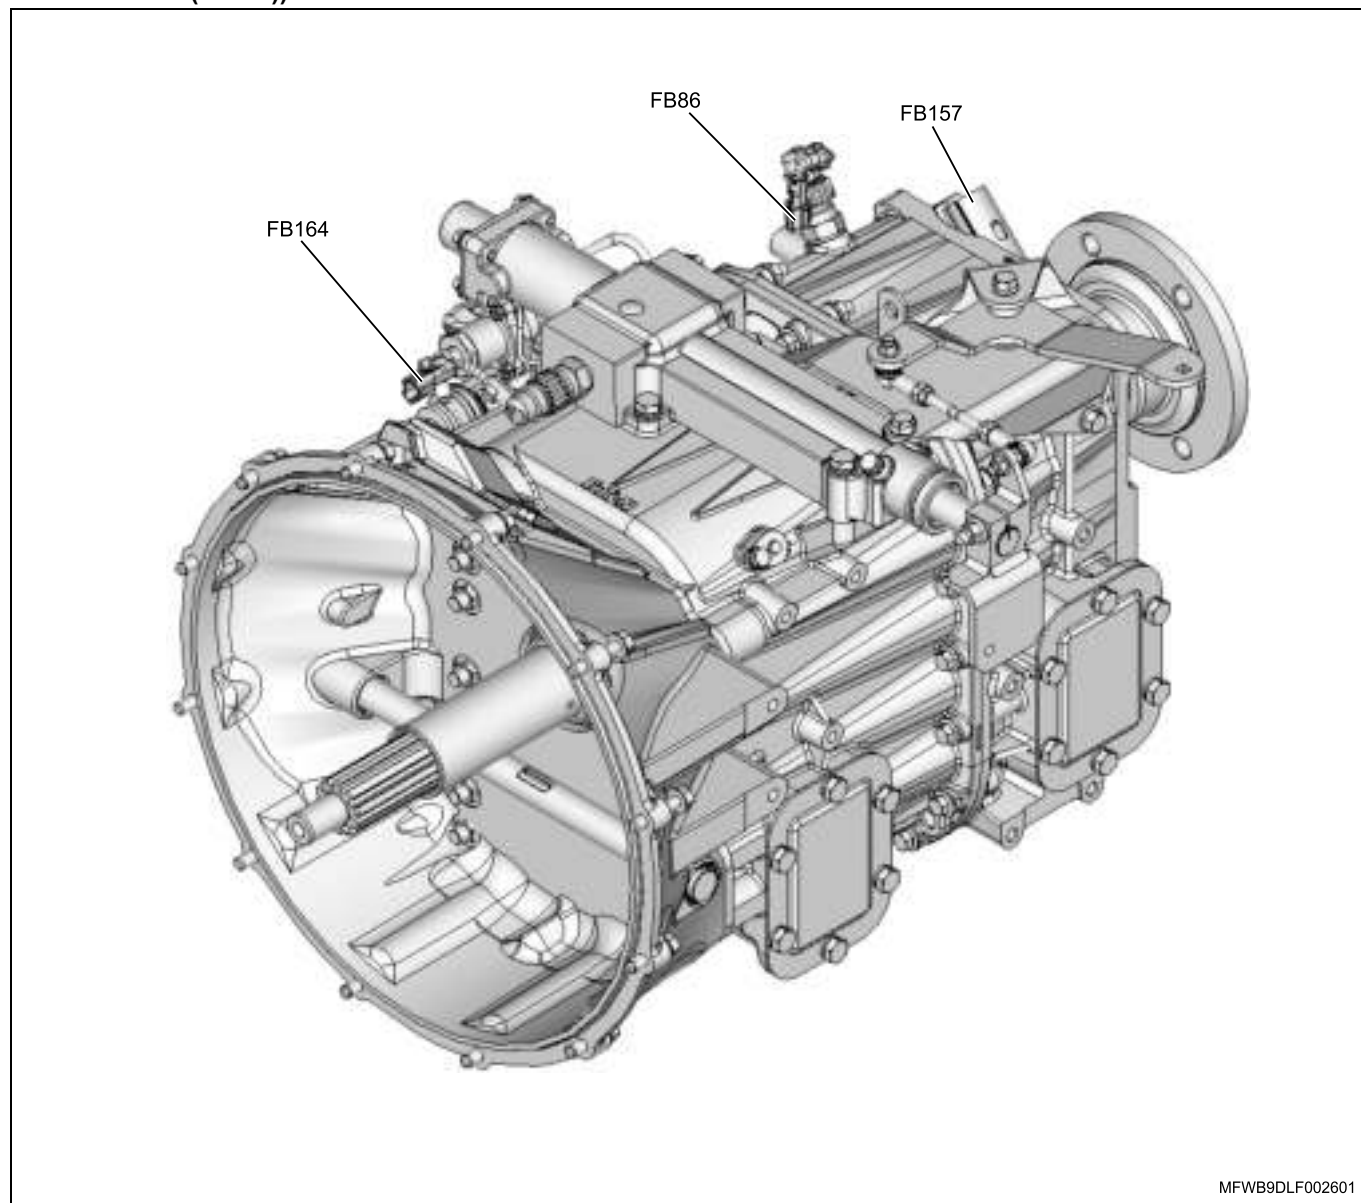
MFWB9DLF002501

Legend

FB83 Impulse Sensor
FB86 Backup Light Switch

FB95 Neutral Switch
FB98 Low Range Switch

Transmission (Fuller) Harness



MFWB9DLF002601

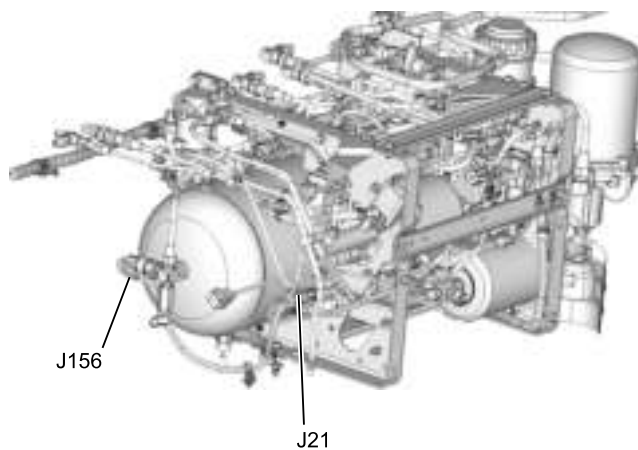
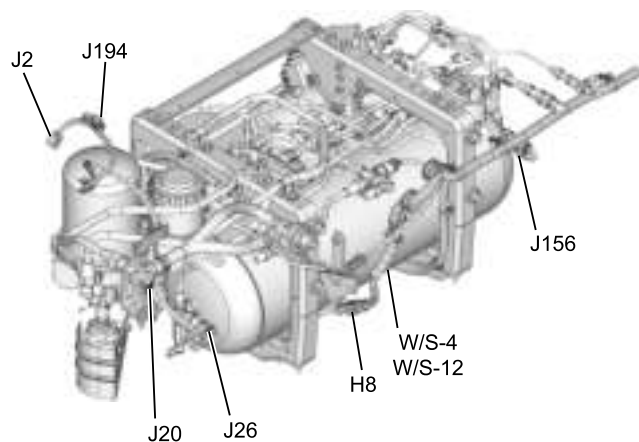
Legend

FB86 Backup Light Switch
FB157 Vehicle Speed Sensor



FB164 Neutral Switch

Air Tank Harness



FRR



FVM, FVZ

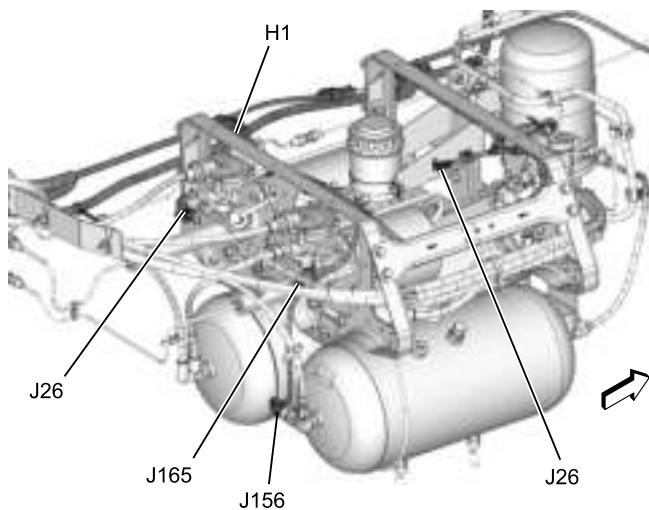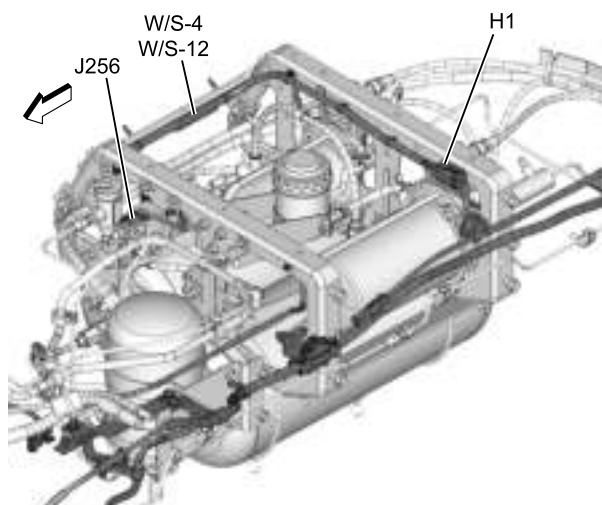

FTR, FVR

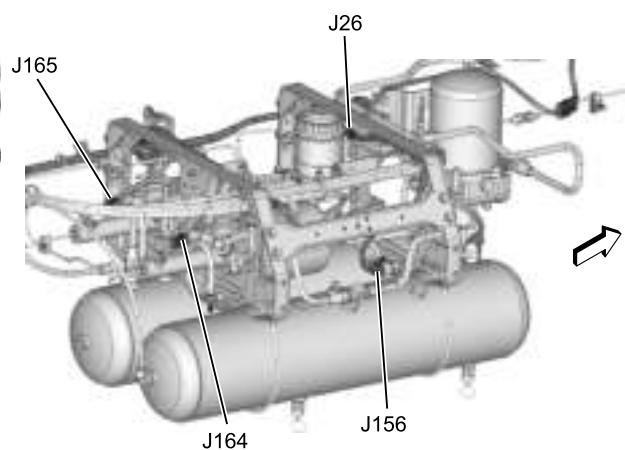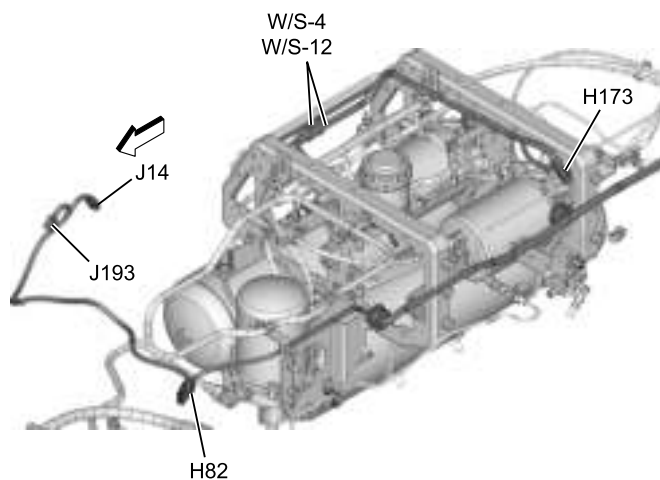








9D-294 Wiring System (RHD model)









Legend

H1	Joint between Harnesses Connector	J26	Brake Fluid Level Switch
H8	Joint between Harnesses Connector	J156	Air Low Pressure Switch 1
H82	Joint between Harnesses Connector	J164	Air Master Stroke Switch 5
H173	Joint between Harnesses Connector	J165	Air Master Stroke Switch 6
J2	Air Flow Sensor	J193	Air Flow Sensor 3
J14	IAT Sensor	J194	IAT sensor
J20	Air Master Stroke Switch 1	J256	Exhaust Brake Magnetic Valve
J21	Air Master Stroke Switch 2		

Connector List


 
 
 
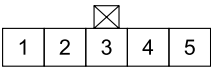
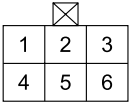
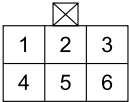
 
Connector List









No.	Connector Face
D2	 <p>002-267</p> <p>Gray</p>
D3	 <p>002-267</p> <p>Gray</p>
D4	 <p>002-267</p> <p>Gray</p>
D5	 <p>005-037</p> <p>Gray</p>
D6	 <p>006-115</p> <p>Green</p>
D7	 <p>006-115</p> <p>Green</p>
D8	 <p>002-267</p> <p>Black</p>

   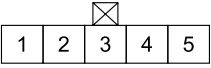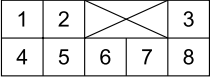   No.	Connector Face
D9	 <p>002-267</p> <p>Black</p>
D10	 <p>002-270</p> <p>Black</p>
D11	 <p>002-270</p> <p>Black</p>
D14	 <p>005-037</p> <p>Gray</p>
D15	 <p>008-077</p> <p>White</p>
D16	 <p>002-267</p> <p>Gray</p>
D17	 <p>002-267</p> <p>Gray</p>
D18	 <p>002-267</p> <p>White</p>

 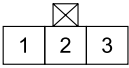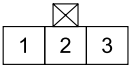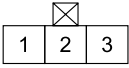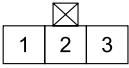       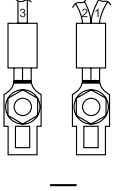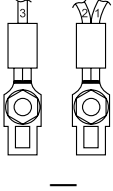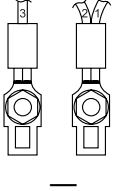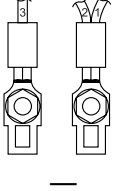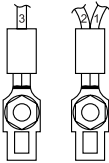
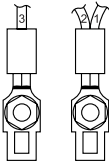
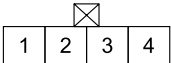
 
 
 
 
 
9D-296 Wiring System (RHD model)

 
 
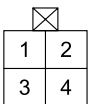
 
 

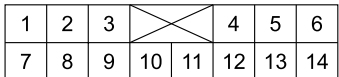
 
No.	Connector Face	No.	Connector Face
D19	<div><div><div>1</div><div>2</div></div><div>⊠</div></div> <div>002-267</div> <div>White</div>	E9	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div></div><div><div>9</div><div>10</div><div>11</div><div>12</div></div><div><div>13</div><div>14</div><div>15</div><div>16</div></div></div><div>⊠</div><div>016-086</div><div>White</div></div>
D20	<div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div></div><div>⊠</div></div> <div>005-037</div> <div>White</div>	E10	<div><div><div>1</div><div>2</div><div>3</div></div><div><div>4</div><div>5</div><div>6</div></div></div> <div>⊠</div> <div>006-115</div> <div>Black</div>
D21	<div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div></div><div>⊠</div></div> <div>005-037</div> <div>White</div>	E20	<div><div><div>1</div></div></div> <div>⊠</div> <div>000-049</div> <div>—</div>
D22	<div><div><div>3</div><div>2</div><div>1</div></div><div><div>6</div><div>5</div><div>4</div></div></div> <div>⊠</div> <div>006-117</div> <div>Gray</div>	E26	<div><div><div><div>121</div><div>120</div><div>119</div><div>113</div><div>112</div><div>111</div><div>110</div><div>109</div><div>108</div><div>107</div><div>106</div></div><div><div>105</div><div>104</div><div>103</div><div>102</div><div>101</div><div>100</div><div>99</div><div>98</div></div></div><div><div>118</div><div>117</div></div><div><div><div>116</div><div>115</div><div>114</div><div>97</div><div>96</div><div>95</div><div>94</div><div>93</div><div>92</div><div>91</div><div>90</div></div><div><div>89</div><div>88</div><div>87</div><div>86</div><div>85</div><div>84</div><div>83</div><div>82</div></div></div></div> <div>⊠</div> <div>040-010</div> <div>Black</div>
D23	<div><div><div>3</div><div>2</div><div>1</div></div><div><div>6</div><div>5</div><div>4</div></div></div> <div>⊠</div> <div>006-117</div> <div>Gray</div>	E30	<div><div><div>1</div><div>2</div></div></div> <div>⊠</div> <div>002-267</div> <div>Black</div>
E2	<div><div><div>1</div></div></div> <div>⊠</div> <div>000-049</div> <div>—</div>	E31	<div><div><div>1</div></div></div> <div>⊠</div> <div>000-049</div> <div>—</div>
E3	<div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div></div></div> <div>⊠</div> <div>008-076</div> <div>White</div>	E45	<div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div></div></div> <div>⊠</div> <div>008-076</div> <div>Black</div>
E6	<div><div><div>1</div></div></div> <div>⊠</div> <div>001-084</div> <div>Black</div>	E46	<div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div></div> <div>⊠</div> <div>006-119</div> <div>Gray</div>









No.	Connector Face
E47	 <p>002-267</p> <p>White</p>
E48	 <p>003-150</p> <p>Black</p>
E49	 <p>003-150</p> <p>Gray</p>
E50	 <p>003-150</p> <p>Black</p>
E54	 <p>003-150</p> <p>Gray</p>
E55	 <p>002-267</p> <p>Gray</p>
E61	 <p>000-049</p> <p>—</p>
E64 (4HK1)	 <p>002-267</p> <p>Black</p>









No.	Connector Face
E64 (6HK1)	 <p>001-084</p> <p>Black</p>
E65(4H K1)	 <p>001-084</p> <p>White</p>
E65(6H K1)	 <p>002-267</p> <p>White</p>
E70	 <p>002-267</p> <p>White</p>
E71	 <p>003-125</p>
E72	 <p>003-125</p>
E73	 <p>003-125</p>
E74	 <p>003-125</p>

9D-298 Wiring System (RHD model)

No.	Connector Face
E75	<div> — 003-125</div>
E76	<div> — 003-125</div>
F1	<div> White 004-128</div>
F2	<div> Yellow 002-267</div>
F3	<div> Yellow 002-267</div>
F7	<div> Black 002-267</div>
F8	<div> White 001-084</div>
F9	<div> White 001-084</div>

No.	Connector Face
F10	<div> White 001-084</div>
F11	<div> White 001-084</div>
F12	<div> White 004-129</div>
F13	<div> Black 001-084</div>
F14	<div> Black 001-084</div>
F15	<div> White 003-156</div>
F16	<div> White 014-026</div>
F18	<div> Gray 002-267</div>

   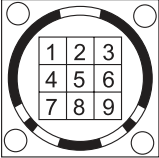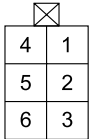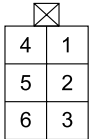
 
 


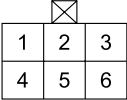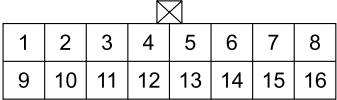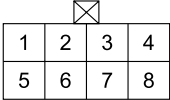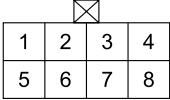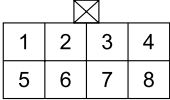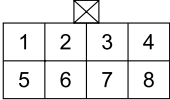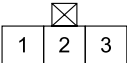 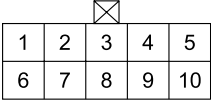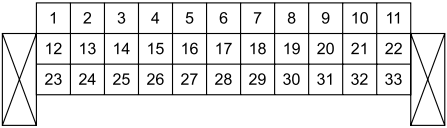
 

No.	Connector Face
F20	 <p>002-267</p> <p>Black</p>
F21	 <p>002-267</p> <p>Gray</p>
F22	 <p>002-267</p> <p>Gray</p>
F23	 <p>009-012</p> <p>Black</p>
F29	 <p>006-129</p> <p>Blue</p>
F30	 <p>006-129</p> <p>Yellow</p>
F31	 <p>002-271</p> <p>White</p>
F32	 <p>002-267</p> <p>White</p>


 
 
 
 
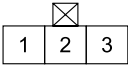
 
 
No.	Connector Face
F34	 <p>006-115</p> <p>White</p>
F35	 <p>016-084</p> <p>White</p>
F60	 <p>008-076</p> <p>White</p>
F61	 <p>008-076</p> <p>White</p>
F63	 <p>008-076</p> <p>White</p>
F66	 <p>008-076</p> <p>White</p>
FB1	 <p>003-150</p> <p>Black</p>
FB2	 <p>003-150</p> <p>Black</p>

9D-300 Wiring System (RHD model)









No.	Connector Face
FB3	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div><div><div>⊠</div></div></div><div>006-119</div><div>Black</div></div>
FB5	<div><div><div><div>1</div><div>2</div></div><div><div>⊠</div></div></div><div>002-267</div><div>Black</div></div>
FB8	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div><div><div>⊠</div></div></div><div>006-119</div><div>Black</div></div>
FB9	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div><div><div>⊠</div></div></div><div>006-119</div><div>Black</div></div>
FB10	<div><div><div><div><div><div>18</div><div>17</div></div><div><div>20</div><div>22</div><div>24</div></div><div><div>19</div><div>21</div><div>23</div></div></div><div><div>16</div><div>15</div><div>14</div></div><div><div>1</div></div><div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div></div><div><div>8</div><div>9</div><div>10</div><div>11</div><div>12</div><div>13</div></div></div><div>024-028</div><div>—</div></div></div>
FB13	<div><div><div><div>1</div><div>2</div></div><div><div>⊠</div></div></div><div>002-267</div><div>Gray</div></div>
FB16	<div><div><div><div><div>1</div><div>2</div><div>3</div></div><div><div>4</div><div>5</div><div>6</div></div></div><div><div>⊠</div></div></div><div>006-115</div><div>Gray</div></div>
FB17	<div><div><div><div>1</div></div></div><div>000-049</div><div>—</div></div>









No.	Connector Face
FB18	<div><div><div><div>1</div></div></div><div>000-049</div><div>—</div></div>
FB19	<div><div><div><div>1</div></div></div><div>000-049</div><div>—</div></div>
FB20	<div><div><div><div>1</div></div></div><div>000-049</div><div>—</div></div>
FB21	<div><div><div><div>1</div></div></div><div>000-049</div><div>—</div></div>
FB22	<div><div><div><div>1</div></div></div><div>000-049</div><div>—</div></div>
FB23	<div><div><div><div>1</div></div></div><div>000-049</div><div>—</div></div>
FB24	<div><div><div><div><div><div>6</div><div>7</div><div>8</div><div>9</div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div><div>19</div><div>20</div><div>21</div><div>22</div><div>23</div><div>24</div><div>5</div><div>4</div></div><div><div>25</div><div>26</div><div>27</div><div>28</div><div>29</div><div>30</div><div>31</div><div>32</div><div>33</div><div>34</div><div>35</div><div>36</div><div>37</div><div>38</div><div>39</div><div>40</div><div>41</div><div>42</div><div>43</div><div>3</div></div><div><div>44</div><div>45</div><div>46</div><div>47</div><div>48</div><div>49</div><div>50</div><div>51</div><div>52</div><div>53</div><div>54</div><div>55</div><div>56</div><div>57</div><div>58</div><div>59</div><div>60</div><div>61</div><div>62</div><div>2</div><div>1</div></div><div><div>63</div><div>64</div><div>65</div><div>66</div><div>67</div><div>68</div><div>69</div><div>70</div><div>71</div><div>72</div><div>73</div><div>74</div><div>75</div><div>76</div><div>77</div><div>78</div><div>79</div><div>80</div><div>81</div></div></div></div><div>081-003</div><div>Black</div></div></div>
FB30	<div><div><div><div><div>1</div><div>2</div></div><div><div>⊠</div></div></div><div>002-267</div><div>Gray</div></div></div>









No.	Connector Face
FB32	 <p>002-267</p> <p>Gray</p>
FB33	 <p>010-061</p> <p>White</p>
FB34	 <p>033-002</p> <p>White</p>
FB35	 <p>033-002</p> <p>White</p>
FB36	 <p>033-002</p> <p>White</p>
FB37	 <p>033-002</p> <p>White</p>
FB41	 <p>002-267</p> <p>Gray</p>
FB44	 <p>003-159</p> <p>Black</p>

    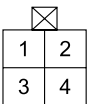  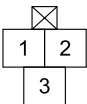     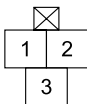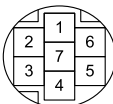    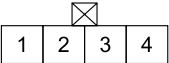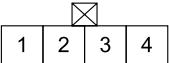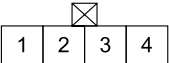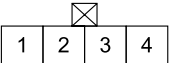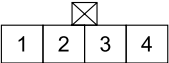
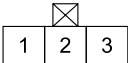
 
 
 
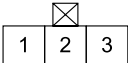
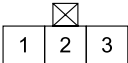
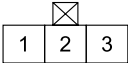
No.	Connector Face
FB45	 <p>003-159</p> <p>Black</p>
FB46	 <p>002-267</p> <p>Gray</p>
FB49	 <p>002-267</p> <p>Light Gray</p>
FB50	 <p>002-267</p> <p>Gray</p>
FB53	 <p>002-267</p> <p>Gray</p>
FB66	 <p>003-150</p> <p>Black</p>
FB67	 <p>002-271</p> <p>Gray</p>
FB68	 <p>002-271</p> <p>Gray</p>

9D-302 Wiring System (RHD model)









No.	Connector Face
FB79	 002-271 Black
FB80	 002-271 Black
FB81	 002-271 Black
FB82	 002-271 Black
FB83	 004-129 Gray
FB86	 002-267 Gray
FB87	 002-267 Gray
FB90	 003-152 Black









No.	Connector Face
FB91	 002-267 Gray
FB92	 002-267 Gray
FB95	 002-267 Gray
FB98	 002-267 Gray
FB99	 002-267 Gray
FB101	 003-152 Black
FB104	 007-018 White
FB109	 002-267 Gray

    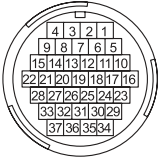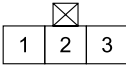     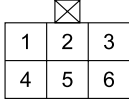 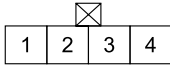 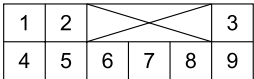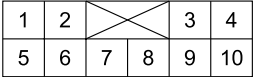

 
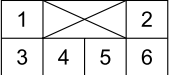
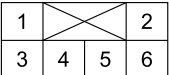

 
 
No.	Connector Face
FB110	 <p>002-267</p> <p>Gray</p>
FB112	 <p>002-267</p> <p>Gray</p>
FB116	 <p>002-267</p> <p>Blue</p>
FB119	 <p>004-128</p> <p>White</p>
FB120	 <p>004-128</p> <p>White</p>
FB121	 <p>004-128</p> <p>White</p>
FB122	 <p>004-128</p> <p>White</p>
FB123	 <p>004-128</p> <p>White</p>

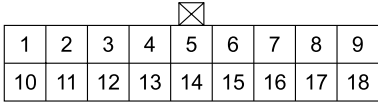

 
 
 
 
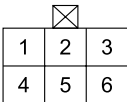
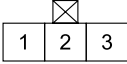
No.	Connector Face
FB128	 <p>005-037</p> <p>Black</p>
FB129	 <p>003-150</p> <p>Gray</p>
FB149	 <p>000-049</p> <p>—</p>
FB150	 <p>000-049</p> <p>—</p>
FB154	 <p>002-267</p> <p>Gray</p>
FB156 (FSS)	 <p>003-150</p> <p>Light Gray</p>
FB156 (Fuller)	 <p>003-150</p> <p>Gray</p>
FB157	 <p>003-150</p> <p>Dark Gray</p>

9D-304 Wiring System (RHD model)

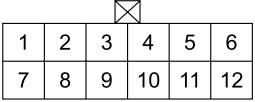
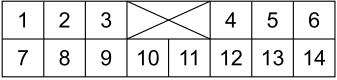
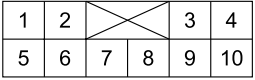

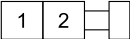
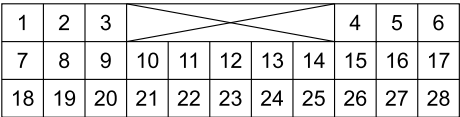
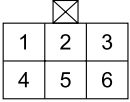
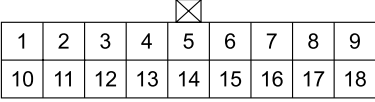
No.	Connector Face
FB160	 002-267 Black
FB163	 002-267 Black
FB164	 002-267 Gray
FB165	 002-267 Gray
FB167	 037-003 Black
FB171	 003-150 Black
FB171 (Euro2 FTS)	 002-271 Gray
FB171 (Fuel Tank 400L)	 002-267 Gray









No.	Connector Face
FB193	 002-267 Blue
FB195	 002-267 Black
FB196	 002-267 Black
FL1	 006-115 Gray
FL3	 002-267 Yellow
FL4	 004-128 Yellow
FL7	 002-267 White
FL8	 009-021 White









No.	Connector Face
FL9	 <p>010-062</p> <p>White</p>
FL10	 <p>024-025</p> <p>White</p>
FL11	 <p>002-267</p> <p>White</p>
FL12	 <p>006-116</p> <p>White</p>
FL13	 <p>006-116</p> <p>White</p>
FL16	 <p>002-272</p> <p>White</p>
FL17	 <p>001-084</p> <p>White</p>
FL18	 <p>001-084</p> <p>Black</p>









No.	Connector Face
FL19	 <p>018-024</p> <p>White</p>
FL23	 <p>033-002</p> <p>White</p>
FL24	 <p>000-049</p> <p>—</p>
FL25	 <p>000-049</p> <p>—</p>
FL26	 <p>000-049</p> <p>—</p>
FL27	 <p>000-049</p> <p>—</p>
FL28	 <p>006-115</p> <p>White</p>
FL33	 <p>003-150</p> <p>White</p>

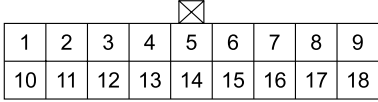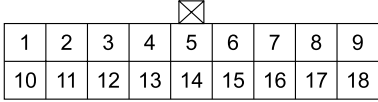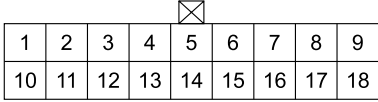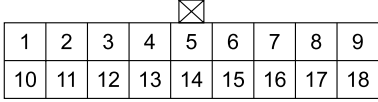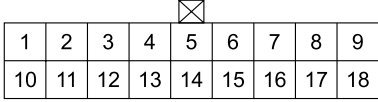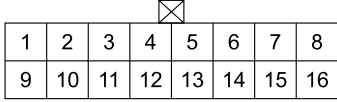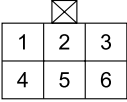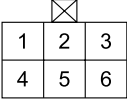 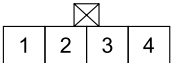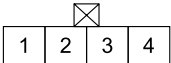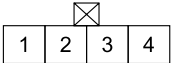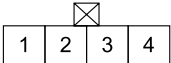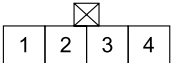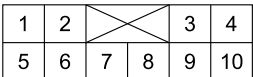  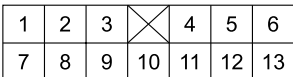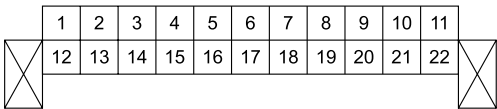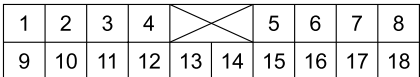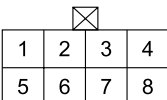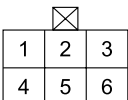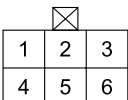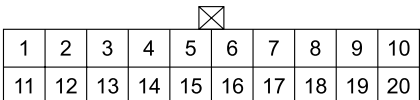9D-306 Wiring System (RHD model)

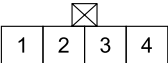
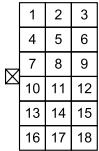
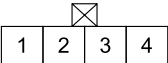
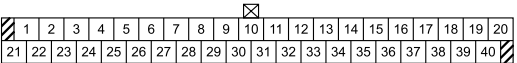
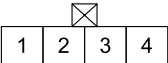
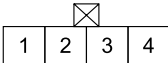
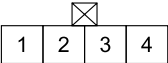
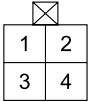



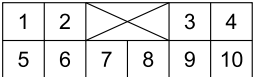

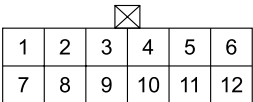
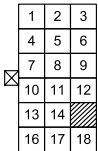
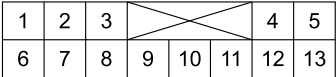
No.	Connector Face
FL34	 <p>012-074</p> <p>White</p>
FL48	 <p>014-026</p> <p>White</p>
FL51	 <p>010-062</p> <p>Green</p>
FL52	 <p>003-150</p> <p>Black</p>
FL53	 <p>002-269</p> <p>Blue</p>
FL60	 <p>028-008</p> <p>Yellow</p>
FL61	 <p>006-115</p> <p>White</p>
FL62	 <p>018-024</p> <p>White</p>

No.	Connector Face
FL63	 <p>018-024</p> <p>Black</p>
FL64	 <p>018-024</p> <p>Red</p>
FL65	 <p>018-024</p> <p>Brown</p>
FL66	 <p>018-024</p> <p>Blue</p>
FL67	 <p>018-024</p> <p>Orange</p>
FL73	 <p>016-084</p> <p>White</p>
FL74	 <p>006-115</p> <p>Black</p>
FL75	 <p>006-115</p> <p>Black</p>

No.	Connector Face
FL79	 <p>002-271</p> <p>Yellow</p>
FL81	 <p>004-128</p> <p>White</p>
FL83	 <p>004-128</p> <p>White</p>
FL84	 <p>004-128</p> <p>White</p>
FL85	 <p>004-128</p> <p>White</p>
FL86	 <p>004-128</p> <p>White</p>
FL87	 <p>010-062</p> <p>Black</p>
FL96	 <p>001-084</p> <p>White</p>

No.	Connector Face
FL97	 <p>002-267</p> <p>White</p>
FL101	 <p>013-010</p> <p>White</p>
FL103	 <p>022-032</p> <p>White</p>
FL105	 <p>018-023</p> <p>Green</p>
FL106	 <p>008-076</p> <p>White</p>
FL108	 <p>006-115</p> <p>Black</p>
FL112	 <p>006-115</p> <p>Black</p>
FL115	 <p>020-044</p> <p>White</p>



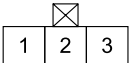
 
 
 
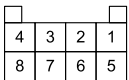
 
9D-308 Wiring System (RHD model)

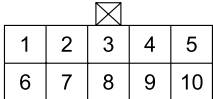
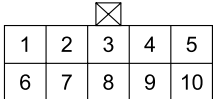
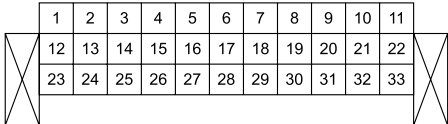
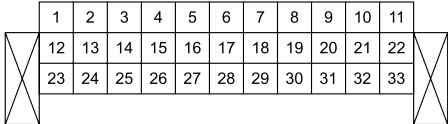
 
 

 
No.	Connector Face	No.	Connector Face
FL117	<div></div> <div>004-128</div> <div>White</div>	FU3	<div></div> <div>018-025</div> <div>Gray</div>
FL118	<div></div> <div>004-128</div> <div>White</div>	FU4	<div></div> <div>040-009</div> <div>Gray</div>
FL119	<div></div> <div>004-128</div> <div>White</div>	FU5	<div></div> <div>004-128</div> <div>Black</div>
FL120	<div></div> <div>004-128</div> <div>White</div>	FU6	<div></div> <div>004-129</div> <div>White</div>
FL131	<div></div> <div>002-272</div> <div>White</div>	FU9	<div></div> <div>030-007</div> <div>Green</div>
FL133	<div></div> <div>008-091</div> <div>White</div>	FU10	<div></div> <div>010-062</div> <div>Blue</div>
FU1	<div></div> <div>007-016</div> <div>Black</div>	FU11	<div></div> <div>012-074</div> <div>White</div>
FU2	<div></div> <div>018-026</div> <div>Black</div>	FU12	<div></div> <div>013-008</div> <div>White</div>













No.	Connector Face
FU13	<p>010-061</p> <p>White</p>
FU14	<p>014-026</p> <p>White</p>
FU15	<p>011-004</p> <p>White</p>
FU16	<p>003-150</p> <p>White</p>
FU19	<p>004-128</p> <p>White</p>
FU20	<p>004-128</p> <p>White</p>
FU21	<p>004-128</p> <p>White</p>
FU22	<p>004-128</p> <p>White</p>









No.	Connector Face
FU23	<p>016-088</p> <p>Blue</p>
FU24	<p>002-267</p> <p>Gray</p>
FU25	<p>002-267</p> <p>Gray</p>
FU27	<p>022-038</p> <p>White</p>
FU28	<p>026-019</p> <p>White</p>
FU29	<p>008-077</p> <p>White</p>
FU30	<p>010-062</p> <p>Black</p>
FU31	<p>006-115</p> <p>White</p>

9D-310 Wiring System (RHD model)









No.	Connector Face
FU32	 <p>003-150</p> <p>Orange</p>
FU33	 <p>003-150</p> <p>Orange</p>
FU34	 <p>003-150</p> <p>White</p>
FU37	 <p>002-268</p> <p>Black</p>
FU41	 <p>002-268</p> <p>Black</p>
FU44	 <p>002-268</p> <p>Black</p>
FU45	 <p>008-085</p> <p>White</p>
FU46	 <p>002-267</p> <p>Brown</p>









No.	Connector Face
FU47	 <p>010-061</p> <p>White</p>
FU48	 <p>010-061</p> <p>White</p>
FU49	 <p>033-002</p> <p>White</p>
FU50	 <p>033-002</p> <p>White</p>
FU51	 <p>000-049</p> <p>—</p>
FU52	 <p>000-049</p> <p>—</p>
FU53	 <p>000-049</p> <p>—</p>
FU54	 <p>000-049</p> <p>—</p>

  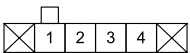  
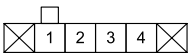
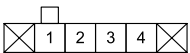
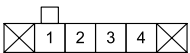
 
 
 
 
No.	Connector Face
FU55	   White 000-049
FU56	   White 000-049
FU57	 White 004-136
FU58	 White 004-136
FU60	 White 002-267
FU61	 Gray 002-267
FU62	 Black 002-267
FU63	 Gray 002-267

  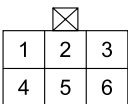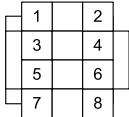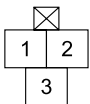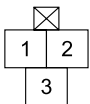  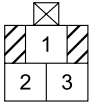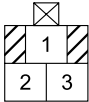  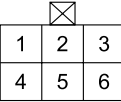   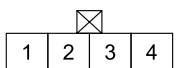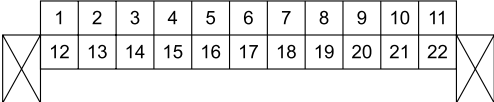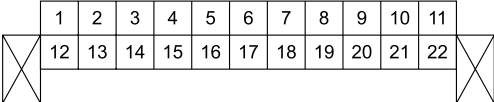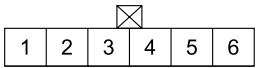 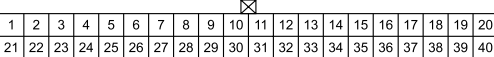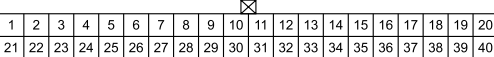 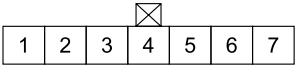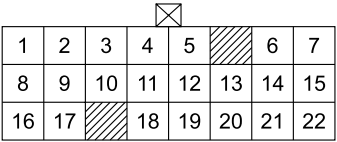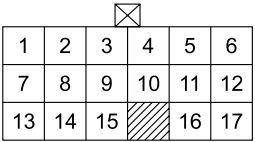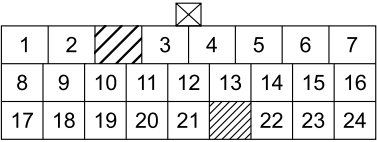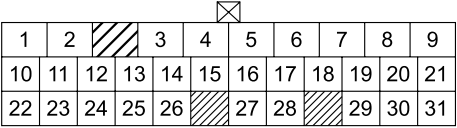 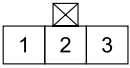 
 
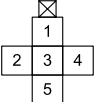
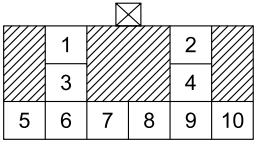
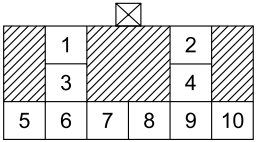
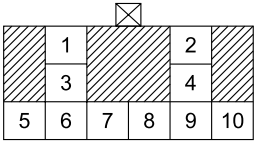
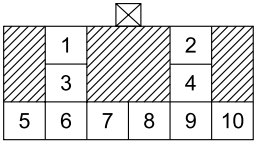
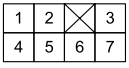
No.	Connector Face
FU64	 Gray 002-267
FU67	 Gray 002-267
FU68	 Gray 006-115
FU69	 Black 008-082
FU70	 Gray 003-152
FU71	 Gray 003-152
FU72	 Black 002-267
FU73	 Black 002-267

9D-312 Wiring System (RHD model)

No.	Connector Face
FU74	 <p>003-151</p> <p>Black</p>
FU75	 <p>003-151</p> <p>Black</p>
FU76	 <p>002-267</p> <p>Gray</p>
FU77	 <p>002-267</p> <p>Gray</p>
FU80	 <p>006-115</p> <p>Gray</p>
FU81	 <p>001-084</p> <p>White</p>
FU82	 <p>001-084</p> <p>White</p>
FU83	 <p>002-267</p> <p>White</p>

No.	Connector Face
FU87	 <p>004-128</p> <p>White</p>
FU92	 <p>022-032</p> <p>White</p>
FU93	 <p>022-032</p> <p>White</p>
FU94	 <p>006-119</p> <p>Gray</p>
FU95	 <p>002-271</p> <p>Black</p>
FU97	 <p>040-008</p> <p>White</p>
FU98	 <p>040-008</p> <p>Black</p>
FU99	 <p>002-267</p> <p>Black</p>

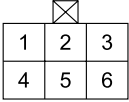
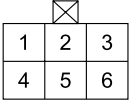
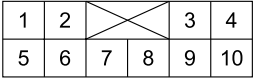
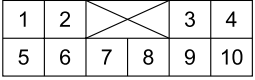
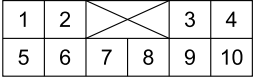
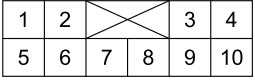

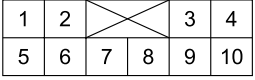
No.	Connector Face
FU100	 <p>007-016</p> <p>White</p>
FU105	 <p>022-035</p> <p>White</p>
FU106	 <p>017-007</p> <p>White</p>
FU107	 <p>024-027</p> <p>White</p>
FU108	 <p>031-008</p> <p>White</p>
FU111	 <p>002-267</p> <p>Black</p>
FU114	 <p>003-150</p> <p>White</p>
FU115	 <p>001-084</p> <p>White</p>









No.	Connector Face
FU116	 <p>002-272</p> <p>Green</p>
FU117	 <p>001-084</p> <p>White</p>
FU118	 <p>005-044</p> <p>Black</p>
FU119	 <p>010-066</p> <p>Black</p>
FU120	 <p>010-066</p> <p>Black</p>
FU121	 <p>010-066</p> <p>Black</p>
FU122	 <p>010-066</p> <p>Black</p>
FU123	 <p>007-017</p> <p>White</p>

9D-314 Wiring System (RHD model)

No.	Connector Face
FU124	<div><div><div>1</div><div>2</div><div>3</div></div><div><div>⊠</div></div></div> <div>003-150</div> <div>Brown</div>
FU125	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div><div><div>⊠</div></div><div>018-024</div><div>Gray</div></div>
FU126	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div><div><div>⊠</div></div><div>018-024</div><div>Blue</div></div>
FU127	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div><div><div>⊠</div></div><div>018-024</div><div>Green</div></div>
FU128	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div><div><div>⊠</div></div><div>018-024</div><div>Orange</div></div>
FU129	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div><div><div>⊠</div></div><div>018-024</div><div>White</div></div>
FU130	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div><div><div>⊠</div></div><div>018-024</div><div>Black</div></div>
FU131	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div><div><div>⊠</div></div><div>018-024</div><div>Gray</div></div>

No.	Connector Face
FU132	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div><div><div>⊠</div></div><div>018-024</div><div>Red</div></div>
FU133	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div><div><div>⊠</div></div><div>018-024</div><div>Brown</div></div>
FU134	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div></div><div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>17</div><div>18</div></div></div><div><div>⊠</div></div><div>018-024</div><div>Green</div></div>
FU135	<div><div><div><div>1</div><div>2</div><div>3</div></div><div><div>4</div><div>5</div><div>6</div></div></div><div><div>⊠</div></div><div>006-115</div><div>Blue</div></div>
FU136	<div><div><div><div>1</div><div>2</div></div><div><div>3</div><div>4</div><div>5</div><div>6</div></div></div><div><div>⊠</div></div><div>006-116</div><div>White</div></div>
FU137	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div><div>10</div></div></div><div><div>⊠</div></div><div>010-062</div><div>Green</div></div>
FU138	<div><div><div><div>1</div><div>2</div><div>3</div></div><div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div></div><div><div>⊠</div></div><div>008-078</div><div>White</div></div>
FU139	<div><div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div><div>10</div></div></div><div><div>⊠</div></div><div>010-062</div><div>Brown</div></div>









No.	Connector Face
FU140	 Orange 006-115
FU141	 Blue 006-115
FU142	 Blue 010-062
FU143	 Brown 010-062
FU145	 Green 010-062
FU146	 Green 010-062
FU147	 Black 005-037
FU148	 Gray 010-062

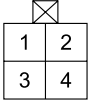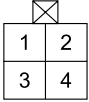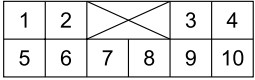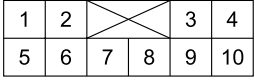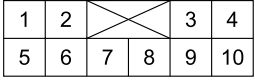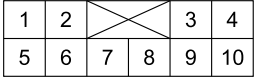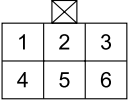  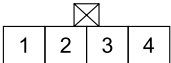   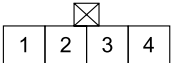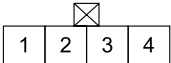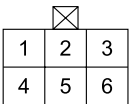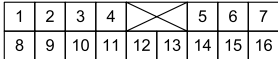

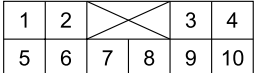
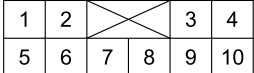
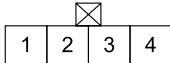
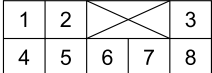
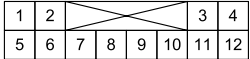
 
No.	Connector Face
FU149	 Blue 004-129
FU150	 White 004-129
FU151	 Blue 010-062
FU152	 Blue 010-062
FU153	 White 010-062
FU154	 Brown 010-062
FU158	 Orange 006-115
FU159	 Black 002-267

9D-316 Wiring System (RHD model)

No.	Connector Face
FU160	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div></div><div><div>4</div><div>5</div><div>6</div></div></div></div><div>006-115</div><div>Blue</div></div>
FU162	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div></div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div><div>10</div></div></div></div><div>010-062</div><div>White</div></div>
FU163	<div><div><div><div><div></div><div></div><div></div></div><div><div>20</div><div>19</div><div>18</div><div>17</div><div>16</div><div>15</div><div>14</div><div>13</div><div>12</div><div>11</div><div>10</div><div>9</div><div>8</div><div>7</div><div>6</div><div>5</div><div>4</div><div>3</div><div>2</div><div>1</div></div><div><div>40</div><div>39</div><div>38</div><div>37</div><div>36</div><div>35</div><div>34</div><div>33</div><div>32</div><div>31</div><div>30</div><div>29</div><div>28</div><div>27</div><div>26</div><div>25</div><div>24</div><div>23</div><div>22</div><div>21</div></div><div><div>60</div><div>59</div><div>58</div><div>57</div><div>56</div><div>55</div><div>54</div><div>53</div><div>52</div><div>51</div><div>50</div><div>49</div><div>48</div><div>47</div><div>46</div><div>45</div><div>44</div><div>43</div><div>42</div><div>41</div></div><div><div>80</div><div>79</div><div>78</div><div>77</div><div>76</div><div>75</div><div>74</div><div>73</div><div>72</div><div>71</div><div>70</div><div>69</div><div>68</div><div>67</div><div>66</div><div>65</div><div>64</div><div>63</div><div>62</div><div>61</div></div></div></div><div>080-005</div><div>Black</div></div>
FU166	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div></div></div></div><div>005-037</div><div>Black</div></div>
FU168	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div></div></div></div><div>002-267</div><div>Gray</div></div>
FU170	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div></div></div></div><div>002-267</div><div>Gray</div></div>
FU172	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div></div></div></div><div>002-267</div><div>White</div></div>
FU173 (MT)	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div></div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div><div>9</div><div>10</div><div>11</div><div>12</div></div></div></div><div>012-078</div><div>White</div></div>

No.	Connector Face
FU173 (AT)	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div></div></div></div><div>008-076</div><div>White</div></div>
FU174	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div></div></div><div>004-128</div><div>White</div></div>
FU175	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div></div></div></div><div>002-267</div><div>White</div></div>
FU176	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div></div></div><div>004-128</div><div>White</div></div>
FU177	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div></div><div><div>3</div><div>4</div></div></div></div><div>004-129</div><div>White</div></div>
FU178	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div></div></div><div>004-128</div><div>White</div></div>
FU179	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div></div><div><div>2</div></div></div></div><div>002-272</div><div>White</div></div>
FU182	<div><div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div></div></div></div><div>002-268</div><div>White</div></div>









No.	Connector Face
FU183	 <p>002-268</p> <p>Black</p>
FU185	 <p>004-128</p> <p>White</p>
FU188	 <p>002-271</p> <p>Green</p>
FU192	 <p>002-267</p> <p>White</p>
FU193	 <p>002-267</p> <p>White</p>
FU194	 <p>004-128</p> <p>White</p>
FU195	 <p>004-128</p> <p>White</p>
FU196	 <p>006-115</p> <p>White</p>









No.	Connector Face
FU198	 <p>016-094</p> <p>White</p>
FU200	 <p>002-272</p> <p>Blue</p>
FU208	 <p>010-062</p> <p>Brown</p>
FU211	 <p>010-062</p> <p>Black</p>
FU224	 <p>004-128</p> <p>White</p>
FU225	 <p>008-077</p> <p>White</p>
FU257	 <p>012-078</p> <p>White</p>
G3	 <p>002-267</p> <p>White</p>

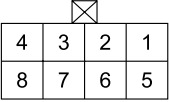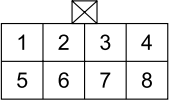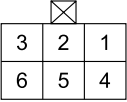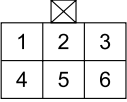  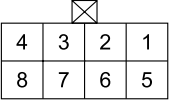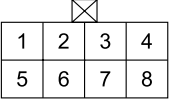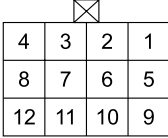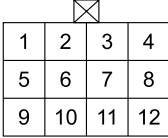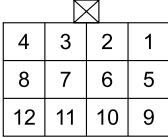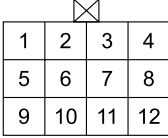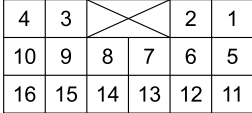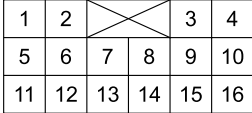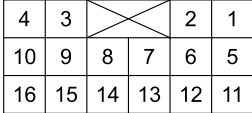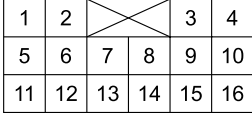9D-318 Wiring System (RHD model)




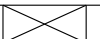
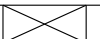
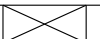


















No.	Connector Face
G4	<div><div><div><div></div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div></div><div>004-128</div><div>White</div></div>
G5	<div><div><div><div></div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div></div><div>004-128</div><div>White</div></div>
G6	<div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div></div></div><div>003-156</div><div>White</div></div>
G7	<div><div><div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div></div></div><div>003-156</div><div>White</div></div>
G8	<div><div><div><div></div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div></div><div>004-128</div><div>White</div></div>
G9	<div><div><div><div></div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div></div><div>004-128</div><div>White</div></div>
G12	<div><div><div><div></div><div></div></div><div><div>2</div><div>1</div></div></div><div>002-271</div><div>White</div></div>
G15	<div><div><div><div></div><div></div></div><div><div>2</div><div>1</div></div></div><div>002-271</div><div>White</div></div>

    
 
 
 
 
 
 
 
 
 
 
 



 
 
 






No.	Connector Face
H1	<div><div><div><div></div><div></div><div></div><div></div></div><div><div>4</div><div>3</div><div>2</div><div>1</div></div><div><div>8</div><div>7</div><div>6</div><div>5</div></div><div><div>12</div><div>11</div><div>10</div><div>9</div></div></div><div>012-076</div><div>Gray</div></div>
H1	<div><div><div><div></div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div></div><div><div>9</div><div>10</div><div>11</div><div>12</div></div></div><div>012-075</div><div>Gray</div></div>
H2	<div><div><div><div></div><div></div><div></div><div></div></div><div><div>4</div><div>3</div><div>2</div><div>1</div></div><div><div>8</div><div>7</div><div>6</div><div>5</div></div></div><div>008-079</div><div>Gray</div></div>
H2	<div><div><div><div></div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div></div></div><div>008-076</div><div>Gray</div></div>
H3	<div><div><div><div></div><div></div><div></div><div></div></div><div><div>4</div><div>3</div><div>2</div><div>1</div></div><div><div>8</div><div>7</div><div>6</div><div>5</div></div></div><div>008-079</div><div>Brown</div></div>
H3	<div><div><div><div></div><div></div><div></div><div></div></div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div></div></div><div>008-076</div><div>Brown</div></div>
H4	<div><div><div><div></div><div></div></div><div><div>2</div><div>1</div></div><div><div>4</div><div>3</div></div></div><div>004-132</div><div>Gray</div></div>
H4	<div><div><div><div></div><div></div></div><div><div>1</div><div>2</div></div><div><div>3</div><div>4</div></div></div><div>004-129</div><div>Gray</div></div>









No.	Connector Face
H5	 <p>008-079</p> <p>Gray</p>
H5	 <p>008-076</p> <p>Gray</p>
H8	 <p>006-117</p> <p>Black</p>
H8	 <p>006-115</p> <p>Black</p>
H9	 <p>001-084</p> <p>Gray</p>
H9	 <p>001-084</p> <p>Gray</p>
H10	 <p>008-079</p> <p>Gray</p>
H10	 <p>008-076</p> <p>Gray</p>









No.	Connector Face
H11	 <p>012-076</p> <p>Gray</p>
H11	 <p>012-075</p> <p>Gray</p>
H12	 <p>012-076</p> <p>Gray</p>
H12	 <p>012-075</p> <p>Gray</p>
H13	 <p>016-089</p> <p>Black</p>
H13	 <p>016-085</p> <p>Black</p>
H14	 <p>016-089</p> <p>White</p>
H14	 <p>016-085</p> <p>White</p>

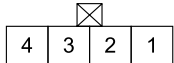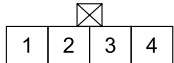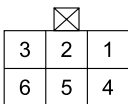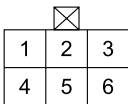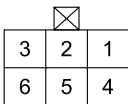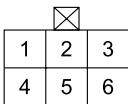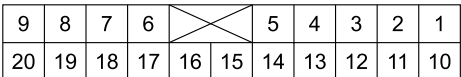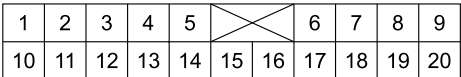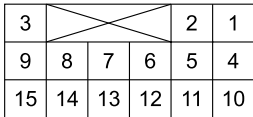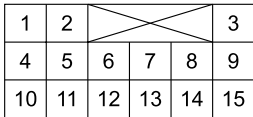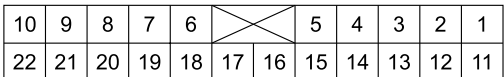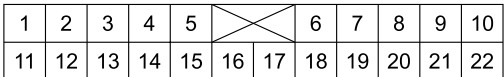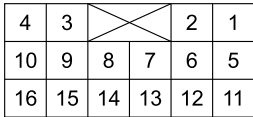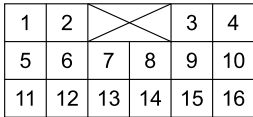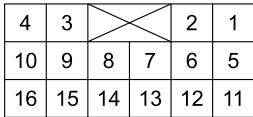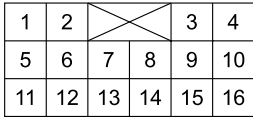9D-320 Wiring System (RHD model)







 
 
 
 
 
 












No.	Connector Face																		
H15	<div><table><tr><td>2</td><td colspan="2"></td><td>1</td></tr><tr><td>6</td><td>5</td><td>4</td><td>3</td></tr></table><div>006-118</div><div>White</div></div>	2			1	6	5	4	3										
2			1																
6	5	4	3																
H15	<div><table><tr><td>1</td><td colspan="2"></td><td>2</td></tr><tr><td>3</td><td>4</td><td>5</td><td>6</td></tr></table><div>006-116</div><div>White</div></div>	1			2	3	4	5	6										
1			2																
3	4	5	6																
H16	<div><table><tr><td>4</td><td>3</td><td colspan="2"></td><td>2</td><td>1</td></tr><tr><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td></tr></table><div>010-064</div><div>Green</div></div>	4	3			2	1	10	9	8	7	6	5						
4	3			2	1														
10	9	8	7	6	5														
H16	<div><table><tr><td>1</td><td>2</td><td colspan="2"></td><td>3</td><td>4</td></tr><tr><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr></table><div>010-062</div><div>Green</div></div>	1	2			3	4	5	6	7	8	9	10						
1	2			3	4														
5	6	7	8	9	10														
H18	<div><table><tr><td colspan="3"></td></tr><tr><td>3</td><td>2</td><td>1</td></tr><tr><td>7</td><td>6</td><td>5</td><td>4</td></tr><tr><td>10</td><td>9</td><td>8</td><td></td></tr><tr><td>14</td><td>13</td><td>12</td><td>11</td></tr></table><div>014-029</div><div>Gray</div></div>				3	2	1	7	6	5	4	10	9	8		14	13	12	11
																			
3	2	1																	
7	6	5	4																
10	9	8																	
14	13	12	11																
H18	<div><table><tr><td colspan="3"></td></tr><tr><td>1</td><td>2</td><td>3</td></tr><tr><td>4</td><td>5</td><td>6</td><td>7</td></tr><tr><td>8</td><td>9</td><td>10</td><td></td></tr><tr><td>11</td><td>12</td><td>13</td><td>14</td></tr></table><div>014-028</div><div>Gray</div></div>				1	2	3	4	5	6	7	8	9	10		11	12	13	14
																			
1	2	3																	
4	5	6	7																
8	9	10																	
11	12	13	14																
H19	<div><table><tr><td colspan="2"></td></tr><tr><td>2</td><td>1</td></tr></table><div>002-271</div><div>Gray</div></div>			2	1														
																			
2	1																		
H19	<div><table><tr><td colspan="2"></td></tr><tr><td>1</td><td>2</td></tr></table><div>002-267</div><div>Gray</div></div>			1	2														
																			
1	2																		









No.	Connector Face																								
H21	<table><tr><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td colspan="2"></td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>22</td><td>21</td><td>20</td><td>19</td><td>18</td><td>17</td><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td><td>11</td></tr></table> <div>022-036</div> <div>Blue</div>	10	9	8	7	6			5	4	3	2	1	22	21	20	19	18	17	16	15	14	13	12	11
10	9	8	7	6			5	4	3	2	1														
22	21	20	19	18	17	16	15	14	13	12	11														
H21	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td colspan="2"></td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr><tr><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td></tr></table> <div>022-033</div> <div>Blue</div>	1	2	3	4	5			6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
1	2	3	4	5			6	7	8	9	10														
11	12	13	14	15	16	17	18	19	20	21	22														
H22	<table><tr><td>9</td><td>8</td><td>7</td><td>6</td><td colspan="2"></td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>20</td><td>19</td><td>18</td><td>17</td><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td></tr></table> <div>020-046</div> <div>Black</div>	9	8	7	6			5	4	3	2	1	20	19	18	17	16	15	14	13	12	11	10		
9	8	7	6			5	4	3	2	1															
20	19	18	17	16	15	14	13	12	11	10															
H22	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td colspan="2"></td><td>6</td><td>7</td><td>8</td><td>9</td></tr><tr><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td></tr></table> <div>020-045</div> <div>Black</div>	1	2	3	4	5			6	7	8	9	10	11	12	13	14	15	16	17	18	19	20		
1	2	3	4	5			6	7	8	9															
10	11	12	13	14	15	16	17	18	19	20															
H23	<table><tr><td>4</td><td>3</td><td colspan="2"></td><td>2</td><td>1</td></tr><tr><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td></tr></table> <div>010-064</div> <div>White</div>	4	3			2	1	10	9	8	7	6	5												
4	3			2	1																				
10	9	8	7	6	5																				
H23	<table><tr><td>1</td><td>2</td><td colspan="2"></td><td>3</td><td>4</td></tr><tr><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td></tr></table> <div>010-062</div> <div>White</div>	1	2			3	4	5	6	7	8	9	10												
1	2			3	4																				
5	6	7	8	9	10																				
H24	<table><tr><td colspan="4"></td><td></td><td colspan="2"></td></tr><tr><td>4</td><td>3</td><td>2</td><td>1</td><td colspan="2"></td></tr></table> <div>004-131</div> <div>Yellow</div>								4	3	2	1													
																									
4	3	2	1																						
H24	<table><tr><td colspan="4"></td><td></td><td colspan="2"></td></tr><tr><td>1</td><td>2</td><td>3</td><td>4</td><td colspan="2"></td></tr></table> <div>004-128</div> <div>Yellow</div>								1	2	3	4													
																									
1	2	3	4																						









No.	Connector Face
H25	 <p>004-131</p> <p>Black</p>
H25	 <p>004-128</p> <p>Black</p>
H26	 <p>006-117</p> <p>Gray</p>
H26	 <p>006-115</p> <p>Gray</p>
H27	 <p>006-117</p> <p>Gray</p>
H27	 <p>006-115</p> <p>Gray</p>
H28	 <p>020-046</p> <p>Orange</p>
H28	 <p>020-045</p> <p>Orange</p>









No.	Connector Face
H29	 <p>015-008</p> <p>Black</p>
H29	 <p>015-009</p> <p>Black</p>
H30	 <p>022-036</p> <p>Black</p>
H30	 <p>022-033</p> <p>Black</p>
H31	 <p>016-089</p> <p>Gray</p>
H31	 <p>016-085</p> <p>Gray</p>
H32	 <p>016-089</p> <p>Blue</p>
H32	 <p>016-085</p> <p>Blue</p>

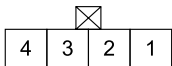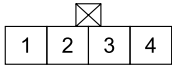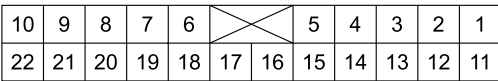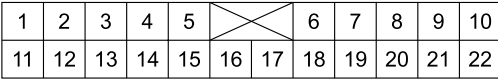          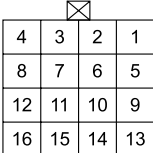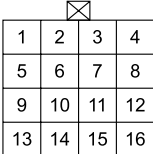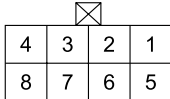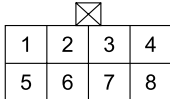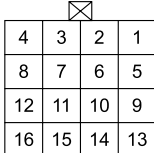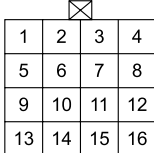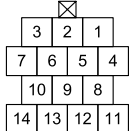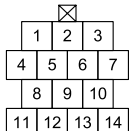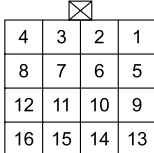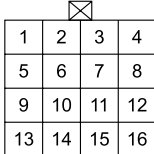9D-322 Wiring System (RHD model)

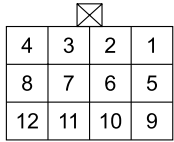
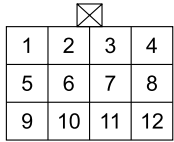
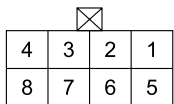
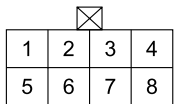
 
 

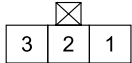
No.	Connector Face																						
H33	<table><tr><td>6</td><td>5</td><td>4</td><td colspan="2"></td><td>3</td><td>2</td><td>1</td></tr><tr><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td></tr></table> <p>014-027</p> <p>Black</p>	6	5	4			3	2	1	14	13	12	11	10	9	8	7						
6	5	4			3	2	1																
14	13	12	11	10	9	8	7																
H33	<table><tr><td>1</td><td>2</td><td>3</td><td colspan="2"></td><td>4</td><td>5</td><td>6</td></tr><tr><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td></tr></table> <p>014-026</p> <p>Black</p>	1	2	3			4	5	6	7	8	9	10	11	12	13	14						
1	2	3			4	5	6																
7	8	9	10	11	12	13	14																
H34	<table><tr><td>9</td><td>8</td><td>7</td><td>6</td><td colspan="2"></td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr><tr><td>20</td><td>19</td><td>18</td><td>17</td><td>16</td><td>15</td><td>14</td><td>13</td><td>12</td><td>11</td><td>10</td></tr></table> <p>020-046</p> <p>Blue</p>	9	8	7	6			5	4	3	2	1	20	19	18	17	16	15	14	13	12	11	10
9	8	7	6			5	4	3	2	1													
20	19	18	17	16	15	14	13	12	11	10													
H34	<table><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td colspan="2"></td><td>6</td><td>7</td><td>8</td><td>9</td></tr><tr><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td><td>17</td><td>18</td><td>19</td><td>20</td></tr></table> <p>020-045</p> <p>Blue</p>	1	2	3	4	5			6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
1	2	3	4	5			6	7	8	9													
10	11	12	13	14	15	16	17	18	19	20													
H35	<table><tr><td>2</td><td colspan="3"></td><td>1</td></tr><tr><td>6</td><td>5</td><td>4</td><td>3</td></tr></table> <p>006-118</p> <p>White</p>	2				1	6	5	4	3													
2				1																			
6	5	4	3																				
H35	<table><tr><td>1</td><td colspan="3"></td><td>2</td></tr><tr><td>3</td><td>4</td><td>5</td><td>6</td></tr></table> <p>006-116</p> <p>White</p>	1				2	3	4	5	6													
1				2																			
3	4	5	6																				
H36	<table><tr><td colspan="2"></td></tr><tr><td>2</td><td>1</td></tr></table> <p>002-271</p> <p>Blue</p>			2	1																		
																							
2	1																						
H36	<table><tr><td colspan="2"></td></tr><tr><td>1</td><td>2</td></tr></table> <p>002-267</p> <p>Blue</p>			1	2																		
																							
1	2																						









No.	Connector Face
H37	 <p>004-131</p> <p>White</p>
H37	 <p>004-128</p> <p>White</p>
H38	 <p>022-036</p> <p>White</p>
H38	 <p>022-033</p> <p>White</p>
H40	 <p>004-132</p> <p>Gray</p>
H40	 <p>004-129</p> <p>Gray</p>
H41	 <p>002-271</p> <p>Gray</p>
H41	 <p>002-267</p> <p>Light Gray</p>









No.	Connector Face
H42 (Full Cab)	 <p>002-271</p> <p>Gray</p>
H42 (Full Cab)	 <p>002-267</p> <p>Gray</p>
H42 (Crew Cab)	 <p>003-155</p> <p>Gray</p>
H42 (Crew Cab)	 <p>003-152</p> <p>Gray</p>
H43	 <p>001-084</p> <p>Gray</p>
H43	 <p>001-084</p> <p>Gray</p>
H44	 <p>016-090</p> <p>Gray</p>
H44	 <p>016-086</p> <p>Gray</p>









No.	Connector Face
H45	 <p>008-079</p> <p>Gray</p>
H45	 <p>008-076</p> <p>Gray</p>
H47	 <p>016-090</p> <p>Black</p>
H47	 <p>016-086</p> <p>Black</p>
H48	 <p>014-029</p> <p>Black</p>
H48	 <p>014-028</p> <p>Black</p>
H56	 <p>016-090</p> <p>Gray</p>
H56	 <p>016-086</p> <p>Gray</p>

9D-324 Wiring System (RHD model)

No.	Connector Face
H57	 <p>012-076</p> <p>Black</p>
H57	 <p>012-075</p> <p>Black</p>
H59	 <p>008-079</p> <p>Gray</p>
H59	 <p>008-076</p> <p>Gray</p>
H63	 <p>002-271</p> <p>Gray</p>
H63	 <p>002-267</p> <p>Gray</p>
H63 (Fuel Tank 400L)	 <p>003-150</p> <p>Black</p>
H63 (Fuel Tank 400L)	 <p>003-154</p> <p>Black</p>

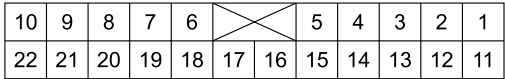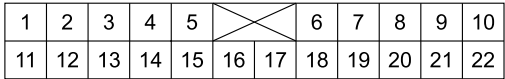  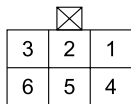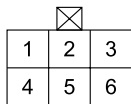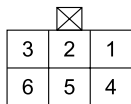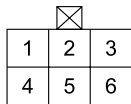No.	Connector Face
H64	 <p>022-036</p> <p>White</p>
H64	 <p>022-033</p> <p>White</p>
H65	 <p>002-271</p> <p>White</p>
H65	 <p>002-267</p> <p>White</p>
H66	 <p>006-117</p> <p>Gray</p>
H66	 <p>006-115</p> <p>Gray</p>
H67	 <p>006-117</p> <p>Gray</p>
H67	 <p>006-115</p> <p>Gray</p>

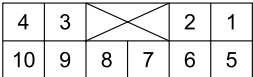
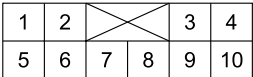
 
 
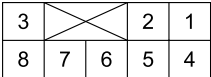
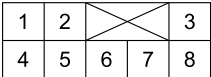
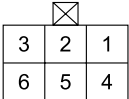
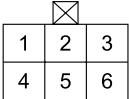
No.	Connector Face
H68	 <p>010-064</p> <p>Black</p>
H68	 <p>010-062</p> <p>Black</p>
H69	 <p>002-271</p> <p>Whiteí</p>
H69	 <p>002-267</p> <p>White</p>
H72	 <p>008-080</p> <p>White</p>
H72	 <p>008-077</p> <p>White</p>
H73	 <p>006-117</p> <p>Black</p>
H73	 <p>006-115</p> <p>Black</p>

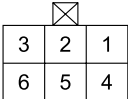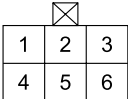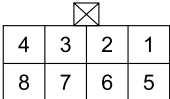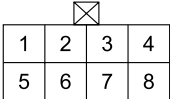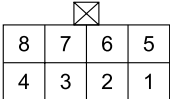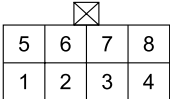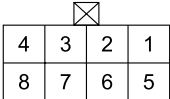
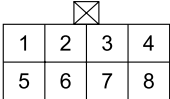






No.	Connector Face
H74	 <p>006-117</p> <p>Black</p>
H74	 <p>006-115</p> <p>Black</p>
H76	 <p>008-079</p> <p>Gray</p>
H76	 <p>008-076</p> <p>Gray</p>
H77	 <p>008-088</p> <p>Gray</p>
H77	 <p>008-087</p> <p>Gray</p>
H78	 <p>008-079</p> <p>Black</p>
H78	 <p>008-076</p> <p>Black</p>

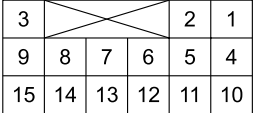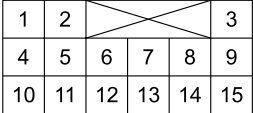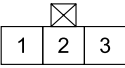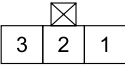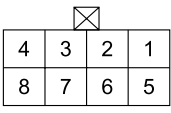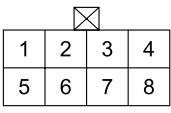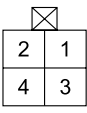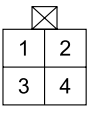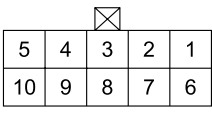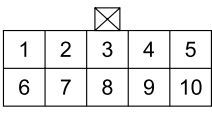  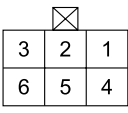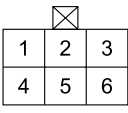9D-326 Wiring System (RHD model)

 
 

 
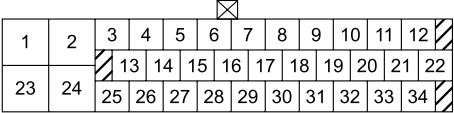
 

 
No.	Connector Face
H79	<div><div><div>⊠</div><div>4321</div><div>8765</div></div><div>008-079</div><div>Black</div></div>
H79	<div><div><div>⊠</div><div>1234</div><div>5678</div></div><div>008-076</div><div>Gray</div></div>
H80	<div><div><div>⊠</div><div>8765</div><div>4321</div></div><div>008-088</div><div>Gray</div></div>
H80	<div><div><div>⊠</div><div>5678</div><div>1234</div></div><div>008-087</div><div>Gray</div></div>
H81	<div><div><div>⊠</div><div>8765</div><div>4321</div></div><div>008-088</div><div>Gray</div></div>
H81	<div><div><div>⊠</div><div>5678</div><div>1234</div></div><div>008-087</div><div>Gray</div></div>
H82	<div><div><div>⊠</div><div>4321</div><div>8765</div></div><div>008-079</div><div>Gray</div></div>
H82	<div><div><div>⊠</div><div>1234</div><div>5678</div></div><div>008-076</div><div>Gray</div></div>









No.	Connector Face
H85	<div><div><div>⊠</div><div>21</div><div>43</div></div><div>004-132</div><div>Gray</div></div>
H85	<div><div><div>⊠</div><div>12</div><div>34</div></div><div>004-129</div><div>Gray</div></div>
H90	<div><div><div>⊠</div><div>123</div></div><div>003-150</div><div>White</div></div>
H90	<div><div><div>⊠</div><div>321</div></div><div>003-154</div><div>White</div></div>
H97	<div><div><div>⊠</div><div>4321</div><div>8765</div></div><div>008-079</div><div>Gray</div></div>
H97	<div><div><div>⊠</div><div>1234</div><div>5678</div></div><div>008-076</div><div>White</div></div>
H98	<div><div><div>⊠</div><div>4321</div><div>8765</div></div><div>008-079</div><div>Gray</div></div>
H98	<div><div><div>⊠</div><div>1234</div><div>5678</div></div><div>008-076</div><div>White</div></div>









No.	Connector Face
H99	 <p>015-008</p> <p>Orange</p>
H99	 <p>015-009</p> <p>Orange</p>
H103	 <p>003-150</p> <p>Green</p>
H103	 <p>003-154</p> <p>Green</p>
H104	 <p>008-079</p> <p>Gray</p>
H104	 <p>008-076</p> <p>Gray</p>
H105	 <p>004-132</p> <p>Gray</p>
H105	 <p>004-129</p> <p>Gray</p>

    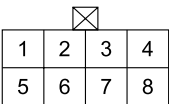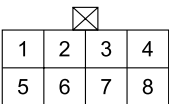    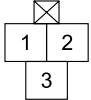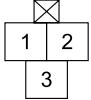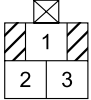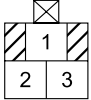  
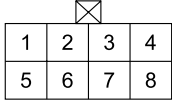
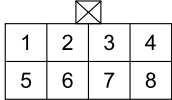
 



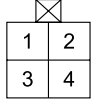
No.	Connector Face
H106	 <p>010-067</p> <p>White</p>
H106	 <p>010-061</p> <p>White</p>
H107	 <p>008-080</p> <p>White</p>
H107	 <p>008-077</p> <p>White</p>
H135	 <p>002-267</p> <p>Gray</p>
H135	 <p>002-271</p> <p>Gray</p>
H141	 <p>006-117</p> <p>Black</p>
H141	 <p>006-115</p> <p>Black</p>

9D-328 Wiring System (RHD model)

No.	Connector Face
J1	<div><div>002-267</div><div>Gray</div></div>
J2	<div><div>002-267</div><div>Blue</div></div>
J3	<div><div>002-273</div><div>Black</div></div>
J6	<div><div>002-267</div><div>Gray</div></div>
J7	<div><div>034-006</div><div>Black</div></div>
J8	<div><div>002-267</div><div>Gray</div></div>
J14	<div><div>005-037</div><div>Black</div></div>
J20	<div><div>002-267</div><div>Gray</div></div>

No.	Connector Face
J21	<div><div>002-267</div><div>Gray</div></div>
J26	<div><div>002-267</div><div>Black</div></div>
J27	<div><div>002-267</div><div>Black</div></div>
J28	<div><div>002-267</div><div>Black</div></div>
J29	<div><div>008-076</div><div>Gray</div></div>
J30	<div><div>008-076</div><div>Gray</div></div>
J31	<div><div>002-267</div><div>Dark Gray</div></div>
J32	<div><div>002-267</div><div>Dark Gray</div></div>



No.	Connector Face
J33	 <p>002-267</p> <p>Gray</p>
J34	 <p>002-267</p> <p>Gray</p>
J35	 <p>003-152</p> <p>Gray</p>
J36	 <p>003-152</p> <p>Gray</p>
J39	 <p>003-151</p> <p>Black</p>
J40	 <p>003-151</p> <p>Black</p>
J43	 <p>002-267</p> <p>Black</p>
J44	 <p>002-267</p> <p>Black</p>









No.	Connector Face
J46	 <p>003-150</p> <p>Black</p>
J49	 <p>008-076</p> <p>Light Gray</p>
J50	 <p>008-076</p> <p>Light Gray</p>
J51	 <p>002-267</p> <p>Black</p>
J52	 <p>003-159</p> <p>Black</p>
J53	 <p>003-159</p> <p>Black</p>
J54	 <p>004-138</p> <p>Black</p>
J55	 <p>004-129</p> <p>Gray</p>

9D-330 Wiring System (RHD model)

No.	Connector Face
J57	<div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div><div><div>⊠</div></div></div> <div>006-119</div> <div>Black</div>
J58	<div><div><div>3</div><div>2</div><div>1</div></div><div><div>6</div><div>5</div><div>4</div></div></div> <div>006-117</div> <div>Black</div>
J59	<div><div><div>3</div><div>2</div><div>1</div></div><div><div>6</div><div>5</div><div>4</div></div></div> <div>006-117</div> <div>Black</div>
J61	<div><div><div>1</div><div>2</div><div>3</div></div><div><div>⊠</div></div></div> <div>003-150</div> <div>Black</div>
J62	<div><div><div>1</div><div>2</div><div>3</div></div><div><div>⊠</div></div></div> <div>003-150</div> <div>Black</div>
J64	<div><div><div>1</div><div>2</div><div>3</div></div><div><div>⊠</div></div></div> <div>003-150</div> <div>Black</div>
J65	<div><div><div>1</div><div>2</div><div>3</div></div><div><div>⊠</div></div></div> <div>003-150</div> <div>Black</div>
J66	<div><div><div>2</div><div>1</div></div><div><div>⊠</div></div></div> <div>002-271</div> <div>Brown</div>









No.	Connector Face
J68	<div><div><div>2</div><div>1</div></div><div><div>⊠</div></div></div> <div>002-271</div> <div>Black</div>
J70	<div><div><div>2</div><div>1</div></div><div><div>4</div><div>3</div></div></div> <div>004-132</div> <div>Black</div>
J75	<div><div><div>1</div><div>2</div></div><div><div>⊠</div></div></div> <div>002-267</div> <div>Black</div>
J76	<div><div><div>1</div><div>2</div></div><div><div>⊠</div></div></div> <div>002-267</div> <div>Gray</div>
J78	<div><div><div>1</div><div>2</div></div><div><div>⊠</div></div></div> <div>002-267</div> <div>Gray</div>
J84	<div><div><div>1</div></div><div>—</div></div> <div>000-049</div> <div></div>
J85	<div><div><div>1</div></div><div>—</div></div> <div>000-049</div> <div></div>
J86	<div><div><div>1</div><div>2</div><div>3</div><div>4</div></div><div><div>5</div><div>6</div><div>7</div><div>8</div></div></div> <div>008-076</div> <div>Gray</div>

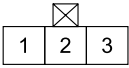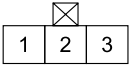    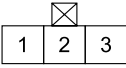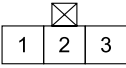  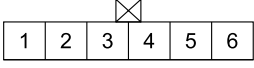        

 
 
 
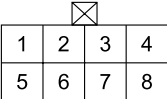
 
 
No.	Connector Face
J87	 001-084 White
J88	 001-084 White
J89	 003-150 Black
J90	 003-150 Black
J91	 002-267 Gray
J92	 002-267 Gray
J93	 002-267 Gray
J94	 002-267 Gray

 
 
 

 
 
 
 
No.	Connector Face
J96	 002-267 Black
J97	 002-267 Black
J98	 003-152 Black
J99	 003-152 Black
J107	 003-150 Brown
J108	 003-150 Brown
J109	 002-267 Dark Gray
J110	 002-267 Dark Gray

9D-332 Wiring System (RHD model)









No.	Connector Face
J113	 <p>004-129</p> <p>Dark Gray</p>
J114	 <p>002-267</p> <p>Green</p>
J115	 <p>002-267</p> <p>Gray</p>
J116	 <p>002-267</p> <p>Black</p>
J117	 <p>003-150</p> <p>Light Gray</p>
J118	 <p>002-267</p> <p>Black</p>
J119	 <p>002-267</p> <p>Black</p>
J129	 <p>006-119</p> <p>Black</p>









No.	Connector Face
J138	 <p>006-119</p> <p>Black</p>
J154	 <p>002-267</p> <p>Gray</p>
J156	 <p>002-267</p> <p>Gray</p>
J158	 <p>002-267</p> <p>Gray</p>
J160	 <p>002-267</p> <p>Gray</p>
J162	 <p>002-267</p> <p>Gray</p>
J164	 <p>002-267</p> <p>Black</p>
J165	 <p>002-267</p> <p>Black</p>









No.	Connector Face
J166	 <p>002-267</p> <p>Gray</p>
J167	 <p>003-150</p> <p>Black</p>
J180	 <p>002-267</p> <p>Black</p>
J193	 <p>002-267</p> <p>Blue</p>
J194	 <p>002-267</p> <p>Black</p>
J195	 <p>008-076</p> <p>Light Gray</p>
J201	 <p>001-084</p> <p>White</p>
J202	 <p>001-084</p> <p>White</p>





No.	Connector Face
J203	 <p>001-084</p> <p>White</p>
J204	 <p>001-084</p> <p>White</p>
J207	 <p>002-267</p> <p>Black</p>
J211	 <p>006-119</p> <p>Black</p>
J226	 <p>002-267</p> <p>Black</p>
J227	 <p>002-267</p> <p>Black</p>
J256	 <p>002-267</p> <p>Gray</p>
P1	 <p>000-049</p> <p>—</p>

     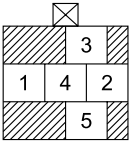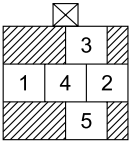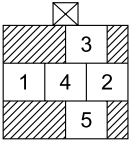9D-334 Wiring System (RHD model)

No.	Connector Face
P2	<div></div> <div>—</div> <div>000-049</div>
P3	<div></div> <div>—</div> <div>000-049</div>
P4	<div></div> <div>—</div> <div>000-049</div>
P5	<div></div> <div>—</div> <div>000-049</div>
P6	<div></div> <div>—</div> <div>000-049</div>
X1	<div></div> <div>White</div> <div>005-041</div>
X2	<div></div> <div>White</div> <div>005-041</div>
X3	<div></div> <div>White</div> <div>005-041</div>

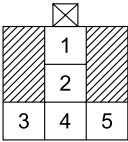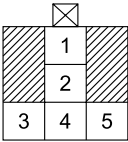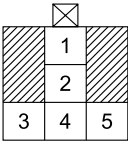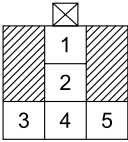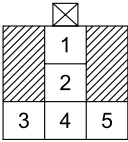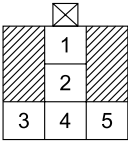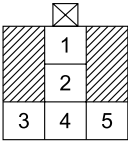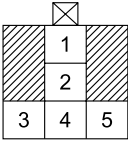No.	Connector Face
X4	<div></div> <div>White</div> <div>005-039</div>
X6	<div></div> <div>White</div> <div>005-039</div>
X7	<div></div> <div>White</div> <div>005-039</div>
X8	<div></div> <div>White</div> <div>005-039</div>
X9	<div></div> <div>White</div> <div>005-039</div>
X10	<div></div> <div>White</div> <div>005-039</div>
X11	<div></div> <div>White</div> <div>005-039</div>
X12	<div></div> <div>White</div> <div>005-039</div>

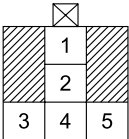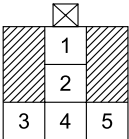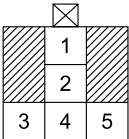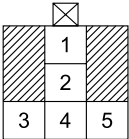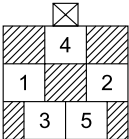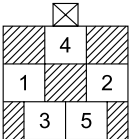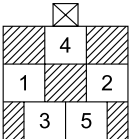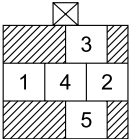No.	Connector Face
X13	 <p>005-039</p> <p>White</p>
X14	 <p>005-039</p> <p>White</p>
X15	 <p>005-039</p> <p>White</p>
X16	 <p>005-039</p> <p>White</p>
X17	 <p>005-040</p> <p>Dark Gray</p>
X18	 <p>005-040</p> <p>Dark Gray</p>
X19	 <p>005-040</p> <p>Dark Gray</p>
X20	 <p>005-041</p> <p>Dark Gray</p>

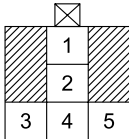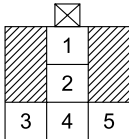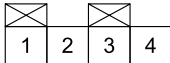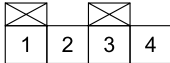No.	Connector Face
X21	 <p>005-039</p> <p>Dark Gray</p>
X22	 <p>005-039</p> <p>Dark Gray</p>
X24	 <p>004-140</p> <p>Dark Gray</p>
X25	 <p>004-140</p> <p>Dark Gray</p>

[illegible]

Published: May, 2011
Second Edition

All rights reserved.

ISUZU
F&G SERIES
WORKSHOP MANUAL
WIRING DIAGRAM
(RHD model)

Issued by ISUZU MOTORS LIMITED
E-Solutions & Service Marketing Dept.
Shinagawa-ku, Tokyo, 140-8722 Japan

0-XXXXKI

