

Apendix 2 – RemoteDomo, quick usage guide.

First time you start RemoteDome, you will be prompted to setup the ODDevices from your OpenDomo System.

You should specify for each Device:

- Desired description name,
- URL,
- login credentials
- type: ODNetwork or ODControl, notice that only is allowed one ODNetwork in a OpnDomo System.



Once you finish configuring the devices, you will be driven to main screen.

From main screen, you can access to devices manage page by clicking on them in the list. To add, delete or modify devices just do a long click on it.

Alerts and GEO services are related to ODNetwork and only will work when it is successfully configured, to start GEO service you will be required to turn on GPSfunctionality in your device.

Services' state ON/OFF is indicated at the bottom of main screen, to start or stop services do a click on them, do a long click on them to configure time execution lapse, set by default to 15 minutes.

Alerts visualization section is accessible by clicking on Alerts section on the top of main screen.

Alerts are classified by generator agent in Opendomo system, and sorted by date and time, you can delete alerts once read or keep them on the App.

