

GSM Status LED
GSM Connected (blinking green)
GSM not connected (blinking red)

GPS Status LED
Valid Fix (blinking green)
Invalid or no fix (blinking red)



MarineTrac®

BASIC INSTALLATION SCHEMATIC

