



In case the led matrix or led strips blinks or the signal is instable, the reason could be an instable power delivery from your power source, you can add a capacitor between VIN and GND and also between 3.3V and GND, this should stabilize the system.