



#### Instruction of use:

When you switch the machine on it is in normal operation mode. This is signaled by the two led lights on the front (one for each line) have green fixed light

The canfiller has two buttons that control its operations. These are placed on each side of the machine. Before canfiller is used the fill level must be set for each line, this is done by setting the configuration as indicated in the next section.

Each line has four different modes controlled by the button :

1. Normal fill mode - purge with co2 and fill to the set level
2. Configuration mode 1 - Set purge time in seconds
3. Configuration mode 2 - Set fill level
4. Configuration mode 3 - Cleaning mode

For each line you select the configuration mode by holding down the button:

#### **To set the purge time:**

- Click and hold the button for the line you want to set purge time for three seconds.
- The green light will start to blink.
- Then click once for every second of desired purge time.
- Example: For 6 seconds click the button six times
- Wait for three seconds. The led will go back to a green fixed light to indicate the the process is complete

#### **To set the fill level:**

- Click and hold the button for 6 seconds on the line you want to set the fill level on
- The led light will turn to blinking green after three seconds and then blinking blue after 3 seconds more ( 6 in total)
- Release the button and the beer will start to flow.
- When the desired level is reached a click of the button will stop the flow and save the fill level

#### **To enter cleaning mode:**

- Click and hold the button for 9 seconds on the line you want to set to cleaning mode
- The led light will turn to blinking green after three seconds and then blinking blue after 6 seconds more and then switch on the beer filling. ( 9 in total)
- To stop the flow click the button

