



## ENGINE CONTROLS

### Engine Controls

---

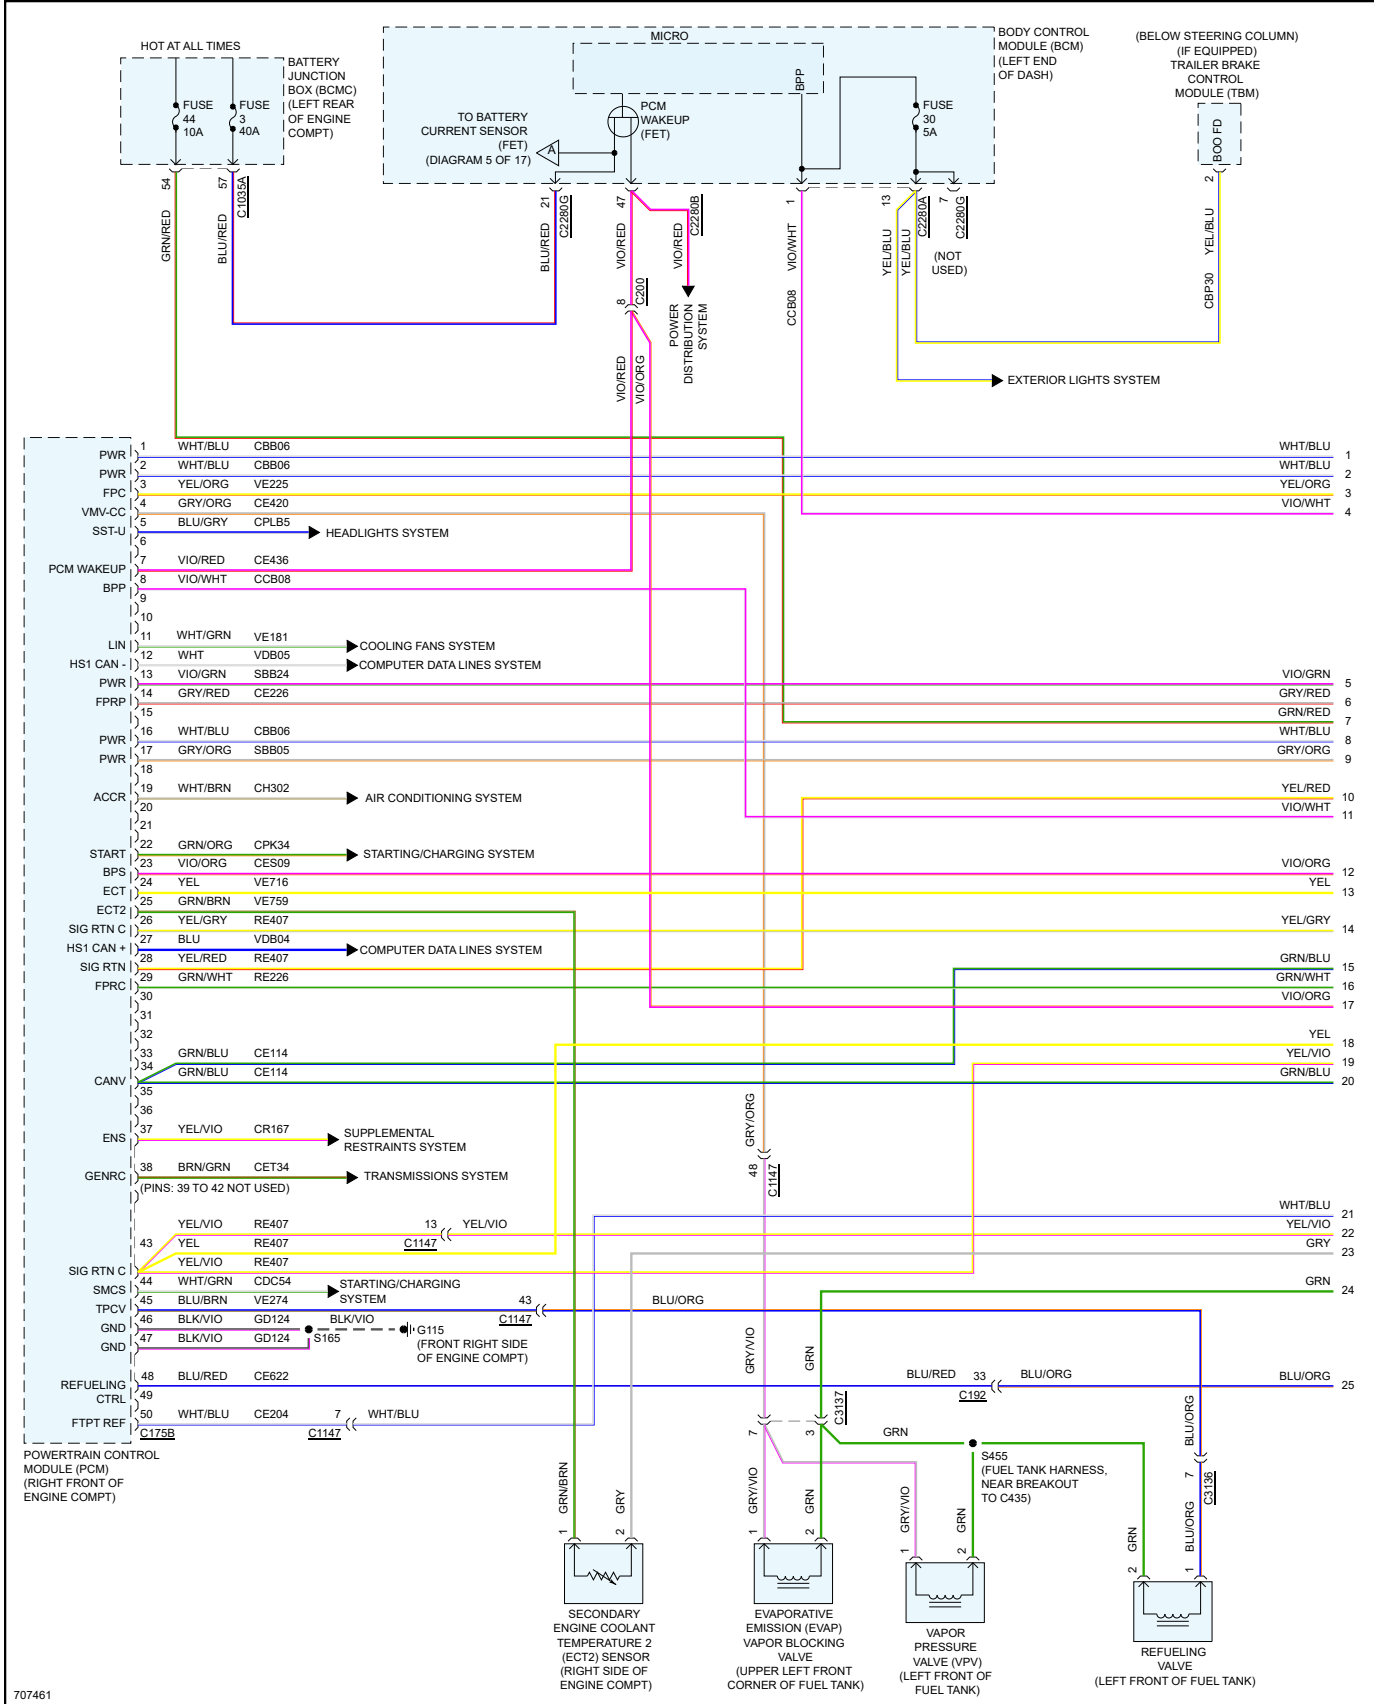


707461

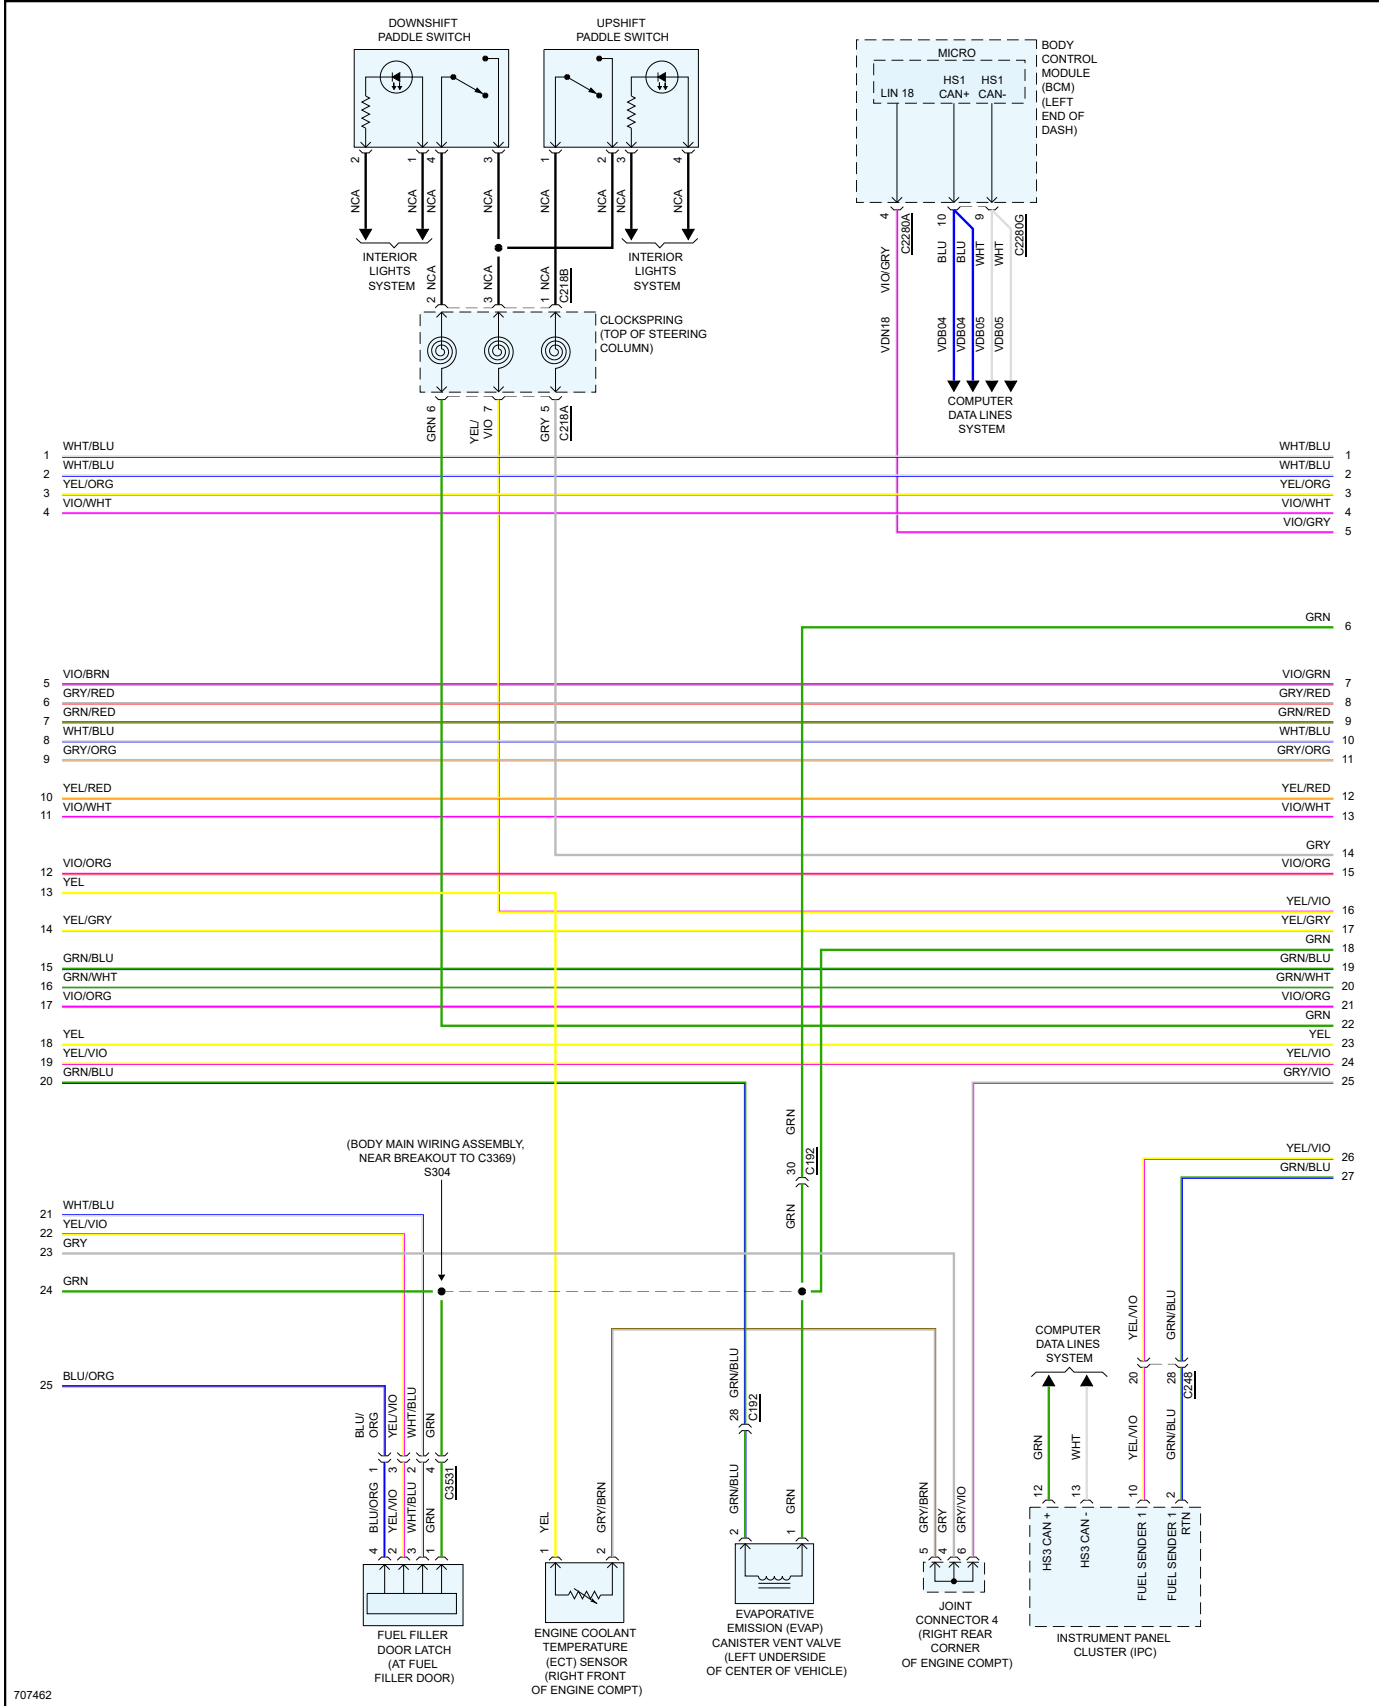


707462






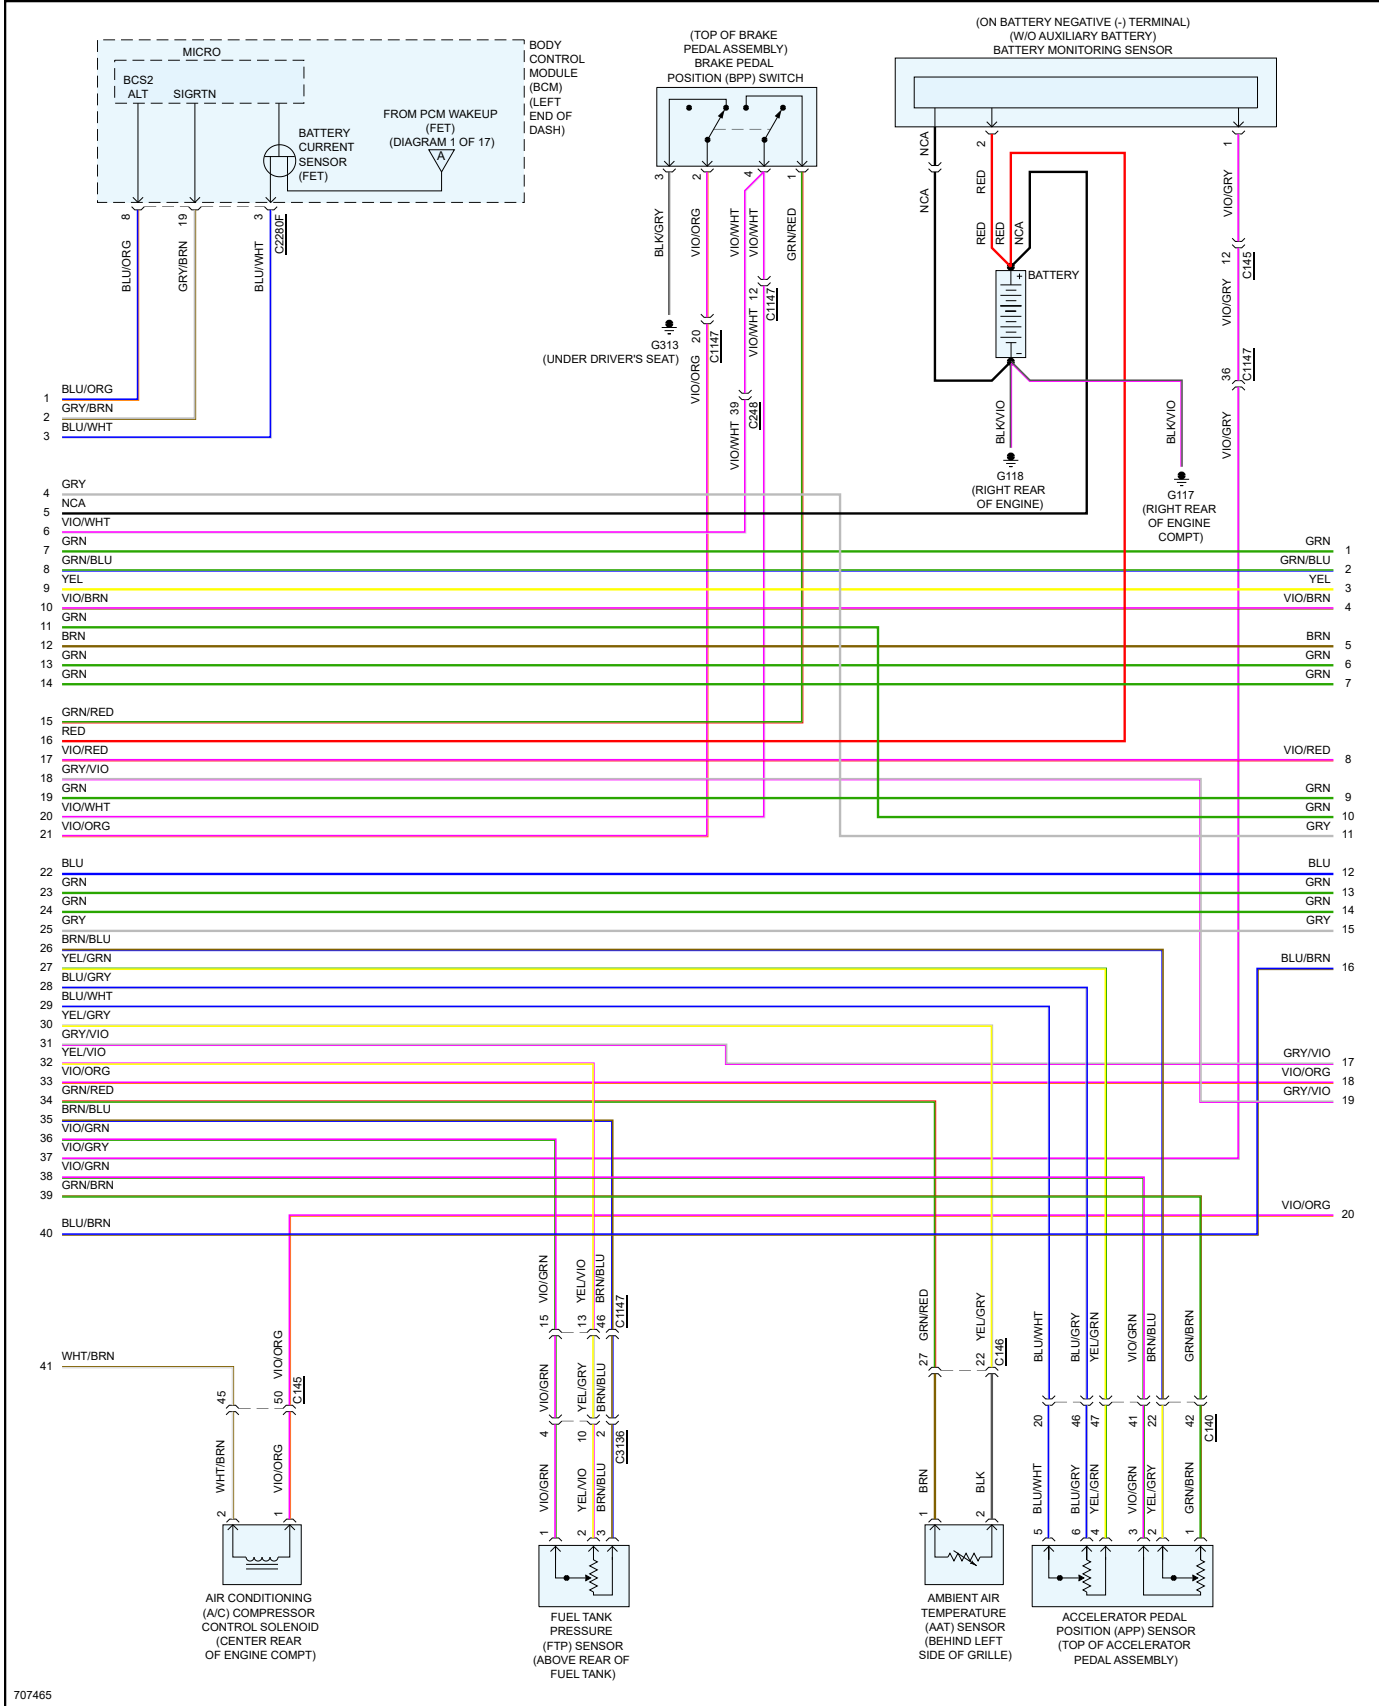

(FRONT CENTER OF ENGINE COMPT)  
EVAPORATIVE EMISSION (EVAP)  
LEAK DETECTION CONTROL MODULE

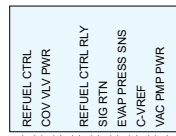

 
(LEFT REAR OF  
ENGINE COMPT)  
ENGINE  
DISCONNECT  
CLUTCH PRESSURE  
SENSOR



JOINT CONNECTOR 2  
(RIGHT FRONT  
OF ENGINE COMPT)




(REAR SUSPENSION  
HARNESS, IN BREAKOUT TO C3809)  
S398

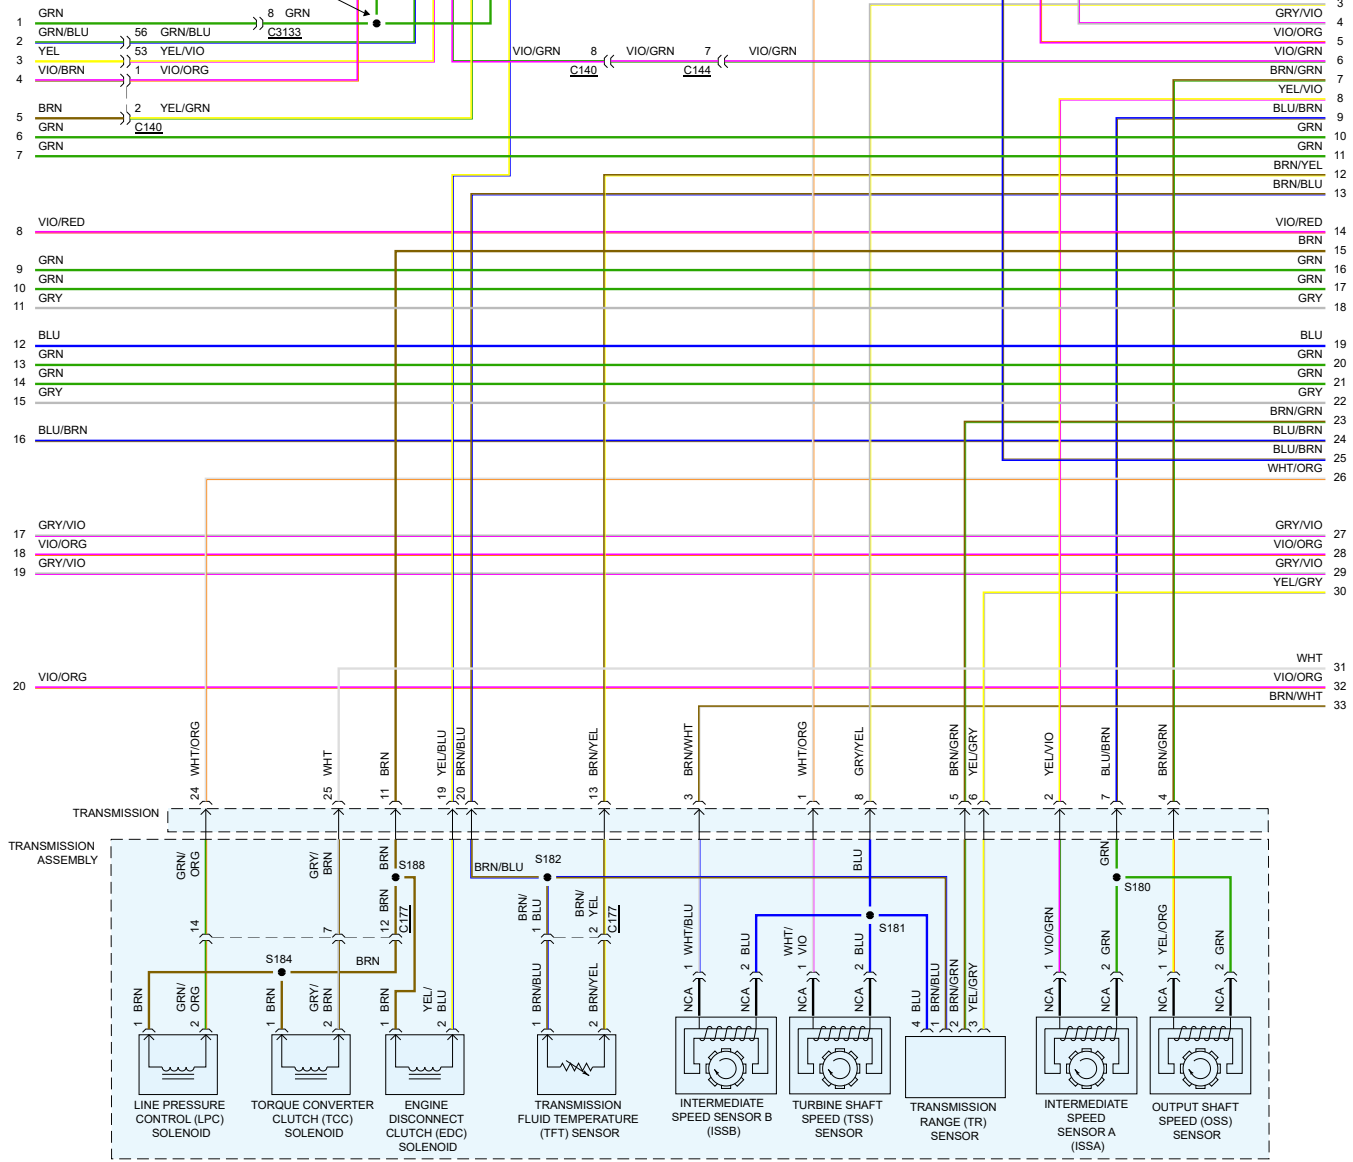


707466

(RIGHT FRONT OF ENGINE COMPT)  
POWERTRAIN CONTROL MODULE (PCM)

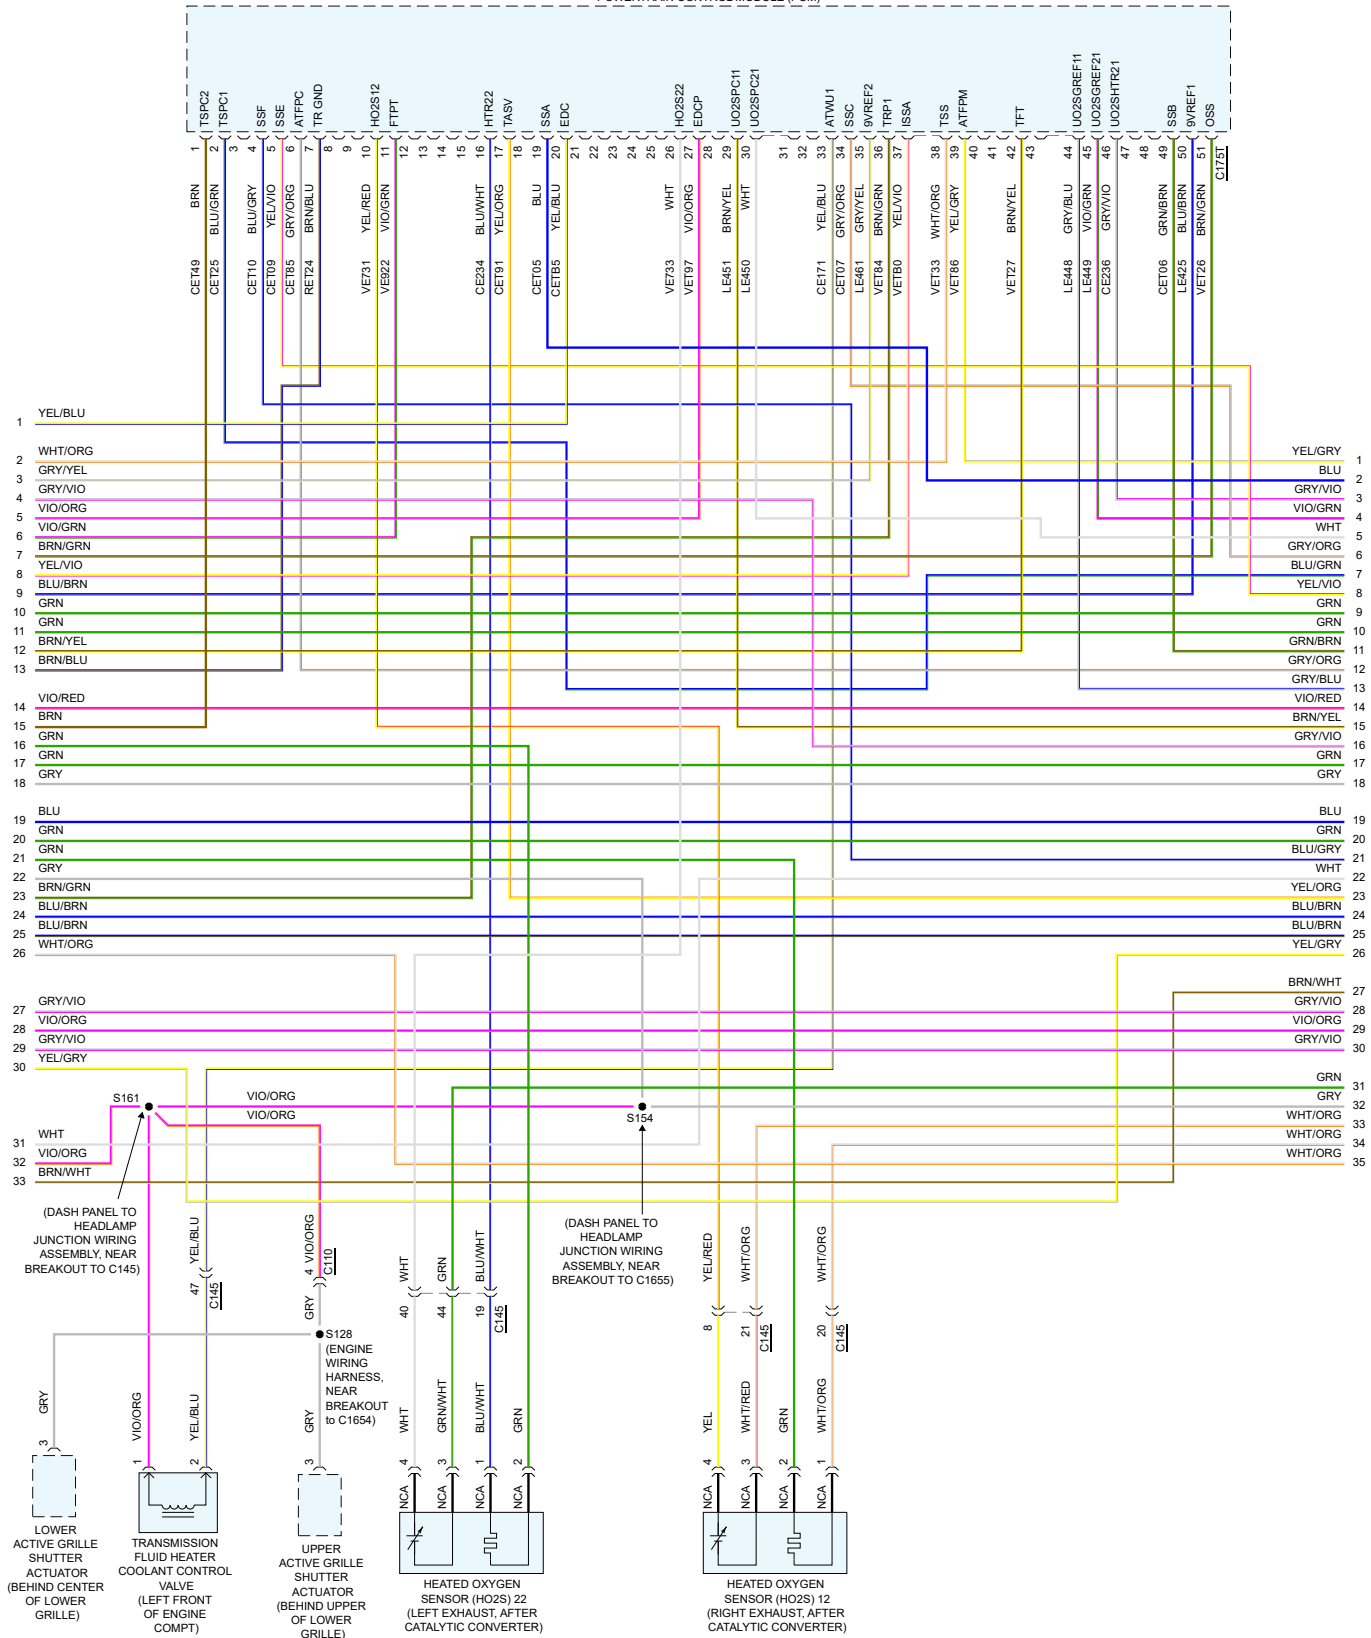

707467



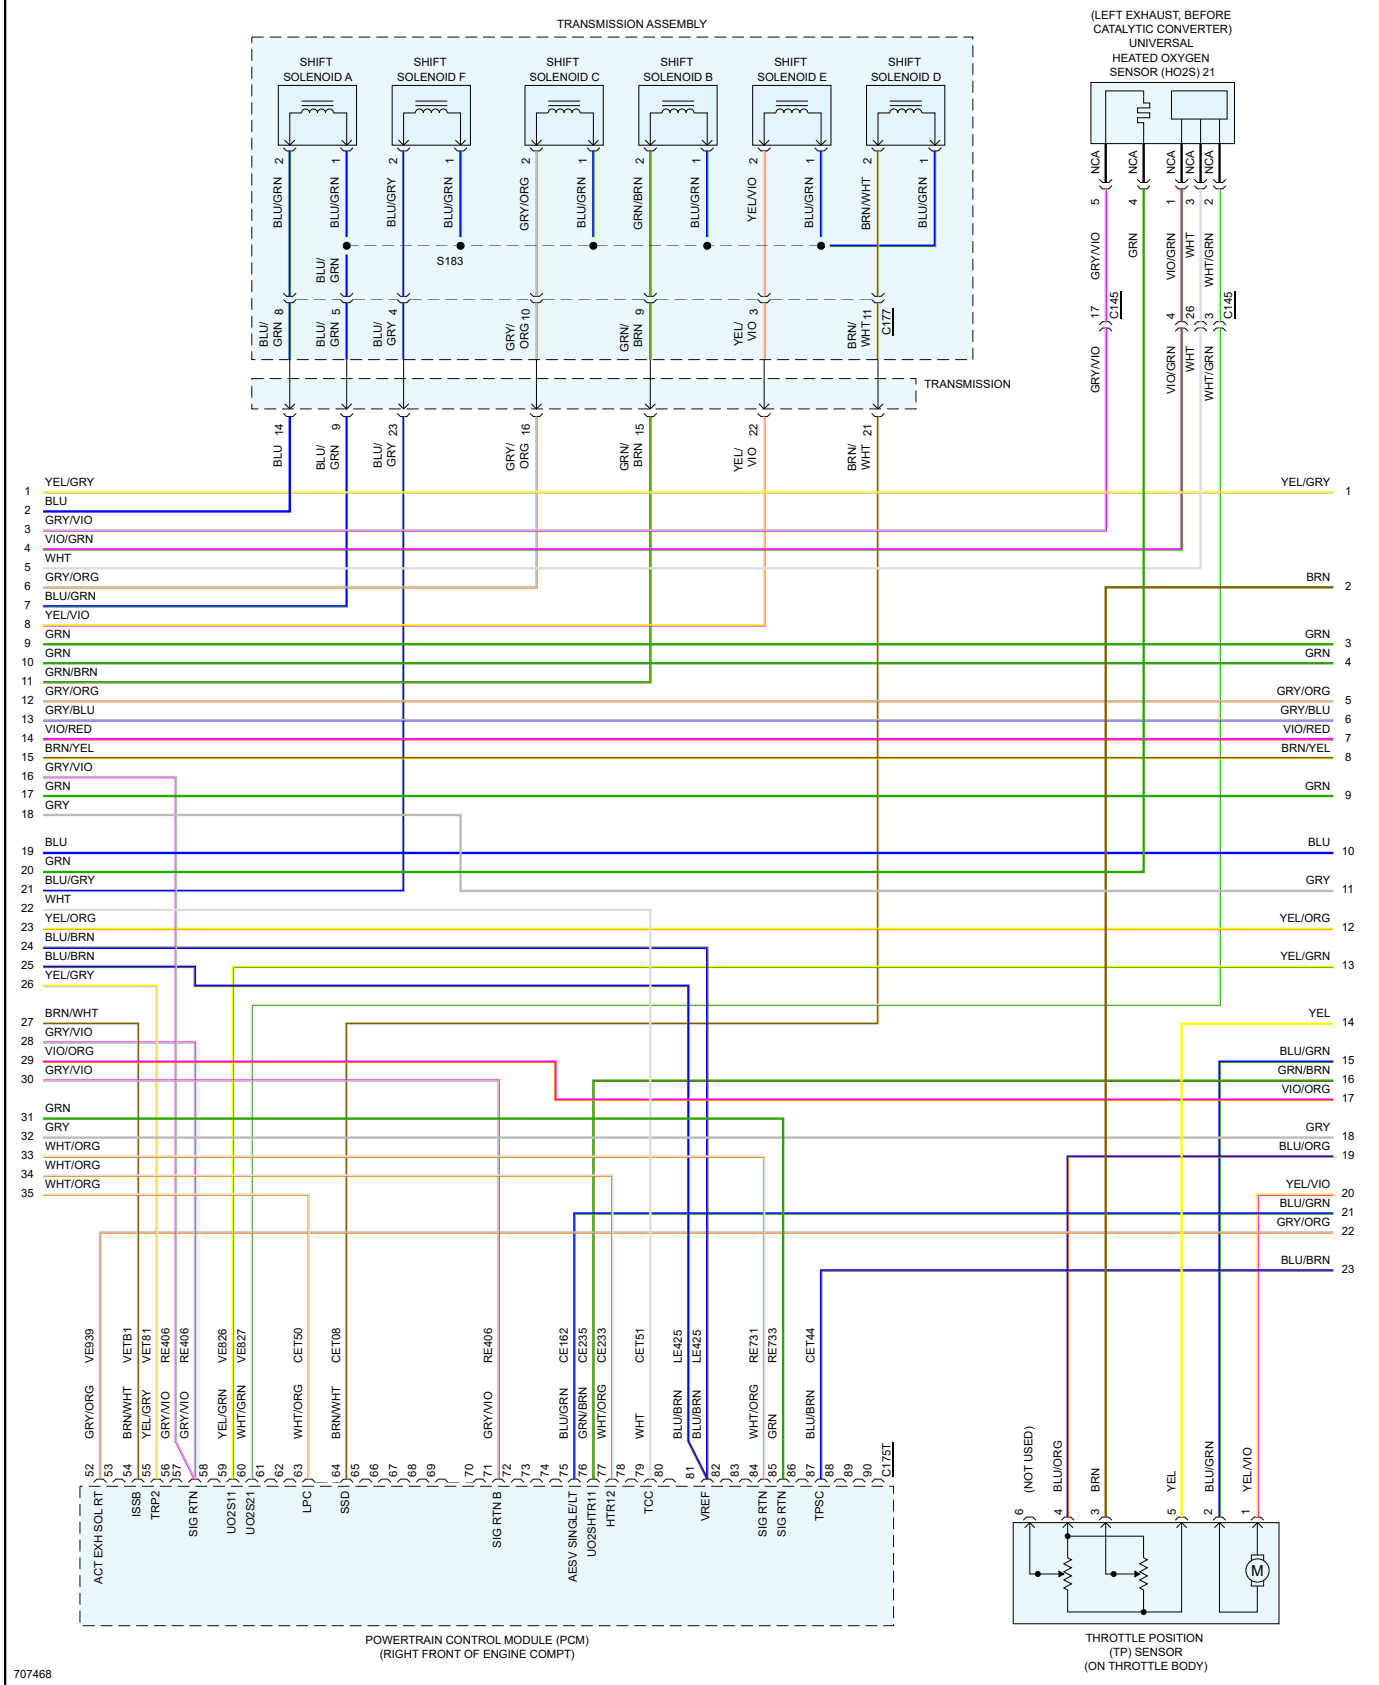

707468

(RIGHT EXHAUST,  
BEFORE CATALYTIC CONVERTER)


UNIVERSAL

HEATED OXYGEN  
SENSOR (HO2S) 11

(IN CENTER OF HIGH VOLTAGE BATTERY ASSEMBLY)  
BATTERY ENERGY CONTROL MODULE (BECM)

HOT W/ RUN/START  
RELAY 1 ENERGIZED

BATTERY  
JUNCTION  
BOX (BJCB)  
(LEFT REAR OF  
ENGINE COMPT)

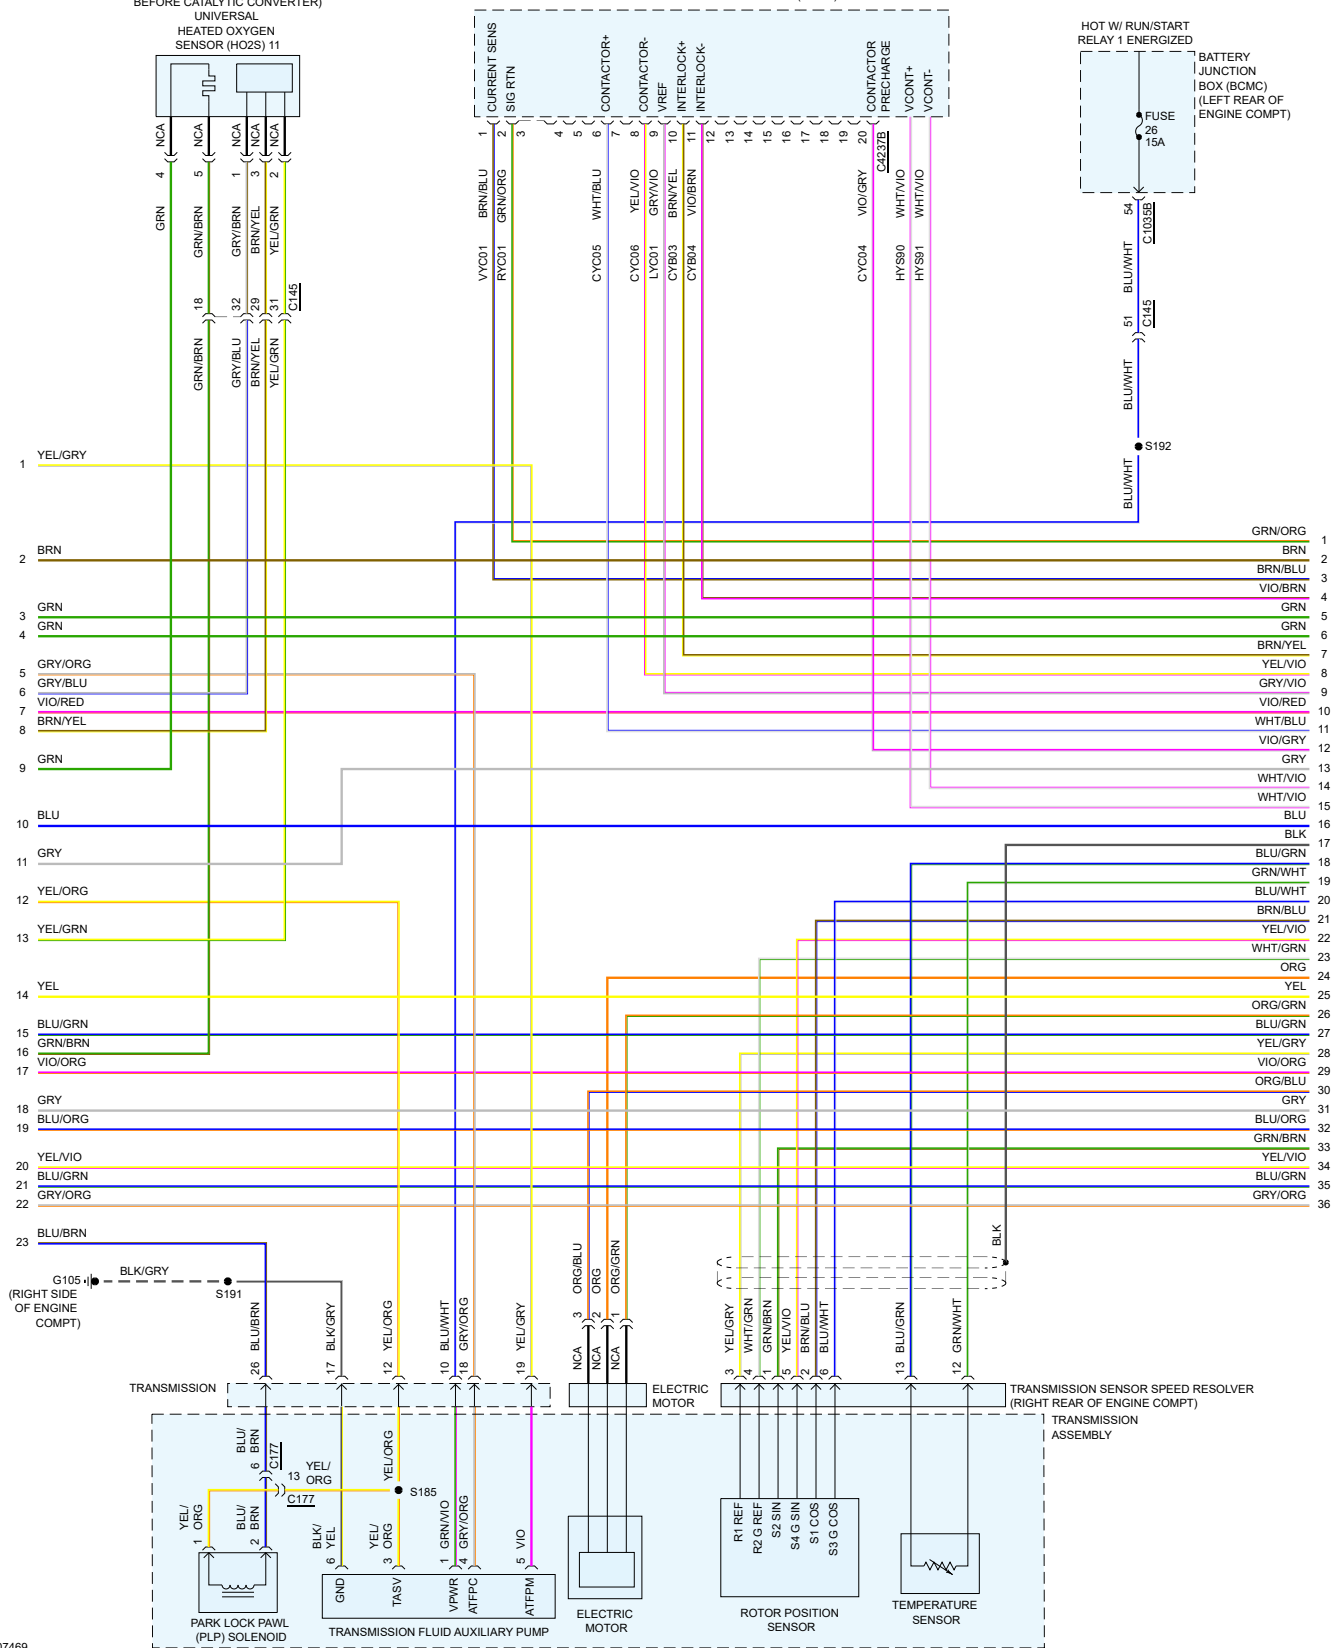


707469











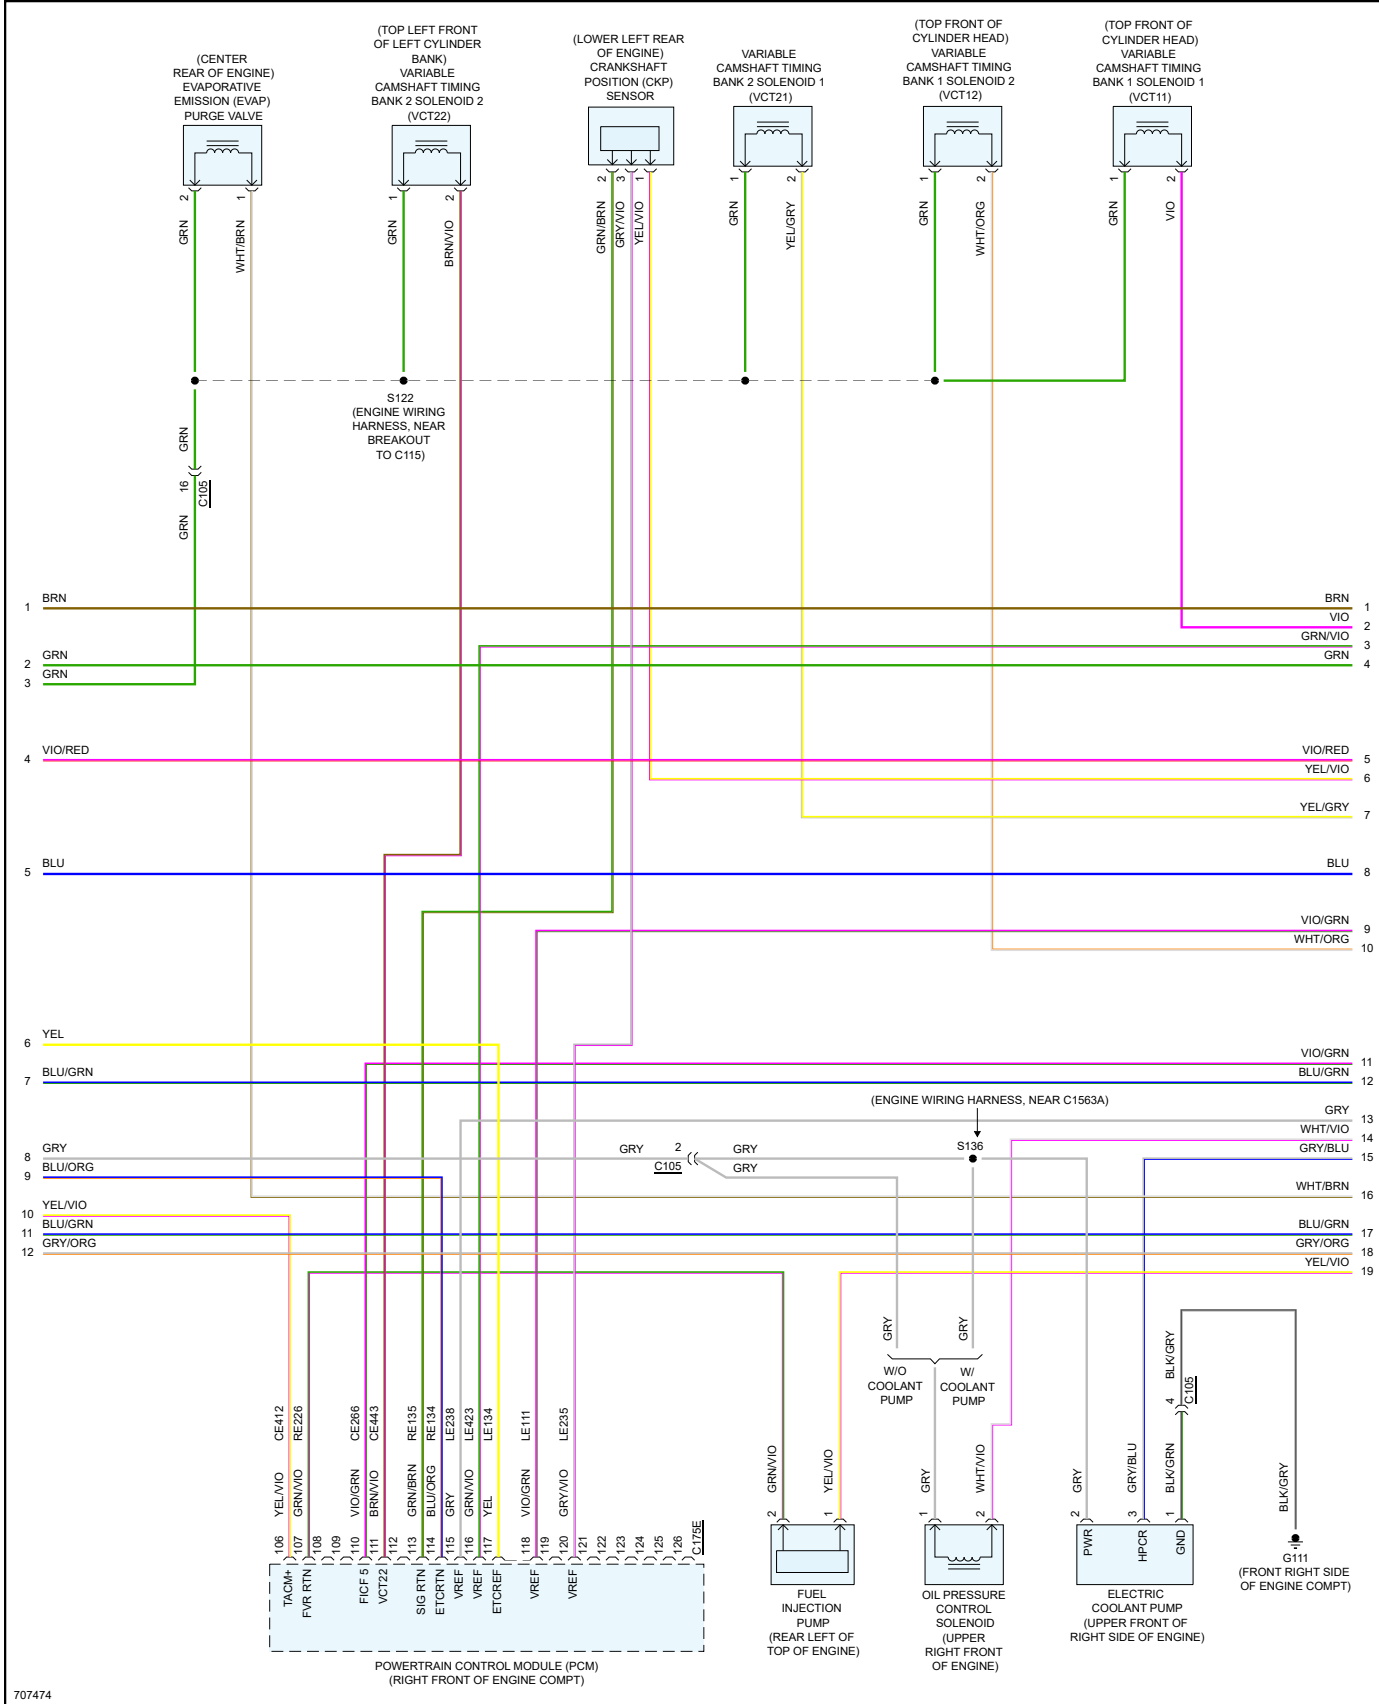

707474

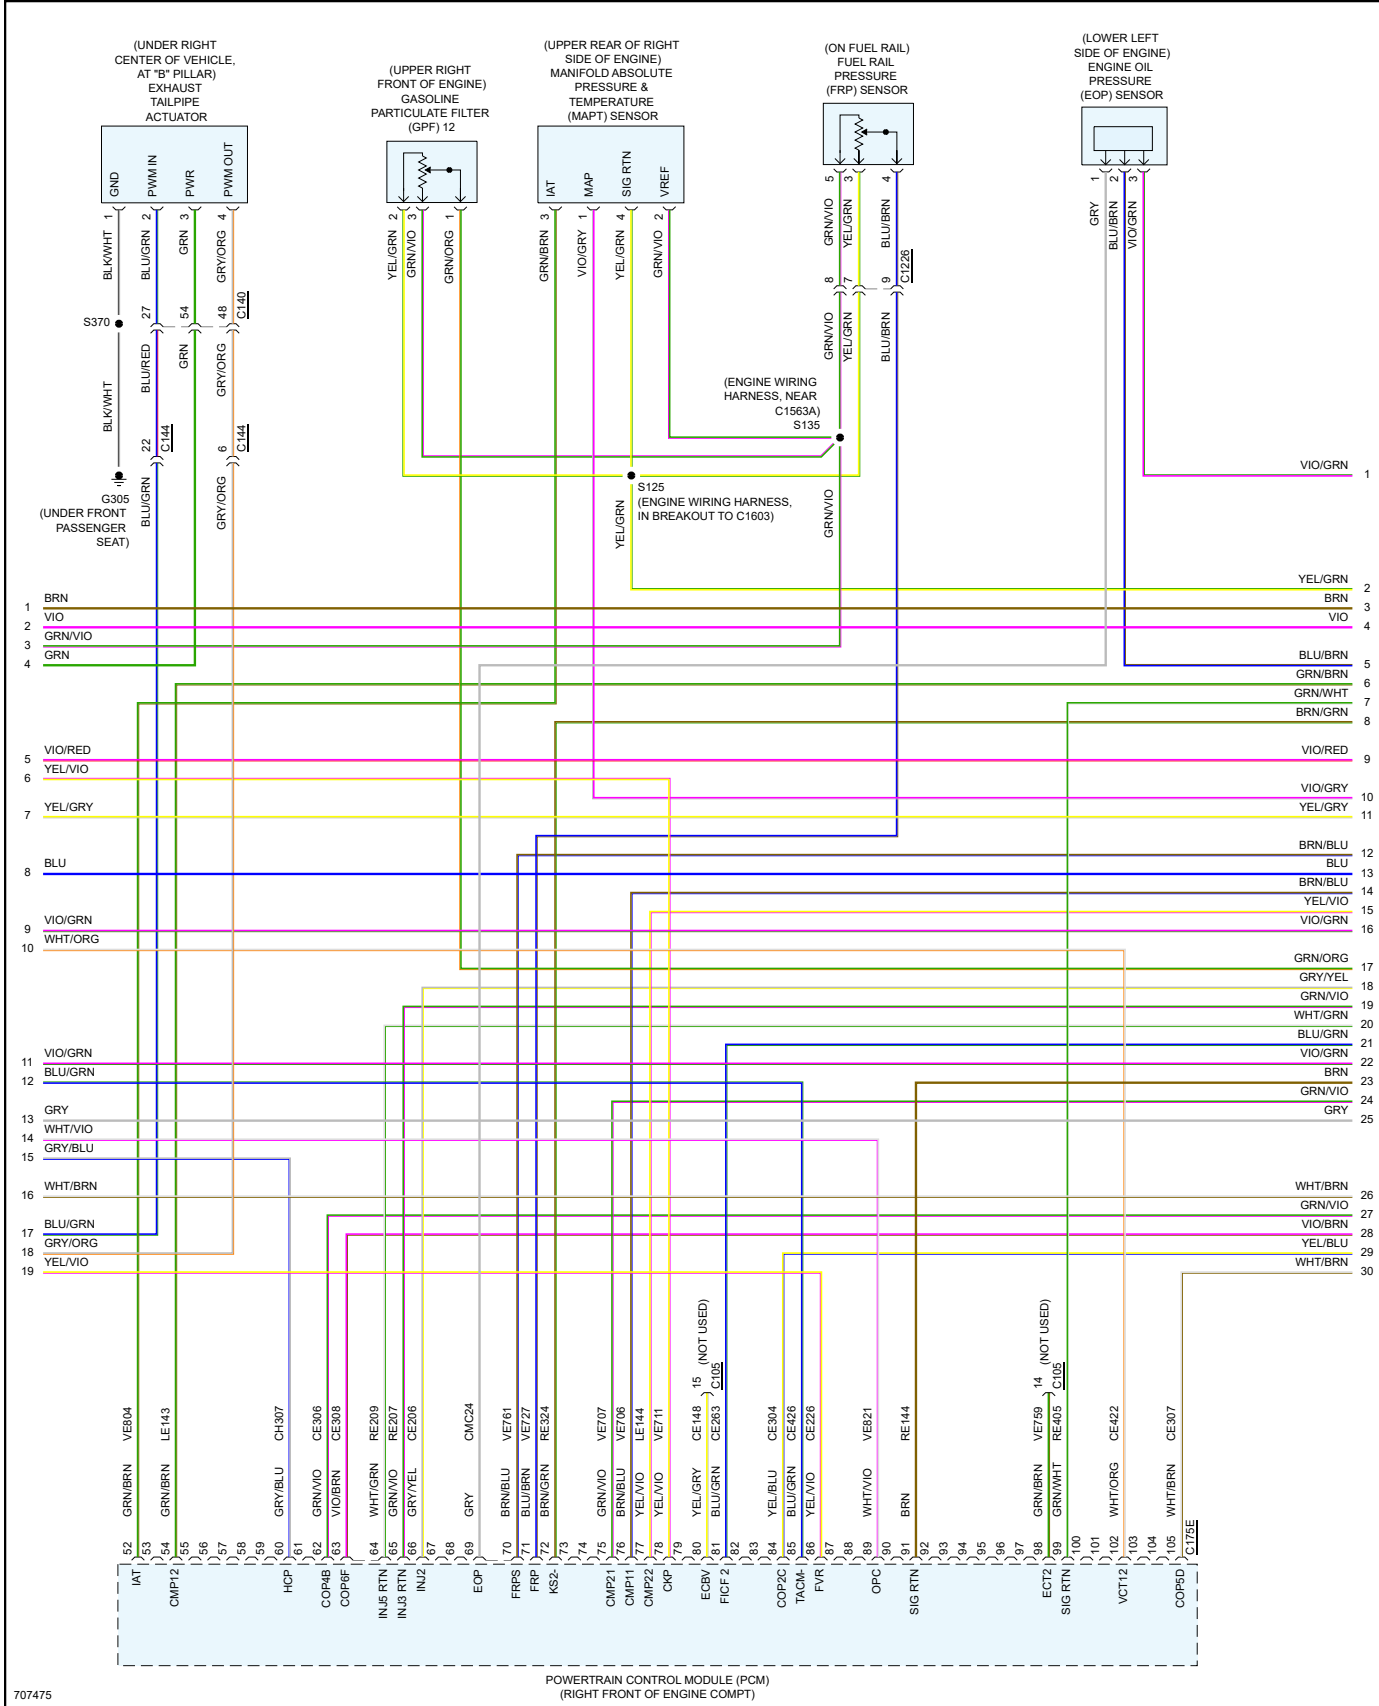



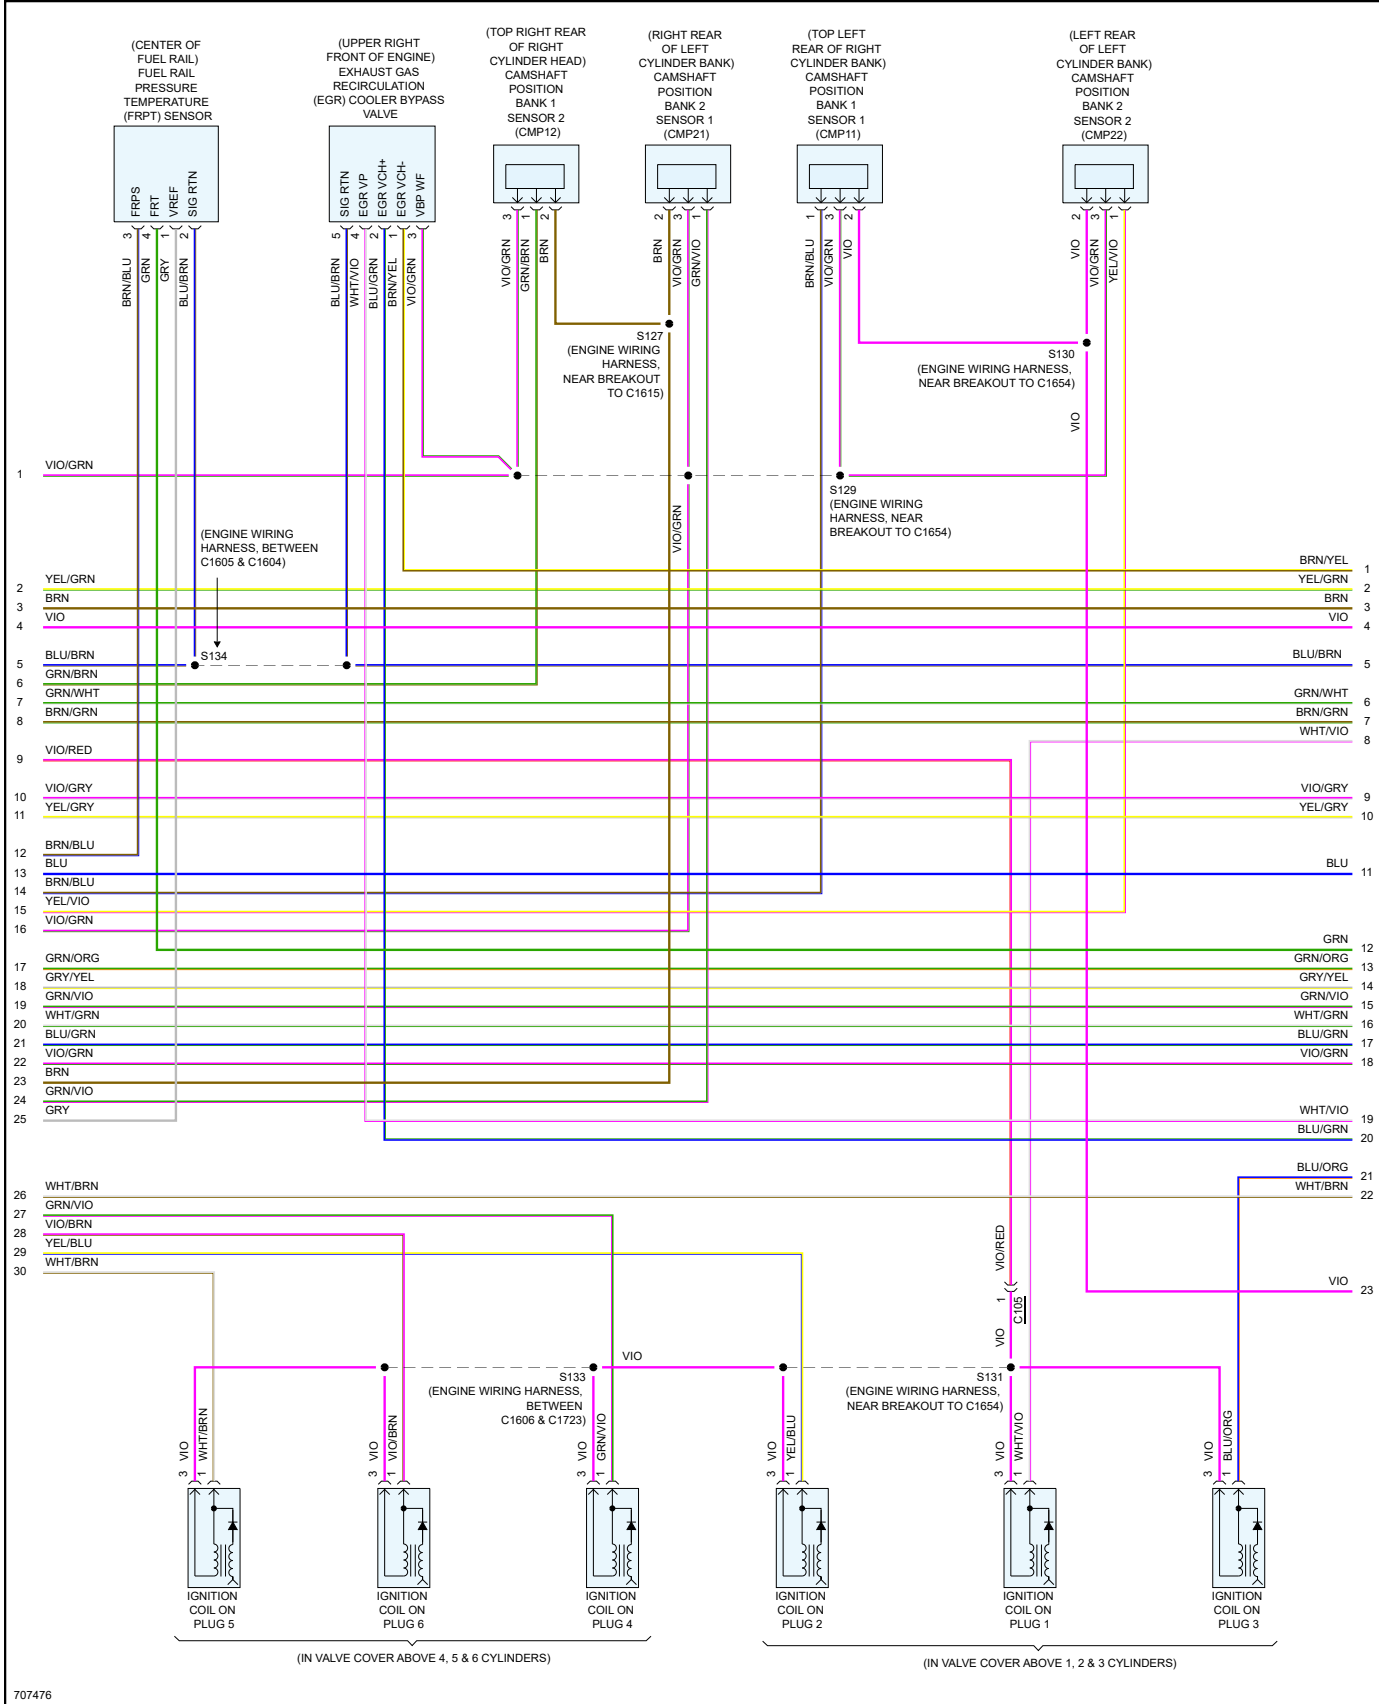

707476

