



AirLink GX400 for Verizon

User Guide



2140712
Rev 2.0

Important Notice

Due to the nature of wireless communications, transmission and reception of data can never be guaranteed. Data may be delayed, corrupted (i.e., have errors) or be totally lost. Although significant delays or losses of data are rare when wireless devices such as the Sierra Wireless AirLink GX400 are used in a normal manner with a well-constructed network, the Sierra Wireless AirLink GX400 should not be used in situations where failure to transmit or receive data could result in damage of any kind to the user or any other party, including but not limited to personal injury, death, or loss of property. Sierra Wireless accepts no responsibility for damages of any kind resulting from delays or errors in data transmitted or received using the Sierra Wireless AirLink GX400, or for failure of the Sierra Wireless AirLink GX400 to transmit or receive such data.

Safety and Hazards

Do not operate the Sierra Wireless AirLink GX400 in areas where blasting is in progress, near medical equipment, near life support equipment, or near any equipment which may be susceptible to any form of radio interference. In such areas, the Sierra Wireless AirLink GX400 **MUST BE POWERED OFF**. The Sierra Wireless AirLink GX400 can transmit signals that could interfere with this equipment.

Do not operate the Sierra Wireless AirLink AirLink GX400 in any aircraft, whether the aircraft is on the ground or in flight. In aircraft, the Sierra Wireless AirLink GX400 **MUST BE POWERED OFF**. When operating, the Sierra Wireless AirLink GX400 can transmit signals that could interfere with various onboard systems.

Note: Some airlines may permit the use of cellular phones while the aircraft is on the ground and the door is open. Sierra Wireless AirLink GX400 may be used at this time.

The driver or operator of any vehicle should not operate the Sierra Wireless AirLink GX400 while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some states and provinces, operating such communications devices while in control of a vehicle is an offence.

Limitation of Liability

The information in this manual is subject to change without notice and does not represent a commitment on the part of Sierra Wireless. SIERRA WIRELESS AND ITS AFFILIATES SPECIFICALLY DISCLAIM LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR REVENUE OR ANTICIPATED PROFITS OR REVENUE ARISING OUT OF THE USE OR INABILITY TO USE ANY SIERRA WIRELESS PRODUCT, EVEN IF SIERRA WIRELESS AND/OR ITS AFFILIATES HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR THEY ARE FORESEEABLE OR FOR CLAIMS BY ANY THIRD PARTY.

Notwithstanding the foregoing, in no event shall Sierra Wireless and/or its affiliates aggregate liability arising under or in connection with the Sierra Wireless product, regardless of the number of events, occurrences, or claims giving rise to liability, be in excess of the price paid by the purchaser for the Sierra Wireless product.

Patents

This product may contain technology developed by or for Sierra Wireless Inc. This product includes technology licensed from QUALCOMM® 3G. This product is manufactured or sold by Sierra Wireless Inc. or its affiliates under one or more patents licensed from InterDigital Group.

Copyright

© 2011 Sierra Wireless. All rights reserved.

Trademarks

AirCard® and Watcher® are registered trademarks of Sierra Wireless. Sierra Wireless™, AirPrime™, AirLink™, AirVantage™, and the Sierra Wireless logo are trademarks of Sierra Wireless.

Windows® and Windows Vista® are registered trademarks of Microsoft Corporation.

Macintosh® and Mac OS X® are registered trademarks of Apple Inc., registered in the U.S. and other countries.

QUALCOMM® is a registered trademark of QUALCOMM Incorporated and is used under license.

Other trademarks are the property of the respective owners.

Contact Information

Support Desk:	Phone:	1-877-231-1144
	Hours:	5:00 AM to 5:00 PM Pacific Time, Monday to Friday, except US Holidays
	E-mail:	support@sierrawireless.com
Sales Desk:	Phone:	1-510-624-4200 1-604-232-1488
	Hours:	8:00 AM to 5:00 PM Pacific Time
	E-mail:	MobileandM2Msales@sierrawireless.com
Post:	Sierra Wireless America 39677 Eureka Drive Newark, CA USA 94560 Sierra Wireless 13811 Wireless Way Richmond, BC Canada V6V 3A4	
Fax:	1-510-624-4299 1-604-231-1109	
Web:	www.sierrawireless.com	

Consult our website for up-to-date product descriptions, documentation, application notes, firmware upgrades, troubleshooting tips, and press releases:

www.sierrawireless.com

Revision History

Revision number	Release date	Changes
1.0		
2.0	March: 2011	User Guide created and initially released.

Contents

Introduction to the AirLink GX400	11
ACEware™	12
ACEmanager	12
Simplified Deployment	13
Monitor and Control	13
ACEview	13
Connecting to Verizon	14
Steps of a Connection:	14
Dynamic vs. Static IP Addresses	14
EV-DO	15
Security	15
Connection methods	15
USB	16
Virtual serial port	16
Networking	16
IPSec	16
GRE	17
Applications	17
Events Reporting	17
Software	17
Documentation	18
Tools and Reference Documents	18
 Specifications	 19
Features and Benefits	19
Technology	19
Environmental	19
Power Consumption: (@12V DC)	19
Standards/Approvals	19
Host Interfaces	20
Dimensions	20
Application Interfaces	20
LED Indicators	20

Interface Port Pin-Outs	20
Serial Port	20
Power Connector	21
Installing and Activating AirLink GX400	23
Physical Interfaces	24
Requirements	24
Activating AirLink GX400	24
Automatic Activation (OTASP)	25
Updating AirLink GX400 Firmware	25
Confirming IP Address	25
Configuring Through ACEmanager	25
Connecting the Antennas	26
GPS Antenna	26
Connecting to Power	27
Connecting to a Computer or Other Device	28
Ethernet	28
Serial Port	28
USB OTG Port	29
LED Operation	30
Light Patterns	31
Reset Button	31
Configuring the AirLink GX400	33
ACEmanager	33
Using a Terminal Application with AT Commands	33
AT Command	36
Inputs, Relay Outputs, and Power Status	39
Capturing External Events	39
Digital Input	39
Digital Output	40

Power Modes and Information	40
Power Effect on device State	41
Monitoring Power-In Voltage	41
Regulatory Information	43
Federal Communications Commission Notice (FCC United States)	43
Industry Canada	43
Antenna Considerations	44
RF Exposure	44
EU	44
WEEE Notice.	45

1: Introduction to the AirLink GX400

- [ACEware™](#)
- [Connecting to Verizon](#)
- [EV-DO](#)
- [Connection methods](#)
- [Networking](#)
- [Applications](#)
- [Software](#)
- [Documentation](#)

The AirLink GX400 is a compact, intelligent, and fully-featured mobile communications platform with multiple peripheral connections including serial, Ethernet, and USB. Expanded I/O functionality in the power connector includes one digital I/O and one low power timer enable input allowing remote instrumentation possibilities.

Its high-precision GPS receiver, coupled with the rich embedded intelligence provided by ALEOS™ technology, make AirLink GX400 the perfect choice for a broad set of applications requiring superior remote management capabilities.



Figure 1-1: AirLink GX400

ALEOS, the embedded core technology of the Sierra Wireless AirLink product, simplifies installation, operation and maintenance of any deployment, and provides an always-on, always-aware intelligent connection for mission-critical applications. ALEOS enables:

- Persistent Network Connectivity
- Over-The-Air (OTA) Upgrades
- Wireless Optimized TCP/IP
- Real-Time Notification
- Real-Time GPS Reporting
- GPS Store and Forward
- Packet Level Diagnostics
- Device Management & Control
- Protocol Spoofing



Figure 1-2: Powered by ALEOS

ACEware™

A wireless deployment is not complete until you have software tools to manage the devices monitoring your valuable equipment. Using the AirLink Control Environment (ACE), ACEWare is the device management and monitoring application suite for Sierra Wireless AirLink devices powered by ALEOS.



Figure 1-3: ACEware Logo

The ACEware suite encompasses an application internal to the firmware (ACEmanager), a Windows-based application (ACEview), and a web-hosted application (ACEnet). You can download the ACEview and the user guides for all ACEware from the Sierra Wireless AirLink Solutions web site: <http://www.sierrawireless.com/support>. Contact your dealer or Sierra Wireless representative for any further information.

Note: ACEview requires the Microsoft .NET Framework v. 2.0 and Microsoft Windows 98, Windows 2000, Windows XP, or later. You can obtain the Microsoft .NET Framework from Microsoft at: <http://www.microsoft.com/>.

ACEmanager

ACEmanager, the ACEWare internal to the firmware, is a configuration and monitoring tool that simplifies deployment and provides extensive monitoring, control, and management capabilities. ACEmanager gives you the power to monitor and control your Sierra Wireless AirLink communications platforms in real-time.

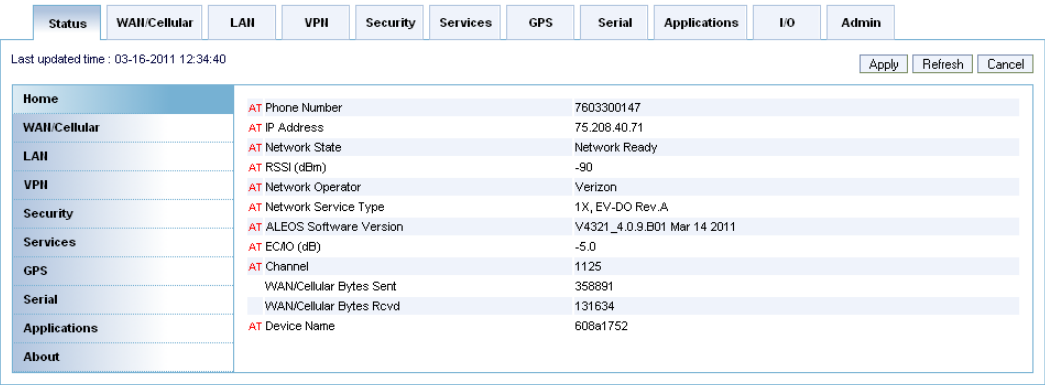


Figure 1-4: ACEmanager: Status

Simplified Deployment

ACEmanager provides the ability to remotely set up and configure Sierra Wireless AirLink products. Remote device setup and configuration reduces the time of your wireless deployment and provides a quicker path to ROI.

Templates allow you to easily configure devices in your fleet with identical settings, ensuring a simple, accurate deployment.

Monitor and Control

ACEmanager allows an administrator to remotely monitor a device's status, health and configuration settings. The user interface displays signal strength, cell site information, byte counters, and error conditions, enabling you to pinpoint any issues and troubleshoot immediately.

ACEmanager enables remote configuration and parameter settings to be changed or reset instantly over the air, change a device's port configuration, IP address settings, GPS settings, and much more. After configuring one device, use the template feature to copy that device configuration to other devices.

Tip: Configuration steps and examples in this guide use ACEmanager.

ACEview

ACEview is an efficient status and connection monitoring application with a low-profile, easy to read interface.



Figure 1-5: ACEview

Connecting to Verizon

The AirLink GX400 uses Verizon as an ISP (Internet Service Provider) to connect you to the Internet.

Steps of a Connection:

1. When your AirLink GX400 is powered on, it automatically searches for cellular service using CDMA-based cellular technology.
2. Your AirLink GX400 establishes a PPP (Point-to-Point Protocol or “dial” up connection) link to the Verizon network, also called registering on the network, and receives an IP address.
3. When your AirLink GX400 has received its IP address from Verizon, a connection to the Internet or the cellular network is also available for computers or other devices connected directly to the AirLink GX400.

The AirLink GX400 will perform routing for all internet traffic to and from the computers or other end devices.

With the AirLink GX400 in Ethernet Public mode, only one device connected to the Ethernet port will receive the public IP address which is the one provided by the cellular network. In Ethernet Private mode, with a hub or switch connected to the Ethernet port, the AirLink GX400 will provide NAT (network address translation) for a range of computers or other devices connected to the switch or hub and allows Internet access to all of them.

Dynamic vs. Static IP Addresses

There are two types of addresses on networks: dynamic and static.

- Dynamic addresses are assigned on a “need to have” basis. Your AirLink GX400 might not always receive the same address each time it connects with Verizon.
- Static addresses are permanently assigned to a particular account and will always be used whenever your AirLink GX400 connects to the Internet. The IP address will not be given to anyone else.

Most ISPs (cellular included) use dynamic IP addresses rather than static IP addresses since it allows them to reuse a smaller number of IP addresses for a large number of customers. A dynamic IP address is suitable for many common Internet uses, such as web browsing, looking up data on another computer system, or other client functions (such as data only being sent out or only being received after an initial request).

Tip: *If your account with Verizon includes a dynamic IP address and you need a static IP, please consult your Verizon Representative for more information about changing your account for static IP support.*

If you need to contact your AirLink GX400, a device connected to the AirLink GX400, or a host system using the AirLink GX400 from the Internet, you need to have a known IP (such as one which is static) or domain name (an IP address converted by a DNS server into a word based name). If you have a dynamic IP address for your device, you can use a Dynamic DNS service (such as IP Manager) to translate your IP address into to a domain name.

Caution: *If you want to connect remotely to your AirLink GX400 using TCP/IP, the IP address given to your device by Verizon cannot be a private or internal IP address (such as a special private network) unless you are on the same network or inside that network's firewall (such as with frame relay).*

EV-DO

CDMA (Code Division Multiple Access) is the underlying digital radio network technology used by many cellular providers across the globe and is prevalent in North America. To provide backward compatibility and seamless connections in a wider range of locations, Sierra Wireless EV-DO products like the AirLink GX400 will fall back to 1x when EV-DO is not available.

Sierra Wireless is certified with Verizon, a prominent North American 1x and EV-DO carrier.

EV-DO revision A is an enhancement on the original revision 0 adding expanded upload capabilities and a more robust connection overall. In addition to increasing the downlink speed, revision A increases the uplink speed, is backwards compatible, and automatically connects with existing and broadly deployed EV-DO Rev. 0 and 1x networks ensuring reliable and pervasive connectivity.

Security

1x data transmissions are highly secure. Originally developed based upon the "spread spectrum" pioneered by the US Department of Defense, security in CDMA technologies is obtained by spreading the digital information contained in a particular signal of interest over multiple coded paths, and over a much greater bandwidth than the original signal.

Connection methods

You can connect the AirLink GX400 to a USB (micro A/B), an Ethernet (RJ45), or a serial (RS232) port on a computer. When connected to a USB or Ethernet port, the AirLink GX400 behaves like a network card.

USB

The AirLink GX400 is equipped with a USB port which increases the methods by which you can send and receive data. The USB port can be set to work as either a virtual Ethernet port or a virtual serial port. A driver installation is required to use the USB port in either mode.

It is recommended that you use a USB 2.0 cable with your AirLink GX400 and connect directly to your computer for best throughput.

Virtual serial port

The AirLink GX400 supports one virtual serial port over USB. This VSP can be used, for example, to send AT commands or to run many serial based applications such as HyperTerminal®.

Networking

IPSec

The IP protocol that drives the Internet is inherently insecure. Internet Protocol Security (IPSec), which is a standards-based protocol, secures communications of IP packets over public networks.

IPSec is a common network layer security control and is used to create a virtual private network (VPN).

The advantages of the IPSec feature includes:

- **Data Protection:** Data Content Confidentiality allows users to protect their data from any unauthorized view, because the data is encrypted (encryption algorithms are used).
- **Access Control:** Access Control implies a security service that prevents unauthorized use of a Security Gateway, a network behind a gateway or bandwidth on that network.
- **Data Origin Authentication:** Data Origin Authentication verifies the actual sender, thus eliminating the possibility of forging the actual sender's identification by a third-party.
- **Data Integrity:** Data Integrity Authentication allows both ends of the communication channel to confirm that the original data sent has been received as transmitted, without being tampered with in transit. This is achieved by using authentication algorithms and their outputs.

The IPSec architecture model includes the Sierra Wireless AirLink gateway as a remote gateway at one end communicating, through a VPN tunnel, with a VPN gateway at the other end. The remote gateway is connected to a Remote network and the VPN is connected to the Local network. The communication of data is secure through the IPSec protocols.

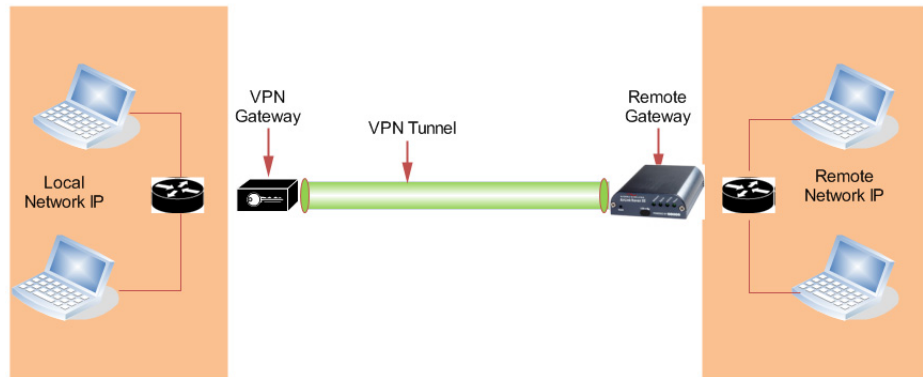


Figure 1-6: IPsec Architecture

GRE

GRE (Generic Routing Encapsulation) is a tunneling protocol used to carry non-IP packets through an IP Network. Non-IP packets that are sent over the GRE tunnel must first be encapsulated. Hence, ALEOS is used to configure and encapsulate non-IP packets and transmit over IP through the GRE tunnel.

Applications

Events Reporting

Events Reporting is a Sierra Wireless AirLink device feature, provided by ACEmanager, that allows the users to generate reports from the events that take place. Events Reporting Protocol is an intuitive embedded protocol which automatically formats the messages based on an event trigger. The messages generated are then reported to the remote server.

Software

The AirLink GX400 device comes with the following software:

- ACEview, the Windows-based software for the AirLink GX400 which allows you to monitor your connections
- Drivers for Windows XP and Windows 7 32-bit for the USB virtual Ethernet and USB virtual serial connections. A 64-bit version is available from Support at www.sierrawireless.com
- Firmware that is stored in non-volatile memory and includes ACEmanager.

The AirLink GX400 has an embedded radio module made by Sierra Wireless, Inc. There are two firmware programs on the device—one stored on the controller board of the AirLink GX400 and one on the radio module.

This firmware was loaded into the radio module and controller board when the AirLink GX400 was assembled. As new versions of the software and firmware are released, they are posted at www.sierrawireless.com.

Documentation

This *AirLink GX400 for Verizon User Guide* describes how to:

- Install the AirLink GX400 hardware.
- Connect the radio antennas.
- Connect a notebook computer and other input/output (I/O) devices.
- Interpret the LEDs on the AirLink GX400 and the indicators in the ACEview software.

This *User Guide* is provided as a PDF (Portable Document Format) file on the installation CD or from the Sierra Wireless support website.

Tools and Reference Documents

User Guide	Description
ALEOS User Guide	This document discusses software configuration in ACEmanager and explains all ALEOS features.
ACEview User Guide	This document explains the use of this utility tool which is used to view and monitor the connection state of a Sierra Wireless AirLink device.
AceNet User Guide	This document explains the use of AceNet services for remote management of a Sierra Wireless AirLink device.

2: Specifications

- [Interface Port Pin-Outs](#)
- [Power Connector](#)

Features and Benefits

- Powered by ALEOS
- Embedded Machine Protocols
- Connection Management
- IPSec/VPN; Firewall
- LBS & Events Reporting Engines
- ACEware interface
- Remote Management and Configuration
- Ethernet, Serial, USB OTG (On-The-Go)
- 1 Digital I/O, 1 low power timer enable input
- Rx Diversity (3G)
- Hardware expansion options (IESM)

Technology

EV-DO Rev.A with fallback to:

- CDMA EV-DO (Rev.0)
- CDMA 1xRTT

Environmental

- Operating Temperature:
 - -30° to 70° Celsius
- Storage Temperature:
 - -40° to 85° Celsius

Power Consumption: (@12V DC)

- Transmit/Receive (Typical/Max) 190/430 mA
- Idle 145 mA
- Low Power Mode <50 mA
- Input Voltage 9 - 36V DC

Standards/Approvals

- Carrier specific approvals
- CE
- FCC
- RoHS Compliant
- Industry Canada
- Mil-Spec 810-F Certified
- Class 1 Div 2 Certified
- e-Mark

- IP 64

Host Interfaces

- Ethernet: 10/100 Mbps RJ-45
- USB "micro A/B" locking
- RS-232: DB-9 DCE (300-230400 baud)
- I/O: one on power connector
- Antenna Connection:
 - Primary Cellular - 50 Ohm SMA
 - Receive Diversity - 50 Ohm SMA
 - GPS - 50 Ohm SMA



Warning: The antenna must be installed to provide a separation distance of at least 20 cm from all persons.

Dimensions

- 143 mm x 96 mm x 44 mm (5.5 in x 3.8 in x 1.7 in)
- 396gms (14 oz)

Application Interfaces

- TCP/IP, UDP/IP, DHCP, HTTP, SNMP, SMTP, SMS, MSCI, NMEA, TAIP, GPS, and more

LED Indicators

- Network
- Signal
- Activity
- Power

Interface Port Pin-Outs

Serial Port

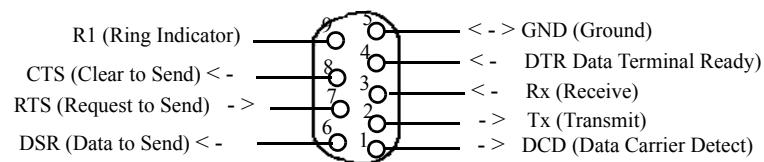


Figure 2-1: Serial Port Diagram: Female DB-9 DCE (not to scale)

Power Connector

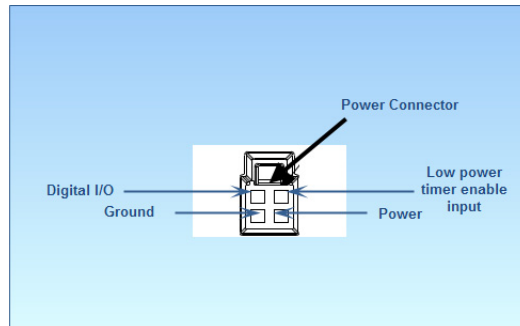


Figure 2-2: Power Connector (Not to scale)

3: Installing and Activating AirLink GX400

- [Physical Interfaces](#)
- [Requirements](#)
- [Activating AirLink GX400](#)
- [Automatic Activation \(OTASP\)](#)
- [Updating AirLink GX400 Firmware](#)
- [Configuring Through ACEmanager](#)
- [Connecting the Antennas](#)
- [Connecting to a Computer or Other Device](#)
- [LED Operation](#)

This chapter provides step-by-step directions for activating your AirLink GX400 on Verizon's network.

The AirLink GX400 should be mounted in a position that provides easy access for all cabling. Cables should not be bent, constricted, in close proximity to high amperage, or exposed to extreme temperatures. The LEDs on the front and top panel should be visible for ease of operational verification. Ensure that there is adequate airflow around the device, and that it is kept free from direct exposure to such environmental elements as the sun, rain, dust, etc.



Figure 3-1: AirLink GX400 front and back plate

Physical Interfaces

The AirLink GX400 has the following physical interfaces and connection methods:

- Primary Cellular - 50 Ohm SMA
- Receive Diversity - 50 Ohm SMA
- GPS - 50 Ohm SMA
- USB OTG Micro A/B locking
- 1 Ethernet port
- 1 Serial port

Requirements

1. Cellular Account:
 - From a cellular provider (e.g., Verizon).
2. Software:
 - **ACEmanager** - Graphical interface for configuring/managing the GX400.
 - A terminal application (e.g., Microsoft HyperTerminal).
3. Hardware:
 - Ethernet cable - 10/100 fast Ethernet interface for management, software downloads/upgrades and data communication.
 - Serial cable - A serial console port is available for initial product configurations and debug.
 - USB cable Type "A" to micro type "B" (could be locking)

Note: The USB port cannot configure the device until a driver is installed for the USB port.

- Power adapter and a power source - You will need a power supply and power source for the device.
- PC or laptop - To configure the device, you will need a computer with an available Ethernet, Serial, or USB port.

Refer to the ACEmanager User Guide for more details on configuration via Ethernet, Serial, and USB.

Activating AirLink GX400

To activate your device, follow the instructions below:

1. Connect the AirLink GX400 with antennas - See [Connecting the Antennas](#) on page 26.
2. Plug the power cable to the power connector on the back panel of the AirLink GX400 - See [Connecting to Power](#) on page 27.
3. Connect your computer to the AirLink GX400 with an ethernet, serial or USB cable - See [Connecting to a Computer or Other Device](#) on page 28.
4. Observe the LEDs - See [LED Operation](#) on page 30.

Wait 60-90 seconds for the AirLink GX400 to initialize and go on the air.

Automatic Activation (OTASP)

One of the special features of your AirLink GX400 for Verizon is the ability to activate itself automatically. When you first power on the AirLink GX400, it will check to see if it has been activated with account data. If it finds that it has not yet been activated, the AirLink GX400 will attempt to retrieve the account data from the Verizon network using Over-the-Air Service Provisioning (OTASP).

Note: You must have a Verizon account before you attempt automatic activation. If you do not have a Verizon account for your AirLink GX400, it will not succeed at activation.

Updating AirLink GX400 Firmware

For installing the latest firmware version (.exe file), you can go to the Sierra Wireless website: <http://www.sierrawireless.com/support>.

Confirming IP Address

Check the IP Address in your Local Area Connection window. The IP Address in the window in Figure 3 is for a USB/net connection.

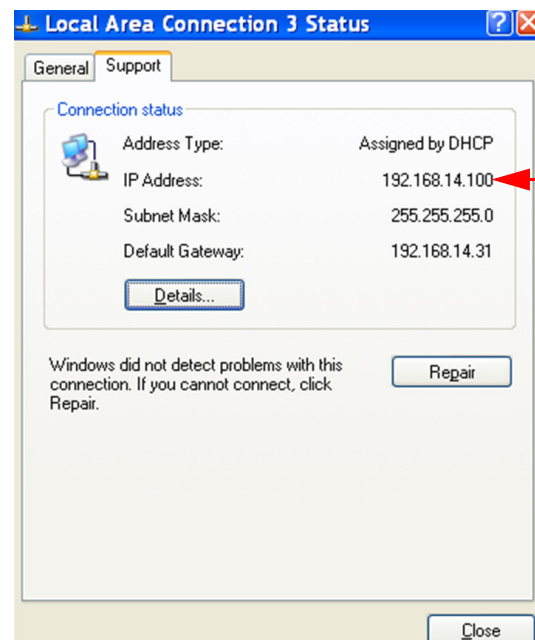


Figure 3-2: Confirm IP Address

Configuring Through ACEmanager

ACEmanager is a free utility. Follow the steps below to connect to ACEmanager and begin configuring the device.

- Ensure that the AirLink GX400 is properly connected to allow access to the ACEmanager user interface.

- Go to: <http://192.168.13.31:9191> the first time you connect to ACEmanager.

Connecting the Antennas



Warning: *This device is not intended for use within close proximity of the human body. Antenna installation should provide for at least a 20 CM separation from the operator.*

Antennas selected should not exceed a maximum gain of 4.55 dBi in Cellular Band and 2.85 dBi in PCS band under any standard installation configuration. In more complex installations (such as those requiring long lengths of cable and/or multiple connections), it is imperative that the installer follow maximum dBi gain guidelines in accordance with the radio communications regulations of the Federal Communications Commission (FCC), Industry Canada, or your country's regulatory body (if used outside the US).

Your AirLink GX400 will work with most cellular antennas with an SMA connector. Connect the primary antenna or primary RF cable directly to the antenna connector on the back of the AirLink GX400.

Tip: *When using a cable to an antenna placed away from the device, minimize the length of your cable. All gain from a more advantageous antenna placement can be lost with a long cable to the device.*

GPS Antenna

Your AirLink GX400 will work with most standard active GPS antennas. Connect the GPS antenna or cable directly to the threaded SMA connector.

If you are mounting the AirLink GX400 into a vehicle, the less the cable is wrapped and bound together, the better it will perform. Place it on the roof, on the dash, or on a rear panel where it has a greater than 90° angle view of the sky.

There are three options for antenna mounts:

- Magnetic roof-mount
- Through glass-mount
- Permanent mount

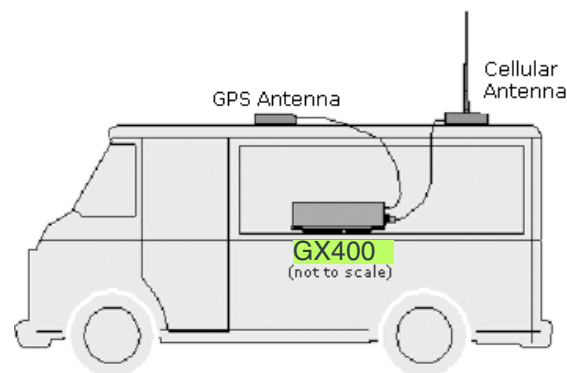


Figure 3-3: GPS Antenna Placement for a Vehicle

Connecting to Power



Warning: *Risk of electric shock: Only use the supply voltages listed in this user guide.*



Warning: *Explosion Hazard - When the device is located in a combustible atmosphere, do not connect or disconnect the AirLink GX400 unless power has been switched off.*

With the appropriate power adapter, the AirLink GX400 can be used with either DC or AC power. DC cables and AC adapters are available as optional accessories in addition to the one included with your AirLink GX400.



Warning: *When using AC to DC adapter the ambient temperature should not exceed 40 °C.*

If the AirLink GX400 is used in a vehicle, the power cable negative lead should be connected to the battery or power source negative terminal.

The battery cable used for a car, truck, or other mobile connection must be less than 3 meters in length.

The AirLink GX400 has an internal polysilicon circuit breaker and reverse polarity protection.

If you wish to use the Standby Ignition Sense (SISE) low-power timer feature of your AirLink GX400, the white wire of the three wire DC power cable should be used to connect to your ignition. When SISE is enabled in the device and the ignition sense connector is wired to your vehicle, the ignition sense will provide a link to the device to enable it to enter a low-power, standby mode when your vehicle is turned off and power up more quickly when the ignition is started.

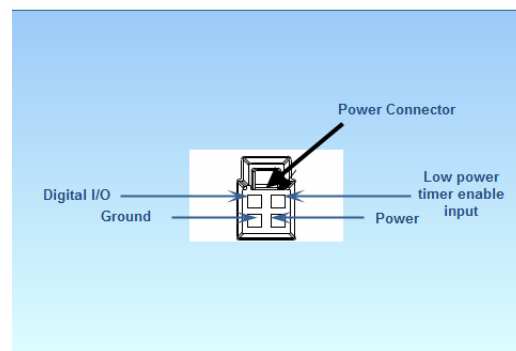


Figure 3-4: AirLink GX400 Power Connector




Warning: *Explosion Hazard - When the device is located in a combustible atmosphere, do not connect or disconnect the AirLink GX400 unless power has been switched off.*

Connecting to a Computer or Other Device

The AirLink AirLink GX400 can be connected to the computer through Ethernet, serial or USB connection.

Ethernet

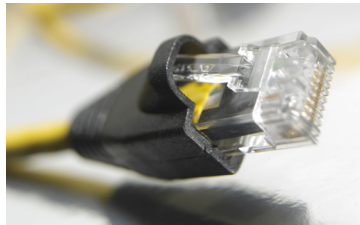

The Ethernet port is a standard RJ-45 connector and two LEDs indicate link and activity. The left LED blinks yellow during activity, and the right LED is Green for 100 Mbps and Orange for 10 Mbps. The Ethernet port of the AirLink GX400 can be connected directly to a computer or other Ethernet device with either a cross-over cable or a straight-through cable. The Ethernet port on the AirLink GX400 is auto-sensing, and it will auto-detect the speed of the connecting device for 100baseTX or 10baseT.

Serial Port



Figure 3-5: Serial cable

The serial port of your AirLink GX400 can be connected directly to most computers or other devices using a standard straight through cable. If you have a DCE device, you will need a null device or null device cable. All local GPS (UDP encapsulated) reports will come over the Ethernet connection. The serial port is available for both initial product configurations and debugging.

USB OTG Port



Figure 3-6: USB Micro-A connector cable

The CPU OTG port operates in device mode; when the port is unused, the AirLink GX400 operates in device mode. If a Micro-B plug is inserted into the port, AirLink GX400 operates as a self-powered device: it will not draw any current from the USB. If a Micro-A plug is inserted, the AirLink GX400 can operate in host mode and supply power to the device that is plugged into. At this time, however, USB host capability is a future ALEOS enhancement.

Your AirLink GX400's high-speed (480 Mbps) USB 2.0 port can be directly connected to computers or other devices using a standard USB 2.0 cable. If the computer or device you are connecting or the cable is not rated for high-speed, the device will communicate at a reduced speed to match.

When it is connected to a computer in device mode, the USB port should be seen as a COM port or Ethernet port after the applicable driver is installed and configuration has been enabled. The port is, by default, a virtual Ethernet port.

LED Operation

Four LEDs are visible from the front and top of the AirLink GX400. Labeled (from left to right) Network, Signal, Activity, and Power, each LED can display one of three colors: green, yellow, or red.

Caution: *If you need to reset the device configuration using the reset button, hold the button depressed until the LEDs start cycling yellow, and then the button may be released.*

LED operation is as follows:

- Off - No activity
- Green - Full function
- Yellow - Limited Function
- Red - Not functional.

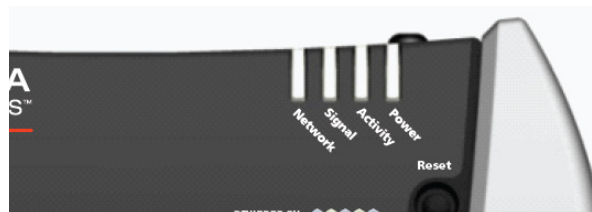


Figure 3-7: AirLink GX400 Indicator lights

- **Network:**
 - Green - On the network
 - Flashing Green - Roaming
 - Yellow - Found service, attempting to connect
 - Flashing Yellow - Link down
 - Red - No data connection available.
- **Signal** - Light shows the strength of the signal and may be nearly solid (strong signal) or flashing (weaker signal). A slow flash indicates a very weak signal.
- **Activity** - Pulse green on packet transmit/receive on radio link.
- **Power:**
 - Off - No power (or above 36V or below 7.5V)
 - Red - System not operational
 - Green - Normal operation
 - Green, Occasional Yellow - GPS Lock
 - Yellow - Low power mode or system booting.

Light Patterns

The LEDs on the front of the device respond with different light patterns to indicate device states.

- **Normal** - Each LED is lit as applicable.
- **Start up and Device Reboot** - All LEDs simultaneously cycle red, yellow, and green at the start. Various light patterns continue until the Power LED turns yellow, and then a solid green, to indicate an active device.
- **Radio Passthrough (H/W)** - Network LED is solid red.
- **Factory Reset** - All LEDs cycle yellow back and forth when the Reset pin is briefly depressed and released. Returns the device's software to the factory default state.
- **Data Retry, Failed Auth and Retrying** - The Network LED blinks red every 3 seconds.

Reset Button

The **Reset button**, located on the right front side of the AirLink GX400, has two primary functions:

1. Reboot the device: Quickly press in and release.
2. Return the device's ALEOS configuration settings to their factory defaults: Press in and hold until all LEDs are flashing yellow (approximately 35 - 45 seconds).

4: Configuring the AirLink GX400

- [ACEmanager](#)
- [Using a Terminal Application with AT Commands](#)
- [AT Command](#)

With ALEOS as its operating system, the AirLink GX400 is a highly configurable device.

Configure the AirLink GX400 through one of two options:

1. Use the configuration and management applications of the AceWare suite, or
2. Use a terminal emulator application such as HyperTerminal, PuTTY, etc.

ACEmanager

To get an expanded view of the other ACEmanager features, refer to the ACEmanager Configuration Guide and the ALEOS 4.2 User Guide.

ACEmanager is a free utility. Follow the steps below to connect to ACEmanager for configuring the device:

- Ensure AirLink GX400 connectivity to access ACEmanager
- Go to: <http://192.168.13.31:9191> the first time you connect to ACEmanager.

A full listing of all the configuration commands for your modem are in the ALEOS 4.2 User Guide.

Using a Terminal Application with AT Commands

You can access and configure your AirLink GX400 using a terminal application such as Microsoft HyperTerminal, PuTTY, or similar. The following directions are for HyperTerminal which is part of a standard installation of Windows XP.

1. Choose a name and icon for your connection
 - a. Choose a name for your connection, such as *AirLink GX400* or *Sierra Wireless AirLink Solutions*. The name and icon are only for your own reference so you can find the connection at a later date.

Tip: *If you want to have a connection saved for both local and remote, it is recommended the connection name reflect the connection type, i.e. AirLink GX400 local.*

- b. Select OK.
2. Connect to

Using USB/Serial:

- a. Select *COM1*, or the comport to which the modem is connected, for the "Connect Using".

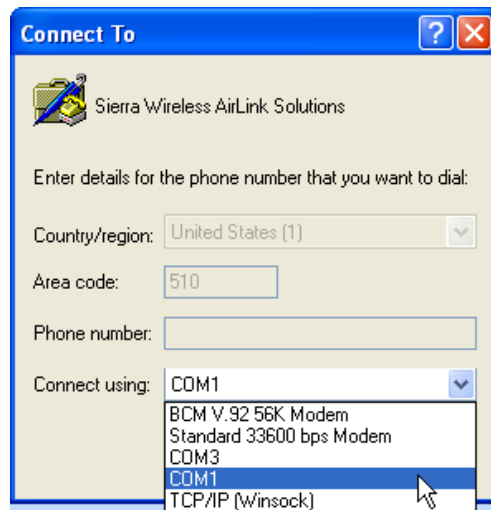


Figure 4-1: Connect To

- b.** Change or verify the settings:
- Bits per Second: 115200 (default)
 - Data Bits: 8
 - Parity: None
 - Stop Bits: 1
 - Flow Control: Hardware (or None).

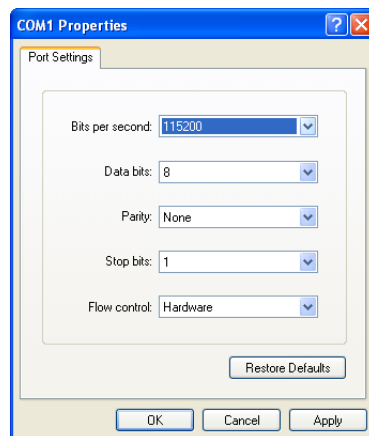



Figure 4-2: Port Settings

Tip: If you have configured the AirLink GX400 for settings different than the defaults for Bits per Second, Data Bits, Parity, and/or Stop Bits, you will need to use your changed settings.

- c.** Select OK.

Using Ethernet:

- d.** Select *TCP/IP (Winsock)* for “Connect Using”.
- e.** Type in *192.168.13.31* for Host Address.
- f.** Change the “Port Number” to *2332*.

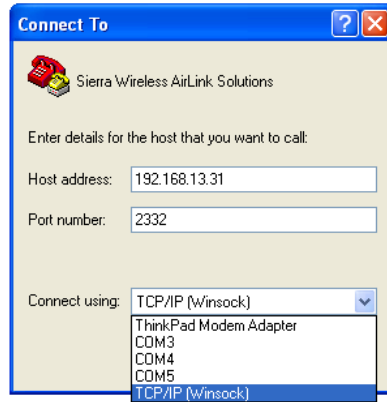

g. Select OK.

3. Connected

Connecting with Telnet will prompt for password.



Figure 4-3: HyperTerminal : TCP/IP connected

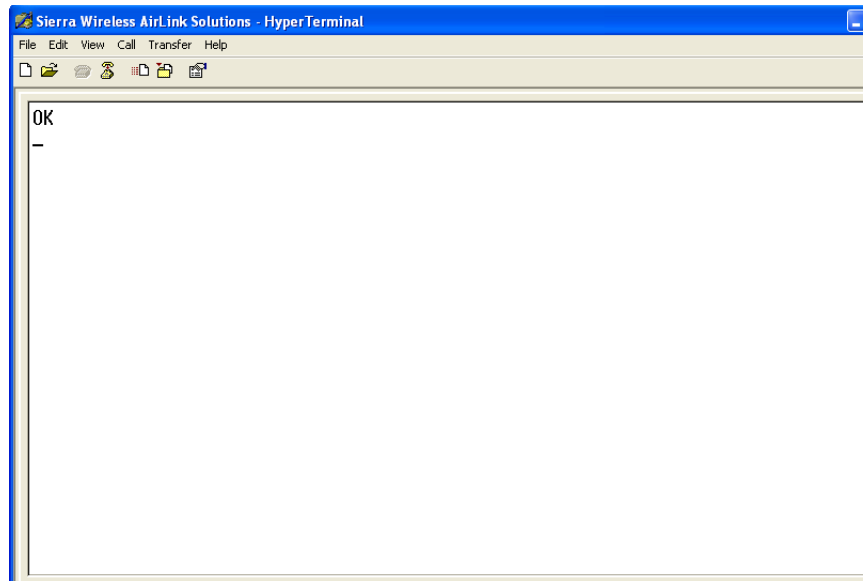


Figure 4-4: HyperTerminal : connected

- a. If you are prompted for a password, enter *12345* (default password).

Tip: *You will not be prompted for a password if you connect using a COM port.*

- b. Type *AT* and press *Enter*. You should get a reply of “OK” or “0”.
- c. To see what you are typing as you type it, you will need to turn on the echo and verbose mode. Type *ATE1V1* and press *Enter*.
- d. If you get a reply of “OK”, then you entered the command successfully. If you get a reply of “0” or “ERROR”, try entering the command again.

AT Command

Note: A full listing of supported AT Commands may be found in the ALEOS Configuration User Guide.

When using a terminal application, you will need to manually type in each command.

- For most commands, when you are entering them using a terminal connection, you will need to preface the command with *AT* (exceptions are noted), i.e. *ATA* which is listed as *A*.
- Some commands have specific parameters while other commands will take whatever you type.
- Required variable parameters are denoted with italicized text, example, *Dn*. The *n* is variable.
- Acceptable parameters and/or specific formats are listed with each command.

- Most commands with parameters can be entered with ? to read the current value (for example, `AT&D?` will respond with “2” if the default has not been changed).
- Optional parameters are denoted with square brackets [].
- AT Commands are not case sensitive. A capital “E” is the same as a lower-case “e”.
- When you are using a terminal connection, if you enter a command which is recognized by the AirLink GX400, it will respond with “OK”. If the command is not recognized, the response will be “ERROR”.
- Those commands applicable only to certain model numbers of the AirLink GX400 will be noted.

Caution: *Symbols listed with commands, such as *, /, &, or ?, are part of the command and must be included. Commands with symbols other than * may require PassThru mode.*

5: Inputs, Relay Outputs, and Power Status

- [Capturing External Events](#)
- [Power Modes and Information](#)

The AirLink GX400 can be configured to monitor the input, respond to specific types of events, and even trigger a digital output. The AirLink GX400 can also be configured to change its power mode in order to conserve power. These features can be configured to your needs.

Capturing External Events

The AirLink GX400 is equipped with an I/O port interface which includes 1 low power timer enable input and 1 digital I/O. These may be connected to sensors and switches to monitor status and remotely control equipment.

AirLink GX400 board supports a low power timer enable input pin and a digital I/O pin which are connected to the CPU processor. The I/O signal comes in from the power connector, through a polyswitch resettable fuse, and ties into the CPU pins with protection circuitry.

Digital Input

Digital Input can be used in two different modes: the switch mode or the voltage sensing mode.

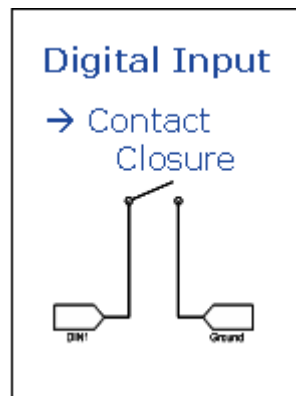


Figure 5-1: Digital Input Contact Closure

The switch mode senses contact closures. The digital input can report either an open or closed state, and can be wired to a ground signal via a switch. When the switch is open, the input reads "3.3V". When the switch is closed, the input reads "OV".

Examples of using the input with a switch to ground:

- When a door or other latch is opened or closed.
- Counting pulses or other electronic events.
- When a gauge reaches a certain point.

- When a container fills or empties.
- When a switch or valve is opened or closed.
- When the tow bar is raised or lowered.
- Connected to a sensor, the level of fuel in a vehicle.
- When the trunk of a vehicle is opened or closed.
- When the ignition is turned on or off.

Digital Output

Digital Output of open collector design is capable of driving an external device such as a pull-up resistor or relay. As an example, a relay could be connected between the output pin and an external voltage. The voltage on the relay cannot exceed 30V. The digital output pin can handle up to 150mA.

Examples of using the digital output with an external relay or pull-up resistor:

- Setting off an alarm or siren.
- Triggering a process to start on another device.
- Opening or closing a valve or switch.
- Locking or unlocking a door. Inputs,
- Turning a light on or off.
- Opening the vehicle's trunk or doors.

Power Modes and Information

By default, AirLink GX400 comes up according to the pre-defined power sequence. However, provisions are in place such that the CPU can be put into low power mode. Low power mode turns off the 1.8V (memory interface) and 1.0V (core) supply voltages connected to the processor to save power.

The AirLink GX400 can be configured to switch power modes in response to specific events, such as when the voltage to the device drops below a configured threshold or when ignition is turned off, in order to conserve a vehicle's battery life. The stand-by state, low-power mode, will prevent the device from draining the battery while allowing the device to quickly power up to regular operation when it is needed.

You can configure Low Power mode using ACEmanager.

Power Effect on device State

Once the transition from powered on to low-power mode starts, the device will change state to AT mode. This results in the current mode being gracefully terminated. For the brief period when the device is preparing for low-power mode, the device will remain in AT mode. At that time, it won't auto-answer, ATD will fail, etc. Once low-power mode is entered, the device will then discard any data received on the host port.

When the device is woken from low-power mode, the same behavior occurs as power on. The device starts in AT mode, and then after 5 seconds will enter the default start-up mode as it is configured for the device.

Monitoring Power-In Voltage

The current status of the power-in voltage can be monitored in ACEmanager.

6: Regulatory Information

Federal Communications Commission Notice (FCC United States)

Electronic devices, including computers and wireless devices, generate RF energy incidental to their intended function and are therefore subject to FCC rules and regulations.

This equipment has been tested to, and found to be within the acceptable limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

This equipment generates radio frequency energy and is designed for use in accordance with the manufacturer's user manual. However, there is no guarantee that interference will not occur in any particular installation.

If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/television technician for help
- This device complies with Part 15 of the Federal Communications Commission (FCC) Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference.
 2. This device must accept any interference received, including interference that may cause undesired operation.



Warning: *Changes or modifications to this device not expressly approved by Sierra Wireless could void the user's authority to operate this equipment.*

Industry Canada

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Cet appareillage numérique de la classe B répond à toutes les exigences de l'interférence canadienne causant des règlements d'équipement. L'opération est sujette aux deux conditions suivantes:

1. ce dispositif peut ne pas causer l'interférence nocive, et

2. ce dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée.

Antenna Considerations

Although the antenna model(s) used with these devices meet(s) the Industry Canada Radio Frequency requirements, it is possible that future customers may swap them for different ones without network provider's knowledge and approval. Such customers must be made aware of, and follow, the Radio Frequency requirements applied in this Technical Approval:

- RSS-102 "Radio Frequency Exposure Compliance of Radiocommunication Apparatus (All Frequency Bands)"
- RSS-129 "800 Mhz Dual-Mode CDMA Cellular Telephones"
- RSS-132e "Cellular Telephones Employing New Technologies Operating in the Bands 824-849 Mhz and 869-894 Mhz"
- RSS-133 r1 "2 GHz Personal Communications Services"

RF Exposure

In accordance with FCC/IC requirements of human exposure to radio frequency fields, the radiating element shall be installed such that a minimum separation distance of 20cm should be maintained from the antenna and the user's body.



Warning: *This product is only to be installed by qualified personnel!*

To comply with FCC/IC regulations limiting both maximum RF output power and human exposure to RF radiation, the maximum antenna gain must not exceed 4.55 dBi in the Cellular band and 2.85 dBi in the PCS band.



Warning: *The antenna(s) used for this transmitter must be installed to provide a separation of at least 20 cm from all persons.*

EU

Sierra Wireless hereby declares that the AirLink GX400 devices conform to all the essential requirements of Directive 1999/5/EC.

Products are marked with a CE and notified body number.

CE 0682

The Declaration of Conformity made under Directive 1999/5/EC is available for viewing at the following location in the EU community.

Sierra Wireless

39677 Eureka Drive

Newark, CA

USA 94560

WEEE Notice



If you purchased AirLink GX400 in Europe, please return it to your dealer or supplier at the end of its life. WEEE products may be recognized by their wheeled bin label on the product label.

