

How to re-key your SmartKey Security™ locks



you must have the working key to re-key the lock.



Current Key



SmartKey Tool

 


New Key



1


Insert the key that currently operates your lock, and rotate it 90° clockwise.

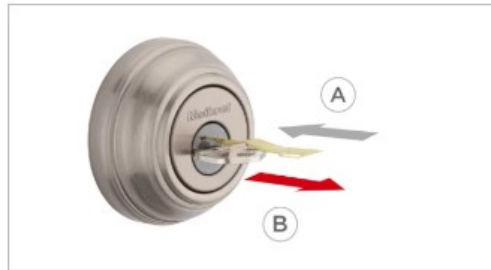

2

A Insert the SmartKey tool fully and firmly into the SmartKey hole.

 B **Remove** the SmartKey tool and the current key.

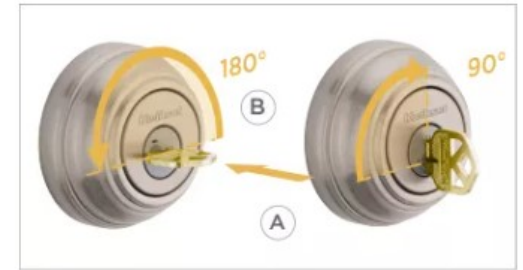

3

A Fully insert your new key into the lock, and rotate it 180°.

B Rotate the new key 90° back to the starting position, and remove it. Your lock is now re-keyed to your new key, and your old key will no longer operate the lock.