



## Elfin cable adapter

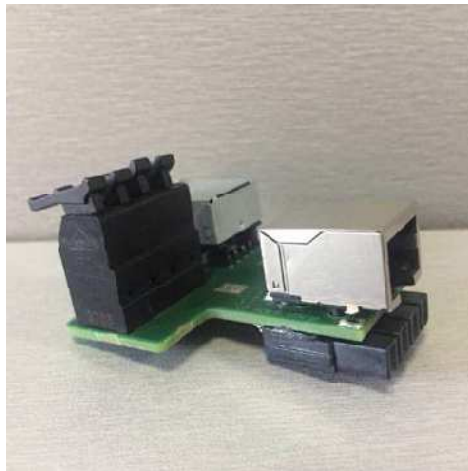

elfin cable adapter

The cable of elfin robot arm is a combination of LAN cable and power cable. If you want to connect elfin to a computer with a LAN cable, you may need an elfin cable adapter.

The obverse side:

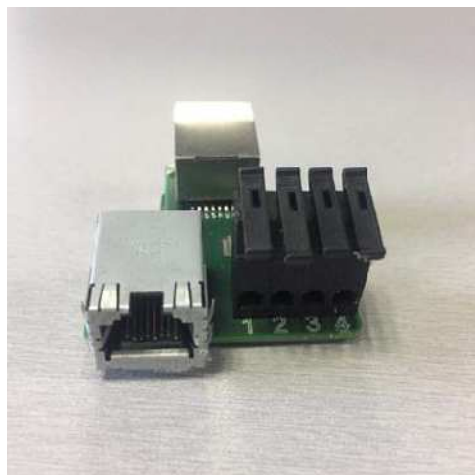


the obverse side

The LAN interface is on the left and the power interface is on the right. There are four pins in the power interface. The following table shows the power interface's mode of connection.

Pin	Meaning
1st pin	+48V
2nd pin	-48V
3rd pin	GND
4th pin	None

The reverse side:

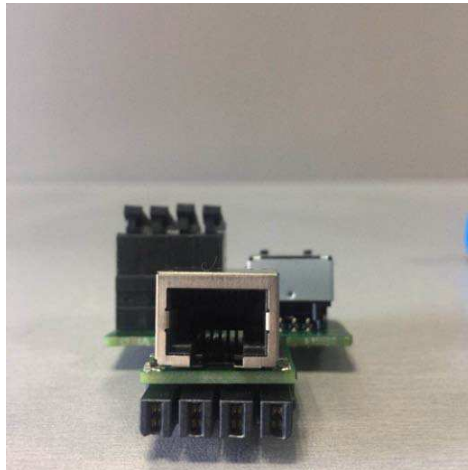

the reverse side

This side adapts the combinational cable of the elfin robot arm.