

KUKA operation

- First, in `KUKA_listener`, run the `udp2tcp` program.
- Second, in `KUKA_talker`, run the `server` program (`kukaopcserver.c`).
- Third, in `KUKA_talker` again, run the `kuka` program (`kukaswopcclient.c`).
- Fourth, in `KUKA controller`, run `pn1224` program in `Aut` mode. (the first time you start the controller, you need run the code in T1 mode for 1 or 2 second, and then change to Aut mode)