


Preparation:


1. Download the nrf Connect Bluetooth App:




2. Open the app and connect the board to power. TRHe board should start advertising a connection for the phone as soon as it is active as below:

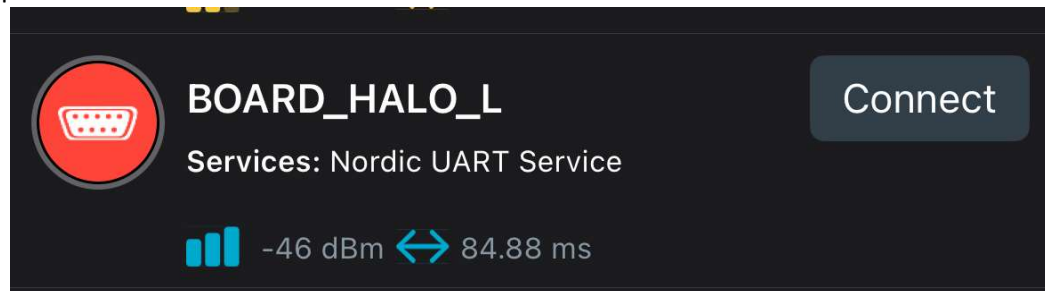


- Note it should say Board\_HALO\_R for the GPS/right module. The red toggle switch will change the R or L mode.
3. Click on the Board\_Halo\_X device:

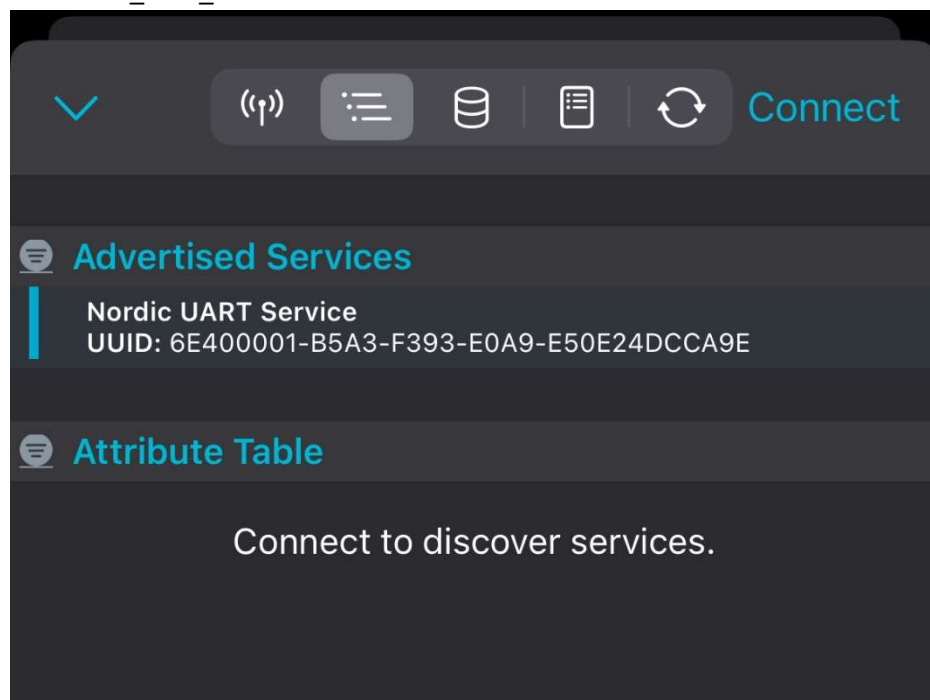


- 
4. Connect to the device by hitting connect.
5. After Connection you should see a UART service as below in one of the sections:

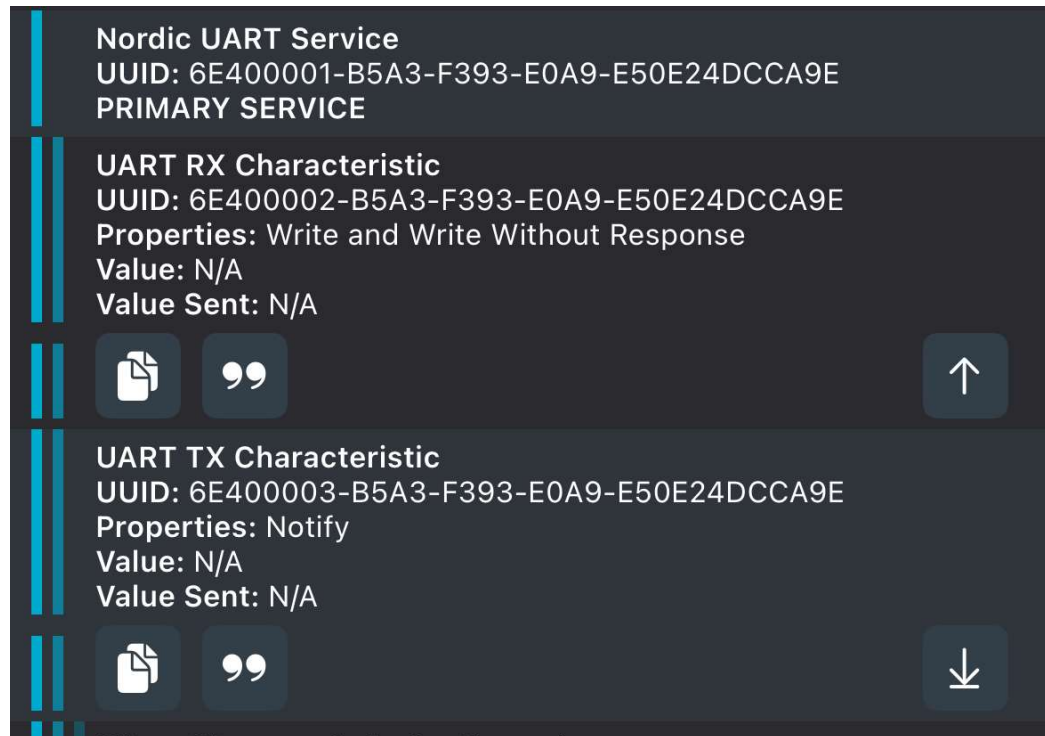


- 
- 6. Click the down arrow on the TX Characteristic on the bottom right:

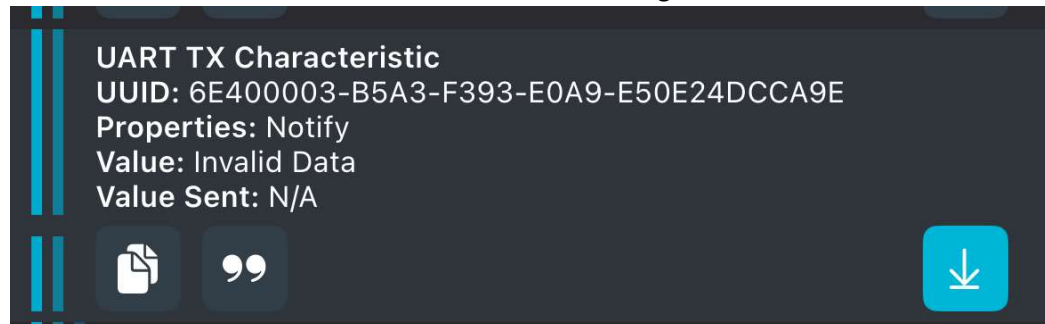

- 
- Note the Value should shown invalid data
- 7. Click the “ symbol and it should bring up the below:

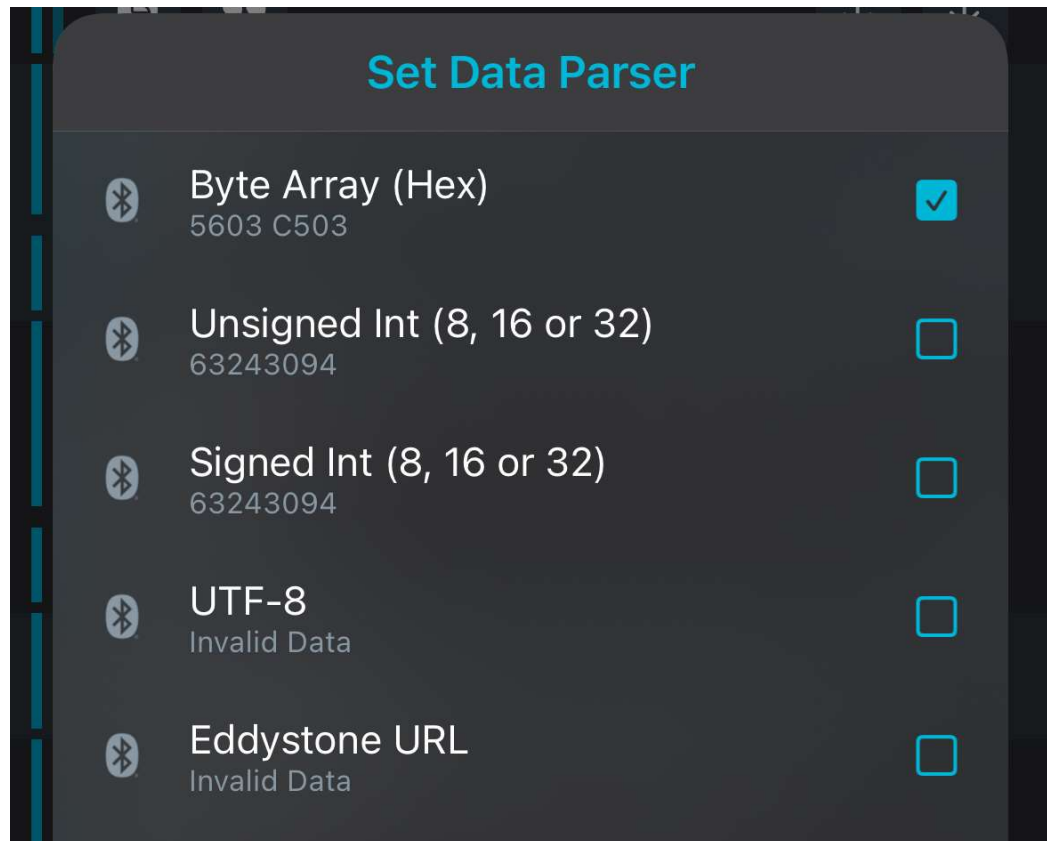

8. Click on the Byte Array (HEX) option

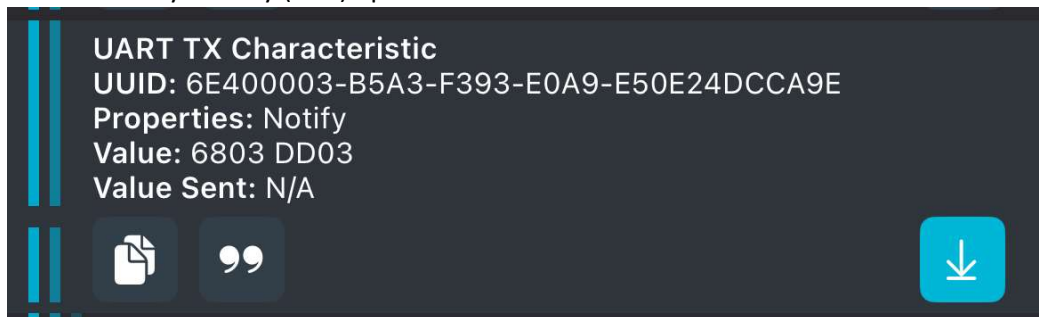

9.
  - The Value section will have values now.
  - Note the gps version will have a lot more digits