





## LIGHT BROTHER POWER SOLUTION

Plot no-116, Near Tata Pasco Showroom, Narsinghpur, Gurgaon – 122004 (Haryana) India  
Email: lbpsindia01@gmail.com

---

### User Manual of Temp. Monitor with Alarm System

**> Password Setup**  
**> Temp Setup**

4. If want to change Passowrd then Press Switch UP then show display as below:

**> Password Setup**  
**Temp Setup**

5. Press ENT Switch and show display as below:

**→ Password Setup**  
**Enter Pswd 10**

6. Change password by switch UP/DOWN and press switch ENT and show display as below:

**→ Password Setup**  
**Password Saved**

**LIGHT BROTHER**  
**TEMPERATURE: 18.2**

7. If want to change Temp range then follow step 2 and 3 step and display as below:

**> Password Setup**  
**> Temp Setup**

8. Press Switch DOWN then Then display show as below:

**Password Setup**  
**> Temp Setup**

9. Press ENT Switch:

**→ Temp Setup**  
**Enter Max Tmp: 20**

10. If You want change Temp Max value by Switch UP / DOWN and press ENT switch then display show as below:

**→ Temp Setup**  
**Enter Min Tmp: 00**



## LIGHT BROTHER POWER SOLUTION

Plot no-116, Near Tata Pasco Showroom, Narsinghpur, Gurgaon – 122004 (Haryana) India  
Email: lbpsindia01@gmail.com

---

### User Manual of Temp. Monitor with Alarm System

If You want change Temp Min value by Switch UP / DOWN and press ENT switch then display show as below:

→ **Temp Setup**  
**Temp Saved**

After 10 second show display as below

**LIGHT BROTHER**  
**TEMPERATURE: 18.2**

If any reason Temp out of range then show display as below with Flasher light & Sound. At this time Alarm switch will be Normal Mode.

**LIGHT BROTHER**  
**OVER TEMP: 23.2**

When Temp value reach below of Max Temp-0.5degreeC Then Flasher light & sound will be OFF and display show as below:

**LIGHT BROTHER**  
**TEMPERATURE: 18.2**

During out of range of Temp Then if you want no flasher light & sound then please set Alarm switch at OFF Mode.