

EasyFix Seagate - Quick Setup Guide

WARNING: Only proceed if you have experience with electronics!

1. Connect the USB-TTL adapter to the PC.
2. Connect GND of the cable to GND of the HDD Diagnostic Pins.
3. Connect RX of the cable to TX of the HDD.
4. Connect TX of the cable to RX of the HDD.
5. Power the HDD using a standard SATA power cable.
6. Open EasyFix Seagate and select the correct COM port.
7. Use Baud Rate: 38400 (Locked in software).

Note: If 'LED:000000CC' appears, you MUST use a motor insulator (piece of paper) between the PCB and the motor contacts during Step A.