


## egoShield with 4 push-buttons and OLED display

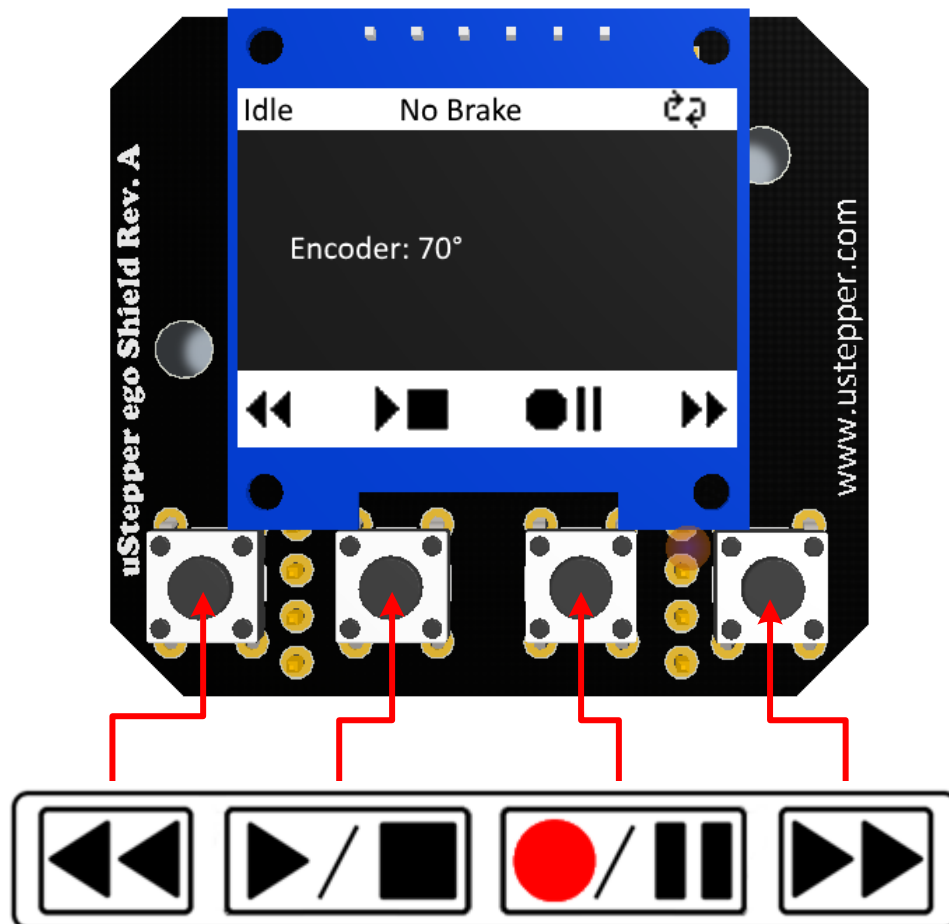

The control in the library has the following functionality:

- Idle state
  - Press **FWD** or **REV** to manually move 10 deg in either direction
  - Press and hold **FWD** or **REV** to move continuous until releasing
  - Press and hold **RECORD** to enter recording state
  - Press **PLAY** to enter Play state, and play recorded sequence
  - Press and hold **STOP** to invert brake mode (either with or without brakes)
- Record state
  - Press **RECORD** to record position
  - Press and hold **STOP** to go into Idle state again
  - If brakes enabled:
    - Press **FWD** or **REV** to manually move 10 deg in either direction
    - Press and hold **FWD** or **REV** to move continuous until releasing
  - If brakes disabled
    - Move by hand
- Play state
  - Press **PAUSE** to enter Pause state at next position
  - Press and hold **STOP** to stop play and go into Idle state
  - Press and hold **FWD** to play sequence in loop
  - Press and hold **REV** to stop looping
- Pause state
  - Press **PLAY** to continue playing by entering Play state
  - Press and hold **STOP** to go into Idle state