



## Welcome to Your Hito Experience

### ~ Beta Edition ~

Thank you for pre-ordering the beta Hito hardware wallet! Here are a few things to know about using your beta edition Hito.

Some of you are experienced users of hardware wallets, while some will be first time users. No matter what your level of experience, we think you'll find the beta Hito simple and intuitive to use. We're excited to have early feedback from you - thank you for taking the Hito journey with us!

---

### Getting Started

1. To power up your beta Hito press the button at the side
  2. Your beta Hito wallet was shipped with a default PIN code of 111111 - this can be changed later via firmware update
  3. Install the latest [firmware](#) (available on Mac Chrome or Android)
  4. Install the [Hito beta app](#)
  5. Pair your Hito wallet with the Hito beta app - watch instructional video [here](#)
  6. Watch a screencast of a complete crypto transaction (sending, receiving) with Hito [here](#)
-

## Index: User's Guide To Your Beta Hito Hardware Wallet

- I. [What does beta functionality entail? Understanding the limitations of your beta Hito.](#)
  - II. [Summary of beta Hito hardware wallet functions](#)
  - III. [Overview of what you can do with your beta Hito hardware wallet](#)
  - IV. [How to transfer crypto from software wallet or exchange to your beta Hito hardware wallet](#)
  - V. [How to transfer crypto from the beta Hito hardware wallet to your software wallet](#)
  - VI. [Video Demos](#)
- 

## User's Guide To Your Beta Hito Hardware Wallet

### I. **Your beta Hito wallet has limited functionality - here's what you need to know:**

Supply chain issues have slowed receipt of different components and approvals with certain impacts on your user experience:

- A. Our Made in California Founder's Edition back panel shipment has been delayed until January 6th. We therefore made the decision to ship your beta unit on time with prototype back panels which bear a Made in Berlin imprint, although your beta Hito wallet was assembled in San Francisco California.
  - a. We will ship to all beta unit recipients a new Hito wallet with the Made in California Founder's Edition back panel beginning March 2023.
- B. **Waterproofing:** the beta unit is not fully waterproof, your new Hito wallet shipped beginning March 2023 will be fully waterproof.
- C. The beta Hito hardware wallet only works with the Hito App at the moment; it will support other software wallets in an upcoming firmware update
- D. Transactions: your beta Hito is safe and secure, but we strongly suggest your transact in small amounts with your beta Hito wallet until all firmware audits are complete.
- E. **Product Review Embargo:** We welcome your user experience reports, questions, and suggestions in the Github repository. **We ask that you refrain from any formal/comparative/social media reviews of the Hito hardware wallet for the fully functional first release version we will ship to you in March 2023.**

---

[Back to top](#)

# User's Guide To Your Beta Hito Hardware Wallet

## II. Beta Hito Hardware Wallet Functionality

- Supports ETH transactions
  - ERC20 (receive only)
  - Features native Uniswap support - you will be able to swap in and out of any ERC20 token through Uniswap, connecting to the wallet
  - Supports Android OS ([app.hito.dev](https://app.hito.dev))
  - Supports instant notifications (backend + app support)
  - Hito app supports Unstoppable Domains and ENS support ([on send](#))
  - ERC721 support will roll out via firmware update in January. We'll provide a firmware update guide in the Hito Github repository
- 

## III. Overview: What You Can Do With the Beta Hito Hardware Wallet

1. Safely transfer crypto from any software wallet to your beta Hito hardware wallet
  2. Easily transfer crypto from your beta Hito hardware wallet to any software wallet
  3. Clearly view your current crypto balance in the beta Hito App (only)
  4. Confidently verify what you're signing for with the ETH Emojidress - **Hito's signal use of color, underlines and emojis makes it easy to check the 42-character Ethereum address onscreen is correct**
  5. Securely sign and transact with a touch and a tap
- 

[Back to top](#)

## User's Guide To Your Beta Hito Hardware Wallet

### IV. How To: transfer crypto from software wallet or exchange to Hito

1. Open the Hito app at [app.hito.dev](https://app.hito.dev)
  2. Choose the network (ETH, BTC, etc.) in the Hito app
  3. Scan your QR-address in Hito with your smartphone
  4. Choose the app (in the pop-up notification) you want to transfer funds from
  5. Enter the sum
  6. Verify the address with the Ethereum Emojidress
  7. Sign (tap) the transaction: check the transaction details and enter you pin using your beta Hito hardware wallet
- 

### V. How To transfer crypto from the beta Hito hardware wallet to your software wallet

1. Open the Hito app at [app.hito.dev](https://app.hito.dev)
  2. Enter the address you want to transfer to (copy and paste)
  3. Choose the network
  4. Enter the sum
  5. Check the address by verifying the Ethereum Emojidress
  6. Sign (tap) the transaction
    - a. check the transaction details and enter you pin using your Hito
  7. **Details: how the transaction is signed**
    - a. After you tap the button "Send" in the app →
    - b. transaction details appear on the device
    - c. after checking transaction details tap the button to "Sign" on the Hito hardware device screen →
    - d. Enter the PIN →
    - e. The transaction is signed!
    - f. You can see see transaction details and the link for the blockchain explorer in the app
- 

[Back to top](#)

## User's Guide To Your Beta Hito Hardware Wallet

### VI. Video Demos

1. Install the latest [firmware](#) (available on Mac Chrome or Android)
2. Install the [Hito beta app](#)
3. Pair your Hito wallet with the Hito beta instructional video [here](#)
4. [How To Make a Transaction](#) with your beta Hito hardware wallet
5. Watch a [transaction screencast](#)
6. Watch a demo on [how Uniswap support](#) works on your beta Hito

---

[Back to top](#)