


## HOW TO SETUP IP CAMERA

1. The default IP address of the camera is **192.168.1.64**. For the computer and the IP camera to successfully communicate, you need to change the IP address of your computer to be in the same network.
2. Connect the IP camera to your laptop with an ethernet cable to establish connection
3. To change your laptop's IP address, navigate to **Control Panel > Network and Internet > Network Connections**. Right click on the **Ethernet** and click *properties*.
4. Double click on the **Internet Protocol Version 4 (TCP/IPv4)**. Change the default *Obtain an IP address automatically* into *Use the following IP address*

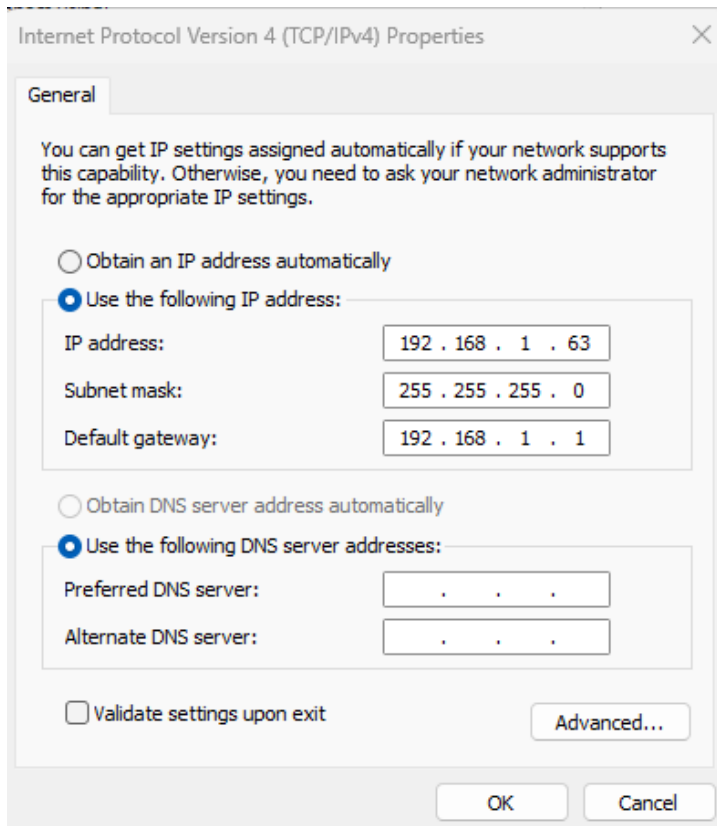

Internet Protocol Version 4 (TCP/IPv4) Properties

General

You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.

☐ Obtain an IP address automatically

☒ Use the following IP address:

IP address: 192 . 168 . 1 . 63

Subnet mask: 255 . 255 . 255 . 0

Default gateway: 192 . 168 . 1 . 1

☐ Obtain DNS server address automatically

☒ Use the following DNS server addresses:

Preferred DNS server: . . .

Alternate DNS server: . . .

☐ Validate settings upon exit

Advanced...

OK Cancel

5. Make sure to input the following:
  - a. IP address: if the IP address of the camera is 192.168.1.64, change the IP address to be 192.168.1.2-254 except 64
  - b. Subnet mask: 255.255.255.0
  - c. Default gateway: 192.168.1.1
6. Download SADP and select the inactive device and set the configurations of the IP camera. Make sure to set the IP address as stated earlier
7. You can now enter the ip address in the browser to view the stream