


- Power in
- GND
- GPIO
- SPI
- UART
- I2C
- PWM
- RP2040 reset and boot mode control pins
- RP2040 SWD debug interface
- IMU interface
- Supporting PWM pins
- Not supporting PWM pins
- Power and ground pins

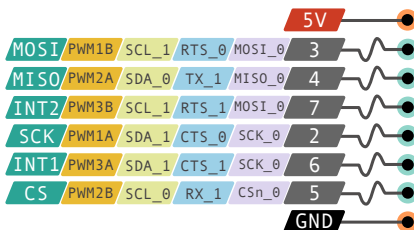

⚠ Pins 2...7 (GPIO 2...7) are connected to the RP2040 microcontroller through 270 ohm resistors. Some of these pins can be used in custom firmware, but please note that they are also connected to the IMU.

