

- Power
- GND
- GPIO
- \* GPIO used in VGM
- GPIO used in RP Pico
- Analog in
- RP2040 reset and boot mode control pins
- RP2040 SWD debug interface
- IMU SPI-interface
- Supporting PWM pins
- Not supporting PWM pins
- Power and ground pins

